

SUZUKI

GSF1200S/GSF1200

SERVICE MANUAL



FOREWORD

This manual contains an introductory description on the SUZUKI GSF1200S and procedures for its inspection/service and overhaul of its main components.

Other information considered as generally known is not included.

Read the GENERAL INFORMATION section to familiarize yourself with the motorcycle and its maintenance. Use this section as well as other sections to use as a guide for proper inspection and service.

This manual will help you know the motorcycle better so that you can assure your customers of fast and reliable service.

** This manual has been prepared on the basis of the latest specifications at the time of publication. If modifications have been made since then, differences may exist between the content of this manual and the actual motorcycle.*

** Illustrations in this manual are used to show the basic principles of operation and work procedures. They may not represent the actual motorcycle exactly in detail.*

** This manual is written for persons who have enough knowledge, skills and tools, including special tools, for servicing SUZUKI motorcycles. If you do not have the proper knowledge and tools, ask your authorized SUZUKI motorcycle dealer to help you.*

▲ WARNING

Inexperienced mechanics or mechanics without the proper tools and equipment may not be able to properly perform the services described in this manual. Improper repair may result in injury to the mechanic and may render the motorcycle unsafe for the rider and passenger.


SUZUKI MOTOR CORPORATION

GROUP INDEX

GENERAL INFORMATION	1
PERIODIC MAINTENANCE	2
ENGINE	3
FUEL SYSTEM	4
CHASSIS	5
ELECTRICAL SYSTEM	6
SERVICING INFORMATION	7
GSF1200K1 (2001-MODEL)	8
GSF1200K2/SK2 ('02-MODEL)	9

HOW TO USE THIS MANUAL TO LOCATE WHAT YOU ARE LOOKING FOR:


1. The text of this manual is divided into sections.
2. The section titles are listed in the GROUP INDEX.
3. Holding the manual as shown at the right will allow you to find the first page of the section easily.
4. The contents are listed on the first page of each section to help find the item and page you need.

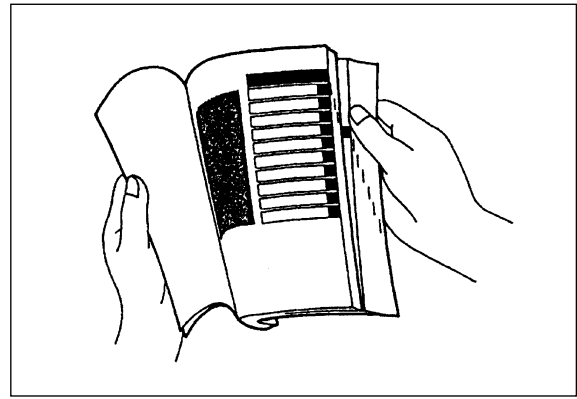

COMPONENT PARTS AND WORK TO BE DONE



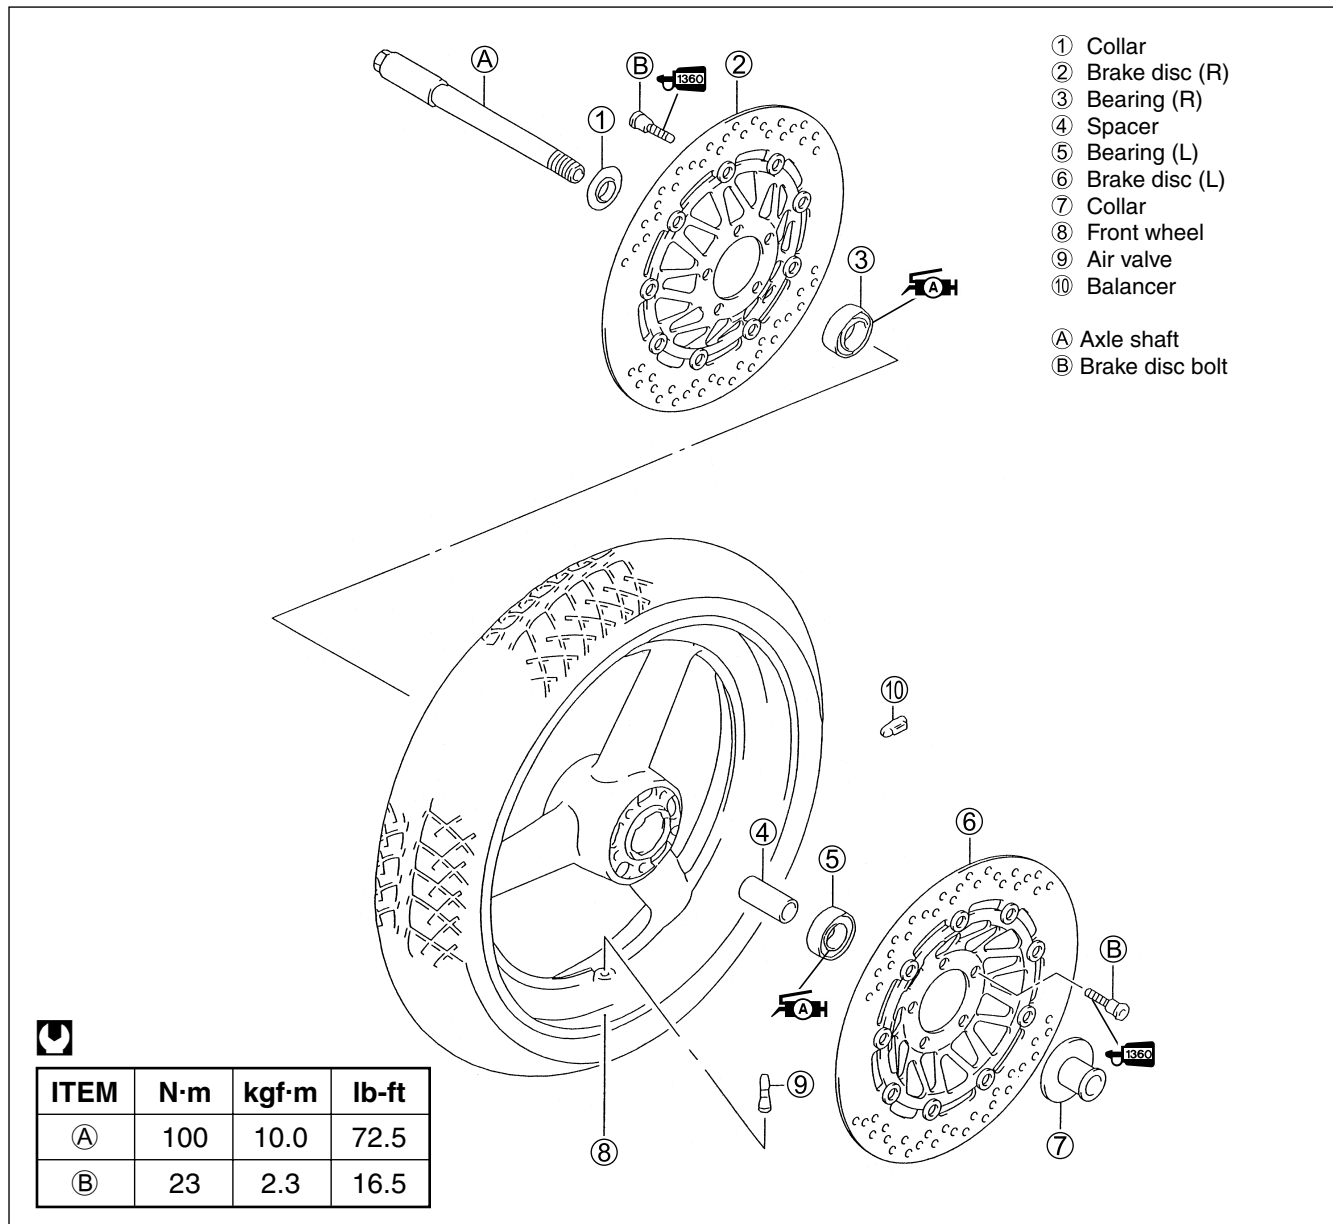


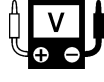

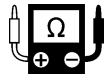

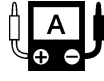

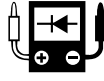








Under the name of each system or unit, is its exploded view. Work instructions and other service information such as the tightening torque, lubricating points and locking agent points, are provided.

Example: Front wheel



SYMBOL

Listed in the table below are the symbols indicating instructions and other information necessary for servicing. The meaning of each symbol is also included in the table.

SYMBOL	DEFINITION	SYMBOL	DEFINITION
	Torque control required. Data beside it indicates specified torque.		Apply THREAD LOCK SUPER "1360". 99000-32130
	Apply oil. Use engine oil unless otherwise specified.		Apply or use brake fluid.
	Apply molybdenum oil solution (mixture of engine oil and SUZUKI MOLY PASTE in a ratio of 1:1).		Measure in voltage range.
	Apply SUZUKI SUPER GREASE "A". 99000-25010		Measure in resistance range.
	Apply SUZUKI SILICONE GREASE. 99000-25100		Measure in current range.
	Apply SUZUKI MOLY PASTE. 99000-25140		Measure in diode test range.
	Apply THERMO-GREASE. 99000-59029		Measure in continuity test range.
	Apply SUZUKI BOND "1207B". 99000-31140		Use special tool.
	Apply THREAD LOCK SUPER "1303". 99000-32030		Use fork oil. 99000-99001-SS8 or 99000-99044-10G
	Apply THREAD LOCK "1342". 99000-32050		Indication of service data.

GENERAL INFORMATION

1

CONTENTS

WARNING/CAUTION/NOTE	1- 2
GENERAL PRECAUTIONS	1- 2
SUZUKI GSF1200SK1 (2001-MODEL)	1- 4
SERIAL NUMBER LOCATION	1- 4
FUEL AND OIL RECOMMENDATION	1- 4
FUEL	1- 4
ENGINE OIL	1- 5
BRAKE FLUID	1- 5
FRONT FORK OIL	1- 5
BREAK-IN PROCEDURES	1- 5
CYLINDER IDENTIFICATION	1- 5
INFORMATION LABELS	1- 6
SPECIFICATIONS	1- 7
COUNTRY OR AREA CODES	1- 9

WARNING/CAUTION/NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words WARNING, CAUTION and NOTE have special meanings. Pay special attention to the messages highlighted by these signal words.

WARNING

Indicates a potential hazard that could result in death or injury.

CAUTION

Indicates a potential hazard that could result in motorcycle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

Please note, however, that the warnings and cautions contained in this manual cannot possibly cover all potential hazards relating to the servicing, or lack of servicing, of the motorcycle. In addition to the WARNINGS and CAUTIONS stated, you must use good judgement and basic mechanical safety principles. If you are unsure about how to perform a particular service operation, ask a more experienced mechanic for advice.

GENERAL PRECAUTIONS

WARNING

- * Proper service and repair procedures are important for the safety of the service mechanic and the safety and reliability of the motorcycle.
- * When 2 or more persons work together, pay attention to the safety of each other.
- * When it is necessary to run the engine indoors, make sure that exhaust gas is forced outdoors.
- * When working with toxic or flammable materials, make sure that the area you work in is well-ventilated and that you follow all of the material manufacturer's instructions.
- * Never use gasoline as a cleaning solvent.
- * To avoid getting burned, do not touch the engine, engine oil, oil cooler and exhaust system until they have cooled.
- * After servicing the fuel, oil, exhaust or brake systems, check all lines and fittings related to the system for leaks.

▲ CAUTION

- * If parts replacement is necessary, replace the parts with Suzuki Genuine Parts or their equivalent.
- * When removing parts that are to be reused, keep them arranged in an orderly manner so that they may be reinstalled in the proper order and orientation.
- * Be sure to use special tools when instructed.
- * Make sure that all parts used in reassembly are clean. Lubricate them when specified.
- * Use the specified lubricant, bond, or sealant.
- * When removing the battery, disconnect the negative cable first and then the positive cable. When reconnecting the battery, connect the positive cable first and then the negative cable, and replace the terminal cover on the positive terminal.
- * When performing service to electrical parts, if the service procedures not require use of battery power, disconnect the negative cable the battery.
- * When tightening the cylinder head and case bolts and nuts, tighten the larger sizes first. Always tighten the bolts and nuts diagonally from the inside working out and to the specified tightening torque.
- * Whenever you remove oil seals, gaskets, packing, O-rings, locking washers, self-locking nuts, cotter pins, circlips and certain other parts as specified, be sure to replace them with new ones. Also, before installing these new parts, be sure to remove any left over material from the mating surfaces.
- * Never reuse a circlip. When installing a new circlip, take care not to expand the end gap larger than required to slip the circlip over the shaft. After installing a circlip, always ensure that it is completely seated in its groove and securely fitted.
- * Use a torque wrench to tighten fasteners to the specified torque. Wipe off grease and oil if a thread is smeared with them.
- * After reassembling, check parts for tightness and proper operation.

- * To protect the environment, do not unlawfully dispose of used motor oil and other fluids: batteries, and tires.
- * To protect Earth's natural resources, properly dispose of used motorcycle and parts.

SUZUKI GSF1200SK1 (2001-MODEL)



LEFT





RIGHT

* Difference between photograph and actual motorcycle depends on the markets.

SERIAL NUMBER LOCATION

The frame serial number or V.I.N. (Vehicle Identification Number) ① is stamped on the right side of the steering head pipe. The engine serial number ② is located on the right side of the crankcase. These numbers are required especially for registering the machine and ordering spare parts.

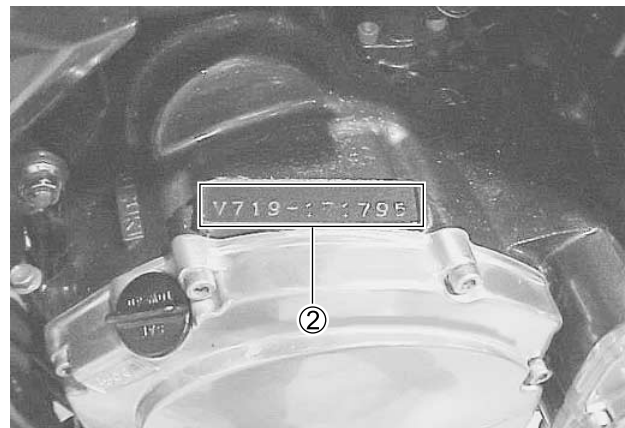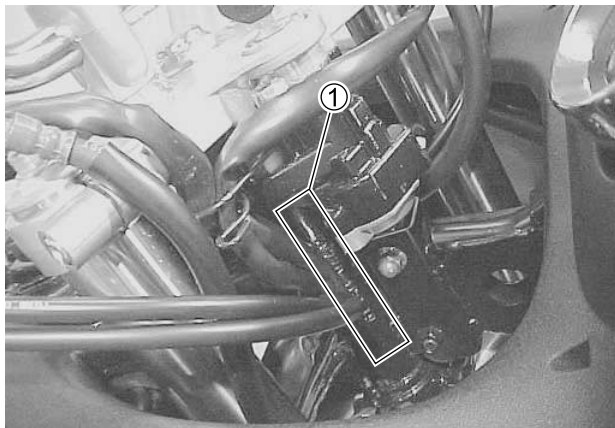

FUEL AND OIL RECOMMENDATION

FUEL (For Canada)

1. Use only unleaded gasoline of at least 87 pump octane ($\frac{R+M}{2}$) method or 91 octane or higher rated by the research method.
2. Suzuki recommends that customers use alcohol free, unleaded gasoline whenever possible.
3. Use of blended gasoline containing MTBE (Methyl Tertiary Butyl Ether) is permitted.
4. Use of blended gasoline/alcohol fuel is permitted, provided that the fuel contains not more than 10% ethanol. Gasoline/alcohol fuel may contain up to 5% methanol if appropriate cosolvents and corrosion inhibitors are present in it.
5. If the performance of the vehicle is unsatisfactory while using blended gasoline/alcohol fuel, you should switch to alcohol-free unleaded gasoline.
6. Failure to follow these guideline could possibly void applicable warranty coverage. Check with your fuel supplier to make sure that the fuel you intend to use meets the requirements listed above.


FUEL (For the others)

Gasoline used should be graded 91 octane (Research Method) or higher. An unleaded gasoline is recommended.

ENGINE OIL

Use a premium quality 4-stroke motor oil to ensure longer service life of your motorcycle. Use only oils which are rated SF or SG under the API service classification.

The recommended viscosity is SAE 10W-40. If an SAE 10W-40 motor oil is not available, select an alternative according to the right chart.

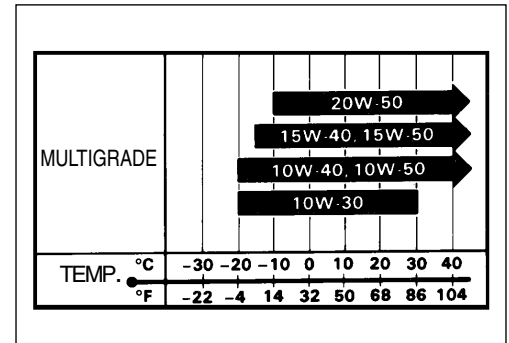

BRAKE FLUID

Specification and classification: DOT 4

⚠ WARNING

Since the brake system of this motorcycle is filled with a glycol-based brake fluid by the manufacturer, do not use or mix different types of fluid such as silicone-based and petroleum-based fluid for refilling the system, otherwise serious damage will result.

Do not use any brake fluid taken from old or used or unsealed containers.

Never re-use brake fluid left over from a previous servicing, which has been stored for a long period.

FRONT FORK OIL

Use fork oil #10 or equivalent fork oil.

BREAK-IN PROCEDURES

During manufacture only the best possible materials are used and all machined parts are finished to a very high standard but it is still necessary to allow the moving parts to “BREAK-IN” before subjecting the engine to maximum stresses. The future performance and reliability of the engine depends on the care and restraint exercised during its early life. The general rules are as follows.

- Keep to these break-in engine speed limits:

Initial 800 km (500 miles): Below 5 500 r/min.

Up to 1 600 km (1 000 miles): Below 8 000 r/min.


Over 1 600 km (1 000 miles): Below 11 000 r/min.

- Upon reaching an odometer reading of 1 600 km (1 000 miles) you can subject the motorcycle to full throttle operation. However, do not exceed 11 000 r/min. at any time.

CYLINDER IDENTIFICATION

The four cylinders of this engine are identified as No.1, No.2, No.3 and No.4 cylinder, as counted from left to right (as viewed by the rider on the seat).

INFORMATION LABELS

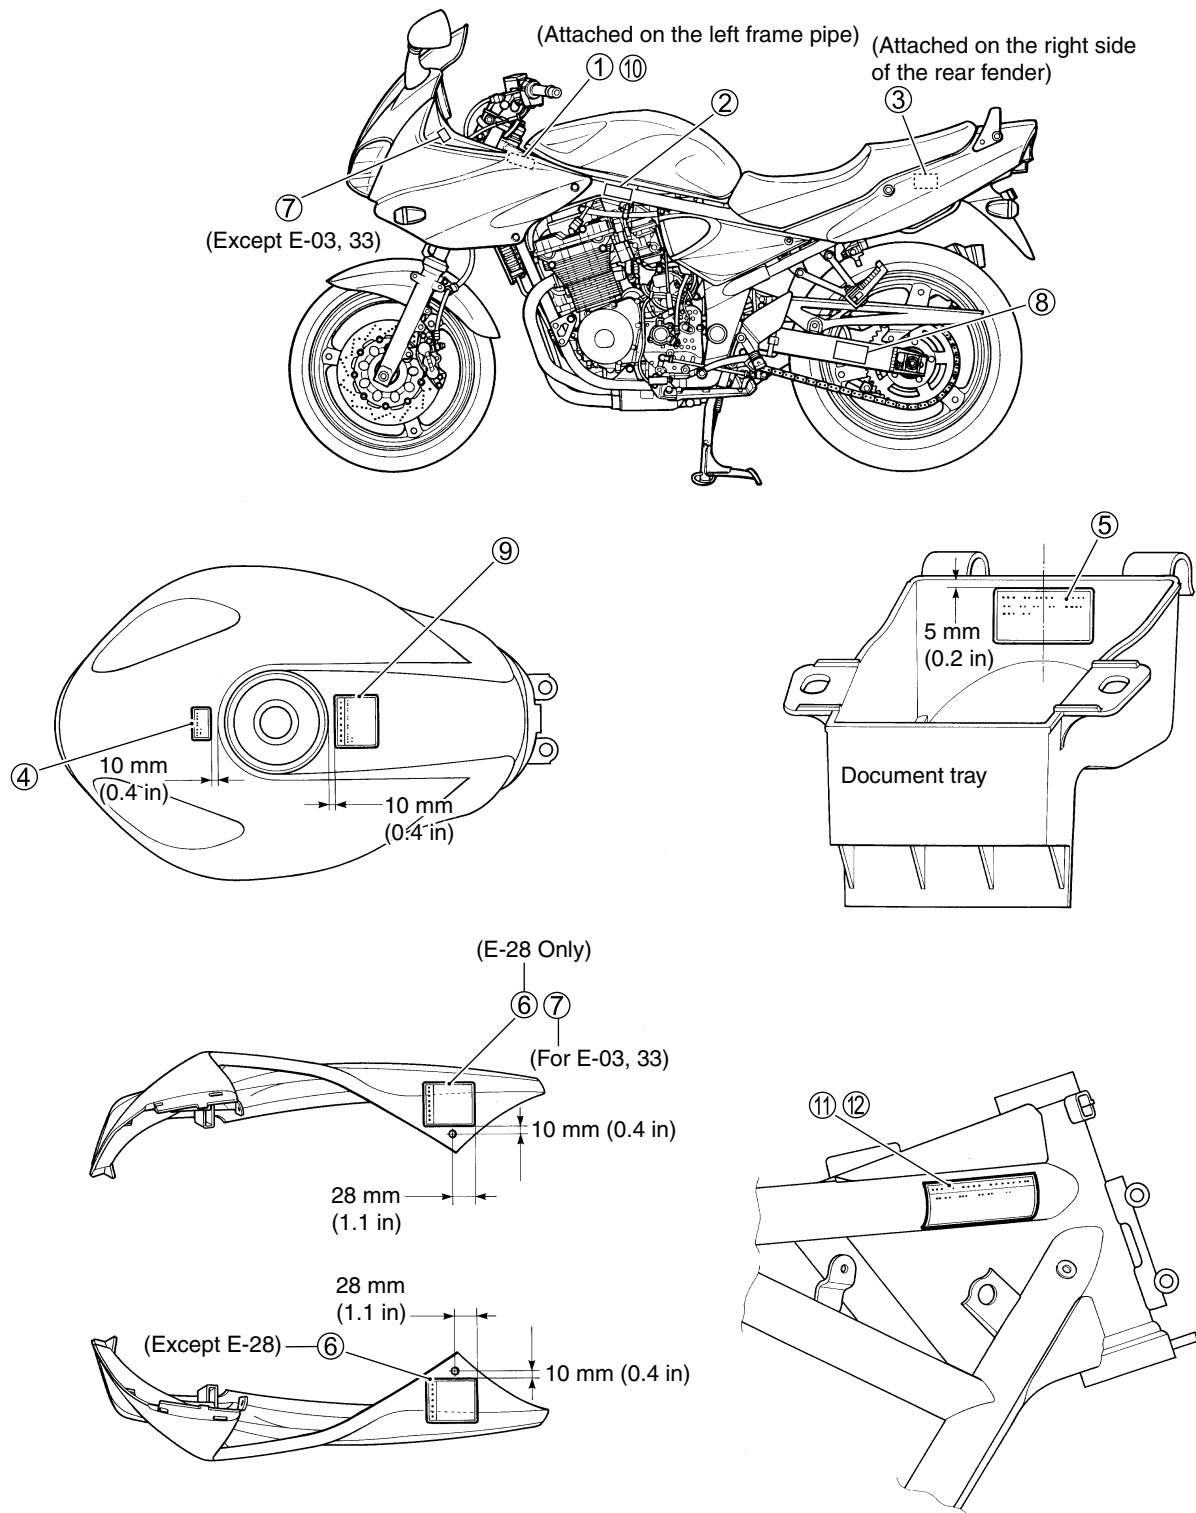

①	Noise label (For E-03, 33)	⑦	Warning steering label
②	Information label (For E-03, 28, 33)	⑧	Tire pressure label
③	Vacuum hose routing label (For E-33)	⑨	Warning safety label
④	Fuel caution label (For E-02, 24)	⑩	ICES Canada label (For E-28)
⑤	Manual notice label (For E-03, 33)	⑪	ID plate (Except E-03, 28, 33)
⑥	Warning screen label	⑫	Safety plate (For E-03, 28, 33)

SPECIFICATIONS

DIMENSIONS AND DRY MASS

Overall length	2 070 mm (81.5 in)
Overall width	765 mm (30.1 in)
Overall height	1 220 mm (48.0 in)
Wheelbase	1 430 mm (56.3 in)
Ground clearance	130 mm (5.1 in)
Seat height	790 mm (31.1 in)
Dry mass	220 kg (485 lbs)

ENGINE

Type	Four-stroke, air-cooled, with SACS, DOHC, TSCC
Number of cylinders	4
Bore	79.0 mm (3.110 in)
Stroke	59.0 mm (2.323 in)
Compression ratio	9.5 : 1
Piston displacement	1 157 cm ³ (70.6 cu.in)
Carburetor	MIKUNI BSR36SS, four
Air cleaner	Non-woven fabric element
Starter system	Electric starter
Lubrication system	Wet sump

TRANSMISSION

Clutch	Wet multi-plate type
Transmission	5-speed constant mesh
Gearshift pattern	1-down, 4-up
Primary reduction ratio	1.565 (72/46)
Final reduction ratio	3.000 (45/15)
Gear ratios, Low	2.384 (31/13)
2nd	1.631 (31/19)
3rd	1.250 (25/20)
4th	1.045 (23/22)
Top	0.913 (21/23)
Drive chain	RKGB50MFOZ1, 110 links

CHASSIS

Front suspension	Telescopic, coil spring, oil damped, spring pre-load fully adjustable
Rear suspension	Link type, oil damped, coil spring, spring pre-load 7-way adjustable, rebound damping force 4-way adjustable
Steering angle	35° (right & left)
Caster	25° 20'
Trail	104 mm (4.10 in)
Turning radius	2.8 m (9.2 ft)
Front brake	Disc brake, twin
Rear brake	Disc brake
Front tire size	120/70 ZR17 (58W), tubeless
Rear tire size	180/55 ZR17 (73W), tubeless
Front fork stroke	130 mm (5.1 in)
Rear wheel travel	125 mm (4.9 in)

ELECTRICAL

Ignition type	Electronic ignition (Fully Transistorized)
Ignition timing	7° B.T.D.C. at 1 500 r/min
Spark plug	NGK JR9B
Battery	12 V 36.0 kC (10 Ah)/10HR
Generator	Three-phase A.C. Generator
Main fuse	30 A
Fuse	15/15/15/10/10 A
Headlight	12 V 51 + 60/51 W
Position light	12 V 5 W Except for E-03, -24, -28, -33
Turn signal light	12 V 21 W × 4
Brake light/Taillight	12 V 21/5 W × 2
License light	12 V 5 W
Speedometer light	LED
Tachometer light	LED
Neutral indicator light	LED
High beam indicator light	LED
Turn signal indicator light	LED
Oil pressure indicator light	LED

CAPACITIES

Fuel tank, including reserve	20.0 L (5.2/4.4 US/Imp gal)
reserve	4.4 L (1.2/1.0 US/Imp gal)
Engine oil, oil change	3 300 ml (3.5/2.9 US/Imp qt)
with filter change	3 500 ml (3.7/3.1 US/Imp qt)
overhaul	4 600 ml (4.9/4.0 US/Imp qt)
Front fork oil (each leg)	507 ml (17.1/17.9 US/Imp oz) E-03, -28, -33
	509 ml (17.2/18.0 US/Imp oz) Others

These specifications are subject to change without notice.

COUNTRY OR AREA CODES

The following codes stand for the applicable country(-ies) and area(-s).

CODE	COUNTRY or AREA
E-02	England (UK)
E-03	USA
E-19	European markets
E-24	Australia
E-28	Canada
E-33	California (USA)
E-54	Israel

PERIODIC MAINTENANCE

CONTENTS

PERIODIC MAINTENANCE SCHEDULE	2- 2
PERIODIC MAINTENANCE CHART	2- 2
LUBRICATION POINTS.....	2- 3
MAINTENANCE AND TUNE-UP PROCEDURES.....	2- 4
VALVE CLEARANCE.....	2- 4
SPARK PLUGS	2- 5
EXHAUST PIPE BOLTS AND MUFFLER BOLTS	2- 7
AIR CLEANER	2- 7
ENGINE OIL AND OIL FILTER	2- 9
FUEL HOSE	2-10
FUEL FILTER	2-11
ENGINE IDLE SPEED	2-11
THROTTLE CABLE PLAY	2-11
CARBURETOR SYNCHRONIZATION	2-12
EVAPORATIVE EMISSION CONTROL SYSTEM (E-33 ONLY)	2-12
PAIR (AIR SUPPLY) SYSTEM.....	2-13
CLUTCH	2-13
DRIVE CHAIN	2-14
BRAKES	2-16
TIRES	2-19
STEERING	2-20
FRONT FORK	2-21
REAR SUSPENSION	2-21
CHASSIS BOLTS AND NUTS.....	2-22
COMPRESSION PRESSURE CHECK	2-24
OIL PRESSURE CHECK.....	2-25

PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Maintenance intervals are expressed in terms of kilometers, miles and months, and are dependant on whichever comes first.

NOTES:

More frequent servicing may be performed on motorcycles that are used under severe conditions.

PERIODIC MAINTENANCE CHART

Item	Interval	km	1 000	6 000	12 000	18 000	24 000
		miles	600	4 000	7 500	11 000	15 000
		months	1	6	12	18	24
Valve clearance			I	–	I	–	I
Spark plugs			–	I	R	I	R
Exhaust pipe bolts and muffler bolts			T	–	T	–	T
Air cleaner			–	I	I	R	I
Engine oil			R	R	R	R	R
Engine oil filter			R	–	–	R	–
Fuel hose			–	I	I	I	I
			Replace every four years.				
Engine idle speed			I	I	I	I	I
Throttle cable play			I	I	I	I	I
Carburetor synchronization			I (E-33 only)	–	I	–	I
Evaporative emission control system (E-33 only)			–	–	I	–	I
			Replace vapor hose every four years.				
PAIR (air supply) system			–	–	I	–	I
Clutch hose			–	I	I	I	I
			Replace every four years.				
Clutch fluid			–	–	I	–	I
			Replace every two years.				
Drive chain			I	I	I	I	I
			Clean and lubricate every 1 000 km (600 miles).				
Brakes			I	I	I	I	I
Brake hoses			–	I	I	I	I
			Replace every four years.				
Brake fluid			–	I	I	I	I
			Replace every two years.				
Tires			–	I	I	I	I
Steering			I	–	I	–	I
Front forks			–	–	I	–	I
Rear suspension			–	–	I	–	I
Chassis bolts and nuts			T	T	T	T	T


I = Inspect and adjust, clean, lubricate or replace as necessary.

R = Replace

T = Tighten

LUBRICATION POINTS

Proper lubrication is important for smooth operation and long life of each working part of the motorcycle. Major lubrication points are indicated below.

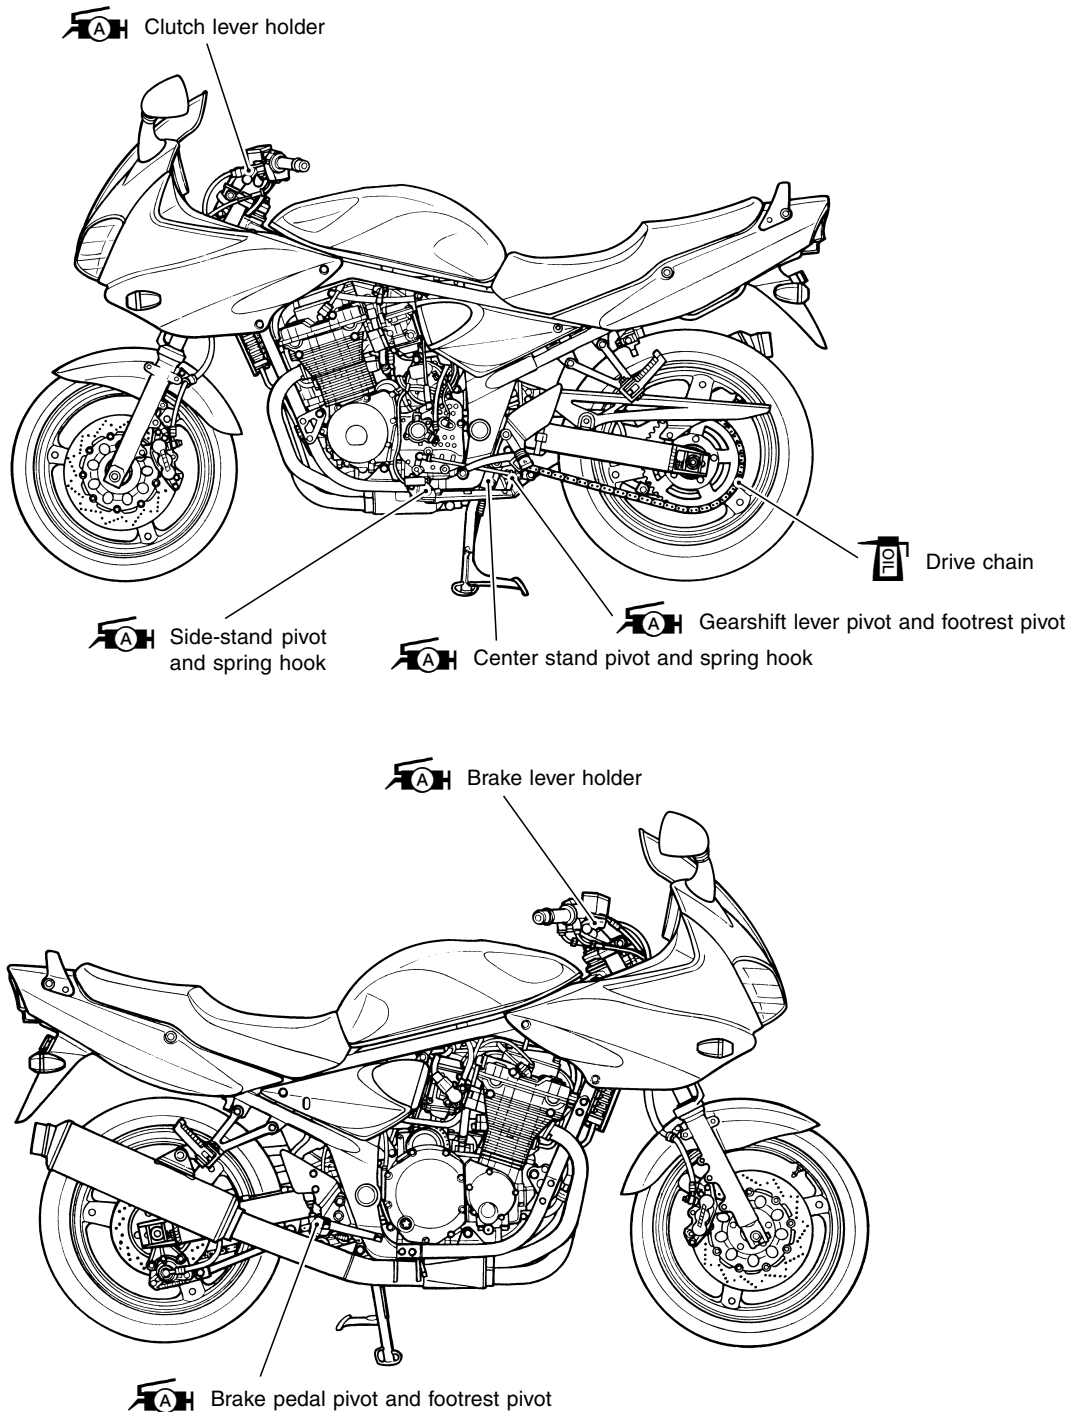

NOTE:

- * Before lubricating each part, clean off any rusty spots and wipe off any grease, oil, dirt or grime.
- * Lubricate exposed parts which are subject to rust, with a rust preventative spray, especially whenever the motorcycle has been operated under wet or rainy conditions.

MAINTENANCE AND TUNE-UP PROCEDURES

This section describes the servicing procedures for each item mentioned in the Periodic Maintenance chart.

VALVE CLEARANCE

Inspect initially at 1 000 km (600 miles, 1 month) and every 12 000 km (7 500 miles, 12 months).

- Remove the seat and fuel tank. (☞ 4-3)
- Remove the ignition coil #1/#4 and PAIR valve.
- Remove the side cowling brackets. (☞ 5-3)
- Remove all of the spark plugs.
- Remove the cylinder head cover and signal generator cover. (☞ 3-12 and -13)

The valve clearance specification is different for both intake and exhaust valves.

Valve clearance adjustment must be checked and adjusted 1) at the time of periodic inspection, 2) when the valve mechanism is serviced, and 3) when the camshafts are removed for servicing.






DATA Valve clearance (when cold):

IN.: 0.10 – 0.15 mm (0.004 – 0.006 in)

EX.: 0.18 – 0.23 mm (0.007 – 0.009 in)

NOTE:

- * The camshafts must be at positions **A** or **B**, in order to check or adjust the valve clearance. Clearance readings should not be taken with the camshafts in any other position than the ones shown.
 - * The valve clearance should only be checked when the engine is cold.
 - * Turn the crankshaft clockwise using a 19-mm wrench. Make sure that all of the spark plugs have been removed.
- Turn the crankshaft clockwise and align the “T” mark on the signal generator rotor with the center of the pickup coil. Also, position the notches **①** on the right end of each camshaft as shown. Then, measure the following valve clearances **C**:
 - Cylinder #1: intake and exhaust valve clearances
 - Cylinder #2: exhaust valve clearance
 - Cylinder #3: intake valve clearance

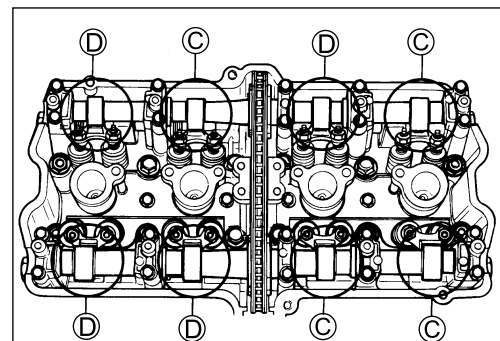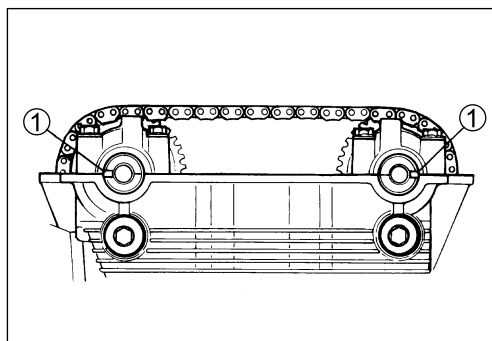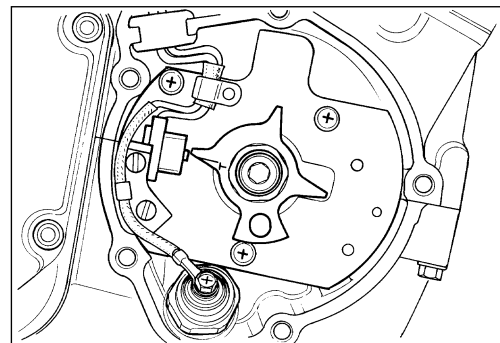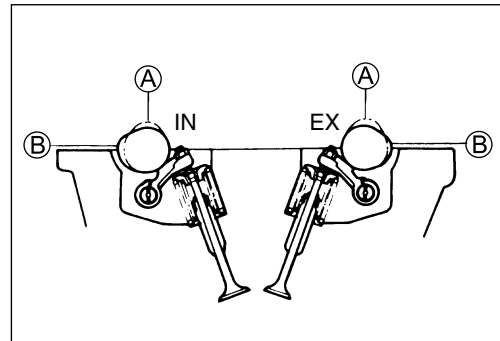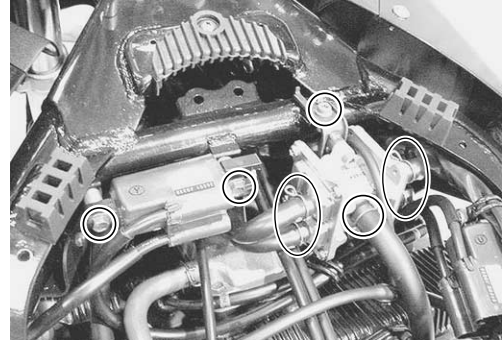

- Insert a thickness gauge between the end of the valve stem and the adjusting screw on the rocker arm. If the clearance is out of specification, hold the locknut with a wrench and use the special tool to adjust the clearance.

TOOL 09900-20803: Thickness gauge
09917-14910: Valve adjuster driver

CAUTION

Both the right and left valve clearances should be as closely as possible.

- Turn the crankshaft clockwise 360° (one full rotation) and align the “T” mark on the signal generator rotor with the center of the pickup coil. Also, position the notches ① on the right end of each camshaft as shown.
- Measure the valve clearances of the remaining valves ② and adjust them if necessary.

Camshaft position	Notch ① position	
	Intake camshaft	Exhaust camshaft
Ⓒ		
Ⓓ		



- When installing the cylinder head cover, apply the recommended bond to the cylinder head cover groove and camshaft end caps. (↗3-48)

1207B 99000-31140: SUZUKI BOND “1207B”

- Tighten the cylinder head cover bolts to the specified torque.

U Cylinder head cover bolt: 14 N·m (1.4 kgf·m, 10.0 lb-ft)


- Install the signal generator cover. (↗3-48)

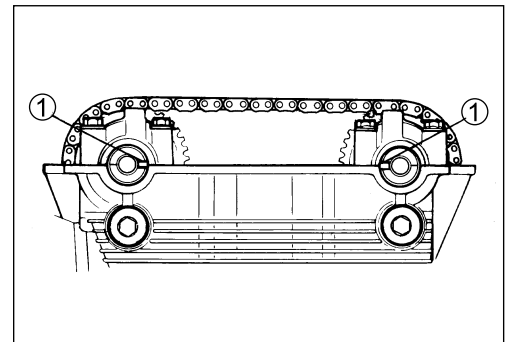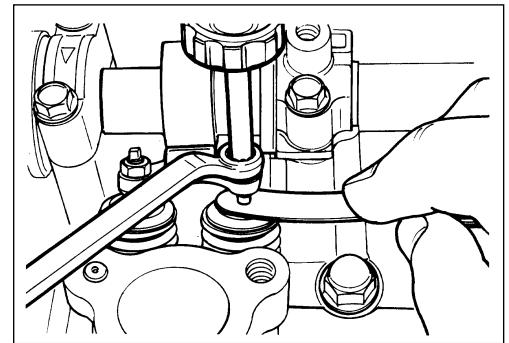

SPARK PLUGS

Inspect every 6 000 km (4 000 miles, 6 months) and replace every 12 000 km (7 500 miles, 12 months).

- Remove the seat and fuel tank. (↗4-3)
- Remove all of the spark plugs.

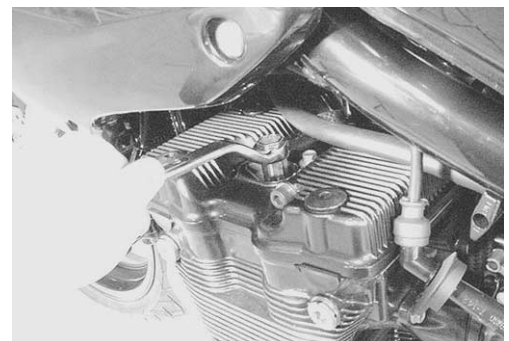

NOTE:


If it is difficult to remove any of the spark plug caps, pry them up using a screwdriver.

TOOL 09930-10121: Spark plug wrench set
09900-20803: Thickness gauge

	Standard	Cold type	Hot type
NGK	JR9B	JR10B	JR8B

CARBON DEPOSITS

Check to see if there are carbon deposits on the spark plug. If carbon is deposited, remove it using a spark plug cleaner machine or carefully use a tool with a pointed end.

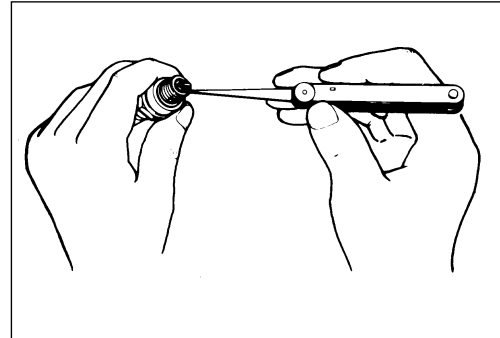**SPARK PLUG GAP**


Measure the spark plug gap using a thickness gauge. If out of specification, regap the spark plug.

DATA Spark plug gap: 0.6 – 0.7 mm
(0.024 – 0.028 in)

TOOL 09900-20803: Thickness gauge

ELECTRODE'S CONDITION

Check the condition of the electrode. If it is extremely worn or burnt, replace the spark plug. Replace the spark plug if it has a broken insulator, damaged threads, etc.

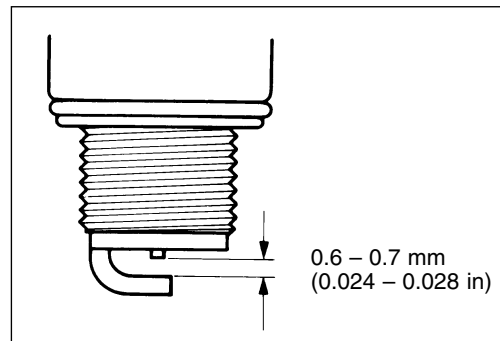**CAUTION**

Check the thread size and reach when replacing the spark plug. If the reach is too short, carbon will be deposited on the screw portion of the spark plug hole and engine damage may result.

SPARK PLUG INSTALLATION**CAUTION**

To avoid damaging the cylinder head threads, first finger tighten the spark plug and then tighten it to the proper torque using the spark plug wrench.

- Install the spark plugs to each spark plug hole by finger tight, and then tighten them to the specified torque.



TOOL Spark plug: 11 N·m (1.1 kgf·m, 8.0 lb-ft)

EXHAUST PIPE BOLTS AND MUFFLER BOLTS

Tighten initially at 1 000 km (600 miles, 1 month) and every 12 000 km (7 500 miles, 12 months) thereafter.

- Tighten the exhaust pipe bolts and muffler mounting bolts to the specified torque.


**🔧 Exhaust pipe bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)
Muffler mounting bolt: 29 N·m (2.9 kgf·m, 21.0 lb-ft)**

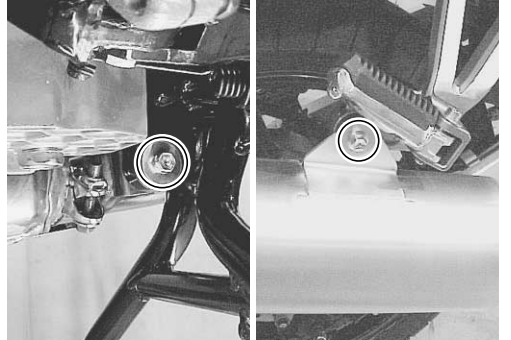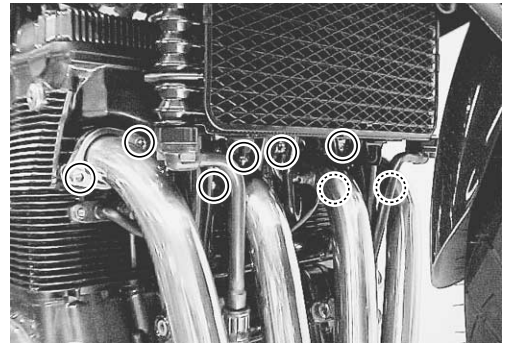


AIR CLEANER

Inspect every 6 000 km (4 000 miles, 6 months) and replace every 18 000 km (11 000 miles, 18 months).

- Remove the seat and fuel tank. (🔧 4-3)
- Remove the fuel tank mounting bracket ①.
- Remove the air cleaner element cover ②.

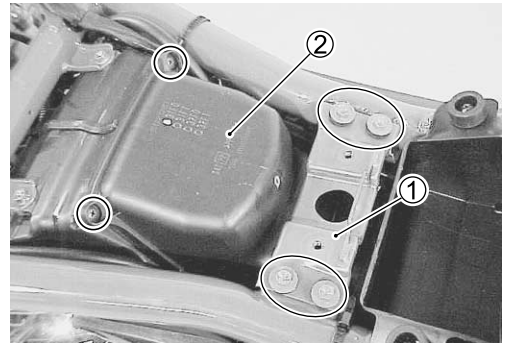

- Remove the air cleaner element ③.

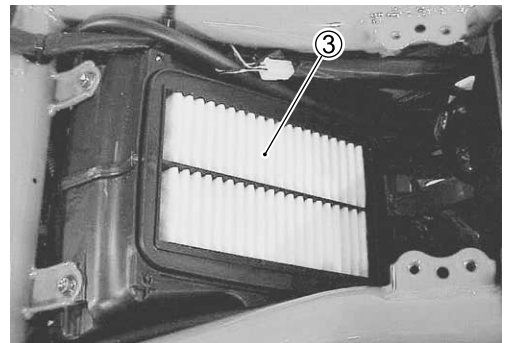



- Carefully use compressed air to clean the air cleaner element.

⚠ CAUTION

Always apply compressed air to the inside of the air cleaner element. If compressed air is applied to the outside, dirt will be forced into the pores of the air cleaner element, restricting air flow through the air cleaner element.




- Reinstall the cleaned or new air cleaner element in the reverse order of removal.

- When installing the air cleaner element into the air cleaner case, make sure that the  mark  points up.

▲ CAUTION

If driving under dusty conditions, clean the air cleaner element more frequently. The surest way to accelerate engine wear is to operate the engine without the element or to use a torn element. Make sure that the air cleaner is in good condition at all times. Life of the engine depends largely on this component!

- Remove the drain plug from the air cleaner drain hose to allow any water to drain out.

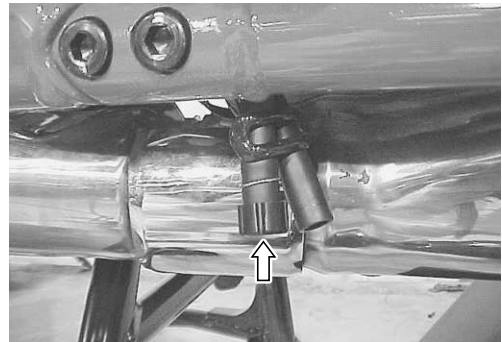

ENGINE OIL AND OIL FILTER

(ENGINE OIL)

Replace initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.



(OIL FILTER)

Replace initially at 1 000 km (600 miles, 1 month) and every 18 000 km (11 000 miles, 18 months) thereafter.

The oil should be changed while the engine is warm. Oil filter replacement at the above intervals, should be done together with the engine oil change.


ENGINE OIL REPLACEMENT

- Keep the motorcycle upright.
- Place an oil pan below the engine, and drain the oil by removing the oil drain plug ① and filler cap ②.

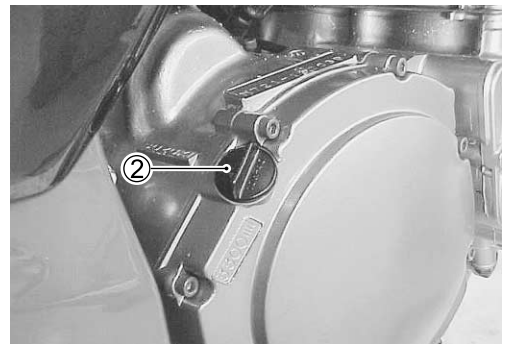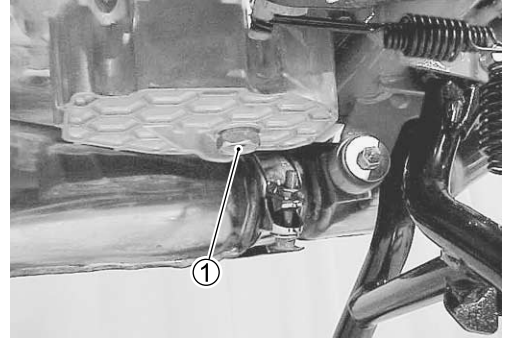


- Tighten the oil drain plug ③ to the specified torque, and pour new oil through the oil filler. When performing an oil change (without oil filter replacement), the engine will hold about 3.3 L (3.5/2.9 US/Imp qt) of oil. Use SF or SG classified (API) engine oil with a viscosity rating of 10W/40 (SAE).

 **Oil drain plug: 23 N·m (2.3 kgf·m, 16.5 lb-ft)**

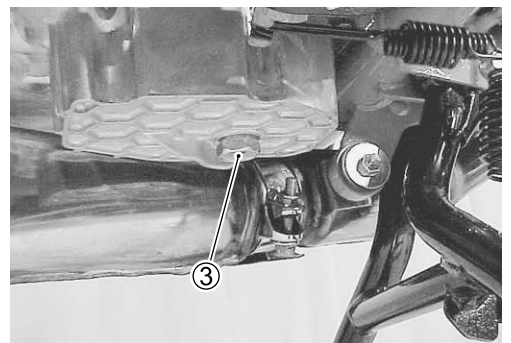


- Start up the engine and allow it to run for several minutes at idling speed.
- Turn off the engine and wait about three minutes, then check the oil level through the inspection window ④. If the level is below the “L” mark, add oil to the “F” mark. If the level is above the “F” mark, drain the oil until the level reaches the “F” mark.

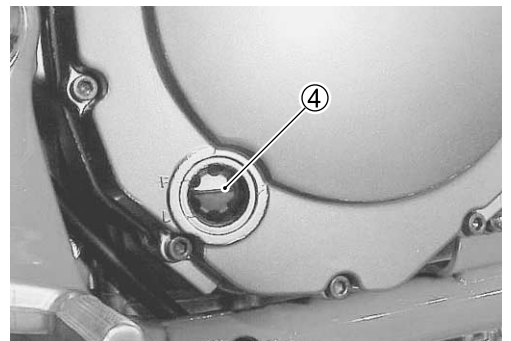

OIL FILTER REPLACEMENT

- Drain the engine oil as described in the engine oil replacement procedure.
- Remove the oil filter ① using the special tool.
- Apply engine oil lightly to the O-ring of the new oil filter, before installation.

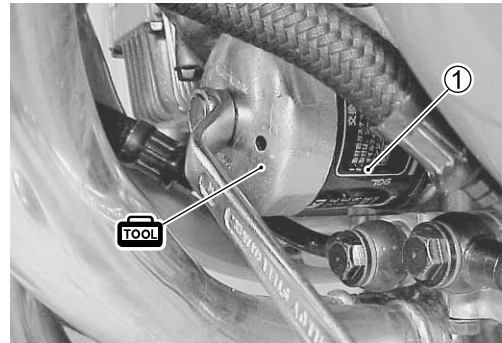


- Install the new oil filter. Turn it by hand until you feel that the oil filter O-ring has contacted the oil filter mounting surface. Then, tighten the oil filter two full turns using the special tool.

TOOL 09915-40610: Oil filter wrench

NOTE:

To properly tighten the oil filter, use the special tool. Never tighten the oil filter by hand.

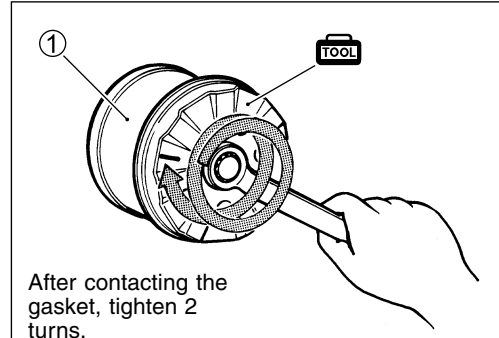

- Add new engine oil and check the oil level as described in the engine oil replacement procedure.

DATA NECESSARY AMOUNT OF ENGINE OIL

Oil change: 3.3 L (3.5/2.9 US/Imp qt)

Oil and filter change: 3.5 L (3.7/3.1 US/Imp qt)

Engine overhaul: 4.6 L (4.9/4.0 US/Imp qt)

⚠ CAUTION

ONLY USE A GENUINE SUZUKI MOTORCYCLE OIL FILTER.


Other manufacturer's oil filters may differ in thread specifications (thread diameter and pitch), filtering performance and durability which may lead to engine damage or oil leaks. Also, do not use a genuine Suzuki automobile oil filter on this motorcycle.

FUEL HOSE

Inspect every 6 000 km (4 000 miles, 6 months).
Replace every 4 years.

- Remove the seat.
- Remove the fuel tank mounting bolts. (☞ 4-3)
- Lift up the fuel tank.

Inspect the fuel hose ① for damage and fuel leakage. If any defects are found, the fuel hose must be replaced.

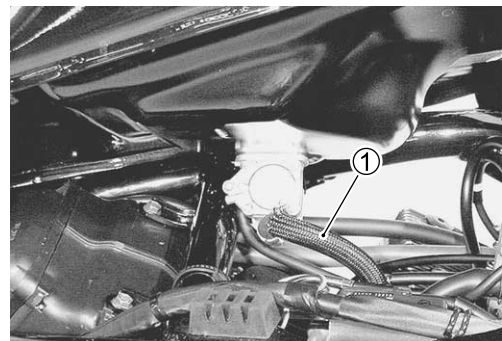

ENGINE IDLE SPEED

Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.


NOTE:

Make this adjustment when the engine is hot.

- Start the engine, turn the throttle stop screw and set the engine idle speed between 1 100 and 1 300 r/min.

DATA Engine idle speed: 1 200 ± 100 r/min


1 300 ± 100 r/min for Canada

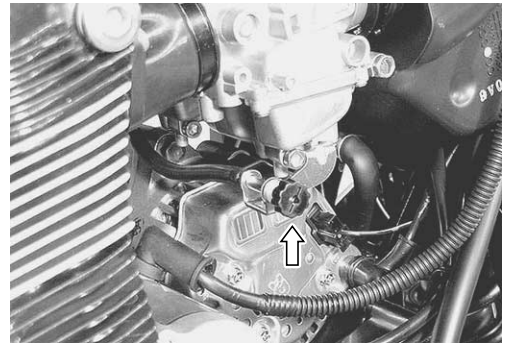

THROTTLE CABLE PLAY


Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.

Adjust the throttle cable play (A) as follows.

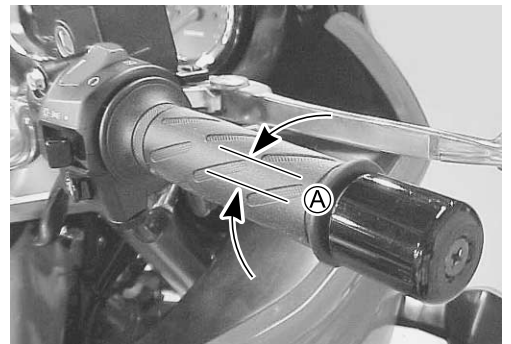


1st step:

- Loosen the locknut ① of the throttle returning cable ② and fully turn in the adjuster ③ fully into the threads.

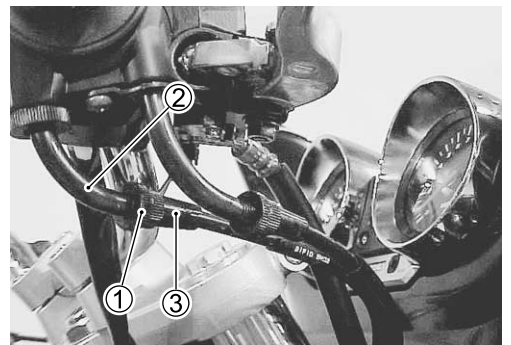

2nd step:

- Loosen the locknut ④ of the throttle pulling cable ⑤.
- Turn the adjuster ⑥ in or out until the throttle cable play (at the throttle grip) (A) is between 2 – 4 mm (0.08 – 0.16 in).
- Tighten the locknut ④ while holding the adjuster ⑥.

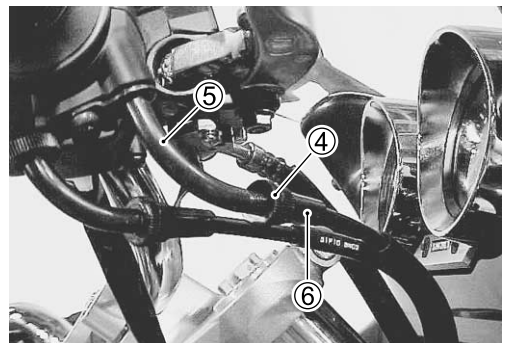

3rd step:

- While holding the throttle grip at the fully closed position, slowly turn out the adjuster ③ of the throttle returning cable ② until resistance is felt.
- Tighten the locknut ① while holding the adjuster ③.


DATA Throttle cable play \AA : 2 – 4 mm (0.08 – 0.16 in)

⚠ WARNING

After the adjustment is completed, check that handlebar movement does not raise the engine idle speed and that the throttle grip returns smoothly and automatically.

NOTE:

Major adjustments can be made at the carburetor side adjuster.

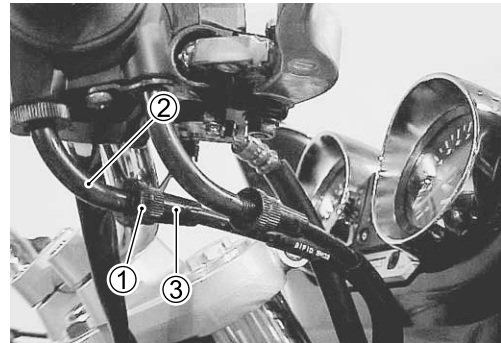

CARBURETOR SYNCHRONIZATION

Inspect initially at 1 000 km (600 miles, 1 month) (E-33 only) and every 12 000 km (7 500 miles, 12 months).

(4-24)

EVAPORATIVE EMISSION CONTROL SYSTEM (E-33 ONLY)

Inspect every 12 000 km (7 500 miles, 12 months).
Replace vapor hose every 4 years.

PAIR (AIR SUPPLY) SYSTEM

Inspect every 12 000 km (7 500 miles, 12 months).

(3-98)

CLUTCH

(CLUTCH FLUID)

Inspect every 12 000 km (12 months).

Replace fluid every 2 years.

(CLUTCH HOSE)

Inspect every 6 000 km (6 months).

Replace hose every 4 years.

CLUTCH FLUID LEVEL

- Keep the motorcycle upright and place the handlebars straight.
- Check the clutch fluid level by observing the lower limit line on the clutch fluid reservoir.
- If the level is found to be lower than the lower mark, replenish with BRAKE FLUID that the following specification.



Specification and Classification: DOT 4





⚠ WARNING

The clutch system of this motorcycle is filled with a glycol-based brake fluid. Do not use or mix different types of fluid such as silicone-based or petroleum-based. Do not use any brake fluid taken from old, used or unsealed containers. Never re-use brake fluid left over from the last servicing or stored for a long periods. Check the clutch hose and hose joints for cracks and fluid leakage.

BLEEDING AIR FROM THE CLUTCH FLUID CIRCUIT

The clutch fluid circuit may be purged of air in the following manner.

- Keep the motorcycle upright and place the handlebars straight.
- Fill up the master cylinder reservoir to the upper end of the inspection window. Replace the reservoir cap to prevent entry of dirt.
- Attach a pipe to the bleeder valve and insert the free end of the pipe into a receptacle.
- Squeeze and release the clutch lever several times in rapid succession, and squeeze the lever fully without releasing it. Loosen the bleeder valve by turning it a quarter of a turn so that the fluid runs into the receptacle; this will remove the tension of the clutch lever causing it to touch the handlebar grip. Then, close the valve, pump and squeeze the lever, and open the valve. Repeat this process until the fluid flowing into the receptacle no longer contains air bubbles.
- Close the bleeder valve, and disconnect the pipe. Fill the reservoir with brake fluid to the upper end of the inspection window.

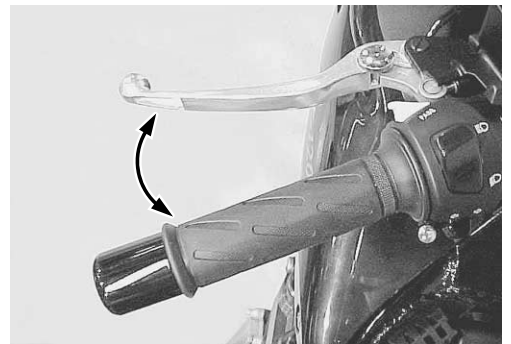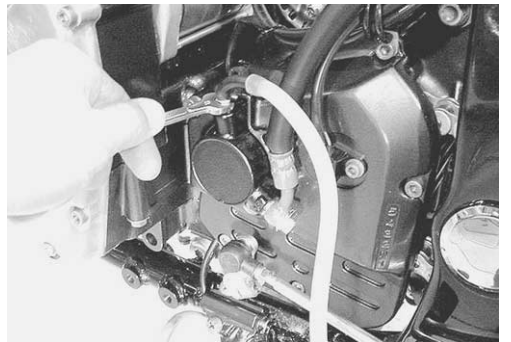

🔧 Air bleeder valve: 8 N·m (0.8 kgf·m, 6.0 lb·ft)

DRIVE CHAIN

**Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.
Lubricate every 1 000 km (600 miles).**


With the transmission in neutral, support the motorcycle using the center-stand and turn the rear wheel slowly by hand. Visually check the drive chain for the possible defects listed below.

- * Loose pins
- * Excessive wear
- * Damaged rollers
- * Improper chain adjustment
- * Dry or rusted links
- * Missing O-ring seals
- * Kinked or binding links

If any defects are found, the drive chain must be replaced.



NOTE:

When replacing the drive chain, replace the drive chain and sprockets as a set.

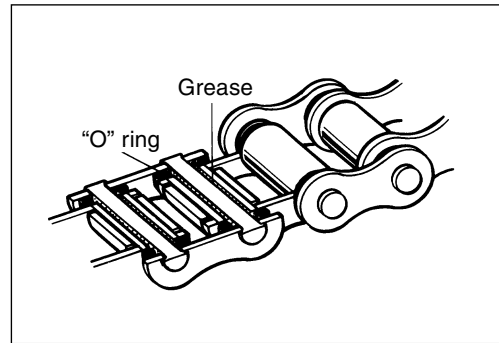


CHECKING

- Remove the cotter pin. (For E-03, 28, 33)
- Loosen the axle nut ①.
- Loosen the torque link nut (Rear side) ②.
- Loosen both chain adjuster lock nuts ③.
- Tense the drive chain fully by turning both chain adjuster bolts ④.

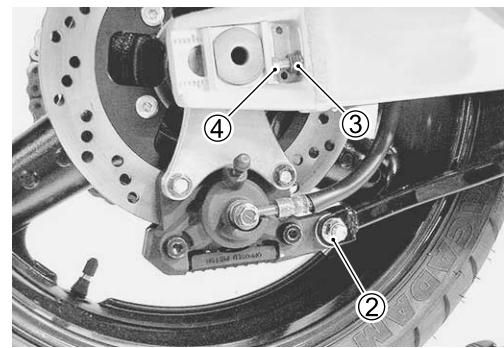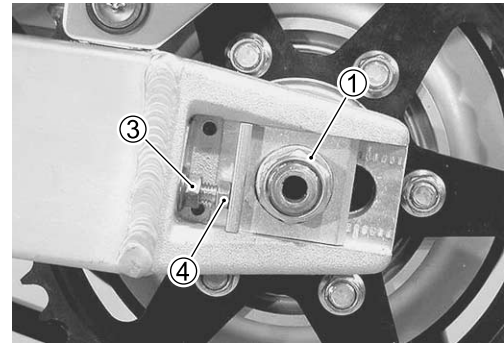

- Count out 21 pins (20 pitches) on the chain and measure the distance between the two points. If the distance exceeds the service limit, the chain must be replaced.

DATA Drive chain 20-pitch length
Service Limit: 319.4 mm (12.6 in)



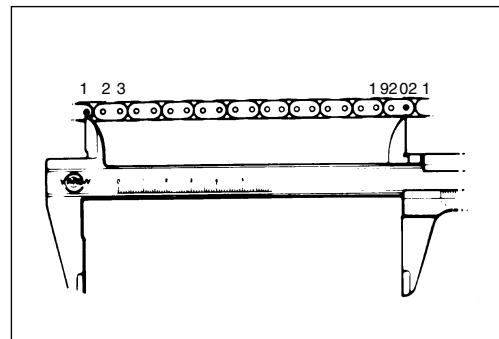


ADJUSTING

- Loosen or tighten both chain adjuster bolts ④ until there is 20 – 30 mm (0.8 – 1.2 in) of slack at the middle of the chain between the engine and rear sprockets as shown. The reference marks ① on both sides of the swingarm and the edge of each chain adjuster must be aligned to ensure that the front and rear wheels are correctly aligned.
- Place the motorcycle on its side-stand for accurate adjustment.
- After adjusting the drive chain, tighten the axle nut ① and torque link nut ② to the specified torque.
- Tighten both chain adjuster lock nuts ③ securely.

Rear axle nut: 100 N·m (10.0 kgf·m, 72.5 lb-ft)

- Install a new cotter pin. (For E-03, 28, 33)

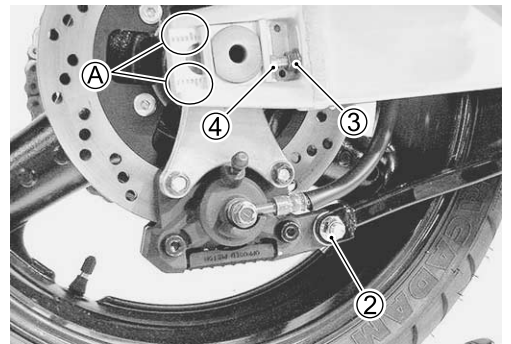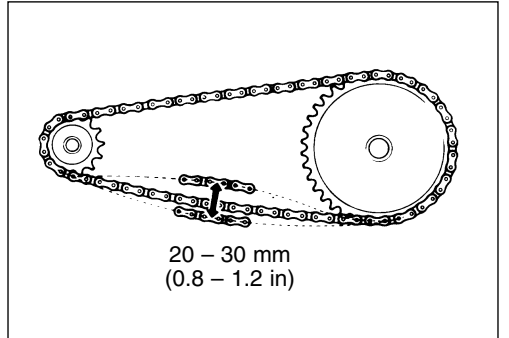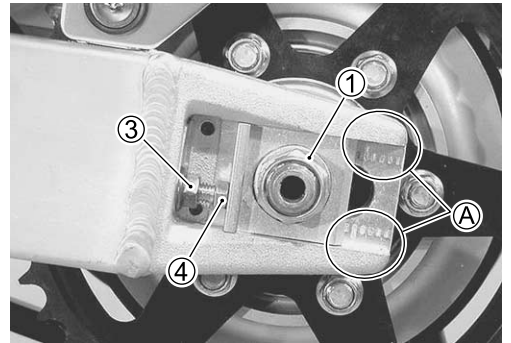

CLEANING AND LUBRICATING

- Clean the drive chain with kerosine. If the drive chain tends to rust quickly, the intervals must be shortened.

CAUTION

Do not use trichloroethylene, gasoline or any similar solvent.


These fluids have too great a dissolving power for this chain and they can damage the O-rings. Use only kerosine to clean the drive chain.

- After cleaning and drying the chain, oil it with a heavyweight motor oil.

CAUTION

* **Do not use any oil sold commercially as “drive chain oil”. Such oil can damage the O-rings.**

* **The standard drive chain is a RKGB50MFOZ1. SUZUKI recommends to use this standard drive chain as a replacement.**

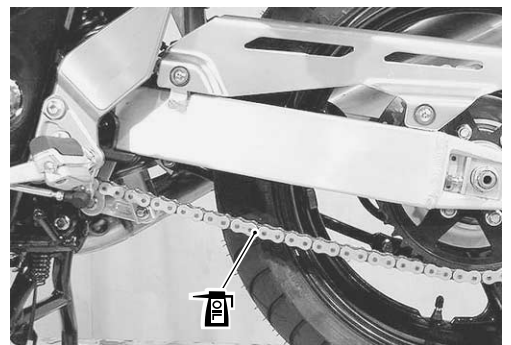

BRAKES

(BRAKE)

Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.

(BRAKE HOSE AND BRAKE FLUID)

Inspect every 6 000 km (4 000 miles, 6 months).

Replace hoses every 4 years. Replace fluid every 2 years.

BRAKE FLUID LEVEL


- Keep the motorcycle upright and place the handlebar straight.
- Check the brake fluid level by observing the lower limit line on the front and rear brake fluid reservoirs.
- When the brake fluid level is below the lower limit line, replenish with brake fluid that meets the following specification.



Specification and Classification: DOT 4

⚠ WARNING

- * The brake system of this motorcycle is filled with a glycol-based brake fluid. Do not use or mix different types of fluid such as silicone-based and petroleum-based fluids. Do not use any brake fluid taken from old, used or unsealed containers. Never re-use brake fluid left over from the last servicing or stored for a long period of time.
- * Brake fluid, if it leaks, will interfere with safe running and immediately discolor painted surfaces. Check the brake hoses and hose joints for cracks and oil leakage before riding.


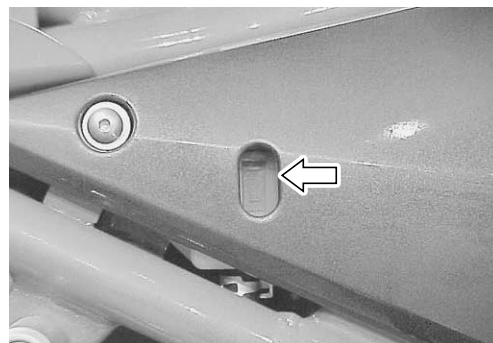


BRAKE PADS

The extent of brake pad wear can be checked by observing the grooved limit line ① on the pad. When the wear exceeds the grooved limit line, replace the pads with new ones. (☞ 5-44 and -54)

▲ CAUTION


Replace the brake pads as a set, otherwise braking performance will be adversely affected.

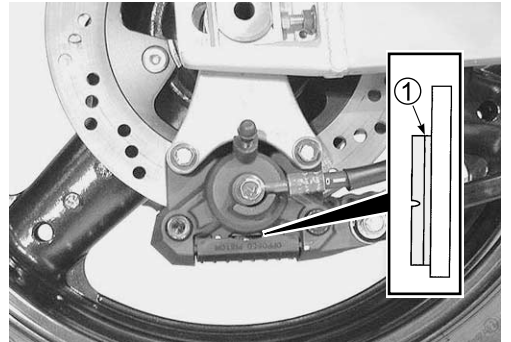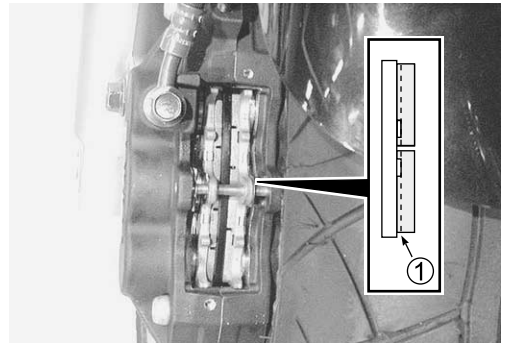

BRAKE PEDAL HEIGHT


- Loosen the locknut ①.
- Turn the push rod ② until the brake pedal is 55 mm (2.2 in) ③ below the top of the footrest.
- Tighten the locknut ① securely.

DATA Brake pedal height ③
Standard: 55 mm (2.2 in)

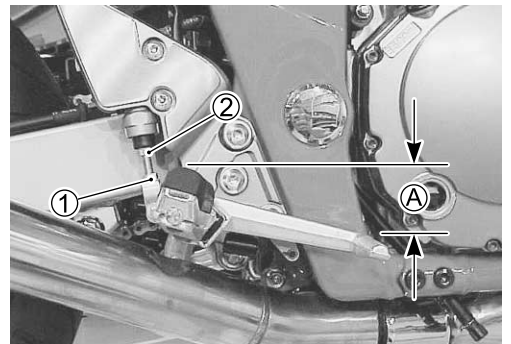

BRAKE LIGHT SWITCH

Adjust the rear brake light switch so that the brake light will come on just before pressure is felt when the brake pedal is depressed.

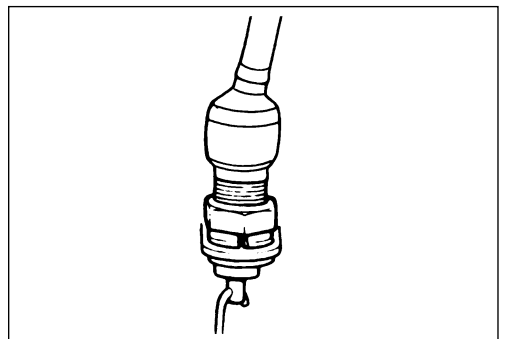

AIR BLEEDING THE BRAKE FLUID CIRCUIT

Air trapped in the brake fluid circuit acts like a cushion to absorb a large proportion of the pressure developed by the master cylinder and thus interferes with the full braking performance of the brake caliper. The presence of air is indicated by “sponginess” of the brake lever and also by lack of braking force. Considering the danger to which such trapped air exposes the machine and rider, it is essential that, after remounting the brake and restoring the brake system to the normal condition, the brake fluid circuit be purged of air in the following manner:

- Fill the master cylinder reservoir to the top of the inspection window. Replace the reservoir cap to prevent dirt from entering.
- Attach a hose to the air bleeder valve, and insert the free end of the hose into a receptacle.

- Front brake: Bleed air from the brake system.
- Squeeze and release the brake lever several times in rapid succession and squeeze the lever fully without releasing it. Loosen the air bleeder valve by turning it a quarter of a turn so that the brake fluid runs into the receptacle, this will remove the tension of the brake lever causing it to touch the handlebar grip. Then, close the air bleeder valve, pump and squeeze the lever, and open the valve. Repeat this process until the fluid flowing into the receptacle no longer contains air bubbles.

NOTE:


While bleeding the brake system, replenish the brake fluid in the reservoir as necessary. Make sure that there is always some fluid visible in the reservoir.

- Close the air bleeder valve, and disconnect the hose. Fill the reservoir with brake fluid to the top of the inspection window.



 **Air bleeder valve: 8 N·m (0.8 kgf·m, 6.0 lb-ft)**

CAUTION

Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials, etc.

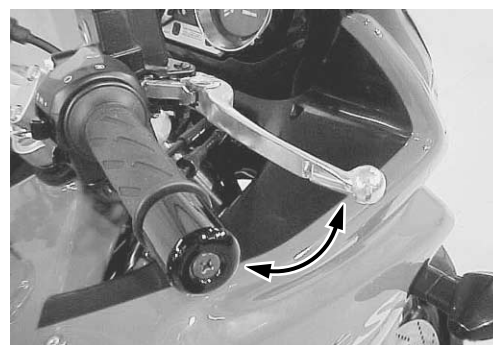

- Rear brake: The only difference between bleeding the front and rear brakes is that the rear master cylinder is actuated by a pedal.

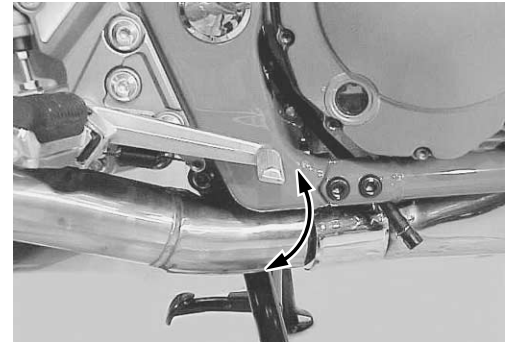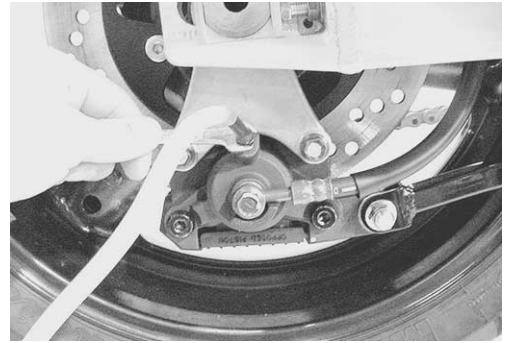


TIRES

Inspect every 6 000 km (4 000 miles, 6 months).

TIRE TREAD CONDITION


Operating the motorcycle with excessively worn tires will decrease riding stability and consequently invite a dangerous situation. It is highly recommended to replace a tire when the remaining depth of the tire tread reaches the following specification.

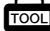 **09900-20805: Tire depth gauge**

 **Tire tread depth**

Service limit: FRONT 1.6 mm (0.06 in)


REAR 2.0 mm (0.08 in)

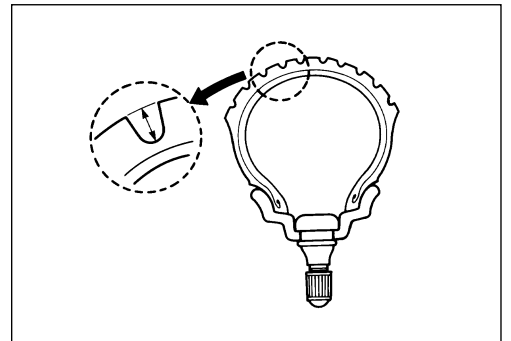

TIRE PRESSURE

If the tire pressure is too high or too low, steering will be adversely affected and tire wear will increase. Therefore, maintain the correct tire pressure for good roadability and a longer tire life. Cold inflation tire pressure is as follows.

COLD INFLATION TIRE PRESSURE	SOLO RIDING			DUAL RIDING		
	kPa	kgf/cm ²	psi	kPa	kgf/cm ²	psi
FRONT	250	2.50	36	250	2.50	36
REAR	250	2.50	36	250	2.50	36

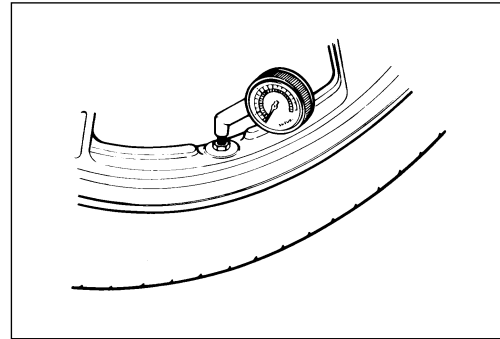

▲ CAUTION

The standard tire fitted on this motorcycle is a 120/70 ZR17 (58 W) for the front (MICHELIN MACADAM 90XM) and a 180/55 ZR17 (73 W) for the rear (MICHELIN MACADAM 90XM). The use of tires other than those specified may cause instability. It is highly recommended to use the specified tires.

STEERING

Inspect initially at 1 000 km (600 miles, 1 month) and every 12 000 km (7 500 miles, 12 months) thereafter.


The steering should be adjusted properly for smooth turning of the handlebars and safe operation. Overtight steering prevents smooth turning of the handlebars and too loose steering will cause poor stability. Check that there is no play in the front fork. Support the motorcycle so that the front wheel is off the ground. With the wheel facing straight ahead, grasp the lower fork tubes near the axle and pull forward. If play is found, readjust the steering. (☞ 5-27)



FRONT FORKS

Inspect every 12 000 km (7 500 miles, 12 months).



Inspect the front fork for oil leakage, scoring or scratches on the outer surface of the inner tubes. Replace any defective parts, if necessary. (👉 5-12)

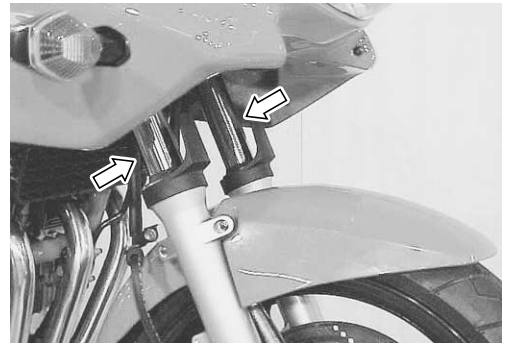

REAR SUSPENSION

Inspect every 12 000 km (7 500 miles, 12 months).

Inspect the rear shock absorbers for oil leakage and check that there is no play in the swingarm. (👉 5-34)









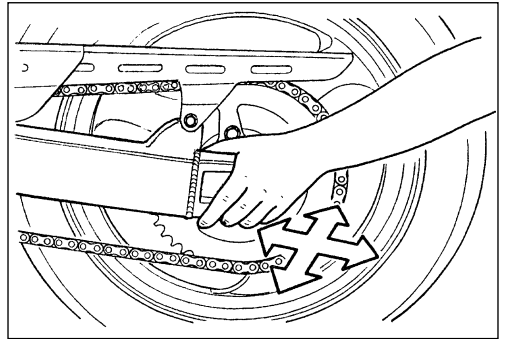
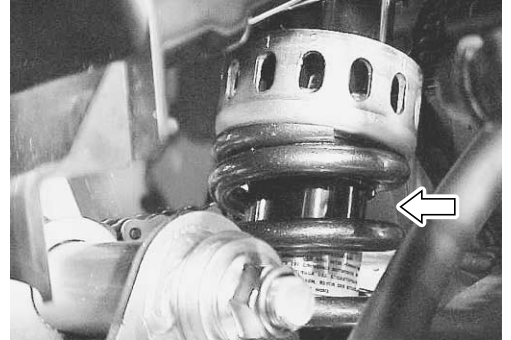


CHASSIS BOLTS AND NUTS

Tighten initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 12 months) thereafter.

Check that all chassis bolts and nuts are tightened to their specified torque. (Refer to page 2-23 for the locations of the following nuts and bolts.)

ITEM	N·m	kgf·m	lb·ft
① Steering stem head nut	65	6.5	47.0
② Front fork upper clamp bolt	23	2.3	16.5
③ Front fork lower clamp bolt	23	2.3	16.5
④ Front fork cap bolt	23	2.3	16.5
⑤ Front axle	100	10.0	72.5
⑥ Front axle pinch bolt	23	2.3	16.5
⑦ Handlebar holder bolt	23	2.3	16.5
⑧ Front brake/clutch master cylinder mounting bolt	10	1.0	7.0
⑨ Front brake caliper mounting bolt	39	3.9	28.0
⑩ Front brake caliper housing bolt	21	2.1	15.2
⑪ Brake hose union bolt (front & rear)	23	2.3	16.5
⑫ Air bleeder valve (brake & clutch)	8	0.8	6.0
⑬ Brake disc bolt (front & rear)	23	2.3	16.5
⑭ Rear brake caliper mounting bolt	25	2.5	18.0
⑮ Rear brake caliper housing bolt	30	3.0	21.5
⑯ Rear brake master cylinder mounting bolt	23	2.3	16.5
⑰ Rear brake master cylinder rod locknut	18	1.8	13.0
⑱ Front footrest bolt	39	3.9	28.0
⑲ Front footrest bracket bolt	23	2.3	16.5
⑳ Swingarm pivot nut	100	10.0	72.5
㉑ Rear shock absorber mounting nut (upper & lower)	50	5.0	36.0
㉒ Cushion lever mounting nut	78	7.8	56.5
㉓ Cushion lever rod mounting nut	78	7.8	56.5
㉔ Rear axle nut	100	10.0	72.5
㉕ Rear sprocket nut	60	6.0	43.5
㉖ Rear torque link nut (front & rear)	35	3.5	25.5

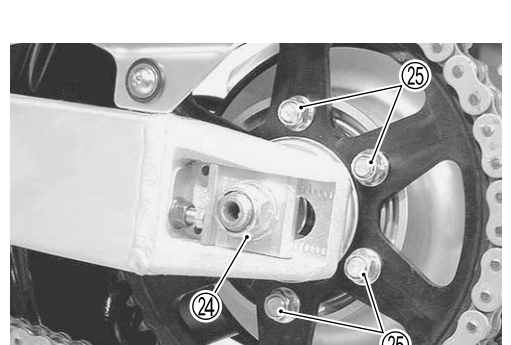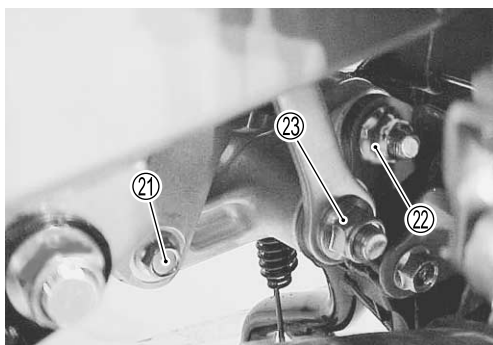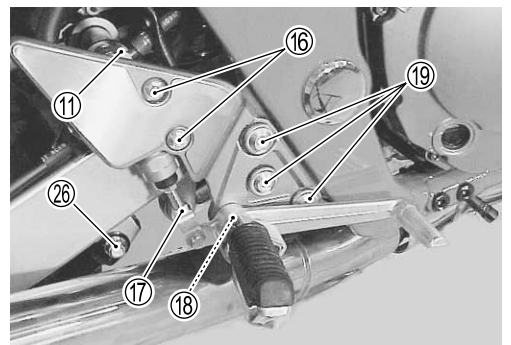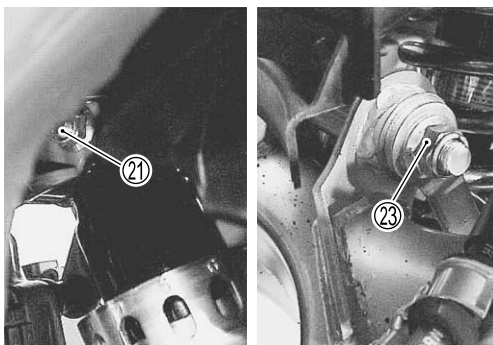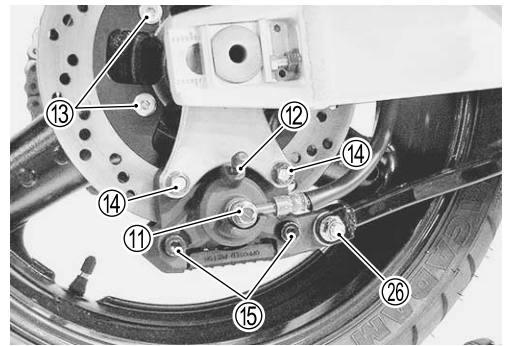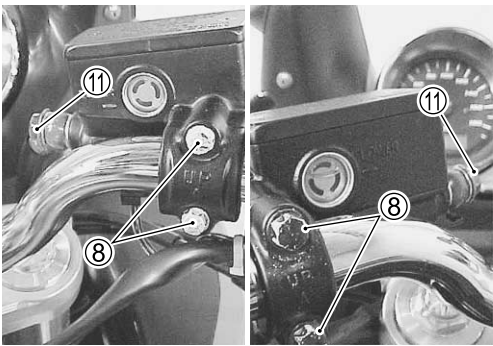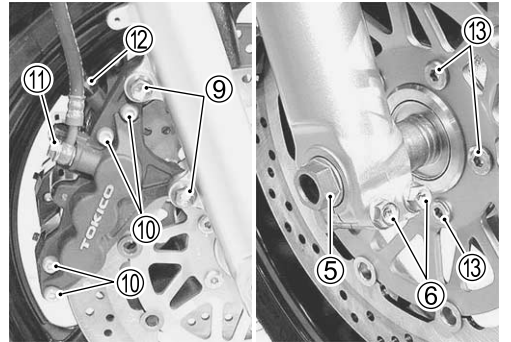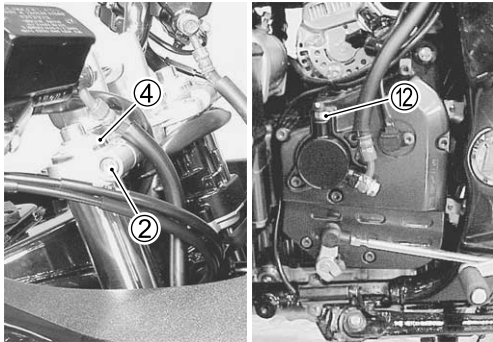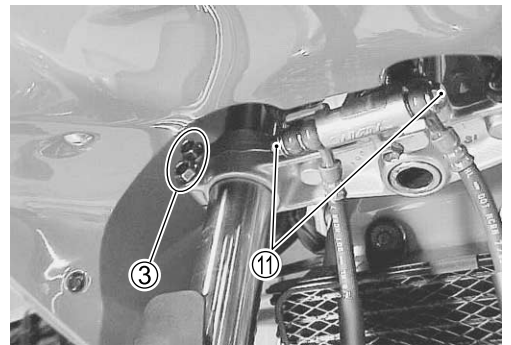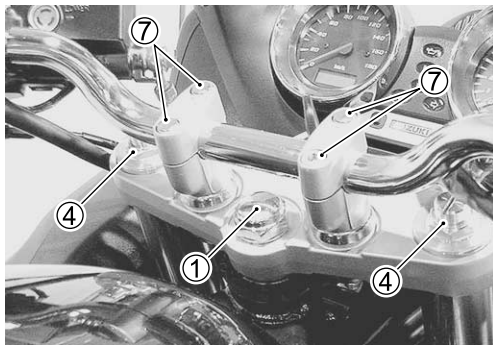

COMPRESSION PRESSURE CHECK

The compression pressure reading of a cylinder is a good indicator of its internal condition.

The decision to overhaul the cylinder is often based on the results of a compression test. Periodic maintenance records kept at your dealership should include compression readings for each maintenance service.

COMPRESSION PRESSURE SPECIFICATION

Standard	Limit	Difference
1 250 kPa (12.5 kgf/cm ²) 178 psi	875 kPa (8.75 kgf/cm ²) 124 psi	200 kPa (2 kgf/cm ²) 28 psi

Low compression pressure can indicate any of the following conditions:

- * Excessively worn cylinder walls
- * Worn piston or piston rings
- * Piston rings stuck in grooves
- * Poor valve seating
- * Ruptured or otherwise defective cylinder head gasket

Overhaul the engine in the following cases:

- * Compression pressure in one of the cylinders is less than 875 kPa (8.75 kgf/cm², 124 psi).
- * The difference in compression pressure between any two cylinders is more than 200 kPa (2 kgf/cm², 28 psi).
- * All compression pressure readings are below 1 000 kPa (10 kgf/cm², 142 psi) even when they measure more than 875 kPa (8.75 kgf/cm², 124 psi).

COMPRESSION TEST PROCEDURE

NOTE:

- * Before testing the engine for compression pressure, make sure that the cylinder head nuts are tightened to the specified torque values and the valves are properly adjusted.
- * Have the engine warmed-up before testing.
- * Make sure that the battery is fully-charged.

Remove the related parts and test the compression pressure in the following manner.

- Remove the fuel tank. (☞ 4-3)
- Remove all of the spark plugs.
- Install the compression gauge and adaptor in the spark plug hole. Make sure that the connection is tight.
- Keep the throttle grip in the fully opened position.
- Press the starter button and crank the engine for a few seconds. Record the maximum gauge reading as the cylinder compression.
- Repeat this procedure with the other cylinders.



 **09915-64510: Compression gauge set**
09915-63310: Adaptor

OIL PRESSURE CHECK

Check the engine oil pressure periodically. This will give a good indication of the condition of the moving parts.

OIL PRESSURE SPECIFICATION

Above 300 kPa (3.0 kgf/cm², 43 psi)
Below 600 kPa (6.0 kgf/cm², 85 psi) at 3 000 r/min., oil temp. at 60°C (140°F)

If the oil pressure is lower or higher than the specification, the following causes may be considered.

LOW OIL PRESSURE

- * Clogged oil filter
- * Oil leakage from the oil passage
- * Damaged O-ring
- * Defective oil pump
- * Combination of the above items


HIGH OIL PRESSURE

- * Engine oil viscosity is too high
- * Clogged oil passage
- * Combination of the above items


OIL PRESSURE TEST PROCEDURE

Start the engine and check if the oil pressure indicator light is turned on. If the light stays on, check the oil pressure indicator light circuit. If the circuit is OK, check the oil pressure in the following manner.

- Remove the main oil gallery plug ①.
- Install the oil pressure gauge and adaptor into the main oil gallery.
- Warm up the engine as follows:
 Summer: 10 min. at 2 000 r/min.
 Winter: 20 min. at 2 000 r/min.
- After warm up, increase the engine speed to 3 000 r/min. (observe the tachometer), and read the oil pressure gauge.

-  **09915-74510: Oil pressure gauge**
- 09915-74540: Oil pressure gauge attachment**
- 09915-77330: Meter (for high pressure)**

 **Main oil gallery plug: 40 N·m (4.0 kgf·m, 29.0 lb·ft)**

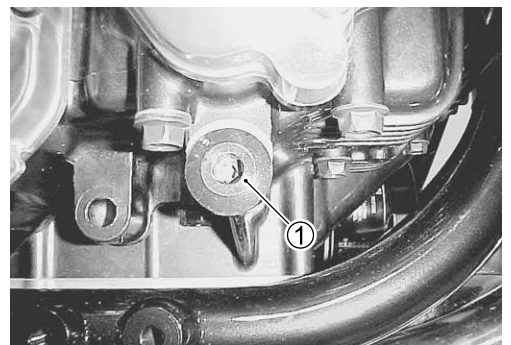

ENGINE

CONTENTS

ENGINE COMPONENTS REMOVABLE WITH ENGINE IN PLACE	3- 2
ENGINE REMOVAL AND REINSTALLATION	3- 3
ENGINE REMOVAL	3- 3
ENGINE REINSTALLATION	3- 8
ENGINE DISASSEMBLY AND REASSEMBLY	3-12
ENGINE DISASSEMBLY	3-12
ENGINE REASSEMBLY	3-26
ENGINE COMPONENTS INSPECTION AND SERVICE	3-50
CAMSHAFT/CYLINDER HEAD	3-50
CAM CHAIN TENSIONER	3-52
VALVE	3-53
VALVE GUIDE	3-56
VALVE SEAT	3-57
VALVE SPRING	3-60
CYLINDER	3-65
PISTON	3-65
PISTON RING	3-66
PISTON PIN	3-67
CLUTCH	3-69
STARTER CLUTCH	3-70
GEARSHIFT LINKAGE	3-71
TRANSMISSION	3-73
CONROD	3-79
CRANKSHAFT	3-82
ENGINE LUBRICATION SYSTEM	3-87
PAIR (AIR SUPPLY) SYSTEM	3-98

ENGINE COMPONENTS REMOVABLE WITH ENGINE IN PLACE

The parts listed below can be removed and reinstalled without removing the engine from the frame. Refer to the page listed in each section for removal and reinstallation instructions.

ENGINE CENTER

	See page
Exhaust pipe/muffler	3-6 and -9
Oil hoses	3-12 and -49
Oil filter	3-12 and -49
Oil cooler	3-6 and -9
Oil pan	3-21 and -32
Engine oil pressure regulator	3-88 and -89
Oil sump filter	3-88 and -89
Carburetors	3-4 and -10
Cam chain tensioner	3-13 and -47
Cylinder head cover	3-12 and -48
Camshafts	3-13 and -44
Cylinder head	3-14 and -42
Cylinder	3-15 and -42
Pistons	3-15 and -41
Starter motor	3-16 and -40
Generator	3-16 and -40
PAIR system	3-4, -12, -49 and -98

ENGINE LEFT SIDE

	See page
Gearshift lever	3-5 and -11
Engine sprocket cover	3-5 and -10
Engine sprocket and drive chain	3-5 and -10
Gear position switch body	3-20 and -32
Starter clutch cover	3-19 and -33
Starter idle gear	3-19 and -33
Starter clutch	3-20 and -33

ENGINE RIGHT SIDE



	See page
Clutch cover	3-16 and -37
Signal generator	3-16 and -39
Oil pressure switch	3-16 and -39
Clutch pressure, drive and driven plates	3-18 and -35
Clutch sleeve hub	3-18 and -35
Oil pump driven gear	3-19 and -34
Generator/oil pump drive gears	3-18 and -35
Primary driven gear	3-18 and -35
Gearshift shaft	3-18, -34, -71 and -72
Gearshift pawl and cam driven gear ..	3-19 and -34

ENGINE REMOVAL AND INSTALLATION

ENGINE REMOVAL

Before taking the engine out of the frame, wash the engine using a steam cleaner. Engine removal is sequentially explained in the following steps.


- Remove the seat and frame side covers. (☞ 5-5 and -6)
- Remove the fuel tank. (☞ 4-3)
- Remove the fuel tank mounting bracket bolts ①.
- Remove the air cleaner box mounting bolts ②.
- Remove the document tray ③.

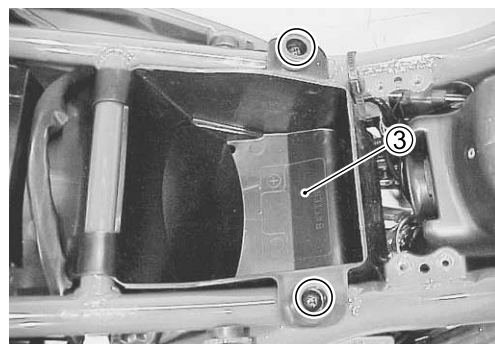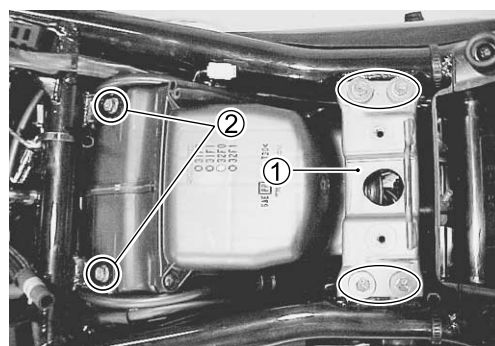


- Remove the battery.

NOTE:


First disconnect the battery \ominus lead wire, then disconnect the battery \oplus lead wire.

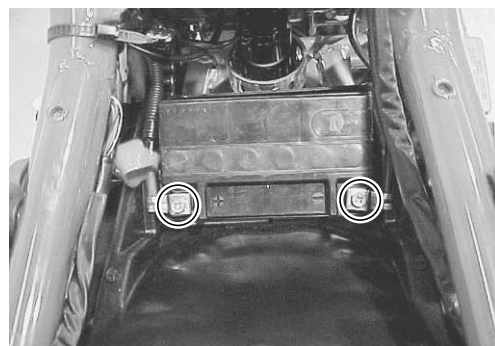

- Remove the oil drain plug ④ and drain the engine oil. (☞ 2-9)

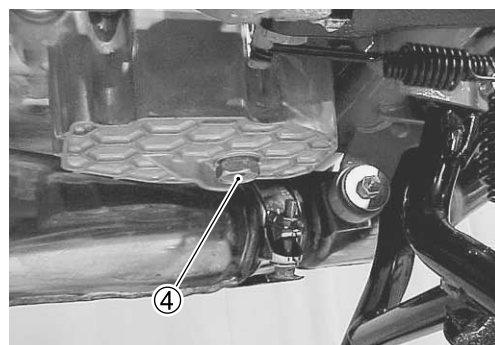


- Disconnect all of the spark plug caps ⑤.
- Disconnect the breather hose ⑥.

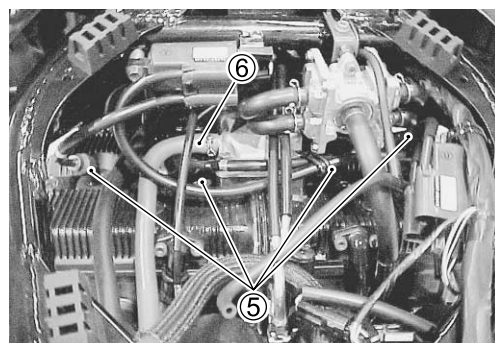


- Disconnect the PAIR valve hoses ①, ② and ③.


- ① Air cleaner hose
- ② Vacuum hose
- ③ PAIR hoses

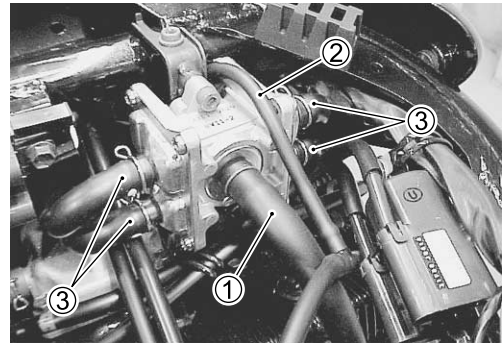


- Loosen the respective carburetor clamp screws ④.

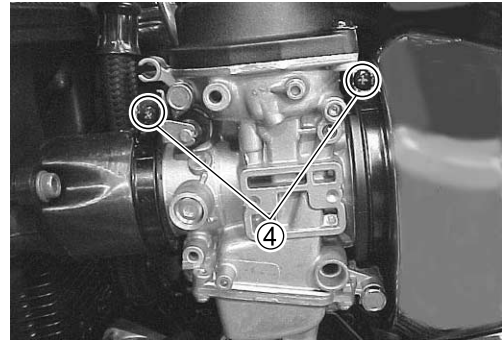


- Disconnect the throttle position sensor lead wire coupler ⑤.
- Slightly move the air cleaner box backward.

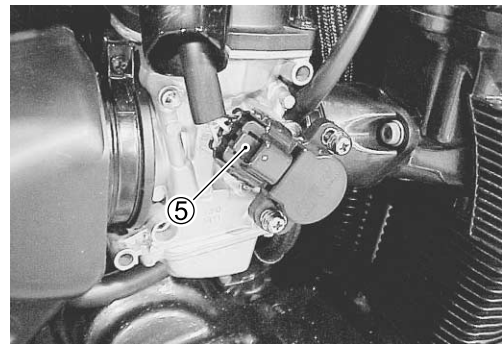


- Remove the carburetor assembly by disconnecting the throttle cables (⑥ and ⑦) and starter cable ⑧.

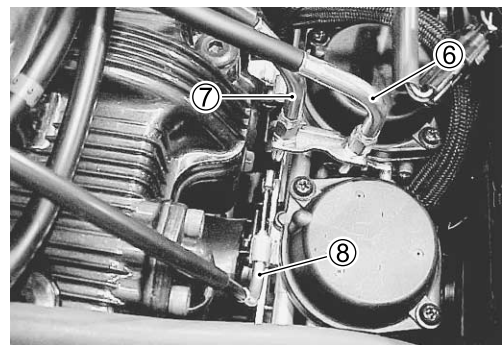


- Remove the wire clamp.
- Disconnect the various lead wires.
 - ⑨ Gear position switch
 - ⑩ Side-stand switch
 - ⑪ Speed sensor
 - ⑫ Signal generator/Oil pressure switch

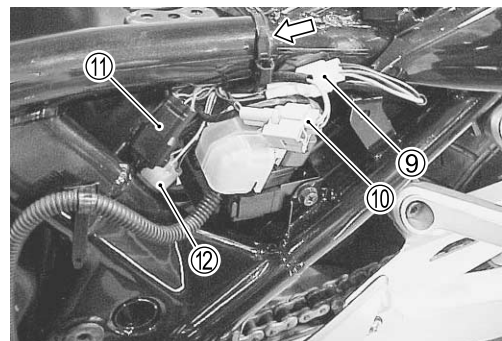

- Remove the two wire clamps.
- Disconnect the starter motor lead wire ①.
- Disconnect the generator lead wire ② and coupler ③.

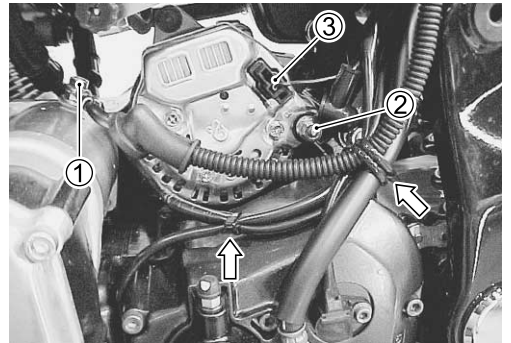


- Remove the gearshift lever by removing its mounting bolt.
- Remove the engine sprocket cover by removing the bolts.

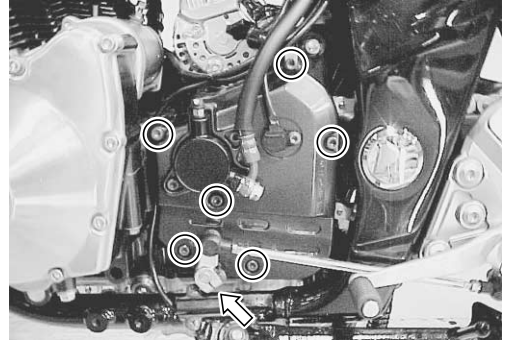


- Remove the speed sensor rotor ④.
- Remove the engine sprocket nut ⑤ while depressing the rear brake pedal.


 **Engine sprocket nut: 115 N·m (11.5 kgf·m)**

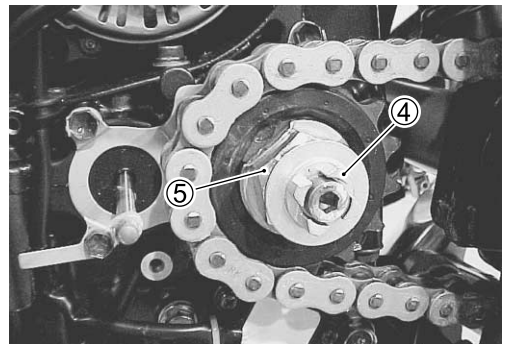


- Loosen the rear axle nut ⑥ and chain adjusters ⑦ to provide additional chain slack.
- Remove the engine sprocket.

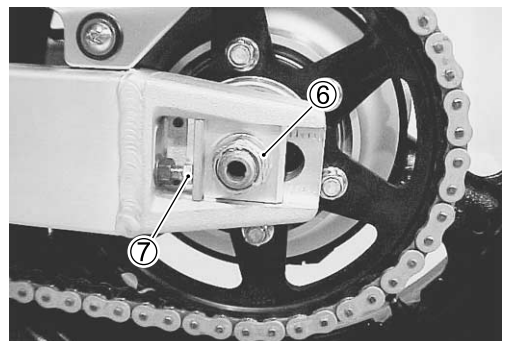


- Remove the eight exhaust pipe bolts.

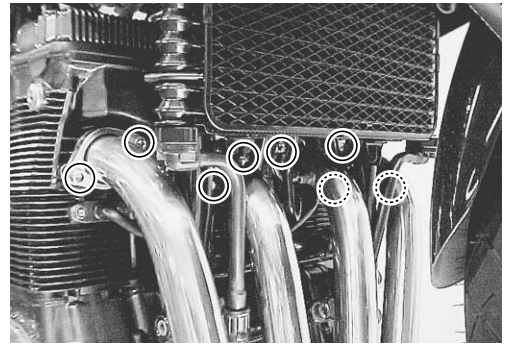


- Remove the muffler mounting bolts.
- Remove the exhaust pipe/muffler.

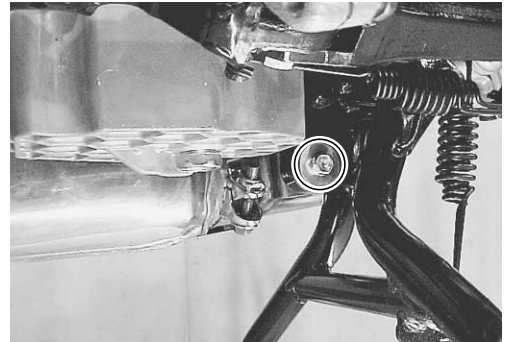

- Remove the oil cooler hose union bolts ①.

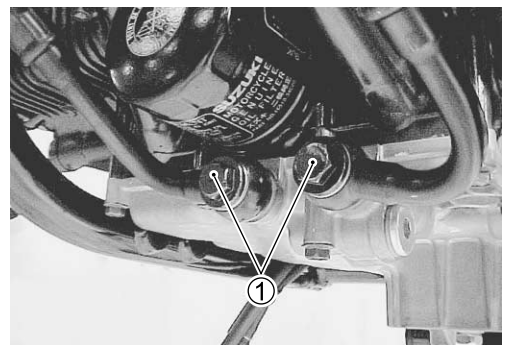



- Remove the oil cooler by removing the mounting bolts ②.

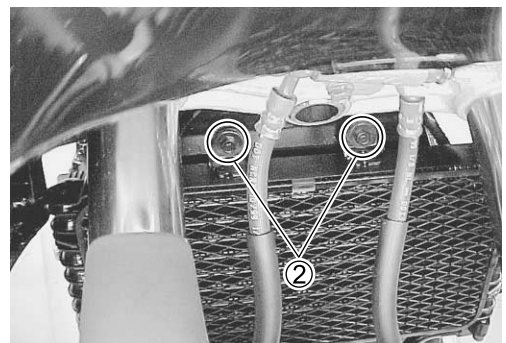

- Support the engine with a proper engine jack.
- Remove the frame down tube mounting bolts and nuts.
- Remove the frame down tube ①.
- Remove the engine mounting bolts, nuts, spacer and brackets.
- Gradually lower the engine.

NOTE:

Only for E-28 model; The engine mounting brackets (A) are not equipped at the frame down tubes.

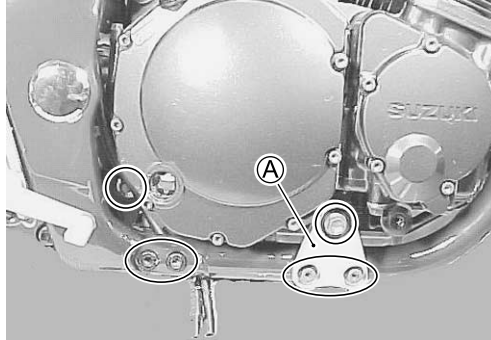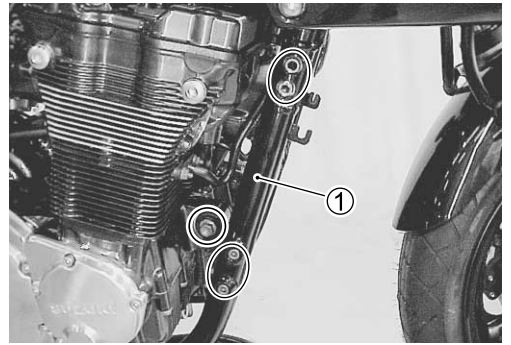

ENGINE REINSTALLATION

Reinstall the engine in the reverse order of engine removal.


- Insert the two long bolts from left side. Install the brackets, spacer, bolts and nuts properly, as shown in the following illustration.

NOTE:

The engine mounting nuts are self-locking. Once the nuts have been removed, they are no longer of any use. Be sure to use new nuts and tighten them to the specified torque.



ITEM	N-m	kgf-m	lb-ft
①, ②, ③	50	5.0	36.0
④, ⑨	55	5.5	40.0
⑤, ⑥	88	8.8	63.5
⑦, ⑩	23	2.3	16.5
⑧	70	7.0	50.5

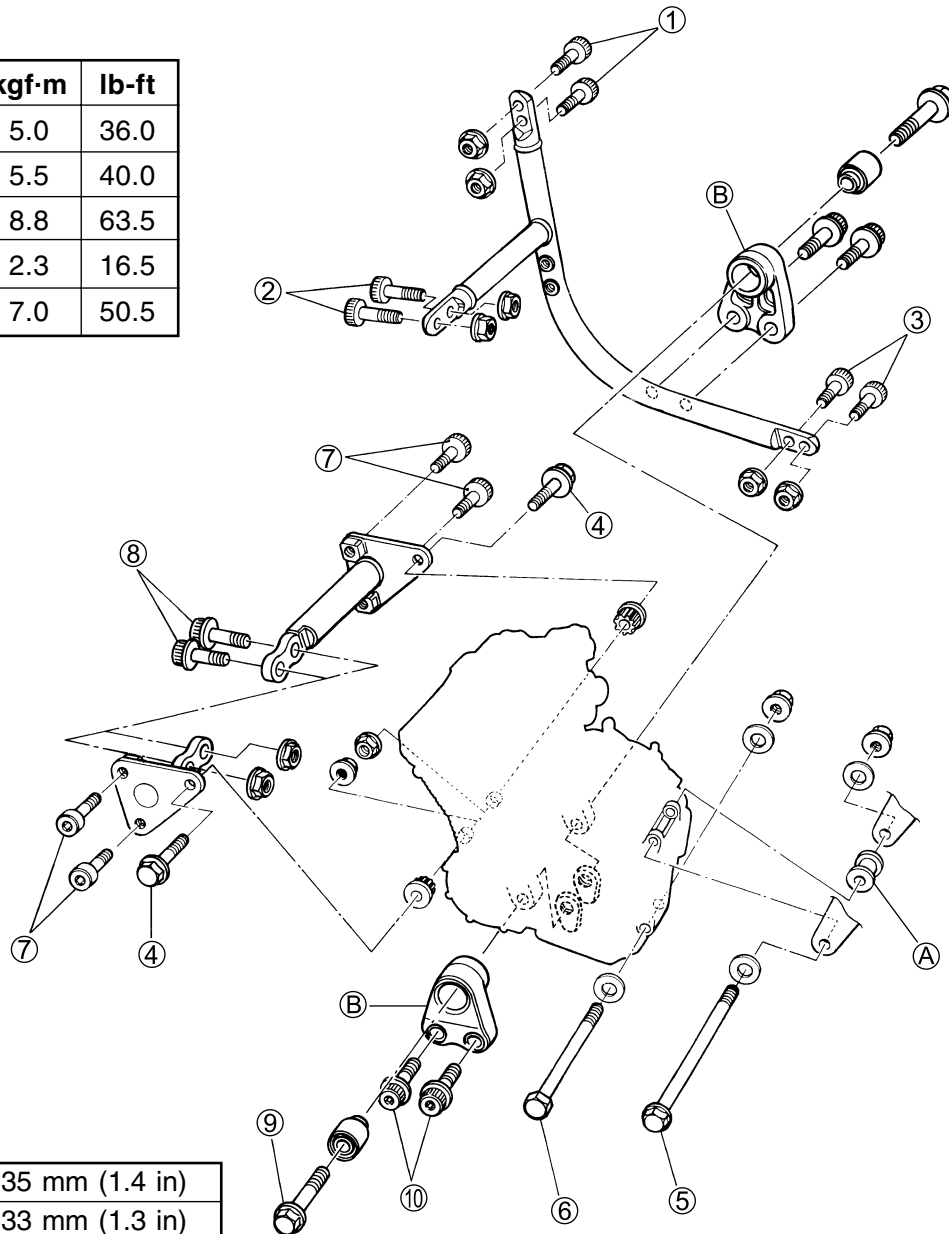

LENGTH

Bolt ①, ②	35 mm (1.4 in)
Bolt ③	33 mm (1.3 in)
Bolt ④	55 mm (2.2 in)
Bolt ⑤	180 mm (7.1 in)
Bolt ⑥	132 mm (5.2 in)
Bolt ⑦	50 mm (2.0 in)
Bolt ⑧	30 mm (1.2 in)
Bolt ⑨	75 mm (3.0 in)
Bolt ⑩	25 mm (1.0 in)
Spacer RH ①	27 mm (1.1 in)

NOTE:


When reusing the removed engine mounting bolts (④, ⑤ and ⑥), apply a small quantity of the **THREAD LOCK "1342"** to their threads.

 **99000-32050: THREAD LOCK "1342"**

Only for E-28 model; The engine mounting brackets ①, bolts ⑨ and bolts ⑩ are not equipped at the frame down tubes.

- Tighten the oil cooler mounting bolts to the specified torque.

 Oil cooler mounting bolt: 10 N·m (1.0 kgf·m, 7.0 lb-ft)

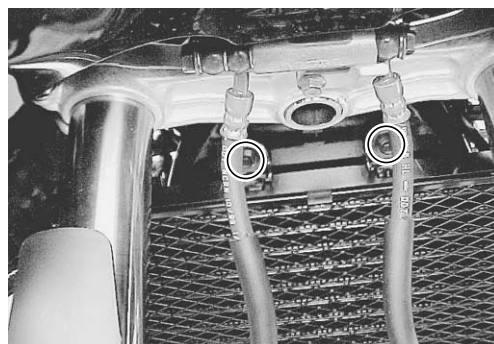

- Tighten the oil cooler hose union bolts to the specified torque.

 Oil cooler hose union bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

▲ CAUTION

Use a new gasket washer to prevent oil leakage.



NOTE:


When installing a new exhaust pipe/muffler assembly connector, remove all of the old sealer from the exhaust pipe and from inside the muffler. Apply the exhaust gas sealer to both the inside and outside of the new exhaust pipe/muffler assembly connector.

EXHAUST GAS SEALER: PREMATEX 1372

- Install the exhaust pipe gaskets ①.

▲ CAUTION



Be sure to face the tabs **A** on the exhaust pipe gasket ① to the inside when installing it.

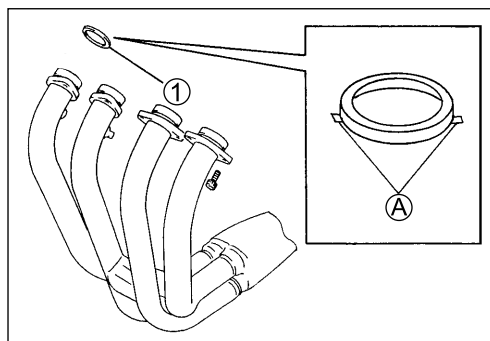

- Tighten the exhaust pipe bolts and muffler mounting bolts to the specified torque.

 Exhaust pipe bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

Muffler mounting bolt: 29 N·m (2.9 kgf·m, 21.0 lb-ft)

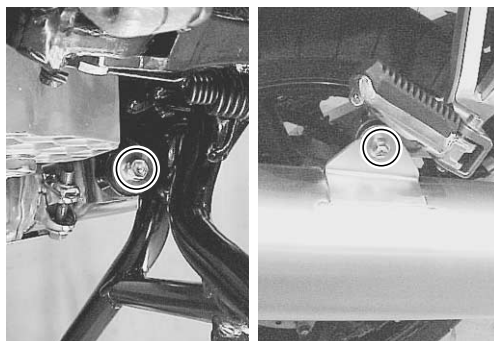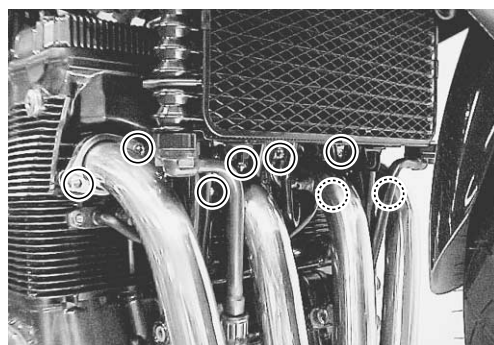

- Apply THREAD LOCK SUPER “1303” to the threads of the driveshaft.

1303 99000-32030: THREAD LOCK SUPER “1303”

- Tighten the engine sprocket nut ① to the specified torque.

Engine sprocket nut ①: 115 N·m (11.5 kgf·m, 83.0 lb-ft)

- Apply a small quantity of THREAD LOCK “1342” to the speed sensor rotor bolt ②.



1342 99000-32050: THREAD LOCK “1342”

- Tighten the speed sensor rotor bolt ② to the specified torque.


Speed sensor rotor bolt ②: 20 N·m (2.0 kgf·m, 14.5 lb-ft)

- Before installing the engine sprocket cover, apply a small quantity of SUZUKI SUPER GREASE “A” to the clutch release mechanism.


AH 99000-25010: SUZUKI SUPER GREASE “A”

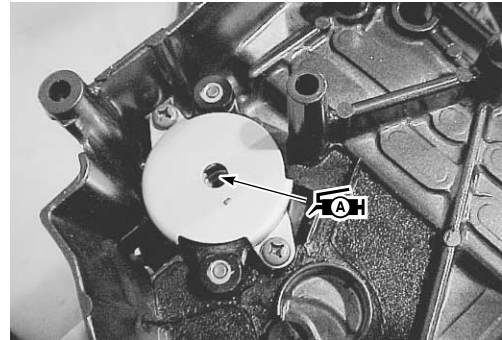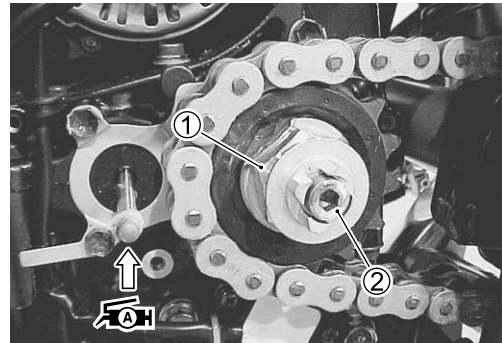

- Install the spark plug caps onto the spark plugs. Make sure that each spark plug cap is installed in the correct location. The number on each spark plug cord refers to the appropriate cylinder.

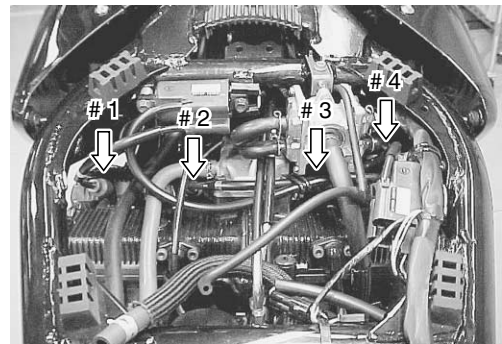


- Position the carburetor clamps as shown.

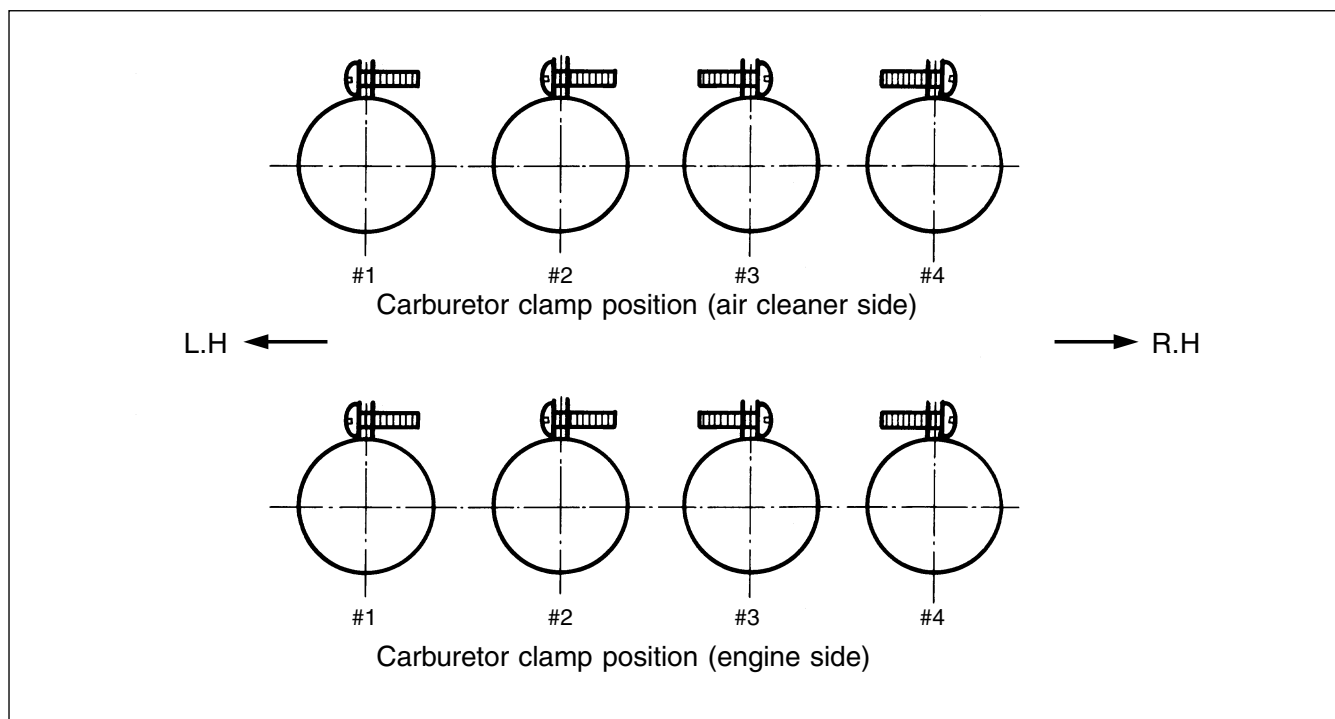

- After remounting the engine, route the wire harness, cables and hoses properly. (☞7-12)


- Install the gearshift lever to the gearshift shaft in the correct position.

DATA Gearshift lever height [Ⓐ]
 Standard: 55 mm (2.2 in)

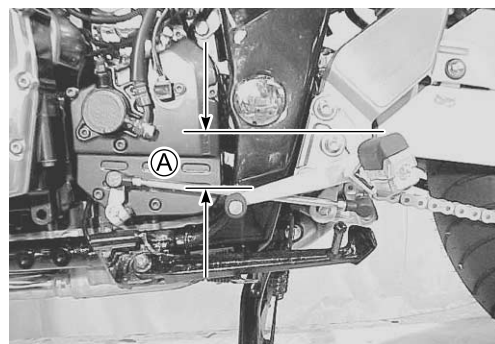


- Tighten the oil drain plug ^① to the specified torque.

🔧 Oil drain plug: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

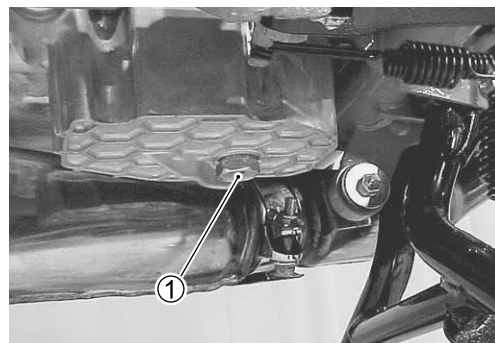

- Pour 3.3 L (3.5/2.9 US/Imp qt) of SF or SG classified (API) engine oil, with a viscosity rating of 10W40 (SAE), into the engine after overhauling it.
- Start up the engine and allow it run for several minutes at idle speed and then stop the engine. Wait three minutes and then check that the oil level remains between the marks on the oil level inspection window.

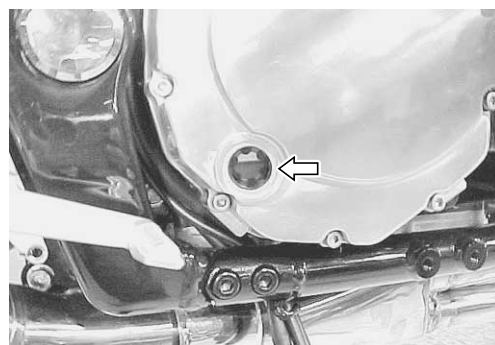

Oil change	3 300 ml (3.5/2.9 US/Imp qt)
Oil and filter change	3 500 ml (3.7/3.1 US/Imp qt)
Engine overhaul	4 600 ml (4.9/4.0 US/Imp qt)

- Adjust the following items to specification.
 - *Throttle cable play ☞2-11
 - *Engine idle speed ☞2-11
 - *Carburetor synchronization ☞4-24
 - *Drive chain ☞2-15


ENGINE DISASSEMBLY AND REASSEMBLY

▲ CAUTION

Identify the position of each removed part. Organize the parts in their respective groups (e.g., intake, exhaust) so that they can be reinstalled in their original positions.

ENGINE DISASSEMBLY

- Remove each PAIR valve pipe and hose.

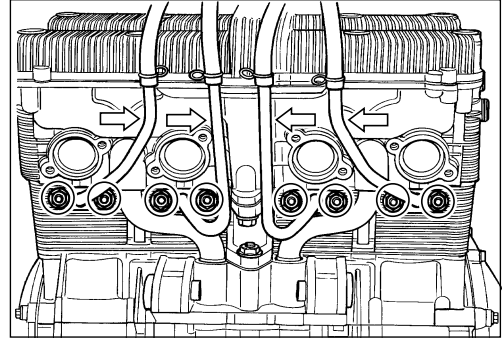


- Remove the oil filter ① using the special tool.

TOOL 09915-40610: Oil filter wrench


NOTE:

Refer to page 2-10 for installation procedures.

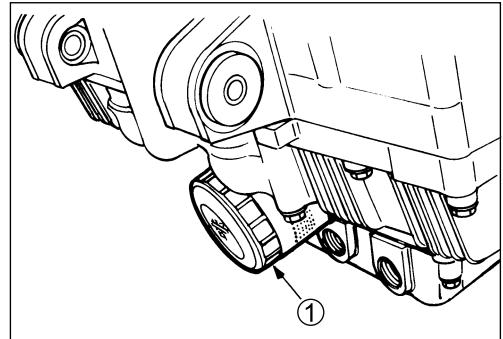


- Remove the left and right oil hoses ②.

TOOL 09911-73730: 5 mm "T" type hexagon wrench

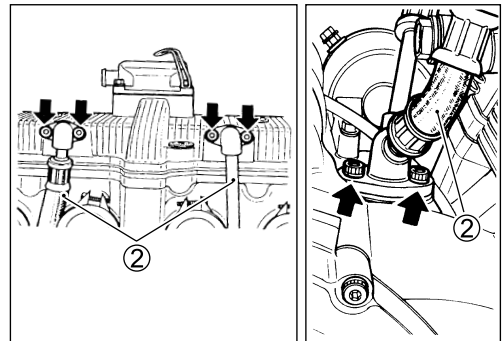


- Remove the cylinder head cover ③.

TOOL 09914-25811: 6 mm "T" type hexagon wrench


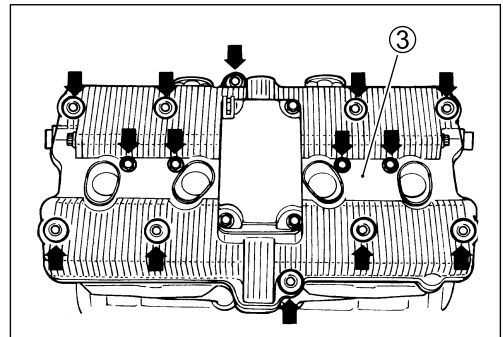


- Remove the signal generator cover ①.

TOOL 09911-73730: 5 mm “T” type hexagon wrench

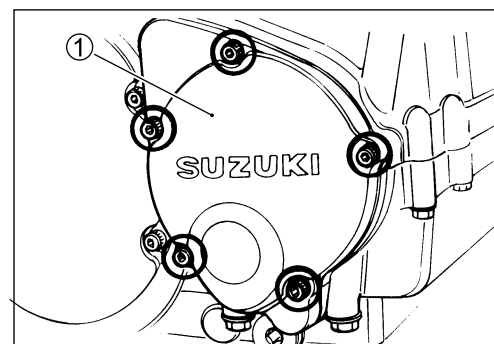


- Remove all of the spark plugs.
- Turn the crankshaft clockwise and align the “T” mark on the signal generator rotor with the center of the pickup coil. Also, position the notches ② on the right end of each camshaft as shown.

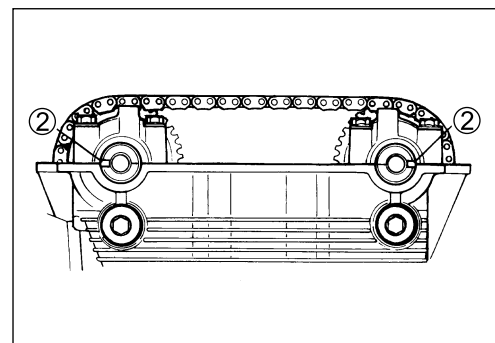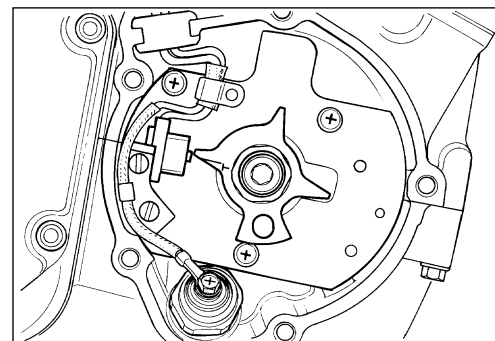

- After removing the spring holder bolt ③ and spring ④, remove the cam chain tensioner ⑤.

TOOL 09911-73730: 5 mm “T” type hexagon wrench

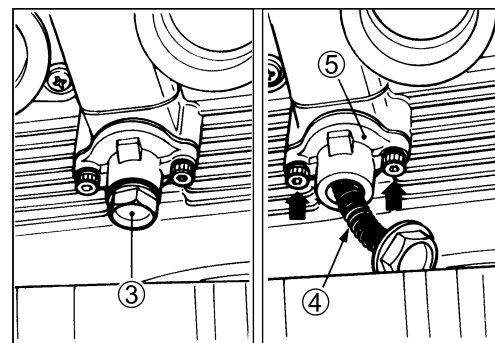

- Remove the camshaft journal holders.


NOTE:

Be sure to loosen the camshaft journal holder bolts evenly and in a crisscross pattern.


- Remove the intake ⑥ and exhaust camshafts ⑦.

NOTE:


See page 3-50 for camshaft inspection.

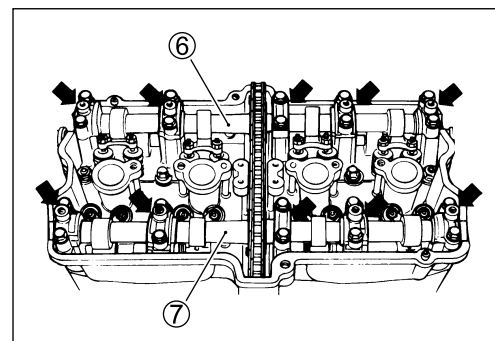

- Remove the cam chain guide ①.

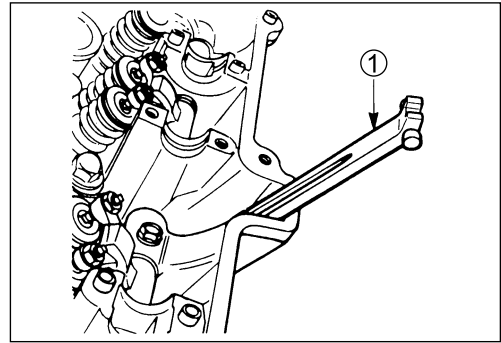


- Remove the cylinder head bolt ②.

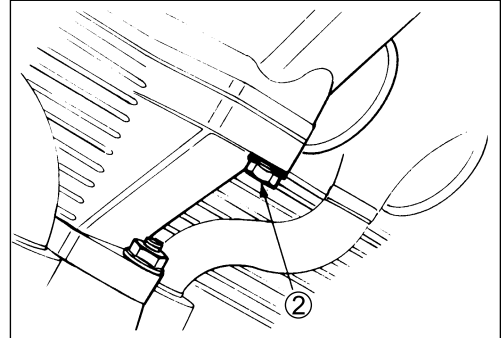

- The cylinder head can be removed when its twelve 10-mm nuts are removed.


NOTE:

When loosening the cylinder head nuts, loosen each nut little by little, in descending order, according to the numbers cast on the cylinder head.

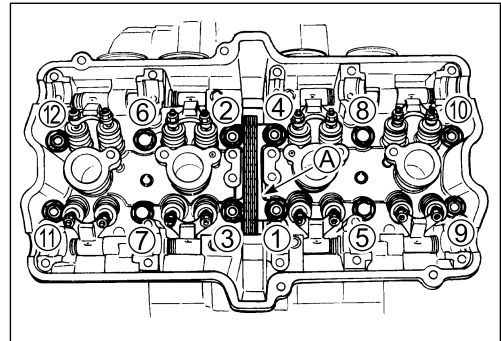

- Remove the cylinder head plate (A).

- Firmly grip the cylinder head at both ends and lift it straight up. If the cylinder head does not come off, lightly tap on the finless portions of it using a plastic mallet.

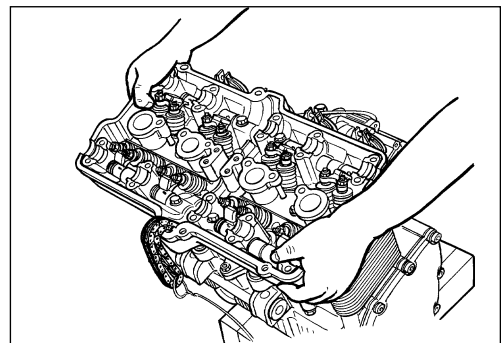


▲ CAUTION

Be careful not to damage the fins when removing or handling the cylinder head.


NOTE:

See page 3-53 for cylinder head servicing.


- Remove the cylinder head gasket, O-rings (6 pcs) and dowel pins (2 pcs).

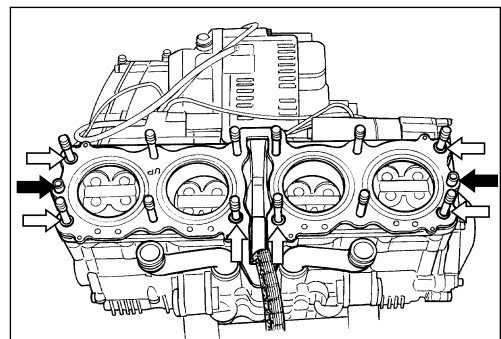

- Remove the left and right oil pipes ①.

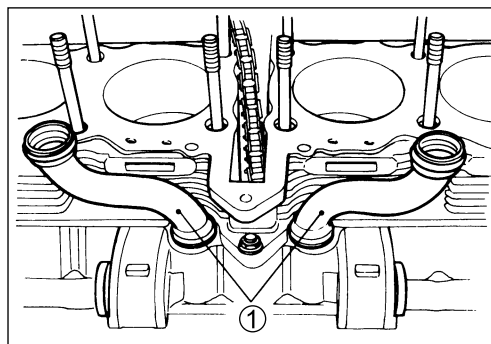


- Remove the cylinder base nut ②.

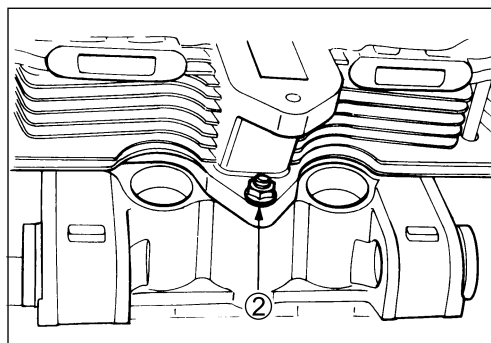


- Firmly grip the cylinder block at both ends and lift it straight up. If the cylinder block does not come off, lightly tap on the finless portions of it using a plastic mallet.

▲ CAUTION

Be careful not to damage the fins when removing or handling the cylinder block.

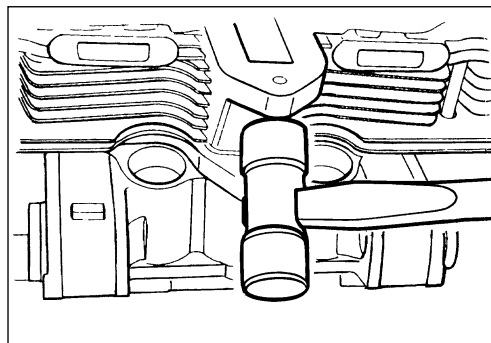


- Scribe the cylinder number on the head of the respective pistons.

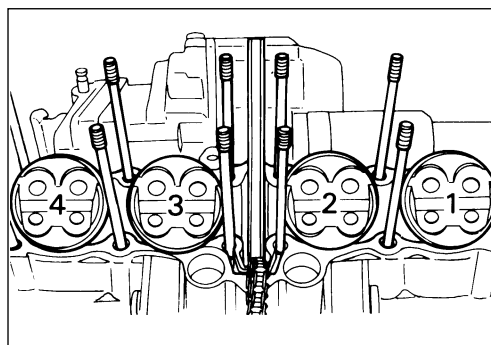


- Place a clean rag over the cylinder to prevent any parts from falling into the crankcase.
- Remove the piston pin circlip ③.
- Draw out each piston pin and remove the pistons.

NOTE:


See page 3-65 for piston and cylinder inspection.

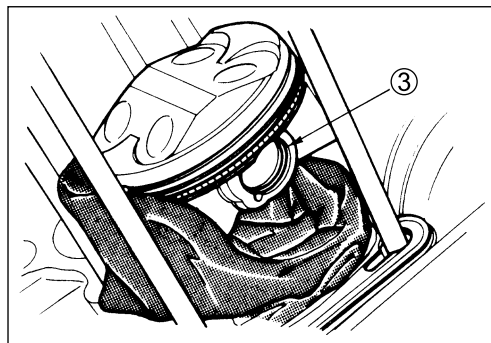

- Remove the starter motor ①.

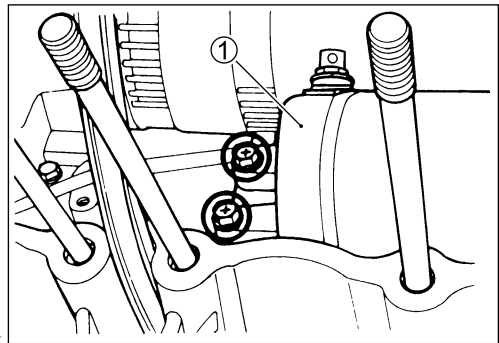


- Remove the generator ②.

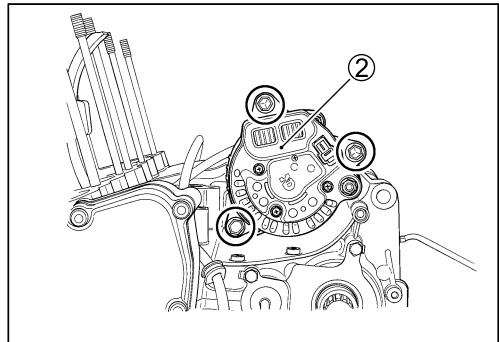


- Remove the signal generator rotor ③ using the special tool.

TOOL 09900-00410: Hexagon wrench set

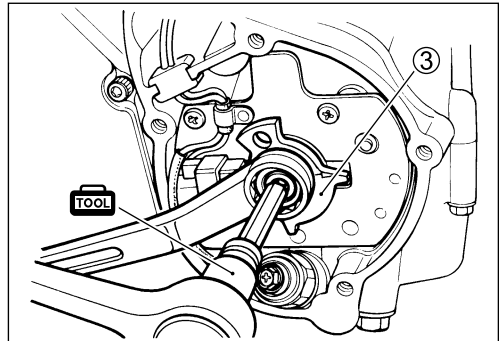


- Disconnect the oil pressure switch lead wire ④.
- Remove the signal generator stator (along with the pickup coil) ⑤ and oil pressure switch ⑥.

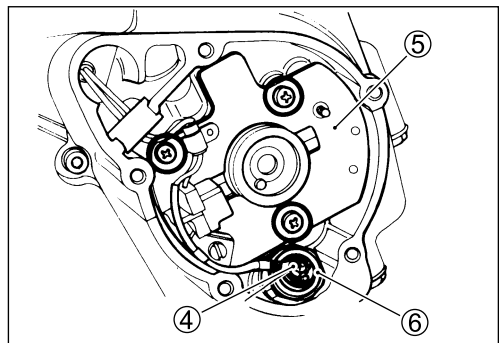


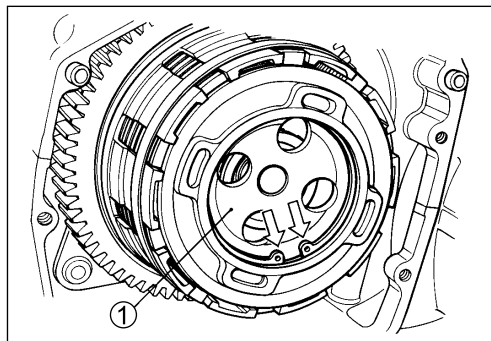
- Remove the clutch cover ⑦.

TOOL 09911-73730: 5 mm "T" type hexagon wrench

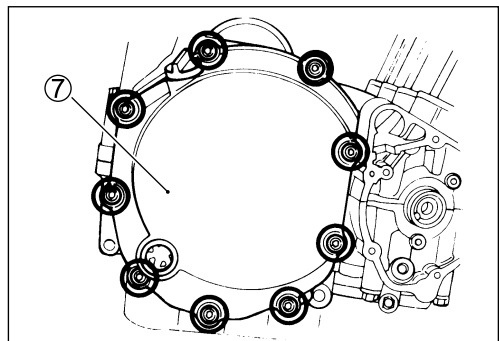

- Remove the clutch pressure plate lifter ① by removing the circlip.




 **09900-06108: Snap ring pliers**



- After removing the clutch pressure plate lifter, remove the thrust washer ②, bearing ③ and clutch push piece ④, and pull out the clutch push rods, ⑤ and ⑥.


NOTE:

If it is difficult to pull out the push rod ⑤, use a magnetic hand or wire.

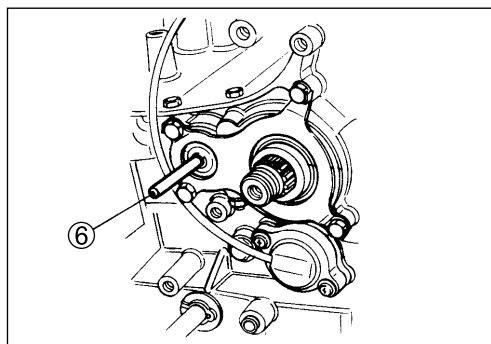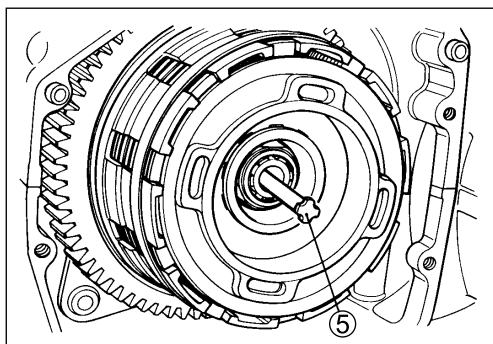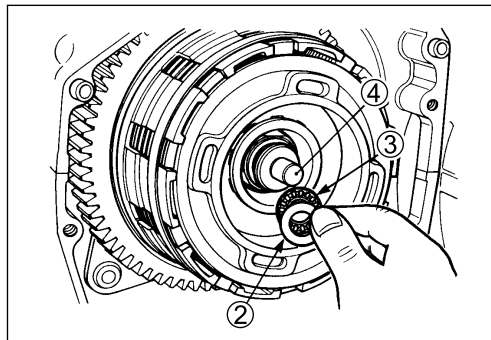


- Hold the clutch pressure plate with the special tool and loosen the clutch sleeve hub nut.


 **09920-34820: Clutch pressure plate holder**

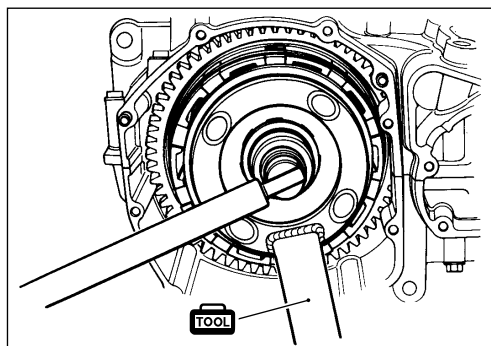


- After removing the clutch sleeve hub nut, remove the lock washer ⑦.
- Remove the clutch diaphragm spring holder ⑧ by removing the screws.

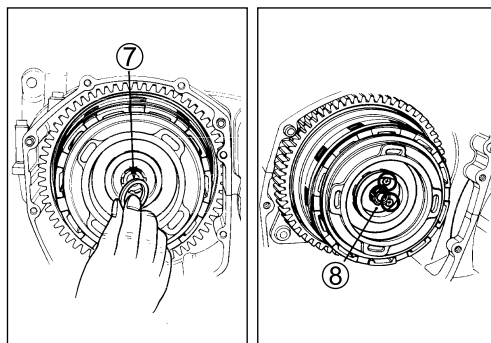


- Remove the clutch diaphragm springs ①, clutch diaphragm spring seat ② and clutch pressure plate ③.
- Remove the clutch drive and driven plates along with the clutch sleeve hub.

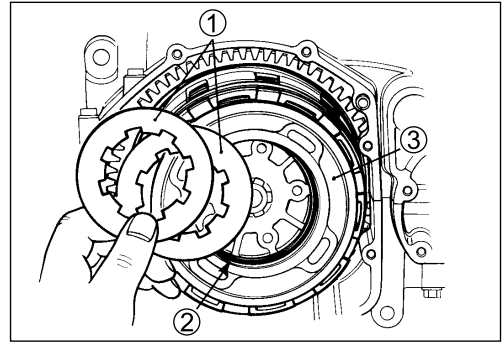


- Remove the thrust washer ④.

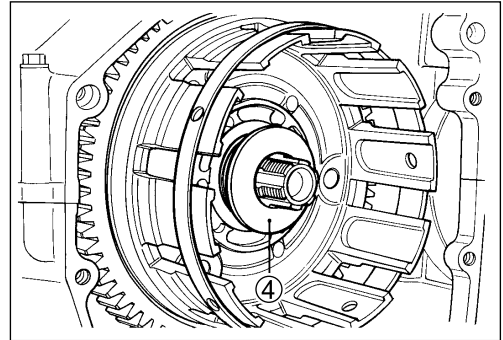


- With the spacer and bearing removed, the primary driven gear (integral with the clutch housing) is free to disengage from the primary drive gear.
- Remove the primary driven gear assembly with the generator/oil pump drive gears.

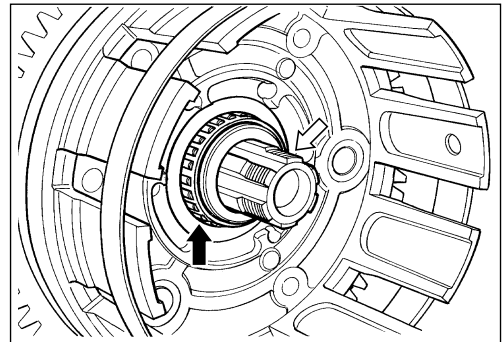


- Remove the thrust washer ⑤.

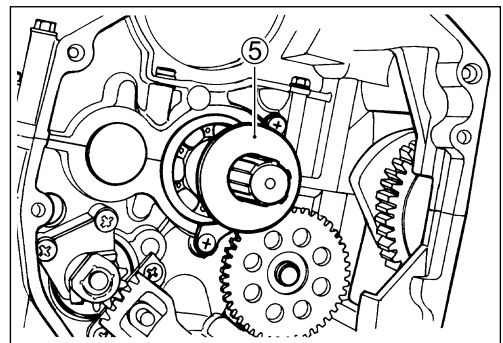


- Remove the circlip and washer from the gearshift shaft.

 09900-06107: Snap ring pliers

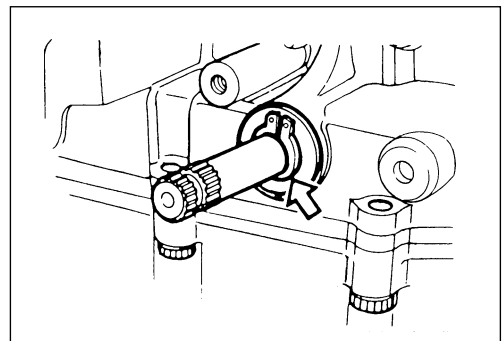


- Draw out the gearshift shaft ①, and then remove the gearshift cam driven gear ②.

TOOL 09900-09004: Impact driver set

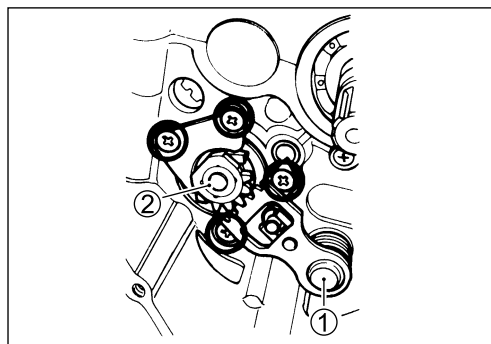


NOTE:

When removing the gearshift cam driven gear, do not lose the gearshifting pawl ③, pin ④ and spring ⑤.

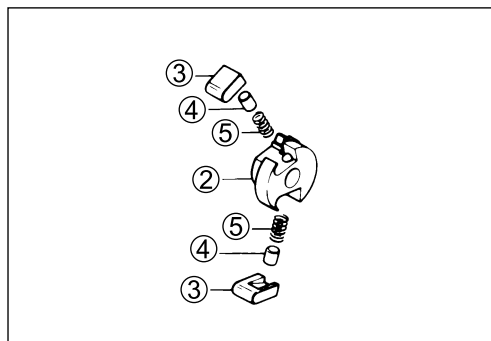

- Remove the circlip ⑥.


TOOL 09900-06107: Snap ring pliers

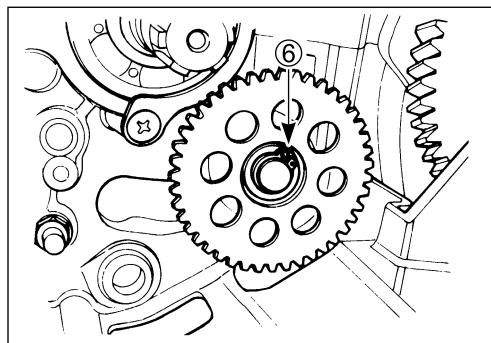


- Remove the washers ⑦, oil pump driven gear ⑧ and pin ⑨.

NOTE:

Do not lose the circlip, pin and the washers.

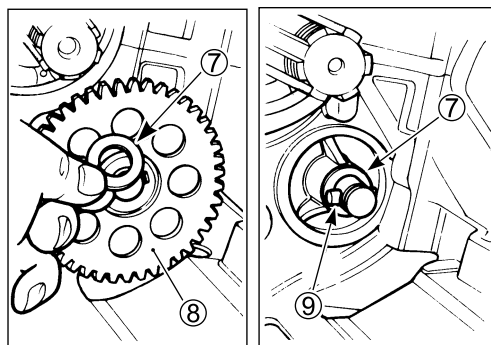

- Remove the starter clutch cover.
- Remove the starter idle gear ⑩ and its shaft ⑪.

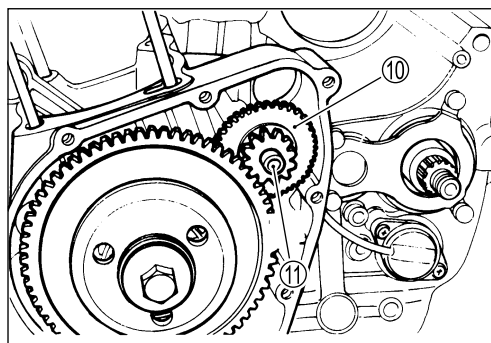


- Hold the starter clutch assembly using the special tool and then loosen the starter clutch mounting bolt.


 **09920-34840: Starter clutch holder**

NOTE:

Do not remove the starter clutch mounting bolt at this stage, only loosen it. You will need to use it in conjunction with the special tool when removing the starter clutch assembly.

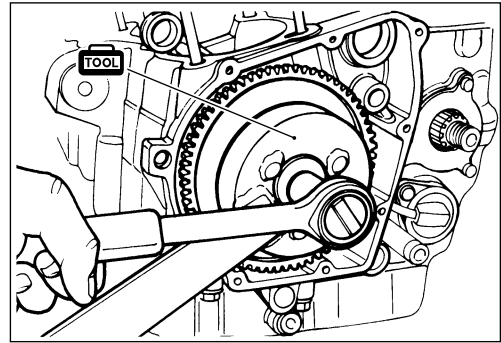


- Remove the starter clutch assembly ① from the crankshaft using the special tool.


 **09930-30720: Rotor remover**

NOTE:


See page 3-69 for the starter clutch inspection.

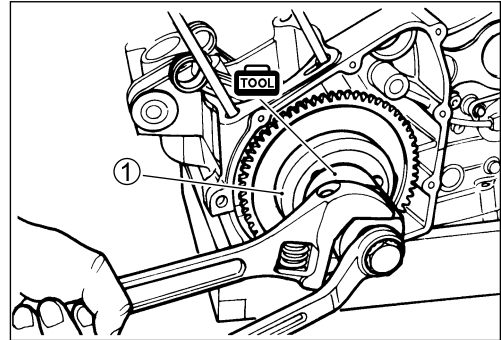

- Flatten the tab on the oil seal retainer and then remove it ②.

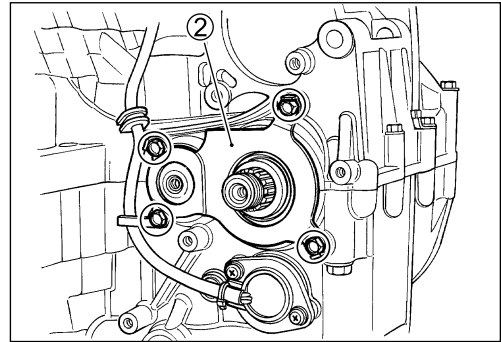


- Remove the gear position switch ③.

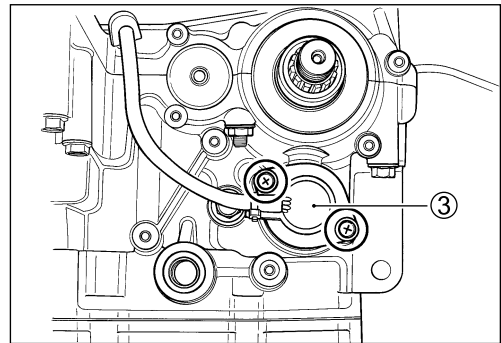


- Remove the O-ring ④, switch contact ⑤ and spring ⑥.

NOTE:


Do not lose the O-ring, switch contact and spring.

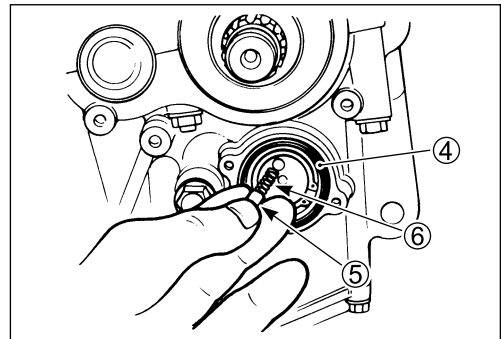


- Remove the countershaft bearing retainer ①.

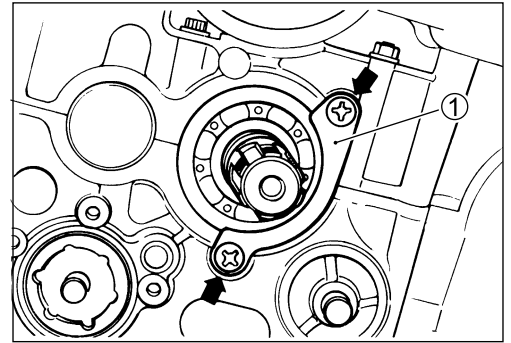


- Remove the plug ②.
- Remove the upper crankcase bolts and nut.

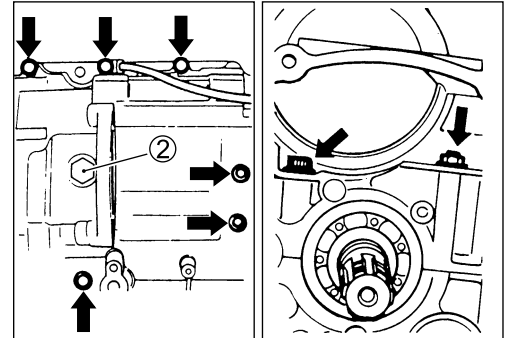



- Remove the oil pan ③.

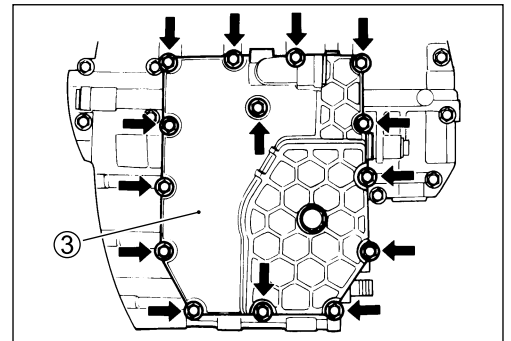

- Remove the shim ④ and O-ring ⑤.
- Remove the oil sump filter ⑥.
- Remove the oil return pipe ⑦.

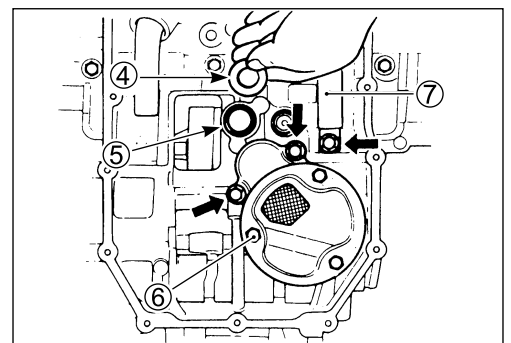


- Remove the lower crankcase bolts and nut.

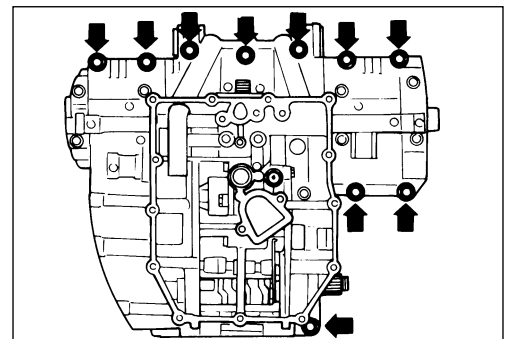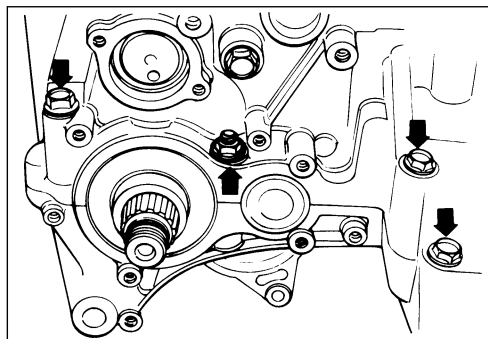

- Remove the main oil gallery plug ① and O-ring.

 09900-00410: Hexagon wrench set

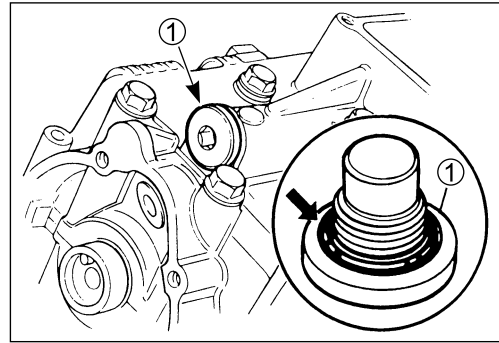



- Loosen the crankcase bolts in descending numerical order and then remove them.

NOTE:

Two allen bolts are located at position ① to tighten the crankshaft.

 09914-25811: 6 mm “T” type hexagon wrench

- Remove the oil return pipe ②.
- Make sure that all of the bolts are removed. Then, tap the sides of the lower crankcase using a plastic mallet to separate the upper and lower crankcase halves and then lift the lower crankcase off of the upper crankcase.

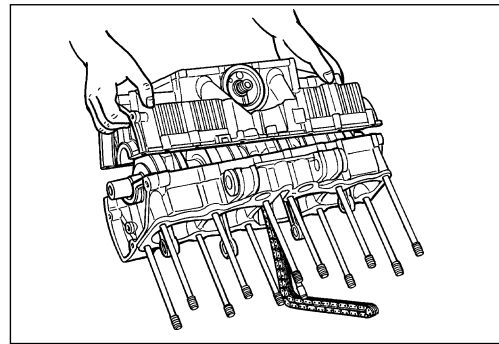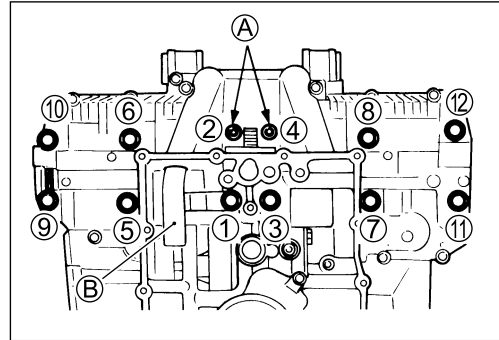


CAUTION

Do not allow the crankshaft journal bearings to drop out of the lower crankcase.

NOTE:

If it is difficult to separate the crankcase halves, set the proper bolt and nut to the crankcase by separating the upper and lower crankcase halves, as shown in the illustration.

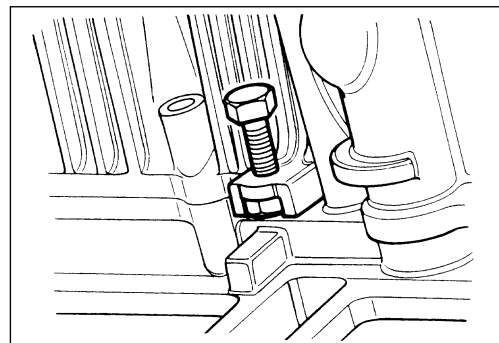


- Remove the crankshaft assembly ② from the upper crankcase.

NOTE:

* The crankshaft thrust bearings ③ are located between the crankshaft assembly and upper crankcase.


* See page 3-79 for the crankshaft and conrod servicing.

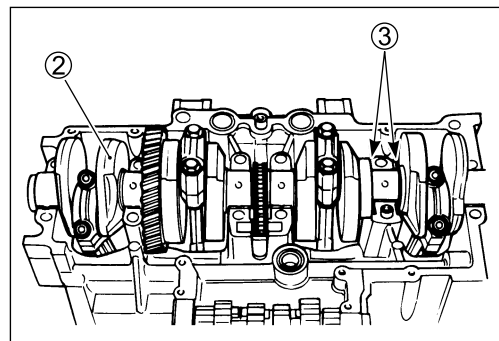

- Remove the dampers ① and cam chain tensioner guide ②.
- Remove the O-rings (③ and ④).

NOTE:

- * Do not remove the crankshaft journal bearings unless absolutely necessary.
- * Make a note of where the crankshaft journal bearings are removed from so that they can be reinstalled in their original positions.

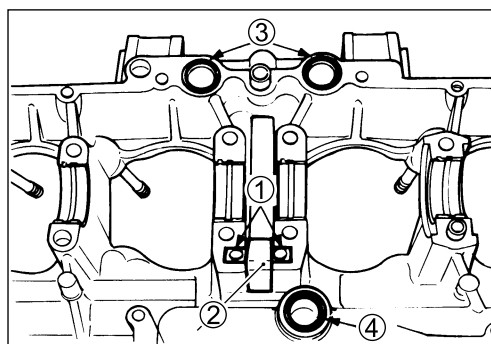
**▲ CAUTION**

When removing the crankshaft journal bearings, be careful not to scratch the crankcase and the crankshaft journal bearings.

- Remove the countershaft assembly ⑤ and driveshaft assembly ⑥.

NOTE:


See page 3-73 for the countershaft and driveshaft servicing.

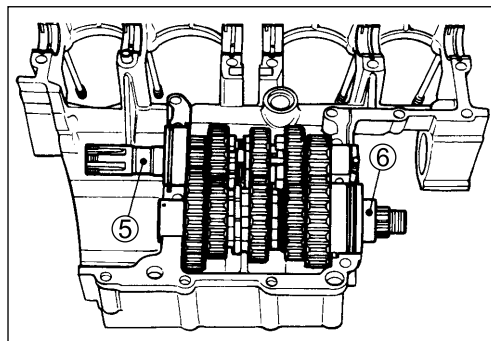


- Remove the C-rings ⑦ and bearing pins ⑧.

NOTE:


Do not lose the C-rings and bearing pins.

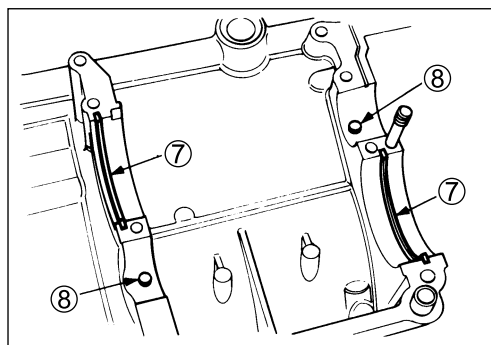

- Hold the gearshift forks ⑨ and draw out the gearshift fork shaft ⑩ from the lower crankcase.

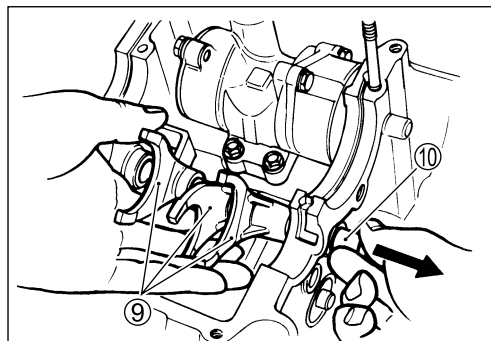


- Unhook the gearshift cam stopper spring ① from the lower crankcase.

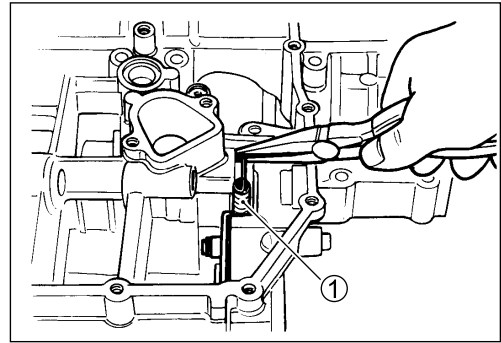

- Remove the circlip ② from the gearshift cam, then draw out the gearshift cam ③ from the opposite side.

TOOL 09900-06107: Snap ring pliers

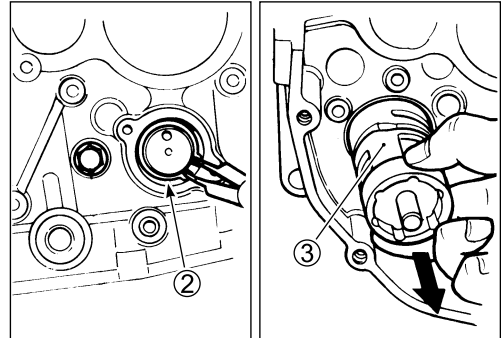


- Remove the circlip ④ and gearshift cam stopper ⑤.

TOOL 09900-06107: Snap ring pliers


NOTE:

Rotate the bearing ⑥ in the crankcase by hand to inspect for abnormal noise and smooth rotation.
Replace the bearing if there is anything unusual.

TOOL 09900-06106: Snap ring pliers

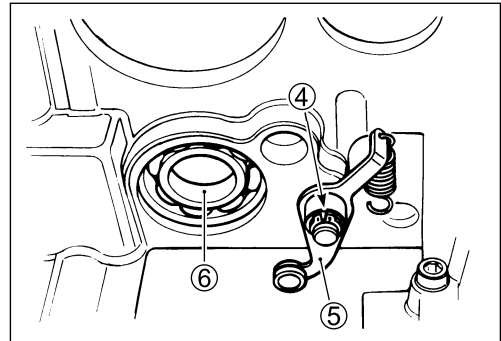


- Remove the gearshift cam stopper bolt ⑦.

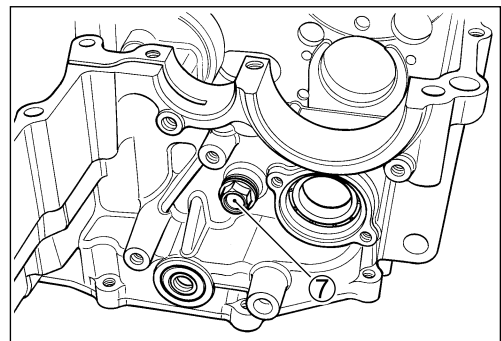


- Remove the oil pump ①.

 **09900-00410: Hexagon wrench set**

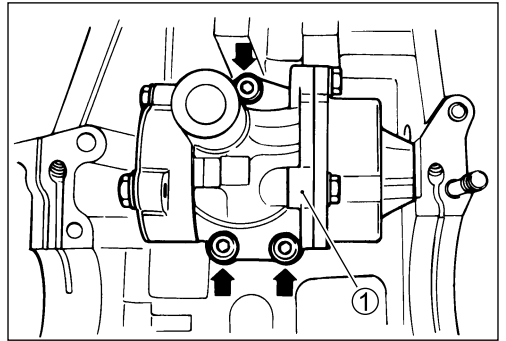

- Remove the O-rings and dowel pins.

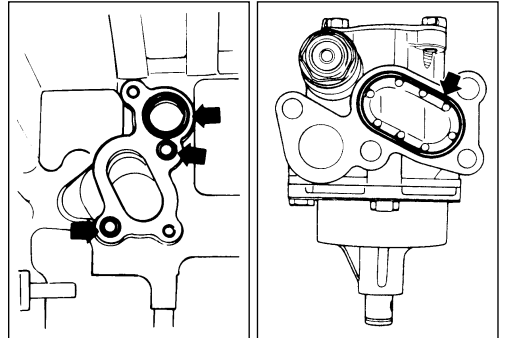

ENGINE REASSEMBLY

Reassemble the engine in the reverse order of disassembly. The following steps require special attention or precautionary measures should be taken.


NOTE:

Apply engine oil to each running and sliding part before reassembling.

- Install the O-rings (① and ②) and dowel pins (③) in the correct position as shown.

▲ CAUTION

Replace the O-rings with new ones to prevent oil leakage.

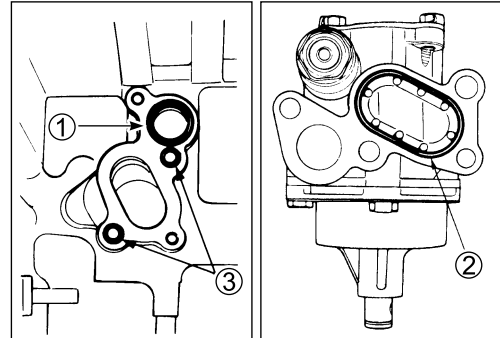

- Install the oil pump (④) into the lower crankcase with the three bolts and then tighten them to the specified torque.

NOTE:


Apply a small quantity of *THREAD LOCK "1342"* to the bolts.

 **99000-32050: THREAD LOCK "1342"**

 **Oil pump mounting bolt: 10 N·m (1.0 kgf·m, 7.0 lb-ft)**

NOTE:

Make sure that the oil jets (⑤) in the lower crankcase are not clogged.

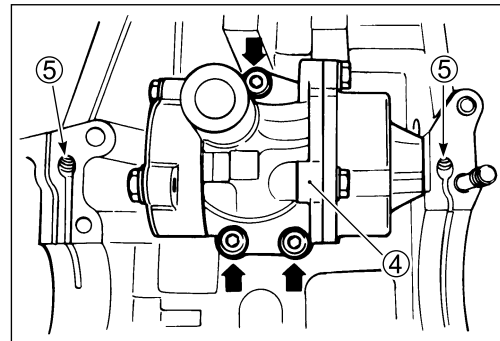


- Install the gearshift cam stopper bolt (⑥).

NOTE:


Before installing the gearshift cam stopper bolt (⑥), apply a small quantity of *THREAD LOCK "1342"* to it.

 **99000-32050: THREAD LOCK "1342"**

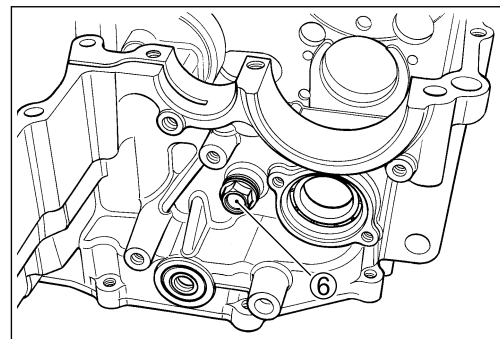

NOTE:

When installing the gearshift cam stopper plate ①, align the pin groove ① with the pin ② as shown.


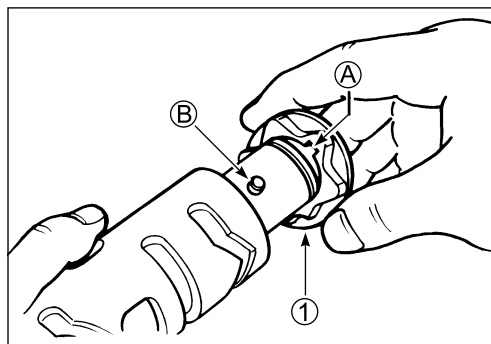


- Install the gearshift cam ② and its related parts.


- ③ Gearshift cam stopper
- ④ Circlip
- ⑤ Spring
- ⑥ Circlip

▲ CAUTION

Always use new circlips (④ and ⑥).

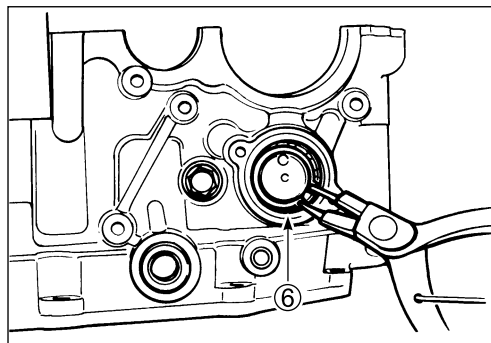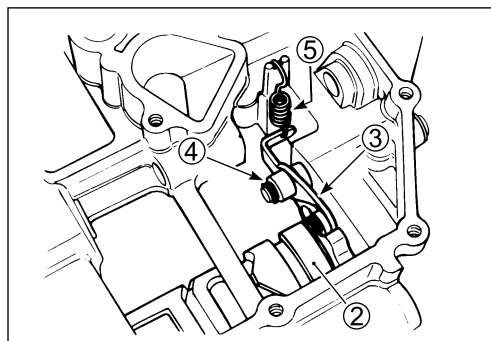


- Position the gearshift cam in the neutral position as shown. This will allow the gearshift forks and transmission gears to be installed easily.

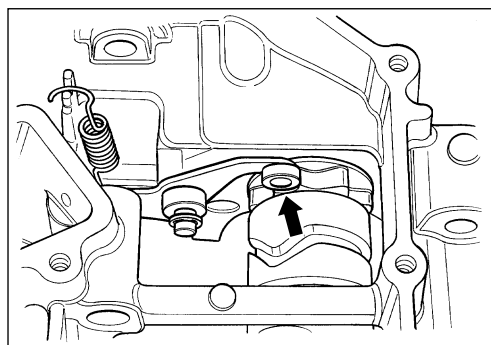


- Install the gearshift forks into the crankcase in the correct position and direction.


- ⑦ For the 4th driven gear
- ⑧ For the 3rd drive gear
- ⑨ For the 5th (top) driven gear

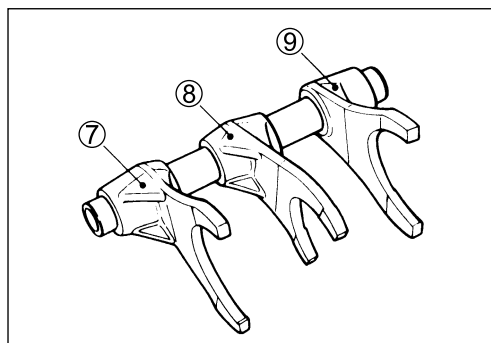

- Hold the gearshift forks ① by hand when installing the gearshift fork shaft ②.

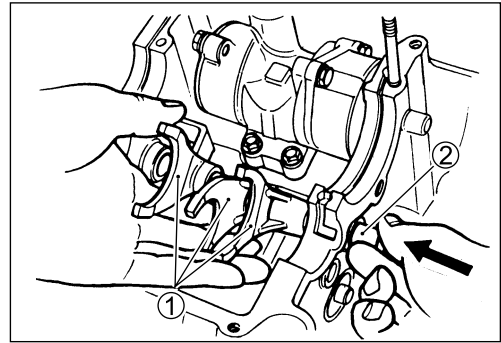


- Install the bearing pins ③ and C-rings ④ into the upper crankcase.

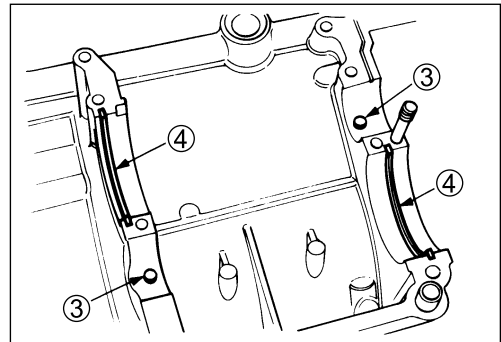

- Install the countershaft assembly ⑤ and driveshaft assembly ⑥ into the upper crankcase.

NOTE:


- * Be sure to install the bearing dowel pins ⑦ in their respective positions.
- * Install the countershaft end cap in the proper position ⑧.
- * Make sure that the countershaft assembly turns freely while holding the driveshaft assembly. If it does not turn freely, turn the gearshift cam to the neutral position.

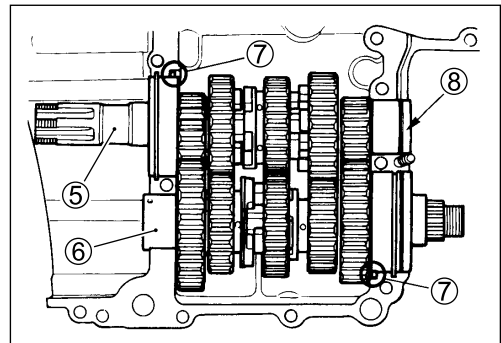

NOTE:

Before installing the crankshaft journal bearings, make sure that the oil jets ⑨ in the upper crankcase are not clogged.


- ⑨ Oil jet (4 pcs) In the upper crankcase

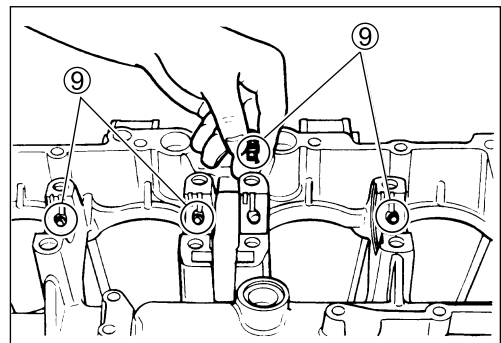

- When installing the crankshaft journal bearings into the upper and lower crankcases, be sure to install the tab ⑩ first, and then press in the opposite side of the bearing. (☞ 3-84)

▲ CAUTION


Do not touch the bearing surfaces with your hands. Grasp the bearings by their edges.

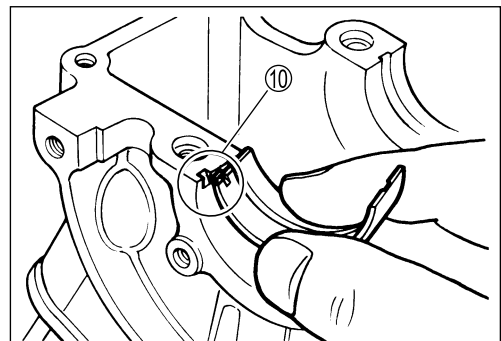

- Install the cam chain tensioner guide ① and the two dampers ② properly.

NOTE:

Be sure to face the arrow mark on the damper towards the front and rear, not towards the left and right.

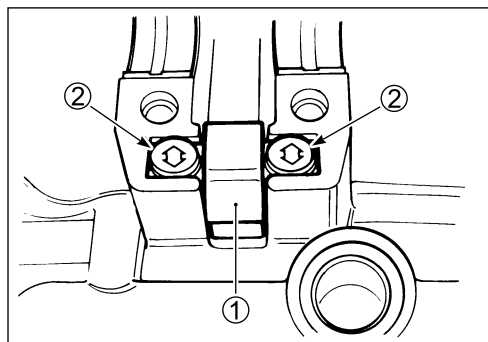


- Install the O-rings (3 and 4).

▲ CAUTION


Replace the O-rings with new ones to prevent oil leakage.

- Before installing the crankshaft assembly, apply molybdenum oil solution to each crankshaft journal bearing.

 99000-25140: SUZUKI MOLY PASTE

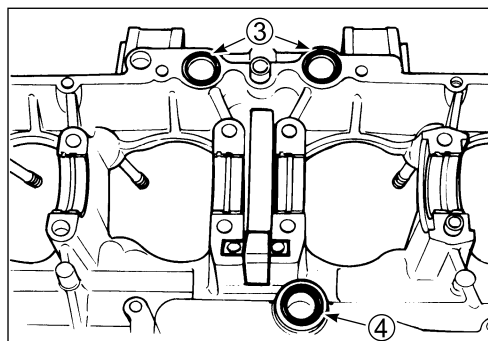

- Install the crankshaft assembly along with the cam chain into the upper crankcase.
- Insert the right- and left-thrust bearings with the oil grooves facing towards the crankshaft web. (3-85)
- Clean the mating surfaces of the crankcases.
- Install the dowel pins in the upper crankcase.

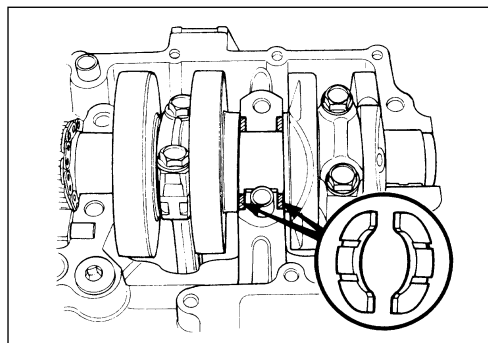


- Apply the recommended bond to the mating surface of the lower crankcase as follows.

 99000-31140: SUZUKI BOND "1207B"

NOTE:

- * Make sure that the mating surfaces are free from moisture, oil, dust and other foreign materials.
- * Apply the bond thinly and evenly and assemble the crankcases within a few minutes of application.
- * Take extreme care not to apply any bond to the bearing surfaces.

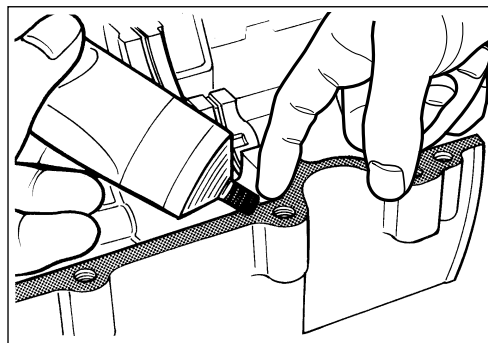


- Install the right oil pipe (A) with the bolt (1).
- Install the copper washers onto bolts (9) and (11).
- Install the two allen bolts at position (B).
- Install the ten crankcase bolts (8 mm).
- Tighten the crankcase bolts (crankshaft tightening bolts) in ascending order. Tighten each bolt a little at a time to equalize the pressure.

🔧 Crankcase bolt (M8)

(Initial): 13 N·m (1.3 kgf·m, 9.5 lb-ft)

(Final) : 23 N·m (2.3 kgf·m, 16.5 lb-ft)

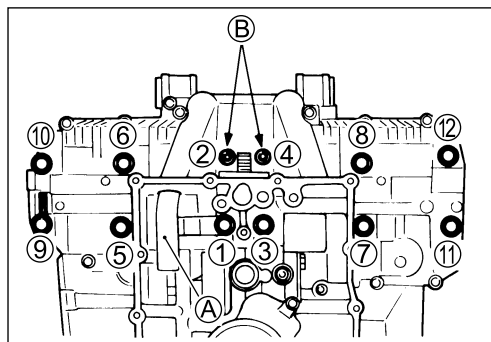

- Tighten the main oil gallery plug (1) to the specified torque.

⚠ CAUTION

Replace the O-ring with a new one.

🔧 09900-00410: Hexagon wrench set

🔧 Main oil gallery plug: 40 N·m (4.0 kgf·m, 29.0 lb-ft)

- Tighten the lower and upper crankcase bolts (6 mm) and nuts to the specified torque.

🔧 Crankcase bolt and nut (M6)

(Initial): 6 N·m (0.6 kgf·m, 4.5 lb-ft)






(Final) : 11 N·m (1.1 kgf·m, 8.0 lb-ft)

NOTE:

- * Install the copper washer at position (2).
- * After tightening the upper crankcase bolt (D), install the plug (C).
- * Install the engine ground wire (3) into the correct position as shown.
- * Install the gasket washer at position (4).

⚠ CAUTION


Use a new gasket washer to prevent oil leakage.

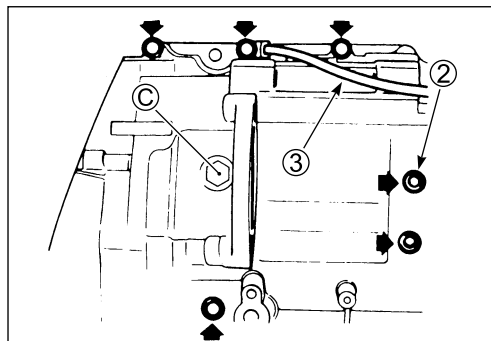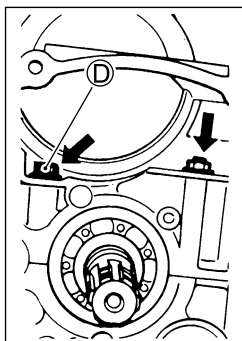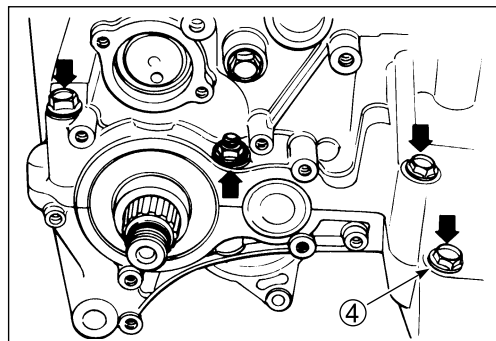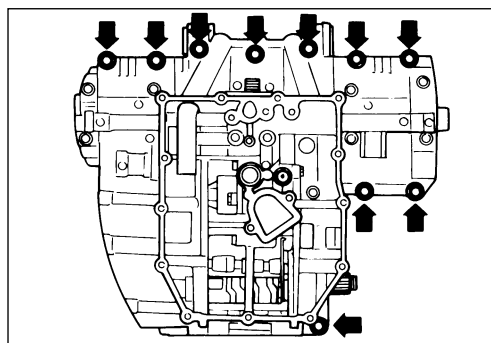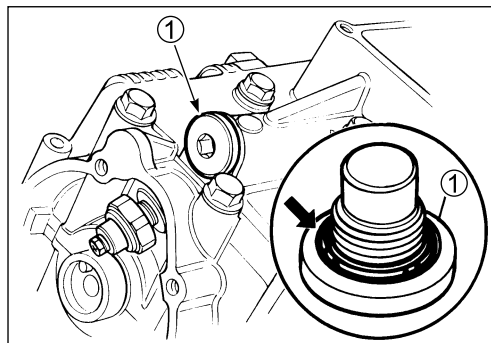

- Install the left oil pipe ①.
- Install a new O-ring ② and shim ③.
- Install a new gasket and the oil sump filter ④.

▲ CAUTION

Replace the gasket and O-ring with new ones to prevent oil leakage.

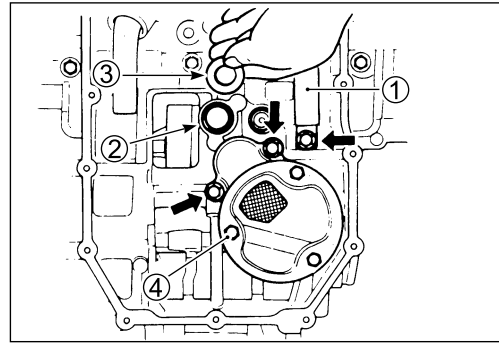


- Install a new gasket and the oil pan. Tighten the oil pan bolts to the specified torque.

 Oil pan bolt: 14 N·m (1.4 kgf·m, 10.0 lb-ft)

▲ CAUTION

Replace the oil pan gasket with a new one to prevent oil leakage.

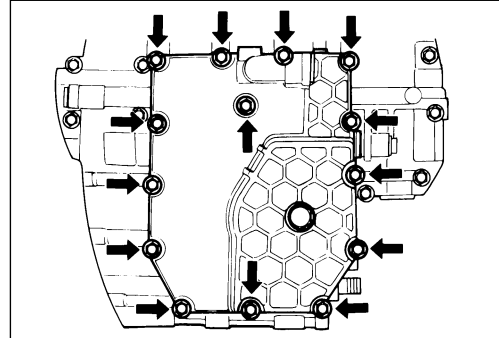


NOTE:

Install a new gasket washer (A) to the oil pan bolt as shown.

▲ CAUTION

Use a new gasket washer to prevent oil leakage.

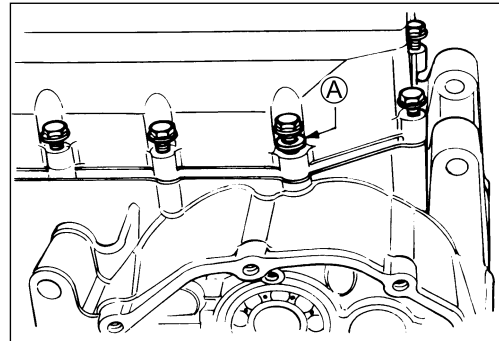


- Install the countershaft bearing retainer ⑤.

NOTE:

Apply a small quantity of **THREAD LOCK "1342"** to the two screws.

 99000-32050: **THREAD LOCK "1342"**

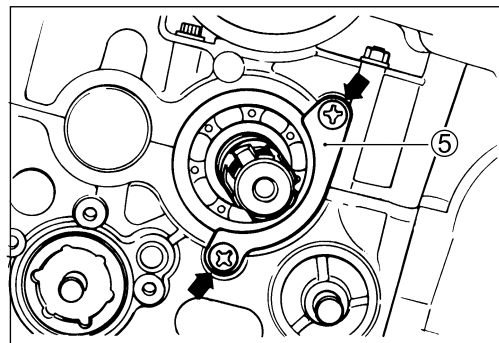


- Install the gear position switch.

NOTE:

When installing the gear position switch, be sure to install the spring ⑥, switch contact ⑦ and O-ring ⑧ properly.

▲ CAUTION


Replace the O-ring with a new one.

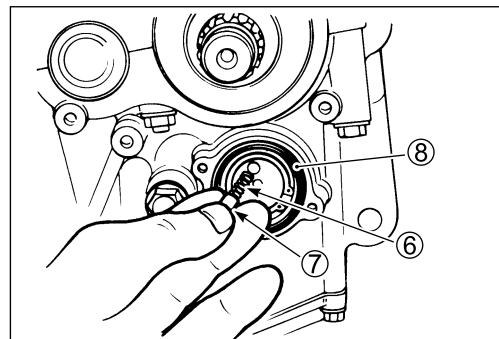

- Install the oil seal retainer ① with the four bolts and then bend the tab on the retainer.

NOTE:

Route the gear position switch lead wire to the inside of the oil seal retainer's tab ① as shown.

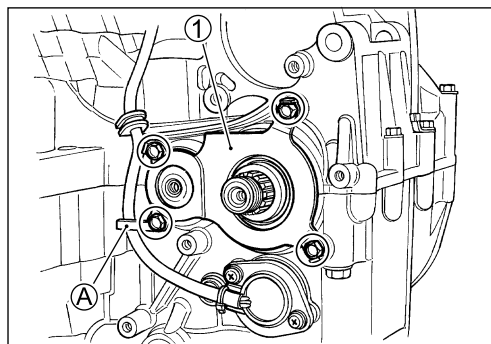


- Remove the grease from the tapered portion of the starter clutch and crankshaft. Use a nonflammable cleaning solvent to wipe off any oil or grease and make sure that the surfaces are completely dry.

NOTE:

Apply a small quantity of **THREAD LOCK SUPER "1303"** to the threads of the starter clutch mounting bolt.

 **99000-32030: THREAD LOCK SUPER "1303"**

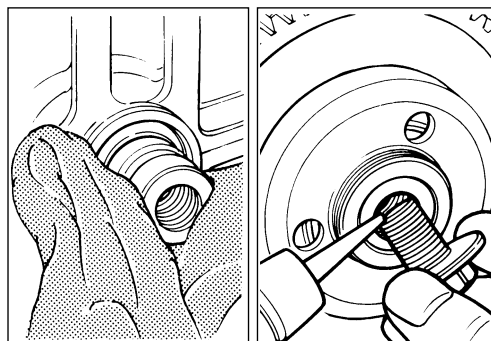


- Hold the starter clutch assembly using the special tool and then tighten the starter clutch mounting bolt to the specified torque.

 **09920-34840: Starter clutch holder**


 **Starter clutch mounting bolt:**

150 N·m (15.0 kgf·m, 108.5 lb-ft)

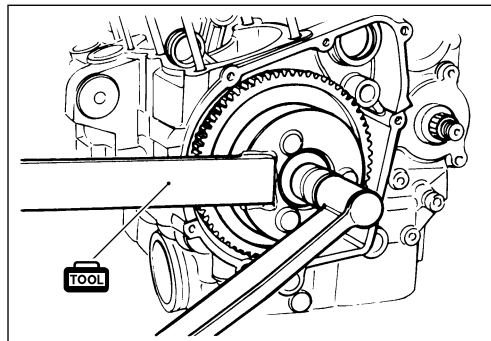

- Install the starter idle gear ② and its shaft ③.
- Apply a light coat of the recommended bond to the starter clutch cover gasket mating surface as shown.

 **99000-31140: SUZUKI BOND "1207B"**

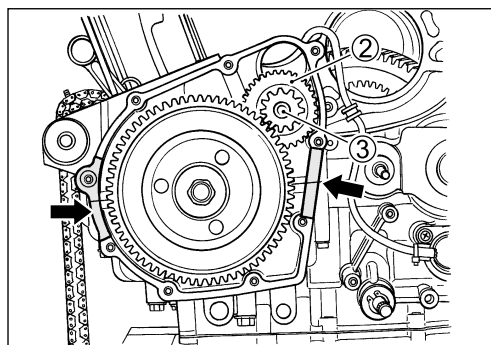


- Install the dowel pin, a new gasket and the starter clutch cover, and tighten the cover bolts securely.

NOTE:

Install the gasket washer to the starter clutch cover bolt ① as shown.

CAUTION


Use a new gasket washer to prevent oil leakage.

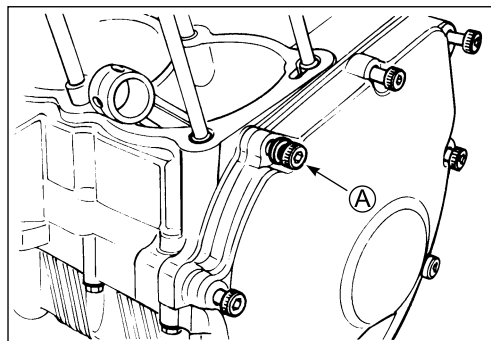

- Install each pawl ① into the gearshift cam driven gear ②.
- The large shoulder ①A must face to the outside.
- Install the cam guide ③ and pawl lifter ④.
- Apply a small quantity of THREAD LOCK “1342” to the screws.

TOOL 09900-09004: Impact driver set


1342 99000-32050: THREAD LOCK “1342”

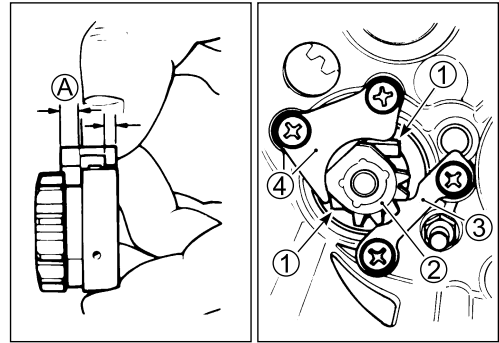

- Install the gearshift shaft ⑤.


NOTE:

Align the center teeth on the gearshift shaft with the center teeth on the gearshift cam driven gear.

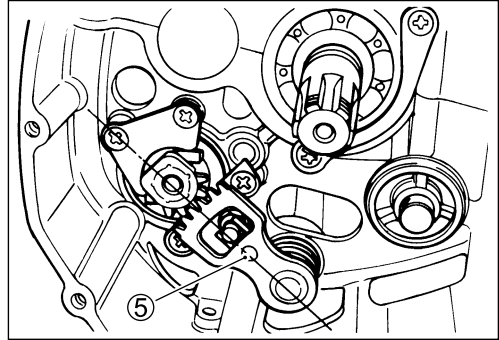


- Install the washer and fix the gearshift shaft with the circlip.

TOOL 09900-06107: Snap ring pliers

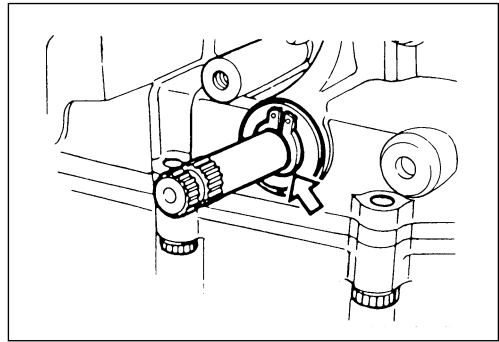

- Install the washer ⑥, pin ⑦, oil pump driven gear ⑧ and washer ⑨.
- Fix the oil pump driven gear with the circlip.


TOOL 09900-06107: Snap ring pliers

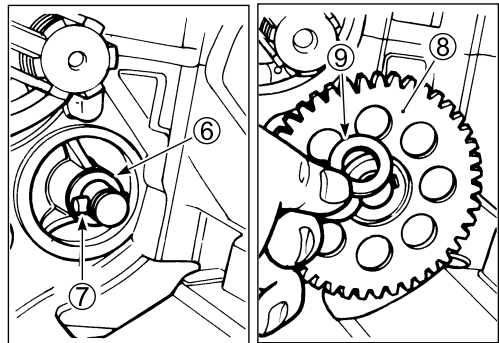


- Install the thrust washer ⑩ onto the countershaft.

NOTE:


The flat surface of the thrust washer should face out.

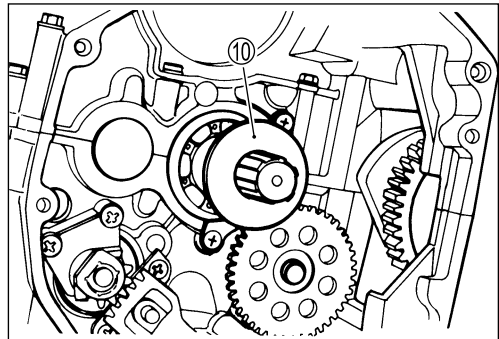


- Install the generator/oil pump drive gears ① onto the primary driven gear assembly as shown.

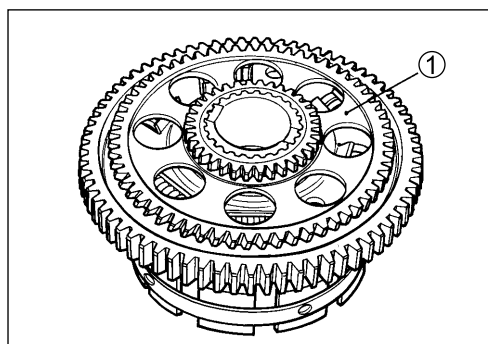

- Install the primary driven gear assembly onto the countershaft, and apply engine oil onto the needle bearing and spacer.
- Install the thrust washer ② onto the countershaft.

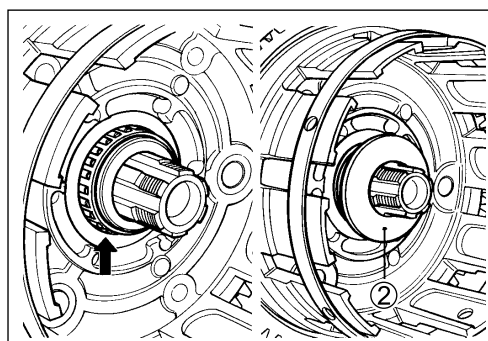

- Install the spring washer seat ③ and spring washer ④ onto the clutch sleeve hub correctly.
- Install the clutch sleeve hub onto the countershaft.
- Insert the clutch drive plates and driven plates one by one into the clutch sleeve hub in the prescribed order, No. 3 drive plate first.

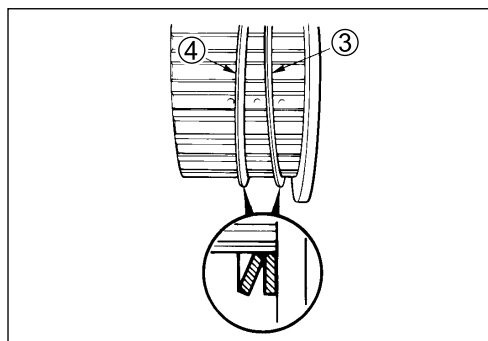

DRIVE PLATE:


Three kinds of the drive plate, No. 1, No. 2 and No. 3, are equipped in the clutch system, they can be distinguished by the inside diameter and clutch facing (☞ 3-36).

DRIVEN PLATE:

Two kinds of the driven plate, No. 1 and No. 2, are equipped in the clutch system, they can be distinguished by the thickness. The No. 1 and No. 2 driven plates are 9 in number. The number of driven plate No. 2 should be used within 4 pcs. The driven plate No. 2 should be installed between third to seventh position from the pressure plate.

DRIVE PLATE	I.D.
No. 1	101 mm (4.0 in)
No. 2	101 mm (4.0 in)
No. 3	108 mm (4.3 in)

DRIVEN PLATE	I.D.
No. 1	1.6 mm (0.16 in)
No. 2	2 mm (0.08 in)

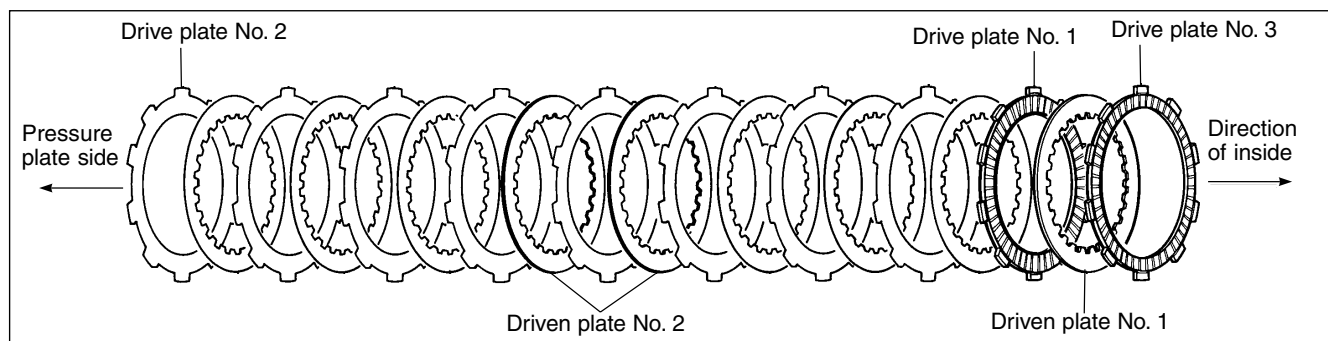

▲ CAUTION

No. 1 and No. 2 drive plates resemble each other very closely in external appearance. Make sure to check the number of facing before installing them.

Drive plate No. 1: 40 pcs


Drive plate No. 2: 48 pcs

- Put the clutch pressure plate onto the clutch sleeve hub securely.

- Put the clutch diaphragm spring seat ① and clutch diaphragm springs ② onto the clutch pressure plate properly.

NOTE:

Pay attention to the direction of the clutch diaphragm springs.






( 3-38)

- Install the diaphragm spring holder ③ with three screws.
- Install the lock washer ④.


- Tighten the clutch sleeve hub nut to the specified torque by using the torque wrench and clutch pressure plate holder.

 **09920-34820: Clutch pressure plate holder**


 **Clutch sleeve hub nut: 150 N·m (15.0 kgf·m, 108.5 lb-ft)**

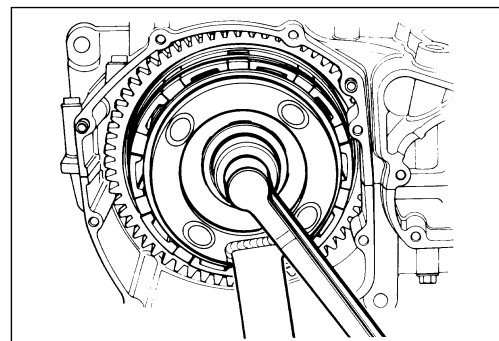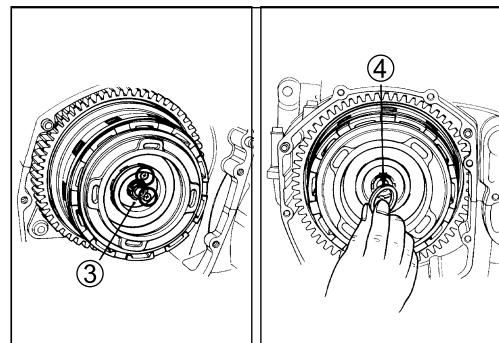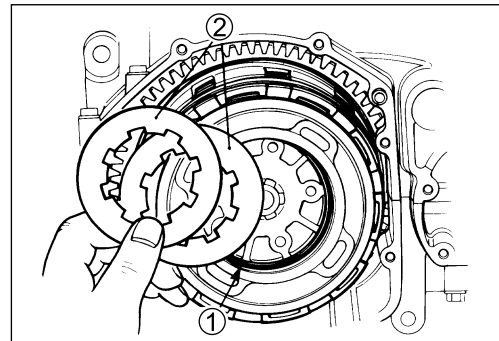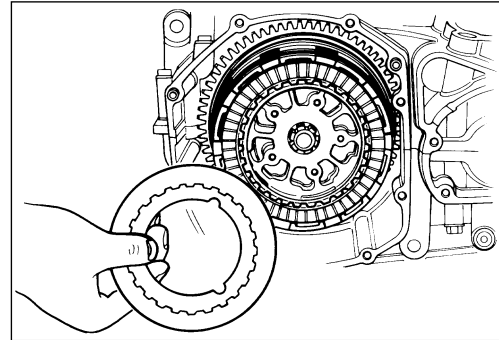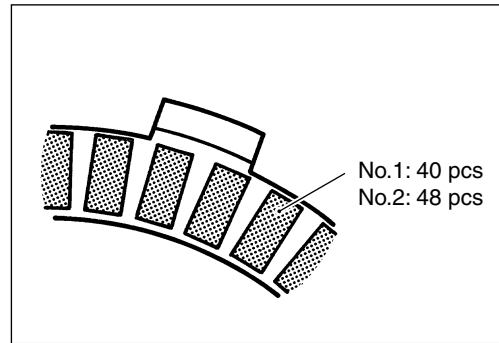

- Lock the clutch sleeve hub nut with a center punch.

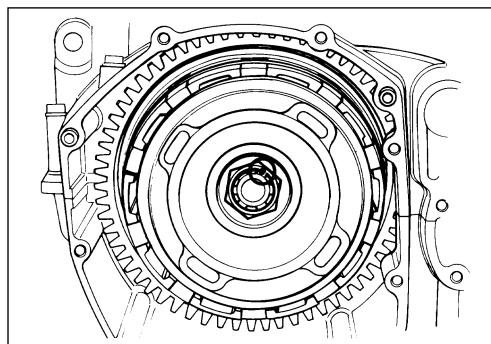

- Insert the clutch push rod ① into the countershaft.
- Install the clutch push piece ②, bearing ③ and thrust washer ④ to the countershaft.

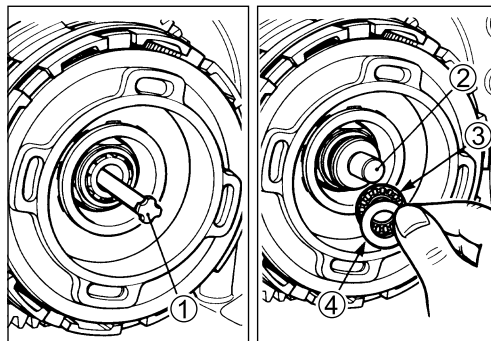


- Fix the clutch pressure plate lifter with the circlip.

TOOL 09900-06108: Snap ring pliers


NOTE:

When fitting the circlip, make sure that the sharp edge of the circlip faces outside.

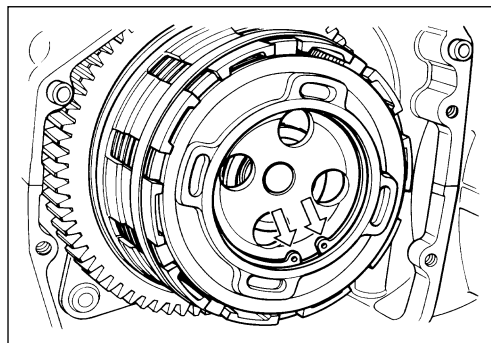

- Apply a light coat of the recommended bond to the clutch cover gasket mating surface (A) as shown.

1207B 99000-31140: SUZUKI BOND "1207B"

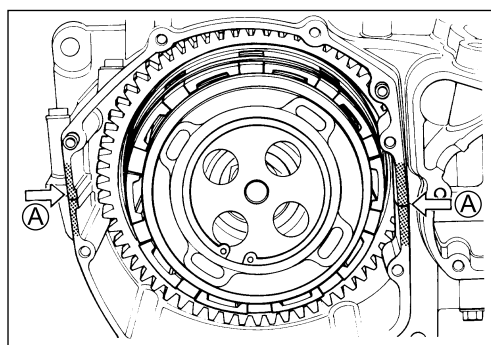


- Install the dowel pins, a new gasket and the clutch cover.
- Tighten the clutch cover bolts securely.


NOTE:

Install the two gasket washers onto the clutch cover bolts (B) as shown.

▲ CAUTION


Use only new gasket washers to prevent oil leakage.

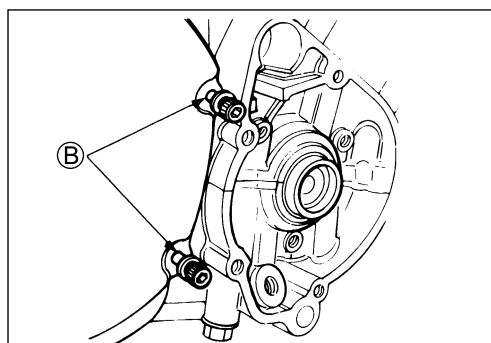


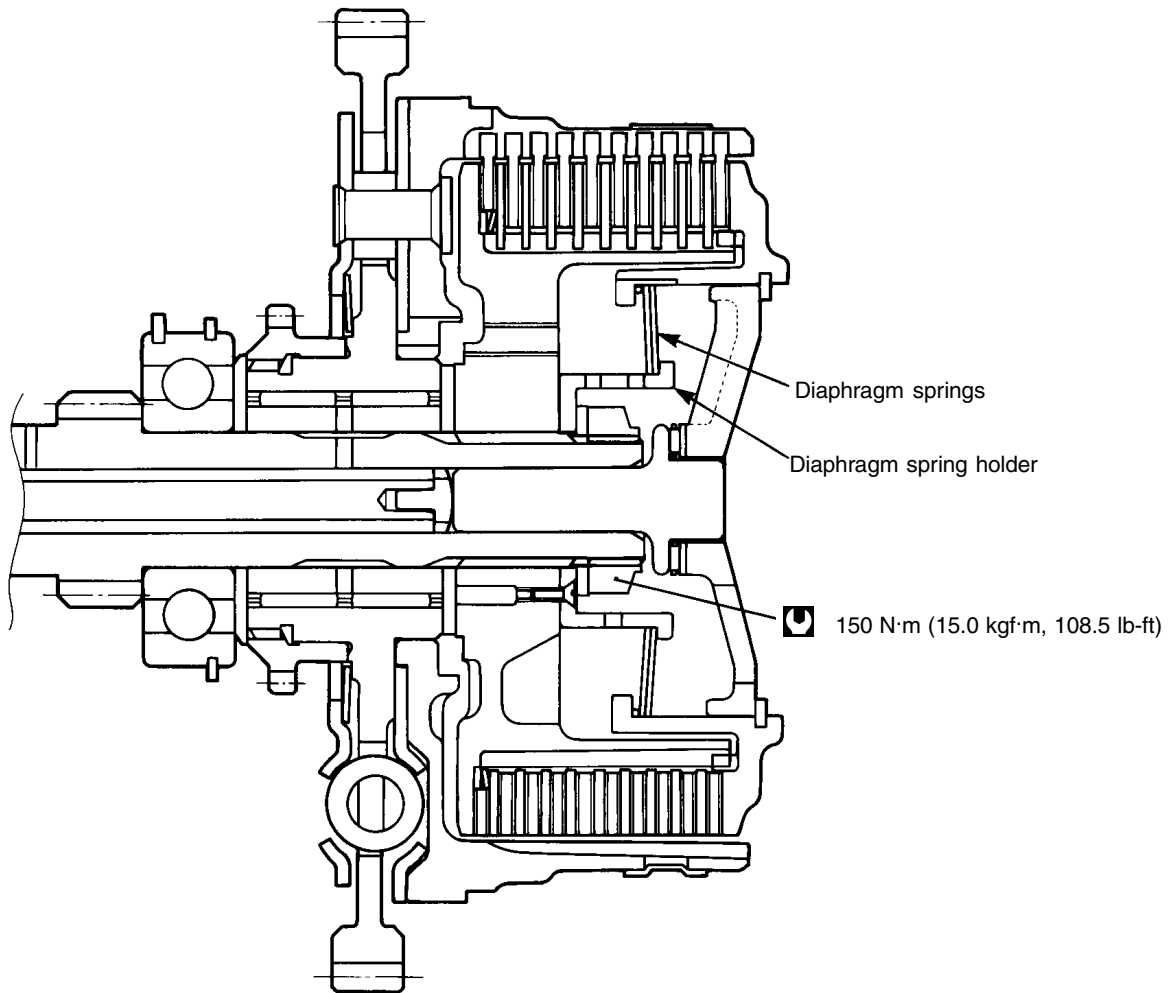

- Install the oil pressure switch, apply the recommended bond to its thread and tighten it to the specified torque.

 **99000-31140: SUZUKI BOND “1207B”**

 **Oil pressure switch: 14 N·m (1.4 kgf·m, 10.0 lb-ft)**

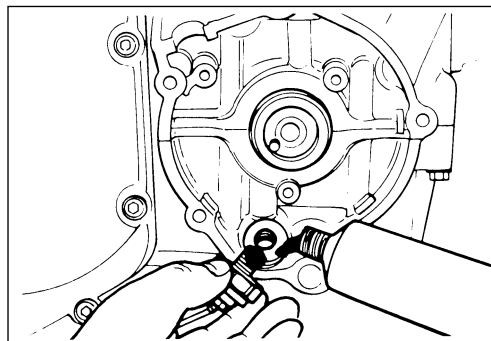


- Install the signal generator stator (along with the pickup coil) ①.
- Connect the oil pressure switch lead wire ②.


NOTE:

The recommended bond should be applied to the groove of the signal generator lead wire grommet ③.

 **99000-31140: SUZUKI BOND “1207B”**

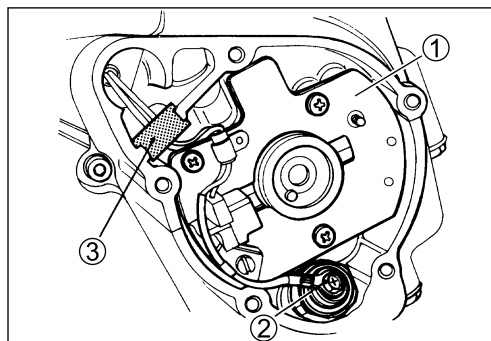


- Be sure to fit the slot ④ on the back surface of the signal generator rotor over the locating pin ⑤ on the end of crankshaft.

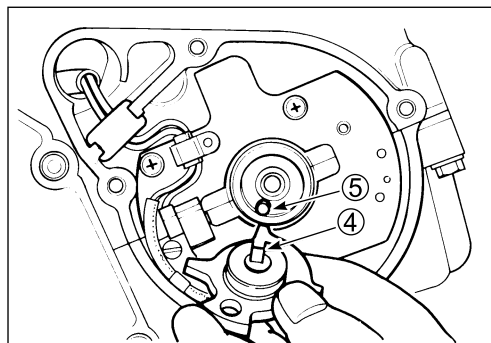


- Hold the nut and tighten the signal generator rotor bolt to the specified torque.

 **09900-00410: Hexagon wrench set**


 **Signal generator rotor bolt: 25 N·m (2.5 kgf·m, 18.0 lb-ft)**

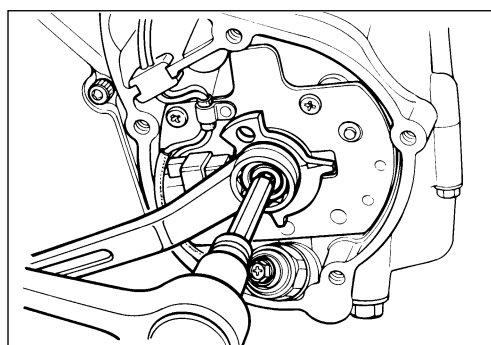

- Pass the signal generator lead wire through the upper crankcase as shown.

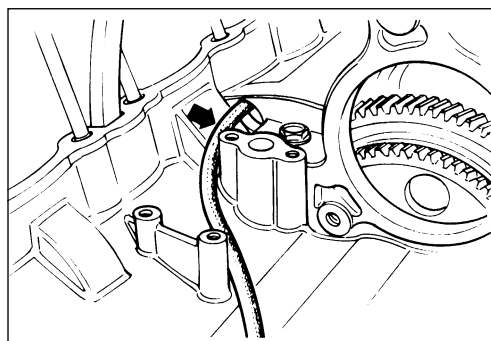

- Install the generator.

 **Generator mounting bolt: 25 N·m (2.5 kgf·m, 18.0 lb-ft)**


NOTE:

Apply **SUZUKI SUPER GREASE "A"** to the generator O-ring.

 **99000-25010: SUZUKI SUPER GREASE "A"**

CAUTION

Replace the O-ring with a new one.

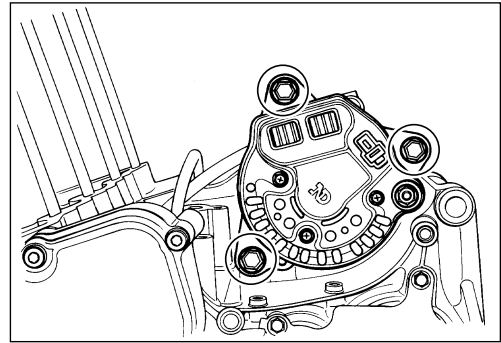

- Install the starter motor.

 **Starter motor mounting bolt: 6 N·m (0.6 kgf·m, 4.5 lb-ft)**


NOTE:

* Apply **SUZUKI SUPER GREASE "A"** to the starter motor O-ring.

* Apply a small quantity of **THREAD LOCK "1342"** to the two bolts.


 **99000-32050: THREAD LOCK "1342"**

 **99000-25010: SUZUKI SUPER GREASE "A"**

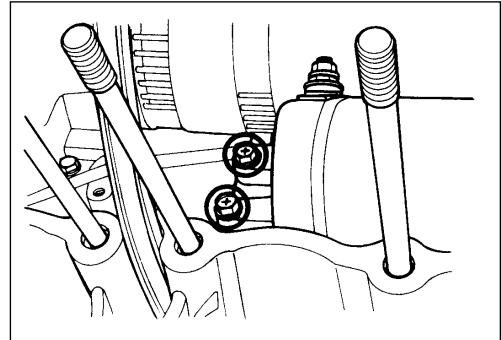

CYLINDER BLOCK STUD BOLT LOCATION

Item No.	Color	Length
① ③	Black	193 mm (7.6 in)
⑥ ⑧	Silver	182 mm (7.2 in)
② ④ ⑤ ⑦	Silver	189 mm (7.4 in)
⑨ ⑩ ⑪ ⑫	Black	189 mm (7.4 in)

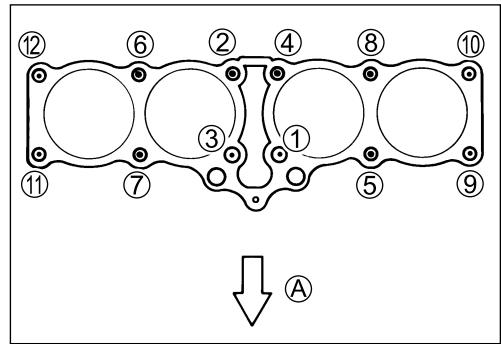


Ⓐ Exhaust side

NOTE:


Before installing the cylinder block stud bolt ⑦, apply a light coat of the recommended bond to its threads.

 **99000-31140: SUZUKI BOND "1207B"**

 **Cylinder block stud bolt: 15 N·m (1.5 kgf·m, 11.0 lb-ft)**

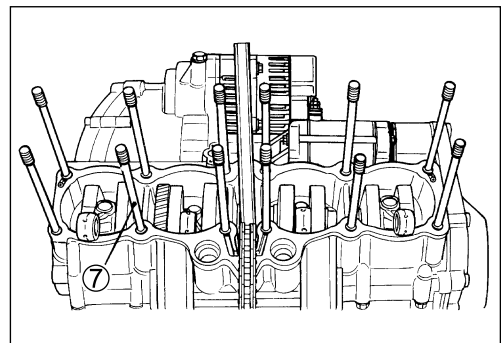

- Make sure that the oil jets Ⓑ in the upper crankcase are not clogged.

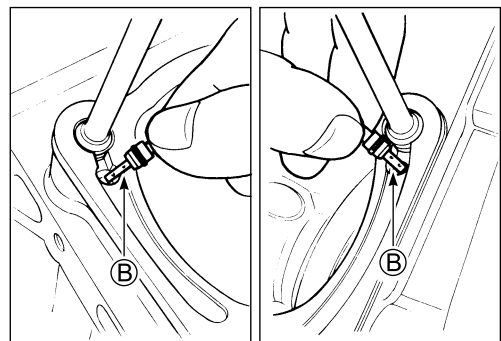

- Install the piston rings in the order of oil ring, 2nd ring and top ring.
- Top ring and 2nd (middle) ring differ in the shape of ring face, and the face of top ring is chrome-plated where as that of ring is not.
- Top and 2nd (middle) rings have letter “N” marked on the upper side.

NOTE:

Be sure to bring the marked side to top when fitting them to the piston.

- The first member to go into the oil ring groove is a spacer ①. After placing spacer, fit the two side rails ②.

Side designations, top and bottom, are not applied to the spacer and side rails: you can position each either way.

▲ CAUTION

When installing the spacer, be careful not to allow its two ends to overlap in the groove.

- Position the gaps of the three rings as shown. Before inserting each piston into the cylinder, check that the gaps are so located.

- Install the pistons and piston pins in their original cylinders. Refer to the scribe marks on each piston.
- Before installing the piston pins, apply molybdenum oil solution to their surfaces.

MOH 99000-25140: SUZUKI MOLY PASTE

- Place a cloth beneath the piston, and install the circlips ③.

NOTE:

* Install the pistons with the arrow mark facing towards the exhaust side.

* Be sure to use new circlips.






- Install the dowel pins and the new cylinder gasket.
- Before installing the cylinder block, oil the big and small ends of each conrod and also the sliding surface of each piston.

NOTE:

Install the gasket with the “UP” mark facing up as shown.

▲ CAUTION

Use a new gasket to prevent oil leakage.

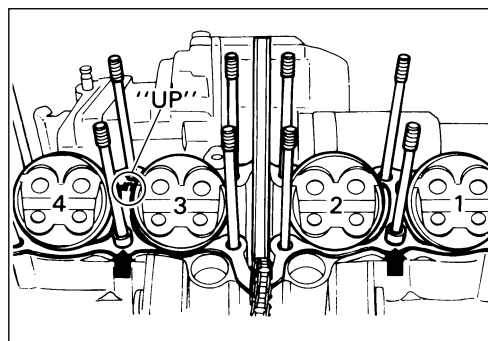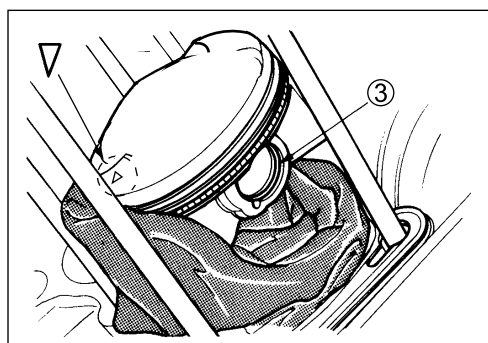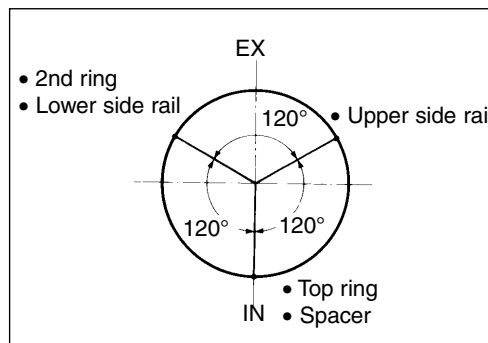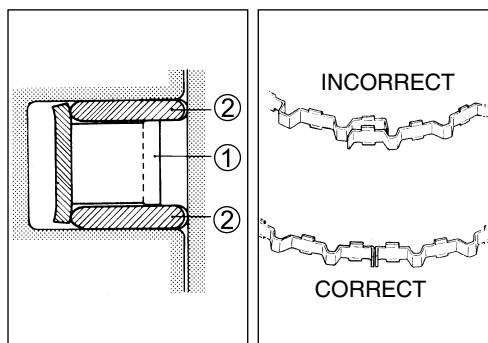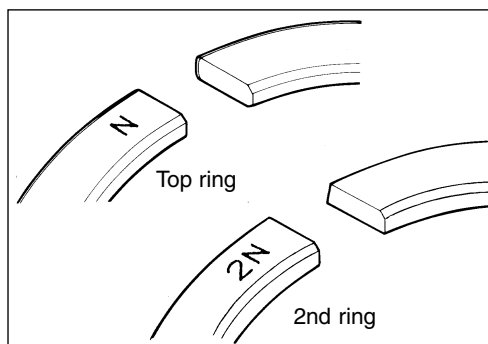



- Install each special tool as shown. Some light resistance must be overcome to lower the cylinder block over the pistons.
- With pistons #2 and #3 in place, install pistons #1 and #4, and then insert them into the respective cylinders.

TOOL 09916-74521: Holder body
 09916-74550: Band (bore 73 – 85 mm)

NOTE:
 Do not overtighten the bands or piston installation into the cylinders will be difficult.

- Tighten the cylinder base nut ① to the specified torque.

U Cylinder base nut: 9 N·m (0.9 kgf·m, 6.5 lb-ft)

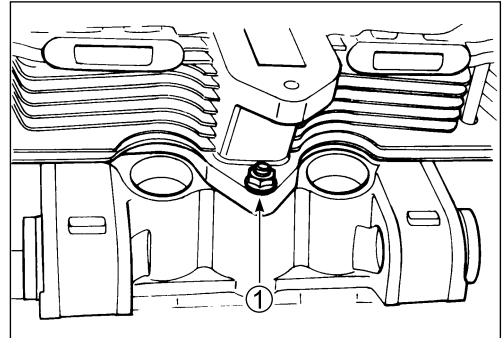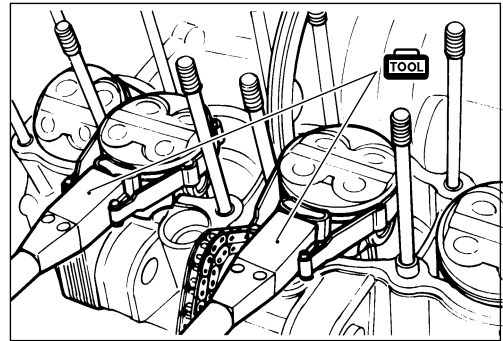


- Install the O-rings, dowel pins and the new cylinder head gasket.

NOTE:
 Install the gasket with the "UP" mark facing up as shown.

▲ CAUTION

Replace the O-rings and gasket with new ones to prevent oil leakage.

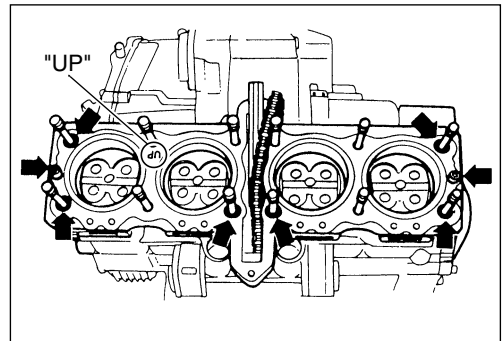


- Install the new O-rings ② onto the oil pipes and apply SUZUKI SUPER GREASE "A" to the O-rings.
- Install the right and left oil pipes.

▲ CAUTION


Replace the O-rings ② with new ones to prevent oil leakage.

AH 99000-25010: SUZUKI SUPER GREASE "A"

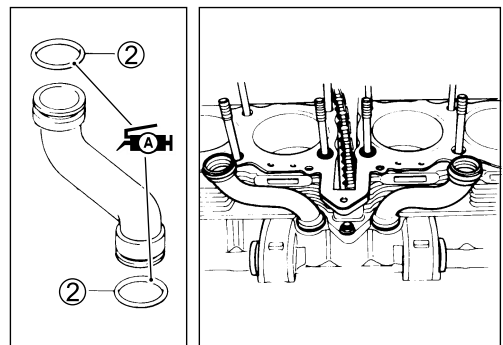


- Place the cylinder head onto the cylinder block.
- Place the cylinder head plate ③ onto the cylinder head.
- Cylinder head nuts and washers must be installed in the correct position as shown.

- (A) Copper washer with cap nut (4 pcs)
- (B) Steel washer with normal nut (4 pcs)
- (C) Copper washer with normal nut (4 pcs)

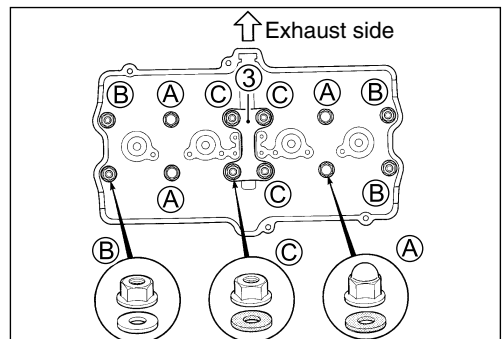


- Tighten the twelve 10-mm nuts in ascending order and to the specified torque.

 **Cylinder head nut: 38 N·m (3.8 kgf·m, 27.5 lb-ft)**

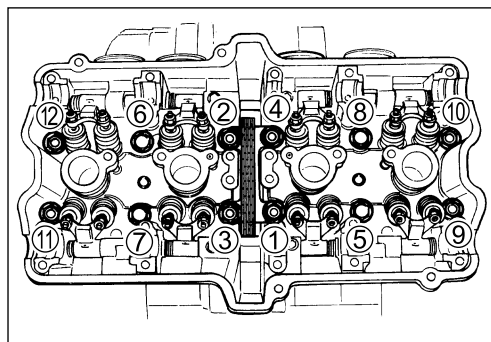


- After firmly tightening the twelve 10-mm nuts, install the cylinder head bolt (6 mm) ① and tighten it to the specified torque.

 **Cylinder head bolt: 10 N·m (1.0 kgf·m, 7.0 lb-ft)**

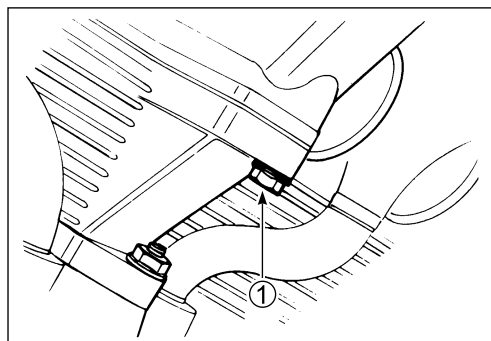


- Install the cam chain guide ② as shown.

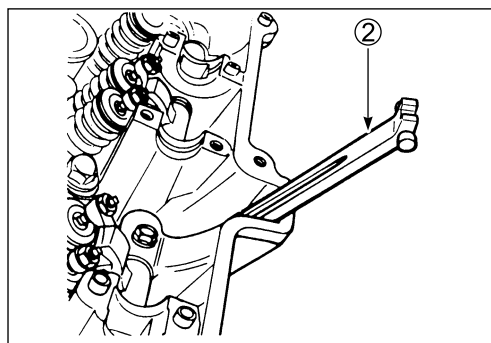

- While holding down the cam chain, rotate the crankshaft clockwise and align the “T” mark on the signal generator rotor with the center of the pickup coil.

▲ CAUTION


Turn the crankshaft using a 19 mm wrench. Never rotate the crankshaft using a 6-mm T-type wrench.

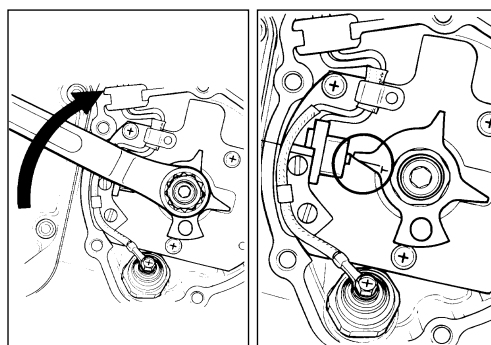



NOTE:

Before installing the camshafts onto the cylinder head, apply mixed engine oil/moly paste onto the camshaft journals and do not leave any dry spots. Also, apply engine oil onto the camshaft journal holders.



 **99000-25140: SUZUKI MOLY PASTE**

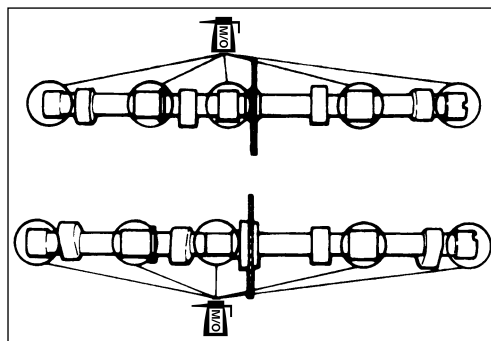


- The exhaust camshaft has the embossed letters “EX” and the intake camshaft has the embossed letters “IN”. Also, the right end of each camshaft has a notch (A).

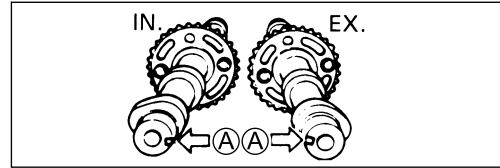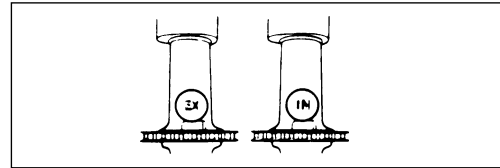

- When the “T” mark on the signal generator rotor is aligned with the center of the pickup coil, hold the camshaft steady and lightly pull up the cam chain to remove any slack between the crankshaft sprocket and the exhaust camshaft sprocket.

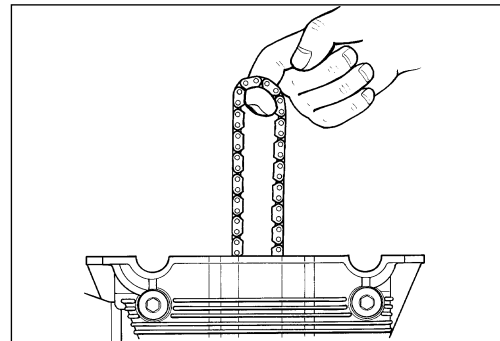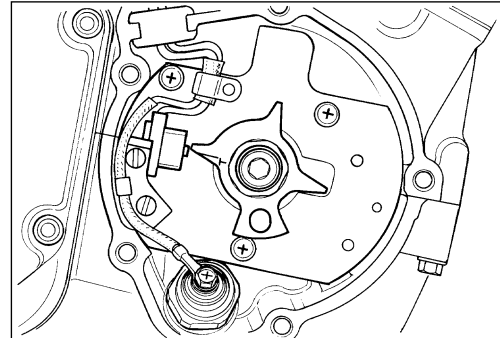




- The exhaust camshaft sprocket has an arrow marked “1” (1). Turn the exhaust camshaft so that the arrow is aligned with the gasket surface of the cylinder head.
- Engage the cam chain with the exhaust camshaft sprocket.
- The other arrow marked “2” should now be pointing straight up. Starting from the roller pin (A) that is directly above the arrow marked “2”, count out 24 roller pins (from the exhaust camshaft side going towards the intake camshaft side). Engage the 24th roller pin (B) on the cam chain with the arrow marked “3” on the intake sprocket. Refer to the right illustrations.

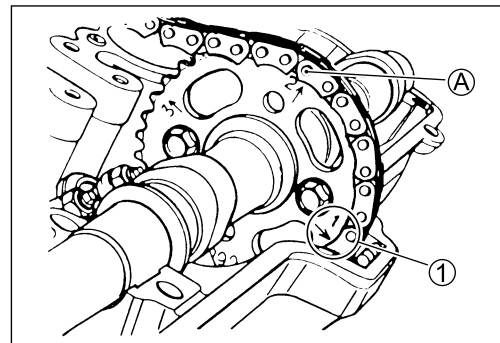

NOTE:

The cam chain should now be on all three sprockets. Be careful not to move the crankshaft until the camshaft journal holders and cam chain tensioner are secured.

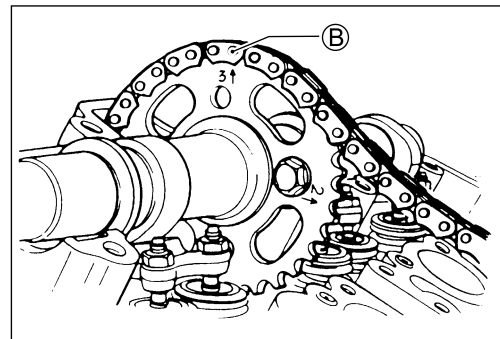

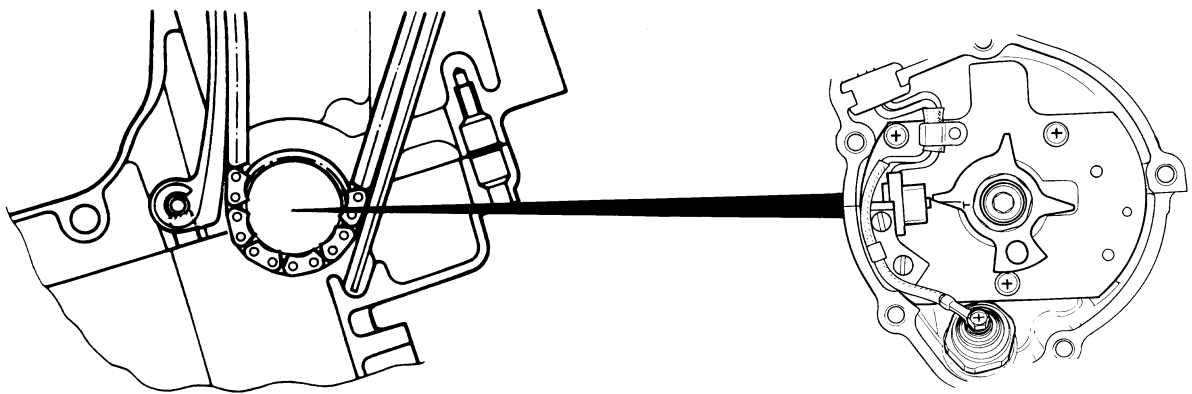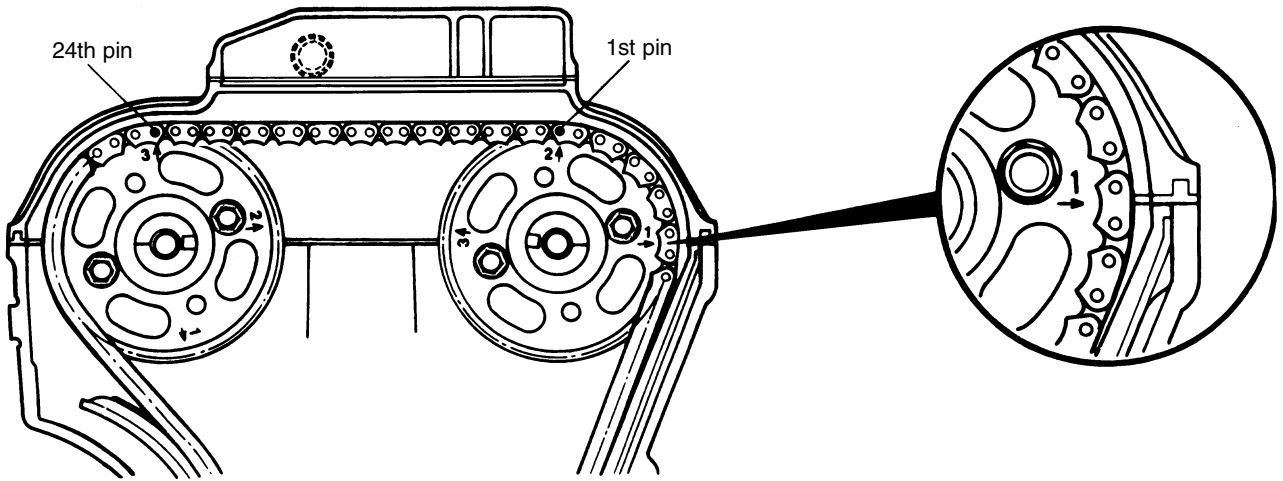

- Each camshaft journal holder is identified with an embossed letter. Install the dowel pins into each camshaft journal holder.
- Fasten the camshafts (IN and EX) evenly by tightening the camshaft journal holder bolts sequentially and in a crisscross pattern.

NOTE:

Damage to the cylinder head or camshaft journal holder thrust surfaces may result if the camshaft journal holders are not tightened evenly.


- Tighten the camshaft journal holder bolts to the specified torque.

🔩 Camshaft journal holder bolt: 10 N·m (1.0 kgf·m, 7.0 lb-ft)

⚠ CAUTION

The camshaft journal holder bolts are made of a special material and much superior in strength, compared with other types of high strength bolts.


Take special care not to use other types of bolts instead of these special bolts. To identify these bolts, each of them has a “9” on its head.

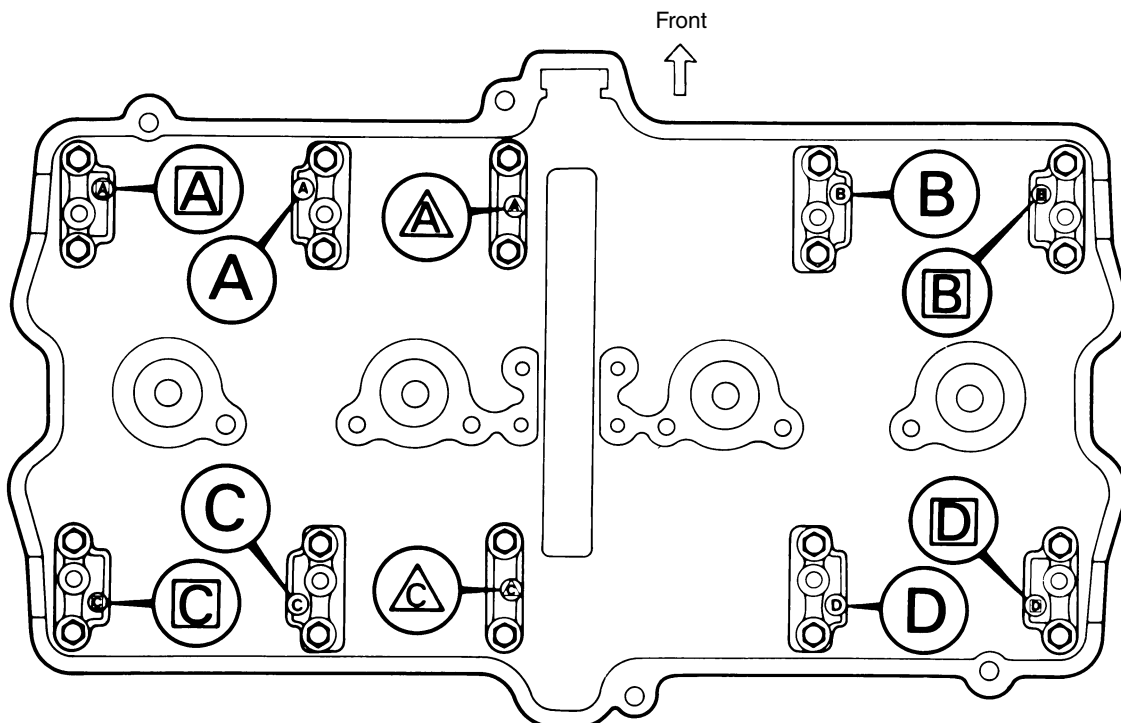

- After removing the spring holder bolt ① and spring, unlock the ratchet mechanism ② and push the push rod ③ all the way into the cam chain tensioner.

NOTE:


Before installing the cam chain tensioner, turn the crankshaft clockwise to remove any cam chain slack between the crankshaft sprocket and exhaust camshaft sprocket.

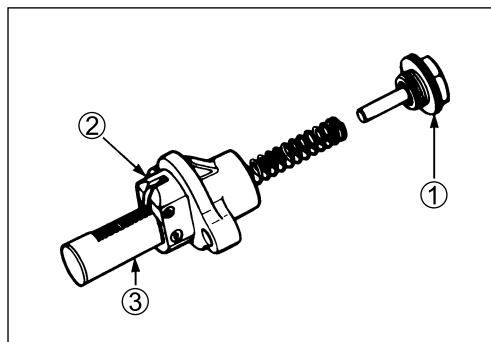

- Install a new gasket and the cam chain tensioner onto the cylinder block as shown.
- Tighten the cam chain tensioner bolts to the specified torque.

🔧 Cam chain tensioner mounting bolt:

7 N·m (0.7 kgf·m, 5.0 lb-ft)

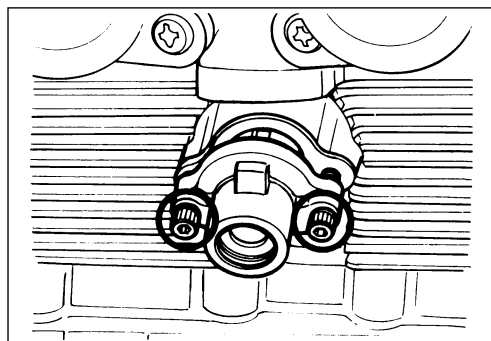

- Insert the spring into the cam chain tensioner and tighten the spring holder bolt ④ to the specified torque.

🔧 Spring holder bolt: 35 N·m (3.5 kgf·m, 25.5 lb-ft)



⚠ CAUTION

After installing the cam chain tensioner, check the cam chain slack to make sure that the cam chain tensioner is working properly.

- Recheck the camshaft position (cam timing).
- Pour about 50 ml of engine oil into each oil pocket in the cylinder head.


NOTE:

Turn the crankshaft and check that all the moving parts (e.g., cam follower, camshaft) work properly.

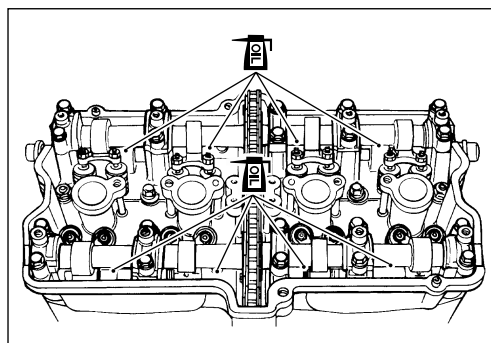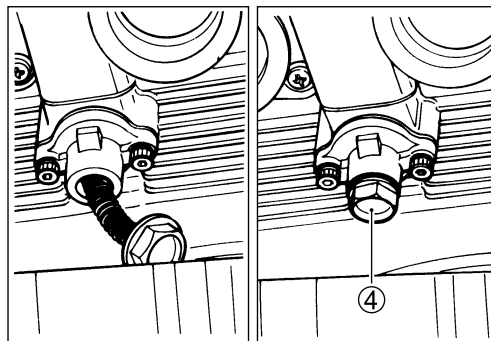

⚠ CAUTION

Be sure to check and adjust the valve clearance. (👉 2-4)

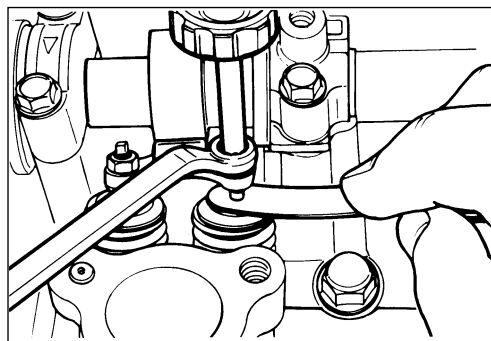

- Apply a light coat of the recommended bond to the signal generator gasket mating surface (A) as shown.

 99000-31140: SUZUKI BOND “1207B”

- Install a new gasket and the signal generator cover.

NOTE:

- * Install the gasket washer onto the signal generator cover bolt (B) as shown.
- * Apply a small quantity of THREAD LOCK “1342” to the signal generator cover bolts.

 99000-32050: THREAD LOCK “1342”

CAUTION

Use a new gasket to prevent oil leakage.


- Before installing the cylinder head cover gasket onto the cylinder head cover, apply the recommended bond to the groove in the cylinder head cover.
- Apply the recommended bond to the four camshaft end caps of the gasket as shown.

 99000-31140: SUZUKI BOND “1207B”

- Place the cylinder head cover onto the cylinder head.
- Install the four gaskets onto each cylinder head cover union bolt (1) and tighten them to the specified torque.

CAUTION

Replace the gaskets with new ones to prevent oil leakage.

 **Cylinder head cover union bolt (1):**
16 N·m (1.6 kgf·m, 11.5 lb-ft)






- Install the eight gaskets in the correct locations.
- Tighten the cylinder head cover bolts (2) to the specified torque.

CAUTION

Replace the gaskets with new ones to prevent oil leakage.

 **Cylinder head cover bolt (2):**
14 N·m (1.4 kgf·m, 10.0 lb-ft)

- Install all of the spark plugs. (➡ 2-5)

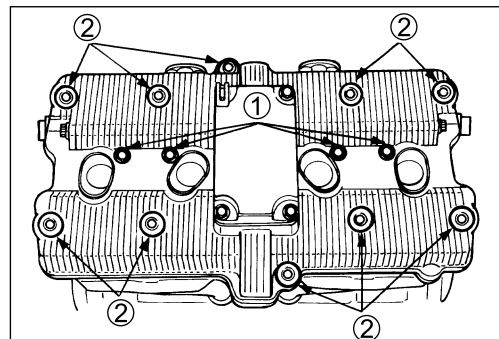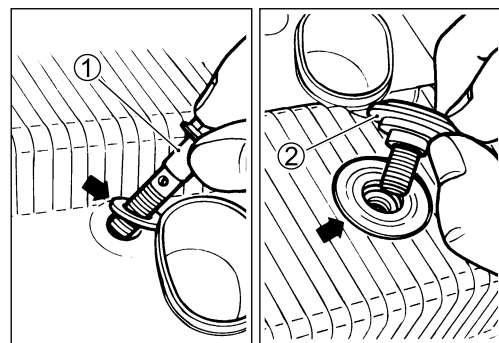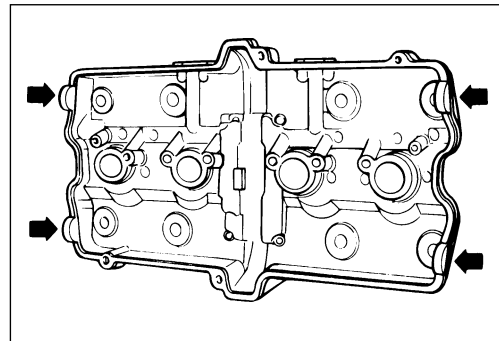
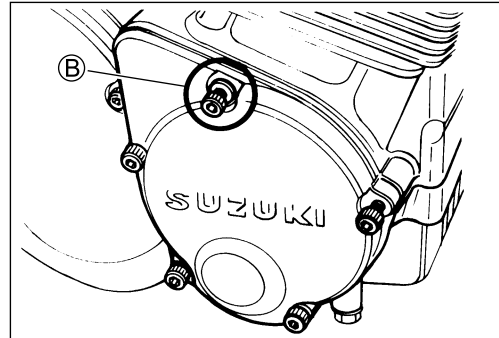
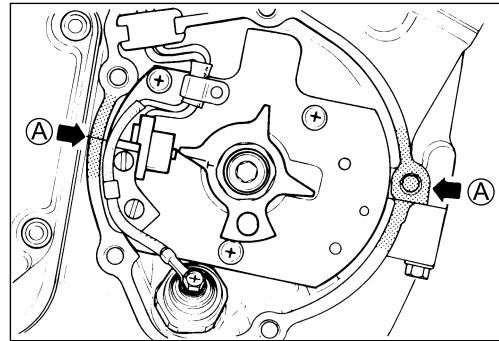


- Install the left and right oil hoses and tighten their mounting bolts to the specified torque.

▲ CAUTION

Replace the O-rings (A) and (B) with new ones to prevent oil leakage.

- 🔧 Oil hose mounting bolt: 10 N·m (1.0 kgf·m, 7.0 lb-ft)

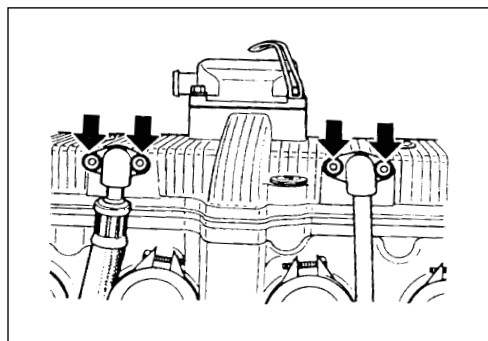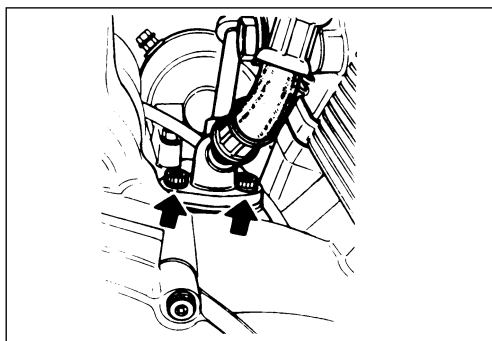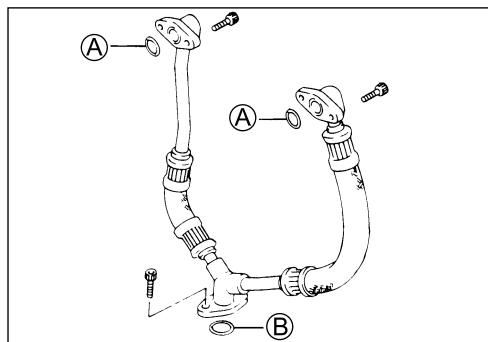

- Turn the oil filter by hand until you feel that the oil filter gasket (O-ring) has contacted the oil filter mounting surface. Then, tighten the oil filter two full turns using the special tool.

🔧 09915-40610: Oil filter wrench

NOTE:



Before installing the oil filter, apply a light coat of engine oil onto its O-ring.

- Install the PAIR valve pipes and hoses and tighten their mounting nuts to the specified torque.

▲ CAUTION

Replace the gaskets with new ones to prevent exhaust gas leakage.

- 🔧 PAIR valve pipe mounting nut:
10 N·m (1.0 kgf·m, 7.0 lb-ft)

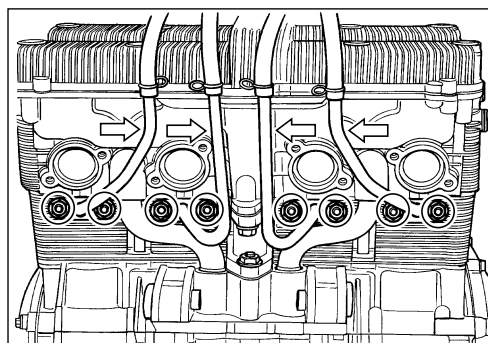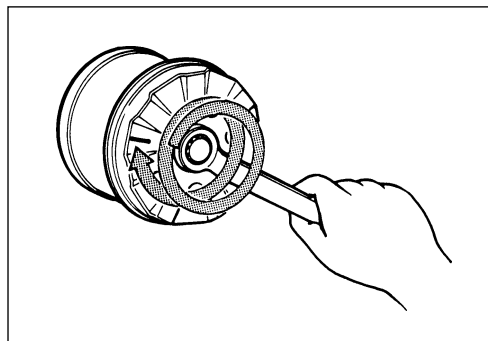

ENGINE COMPONENTS INSPECTION AND SERVICE

CAMSHAFT/CYLINDER HEAD INSPECTION AND SERVICE


▲ CAUTION

Identify the position of each removed part. Organize the parts in their respective groups (i.e., intake, exhaust, #1 or #2) so that they can be installed in their original locations.

CAMSHAFTS

If the engine produces abnormal noises, vibration or lacks power, a camshaft may be distorted or worn to the service limit. The camshaft runout should be checked. Also, check the cams and journals for wear or damage.

The exhaust camshaft has the embossed letters “EX” and the intake camshaft has the embossed letters “IN”.

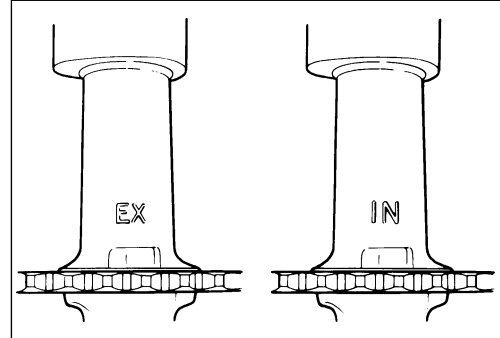

CAM WEAR


Worn-down cams are often the cause of mistimed valve operation resulting in reduced power output.

Measure the cam height (H) using the micrometer. Replace a camshaft if the cams are worn to the service limit.

TOOL 09900-20202: Micrometer (25 – 50 mm)

DATA Cam height (H)

Service Limit: (IN) 33.28 mm (1.3102 in)
(EX) 32.35 mm (1.2736 in)

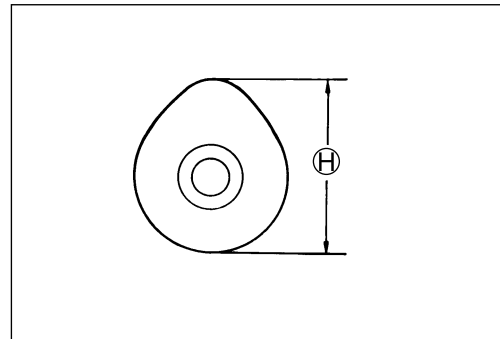


CAMSHAFT JOURNAL WEAR

Determine whether or not each journal is worn down to the limit by measuring the oil clearance with the camshaft installed in place. Measure the clearance using the plastigauge ①.

TOOL 09900-22301: Plastigauge
09900-22302: Plastigauge

DATA Camshaft journal oil clearance (IN & EX)
Service Limit: 0.150 mm (0.0059 in)

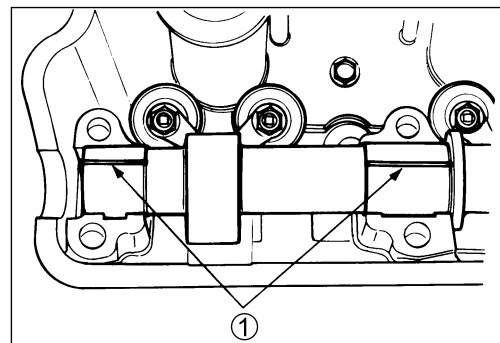


NOTE:

Install each camshaft journal holder to its original position. (☞ 3-46)

Tighten the camshaft journal holder bolts evenly and diagonally to the specified torque.


W Camshaft journal holder bolt: 10 N·m (1.0 kgf·m, 7.0 lb-ft)

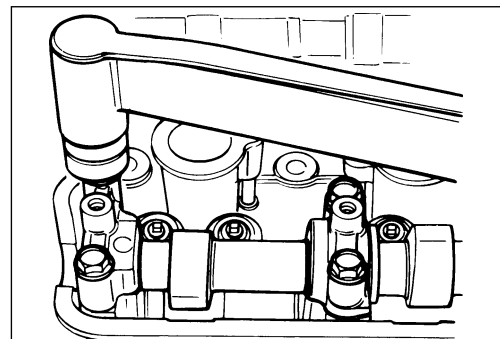

NOTE:

Do not rotate the camshafts with the plastigauge in place.

Remove the camshaft journal holders and measure the width of the compressed plastigauge using the envelope scale. This measurement should be taken at the widest part of the compressed plastigauge.

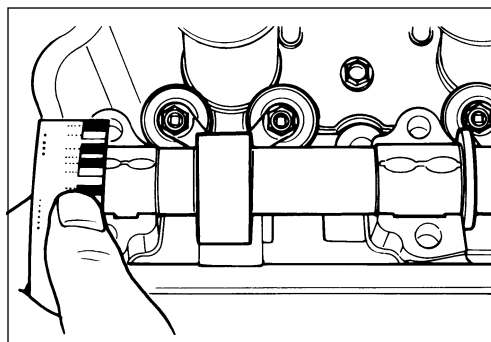



If the camshaft journal oil clearance exceeds the limit, measure the inside diameter of the camshaft journal holder and the outside diameter of the camshaft journal. Replace the camshaft or the cylinder head depending upon which one exceeds the specification.

TOOL 09900-20602: Dial gauge (1/1000 mm)
09900-22403: Small bore gauge (18 – 35 mm)

DATA Camshaft journal holder I.D. (IN & EX)
Standard: 22.012 – 22.025 mm (0.8666 – 0.8671 in)

TOOL 09900-20205: Micrometer (0 – 25 mm)


DATA Camshaft journal O.D. (IN & EX)
Standard: 21.959 – 21.980 mm (0.8645 – 0.8654 in)

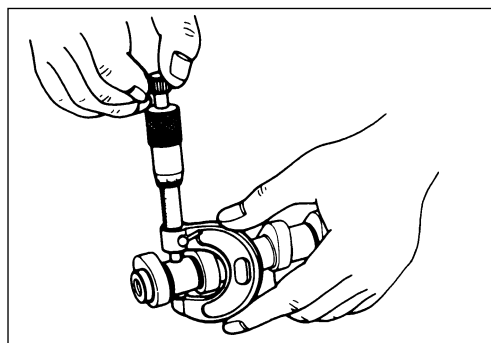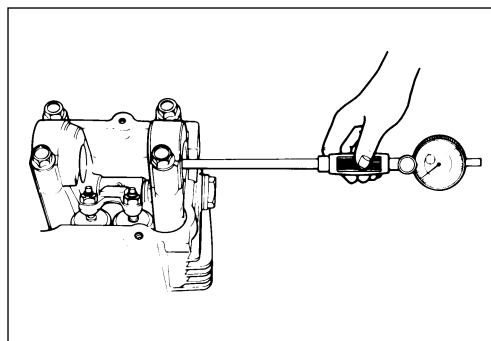**CAMSHAFT RUNOUT**

Measure the runout using the dial gauge. Replace the camshaft if the runout exceeds the limit.


TOOL 09900-20606: Dial gauge (1/100 mm)
09900-20701: Magnetic stand
09900-21304: V-block set (100 mm)

DATA Camshaft runout (IN & EX)
Service Limit: 0.1 mm (0.004 in)

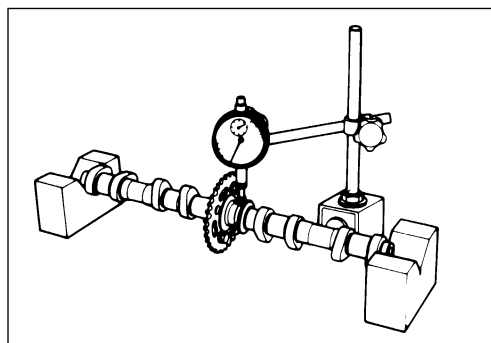**CAMSHAFT SPROCKETS**


The fixed position of each camshaft sprocket is determined by arrow mark “3” for the intake camshaft, and by arrow marks “1” and “2” for the exhaust camshaft, as located in reference to the notch ① on the right end of each camshaft.


Inspect the teeth of each camshaft sprocket for wear or damage. If they are worn or damaged, replace the sprockets and cam chain as a set.

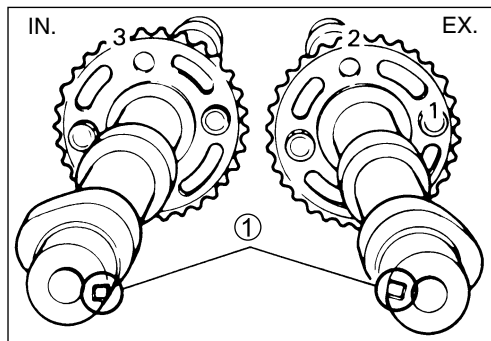

- Apply THREAD LOCK SUPER “1303” to the threads of the camshaft sprocket bolts and then tighten them to the specified torque.

 99000-32030: THREAD LOCK SUPER “1303”


 Camshaft sprocket bolt: 25 N·m (2.5 kgf·m, 18.0 lb-ft)

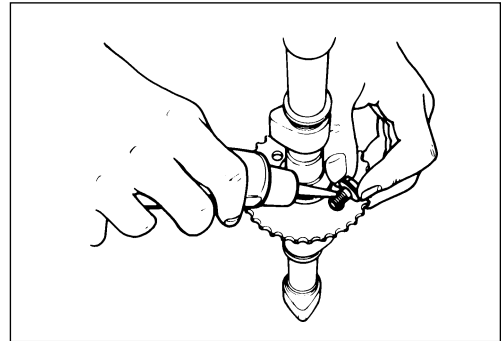

CAM CHAIN TENSIONER



The cam chain tensioner is maintained at the proper tension by an automatically adjusted tensioner.

Unlock the ratchet mechanism ① and move the push rod ② in place to see if it slides smoothly. If it does not slide smoothly or the ratchet mechanism is worn or damaged, replace the cam chain tensioner with a new one.

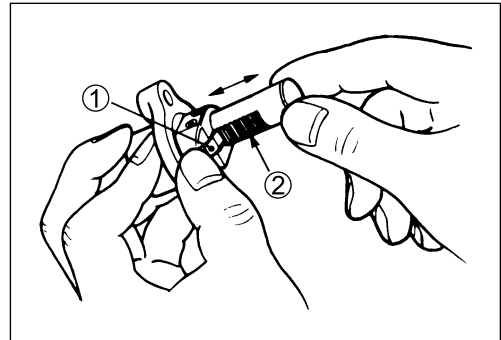

CAM CHAIN GUIDE


Check the contacting surface of the cam chain guide. If it is worn or damaged, replace it with a new one.

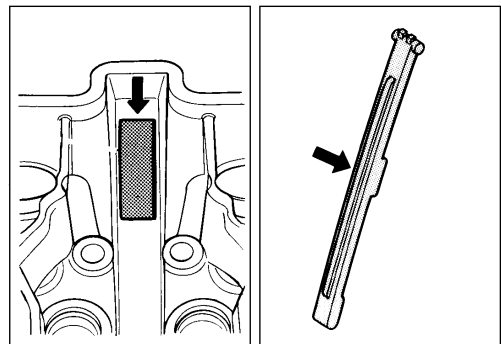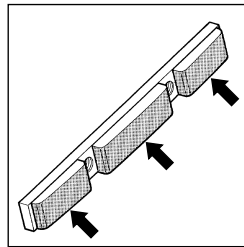


CAM CHAIN TENSIONER GUIDE

Check the contacting surface of the cam chain tensioner guide. If it is worn or damaged, replace it with a new one.

If it is necessary to replace the cam chain tensioner guide, remove the engine and separate the upper and lower crankcases.

( 3-23)

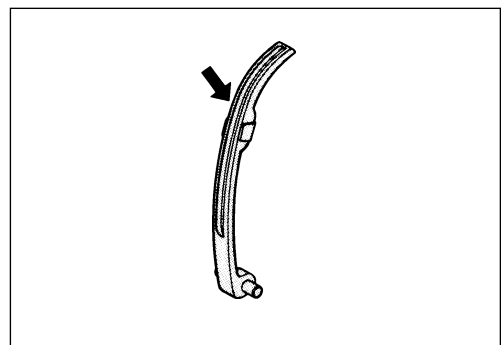


NOTE:

When replacing the cam chain guides ① and ②, apply SUZUKI THREAD LOCK SUPER “1303” to threads of bolt and screws.

 99000-32030: THREAD LOCK SUPER “1303”


 Cam chain guide bolt: 6 N·m (0.6 kgf·m, 4.3 lb-ft)

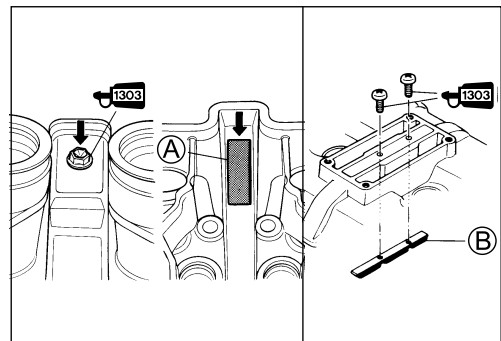

CYLINDER HEAD DISASSEMBLY

- Remove the rocker arm shaft set bolt ① and cylinder head plug ②.


TOOL 09900-00410: Hexagon wrench set

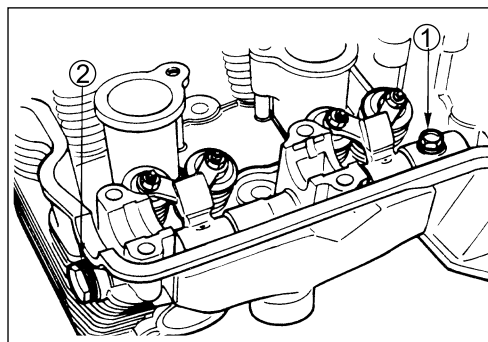

- Remove the rocker arm shaft ①, rocker arm ② and spring ③.



NOTE:

To remove the rocker arm shaft, screw a 8-mm bolt into the rocker arm shaft end and then pull out the shaft.

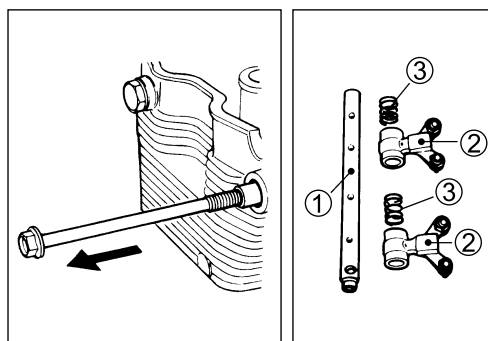


- Using the special tools, compress the valve spring and remove the valve cotteners ④ from the valve stem.


TOOL 09916-14510: Valve lifter
 09916-14910: Valve lifter attachment
 09916-84511: Tweezers

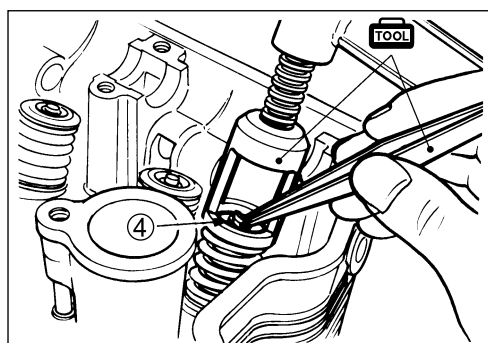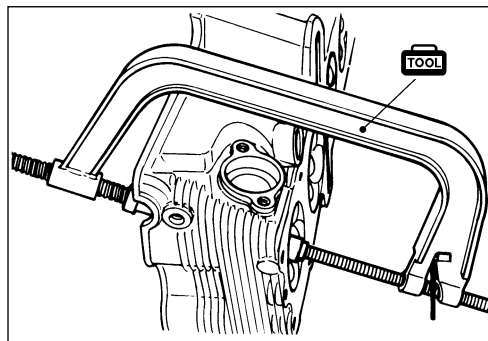

- Remove the valve spring retainer ⑤ and the inner and outer valve springs ⑥.

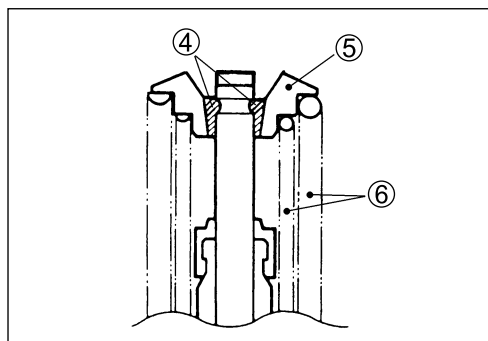

- Remove the valve spring seat.
- Remove the valve from the combustion chamber side.
- Remove the oil seal.

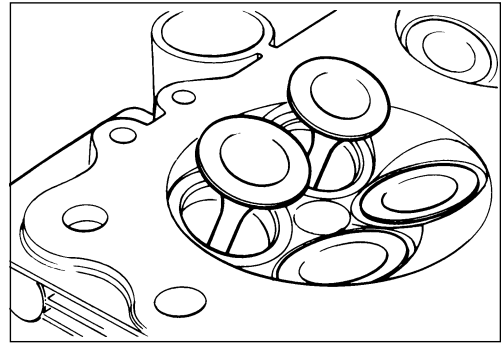


CYLINDER HEAD DISTORTION

Decarbonize the combustion chambers.

Check the gasket surface of the cylinder head for distortion. Use a straightedge and thickness gauge. Take clearance readings at several places. If readings exceed the service limit, replace the cylinder head.

TOOL 09900-20803: Thickness gauge

DATA Cylinder head distortion
Service Limit: 0.2 mm (0.008 in)

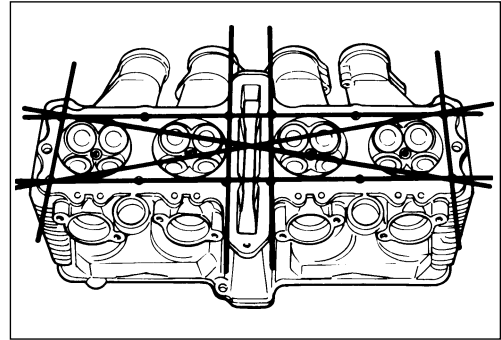


VALVE STEM RUNOUT

Support the valve using V-blocks, as shown, and check its runout using the dial gauge.

If the runout exceeds the service limit, replace the valve.

TOOL 09900-20606: Dial gauge (1/100 mm)
09900-20701: Magnetic stand
09900-21304: V-block set (100 mm)

DATA Valve stem runout
Service Limit: 0.05 mm (0.002 in)

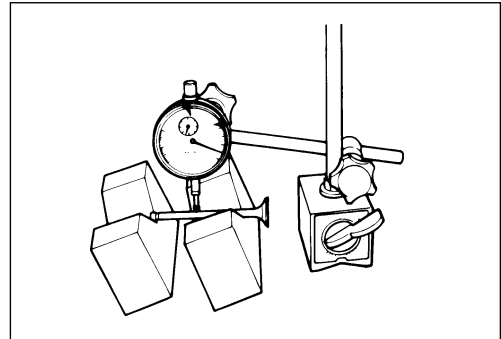


VALVE HEAD RADIAL RUNOUT

Place the dial gauge at a right angle to the valve head face and measure the valve head radial runout.

If it measures more than the service limit, replace the valve.

TOOL 09900-20606: Dial gauge (1/100 mm)
09900-20701: Magnetic stand
09900-21304: V-block set (100 mm)

DATA Valve head radial runout
Service Limit: 0.03 mm (0.001 in)

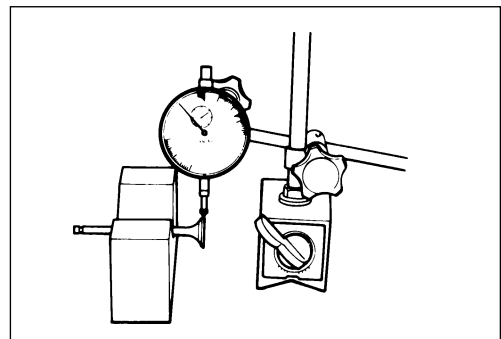


VALVE FACE WEAR

Visually inspect each valve face for wear. Replace any valve with an abnormally worn face. The thickness of the valve face decreases as the face wears. Measure the valve face T . If it is out of specification replace the valve with a new one.

TOOL 09900-20102: Vernier calipers


DATA Valve face thickness T
Service Limit: 0.5 mm (0.02 in)

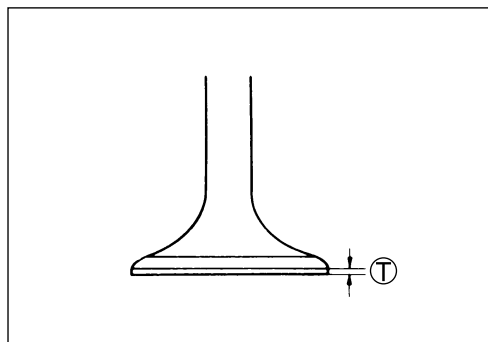**VALVE STEM DEFLECTION**

Lift the valve about 10 mm (0.39 in) from the valve seat. Measure the valve stem deflection in two directions, "X" and "Y", perpendicular to each other. Position the dial gauge as shown. If the deflection exceeds the service limit, then determine whether the valve or the guide should be replaced with a new one.

TOOL 09900-20606: Dial gauge (1/100 mm)
09900-20701: Magnetic stand

DATA Valve stem deflection (IN & EX)
Service Limit: 0.35 mm (0.014 in)

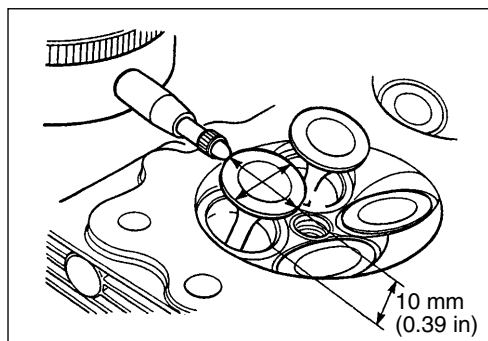**VALVE STEM WEAR**


Measure the valve stem O.D. using the micrometer. If it is out of specification, replace the valve with a new one. If the valve stem O.D. is within specification but the valve stem deflection is not, replace the valve guide. After replacing the valve or valve guide, recheck the deflection.

TOOL 09900-20205: Micrometer (0 – 25 mm)

DATA Valve stem O.D.
Standard (IN) : 4.965 – 4.980 mm (0.1955 – 0.1961 in)
(EX) : 4.945 – 4.960 mm (0.1947 – 0.1953 in)

NOTE:

If valve guides have to be replaced, refer to the valve guide servicing steps below.

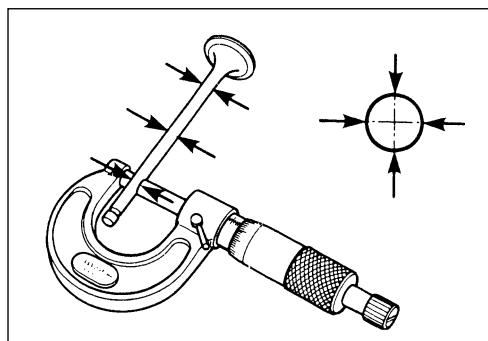


VALVE GUIDE SERVICING



- Using the valve guide remover ①, drive the valve guide out toward the intake or exhaust camshaft side.

 **09916-44310: Valve guide remover/installer**

NOTE:

- * *Discard the removed valve guide subassemblies.*
- * *Only oversized valve guides are available as replacement parts. (Part No. 11116-06B70)*
- Re-finish the valve guide holes in the cylinder head using the reamer and handle.

 **09916-34580: Valve guide reamer**
09916-34542: Valve guide reamer handle

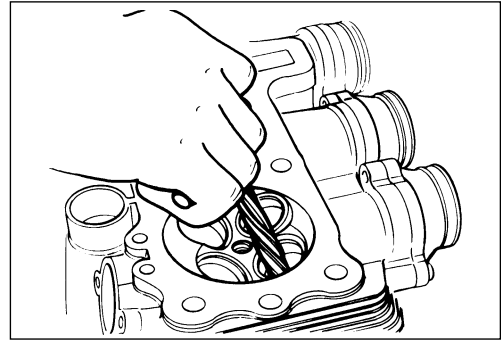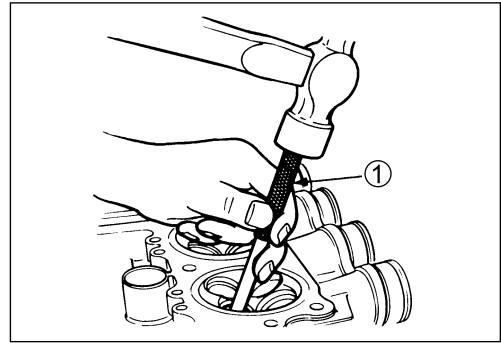

- Install a ring onto each valve guide. Be sure to use new rings.
- Oil the stem hole of each valve guide and drive the guide into the guide hole using the valve guide installer.

② Valve guide


③ Cylinder head

 **09916-44310: Valve guide remover/installer**

CAUTION



Failure to oil the valve guide hole before driving the new guide into place may result in a damaged guide or head.

- After installing the valve guides, re-finish their guiding bores using the reamer. Be sure to clean and oil the guides after reaming.

 **09916-34570: Valve guide reamer**
09916-34542: Valve guide reamer handle

NOTE:

Insert the reamer from the combustion chamber and always turn the reamer handle clockwise.

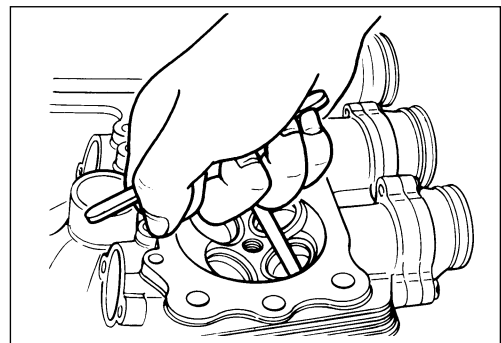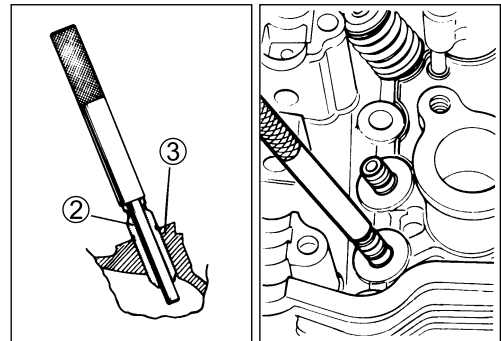

VALVE SEAT WIDTH

- Coat the valve seat uniformly with Prussian blue. Install the valve and attach a valve lapper onto it. Tap the coated seat with the valve face in a rotating manner, in order to obtain a clear impression of the seating contact.



09916-10911: Valve lapper set

- The ring-like dye impression left on the valve face must be continuous without any breaks. In addition, the width of the dye ring, which is the valve seat width, must be within the following specification.

Valve seat width $\text{\textcircled{W}}$

Standard: 0.9 – 1.1 mm (0.035 – 0.043 in)


If the valve seat is out of specification, re-cut the seat.

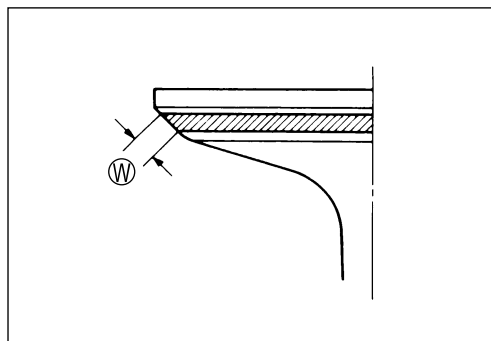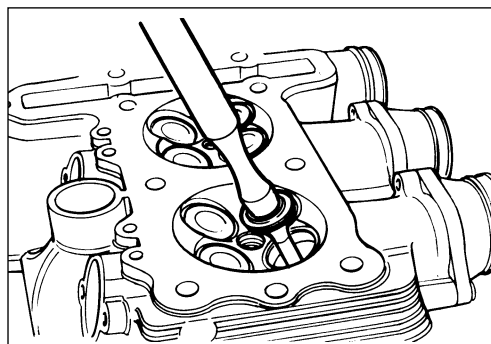

VALVE SEAT SERVICING

The valve seats $\text{\textcircled{1}}$ for both the intake and exhaust valves are machined to two different angles. The seat contact surface is cut at 45°.

	INTAKE	EXHAUST
45°	N-122	N-122
15°	N-121	N-121



-  09916-21111: Valve seat cutter set
- 09916-20610: Valve seat cutter (N-121)
 - 09916-20620: Valve seat cutter (N-122)
 - 09916-24311: Solid pilot (N-100-5.0)

NOTE:


Use the solid pilot (N-100-5.0) along with the valve seat cutter (N-121 and -122).

CAUTION


The valve seat contact area must be inspected after each cut.

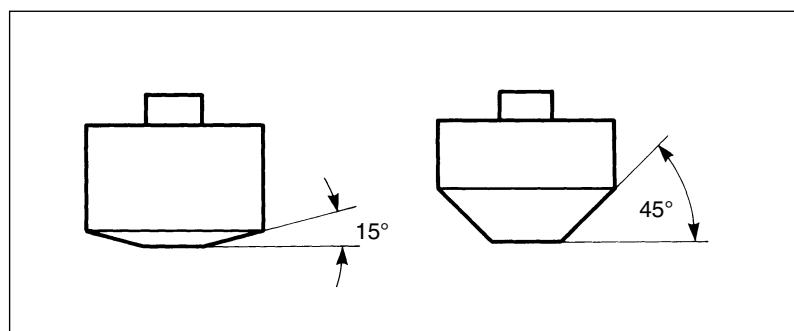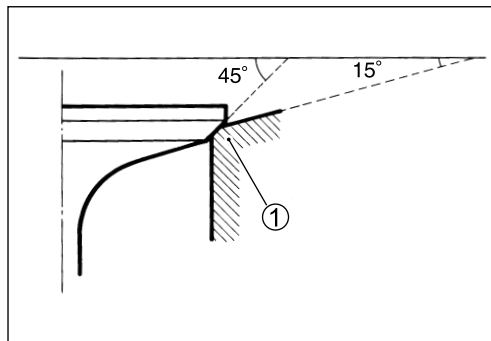

- When installing the solid pilot ①, rotate it slightly.

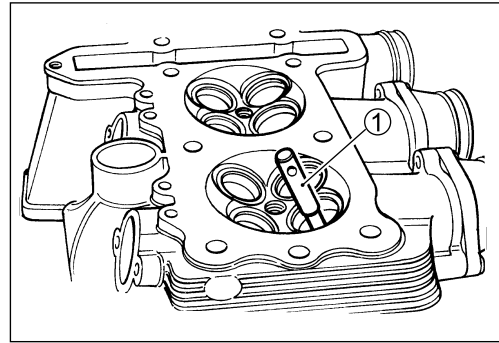


- Seat the pilot snugly. Install the 45° cutter (2), attachment (3) and T-handle (4).

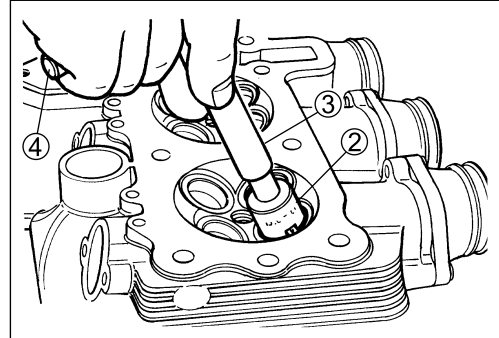

INITIAL SEAT CUT


- Using the 45° cutter, descale and clean up the seat. Rotate the cutter one or two turns.
- Measure the valve seat width (W) after every cut.

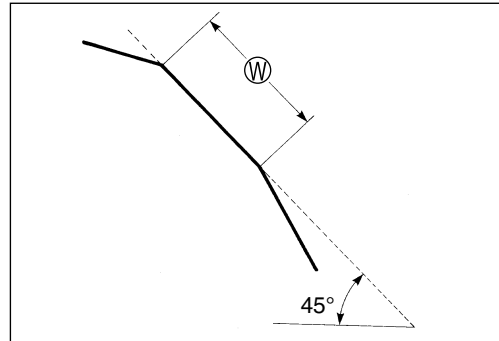

- If the valve seat is pitted or burned, use the 45° cutter to condition the seat some more.


NOTE:


Cut only the minimum amount necessary from the seat to prevent the possibility of the valve stem becoming too close to the rocker arm for correct valve contact angle.

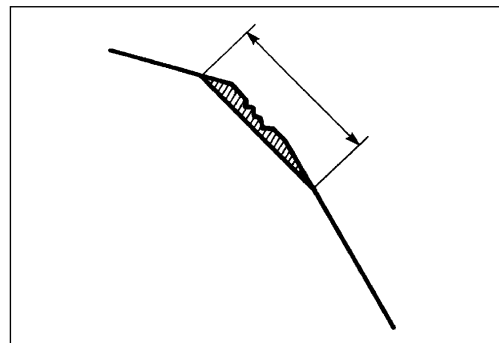

TOP NARROWING CUT

- If the contact area is too high on the valve, or if it is too wide, use the 15° cutter to lower and narrow the contact area.

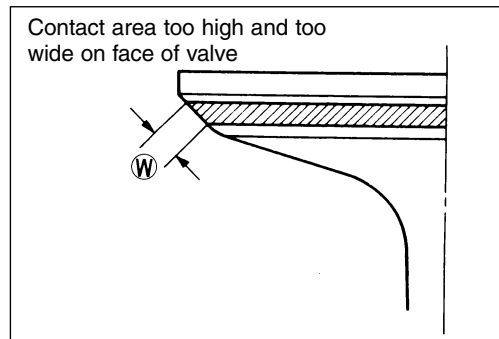

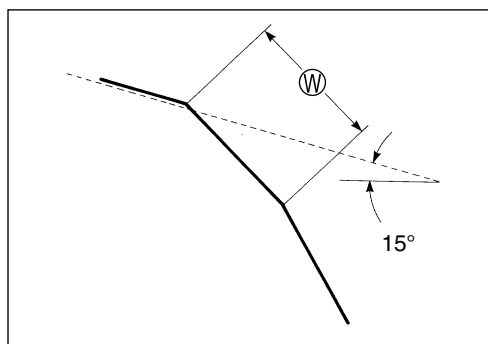

FINAL SEAT CUT

- If the contact area is too low or too narrow, use the 45° cutter to raise and widen the contact area.

NOTE:

After cutting the 15° angle, it is possible that the valve seat (45°) is too narrow. If so, re-cut the valve seat to the correct width.



- After the desired seat position and width is achieved, use the 45° cutter very lightly to clean up any burrs caused by the previous cutting operations.

▲ CAUTION

Do not use lapping compound after the final cut is made. The finished valve seat should have a velvety smooth finish but not a highly polished or shiny finish. This will provide a soft surface for the final seating of the valve which will occur during the first few seconds of engine operation.

NOTE:

After servicing the valve seats, be sure to check the valve clearance after the cylinder head has been reinstalled. (☞ 2-4)

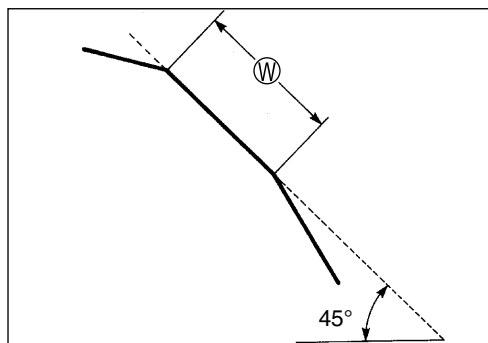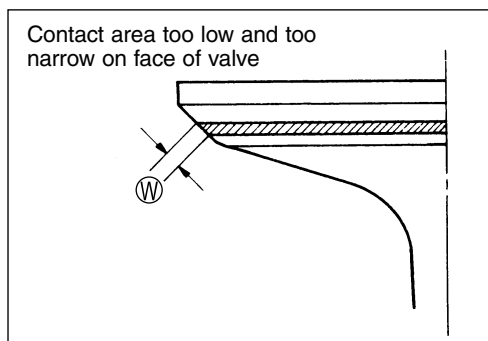

VALVE SEAT SEALING CONDITION INSPECTION


Clean and assemble the cylinder head and valve components. Fill the intake and exhaust ports with gasoline to check for leaks. If any leaks occur, inspect the valve seat and face for burrs or other things that could prevent the valve from sealing.

⚠ WARNING

Always use extreme caution when handling gasoline.

NOTE:


After servicing the valve seats, be sure to check the valve clearance after the cylinder head has been reinstalled. (↔ 2-4)

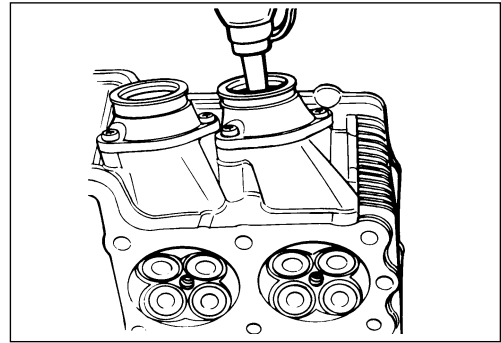**VALVE STEM END CONDITION**

Inspect the valve stem end face for pitting and wear. If pitting or wear is present, resurface the valve stem end. Make sure that the length ① is not less than 2.5 mm (0.10 in). If this length becomes less than 2.5 mm (0.10 in), replace the valve.

DATA Valve stem end length

Service Limit: 2.5 mm (0.10 in)

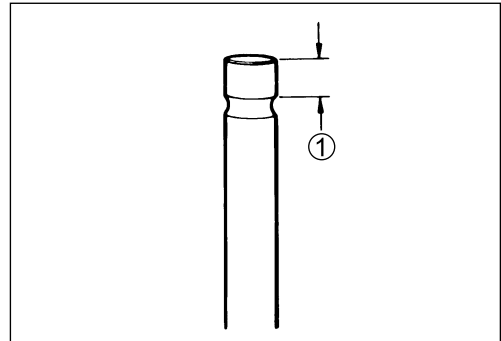**VALVE SPRINGS**


The force of the coil spring keeps the valve seat tight. A weakened spring results in reduced engine power output and often accounts for the chattering noise coming from the valve mechanism.

Check the valve springs for proper strength by measuring their free length and also by the force required to compress them. If the spring length is less than the service limit or if the force required to compress the spring does not fall within the specified range, replace both the inner and outer springs as a set.

TOOL 09900-20102: Vernier calipers**DATA Valve spring free length (IN & EX)**

Service Limit: INNER : 35.0 mm (1.38 in)


OUTER : 37.8 mm (1.49 in)

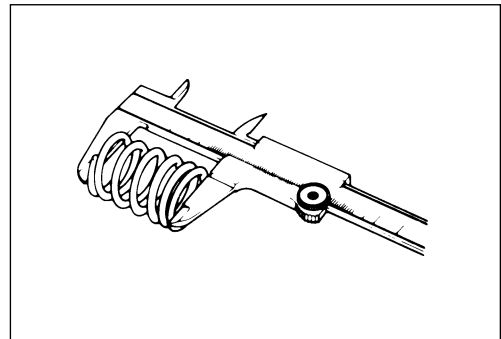

DATA Valve spring tension (IN & EX)

Standard: INNER: 53 – 65 N, 5.3 – 6.5 kgf/28 mm
(11.7 – 14.3 lbs/1.10 in)

OUTER: 131 – 151 N, 13.1 – 15.1 kgf/31.5 mm
(28.9 – 33.3 lbs/1.24 in)

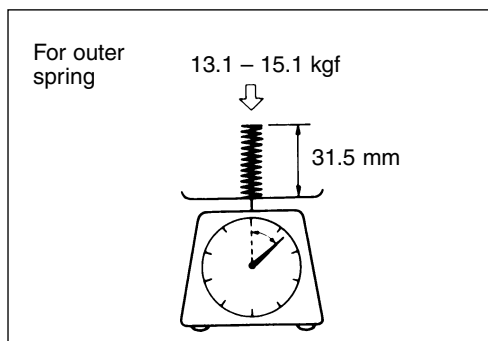**ROCKER ARM SHAFT OUTSIDE DIAMETER INSPECTION**


On the sliding surface, take two measurements, at right angle to each other.

If the outside diameter measured is less than the standard value, replace the shaft.

DATA Rocker arm shaft O.D.

Standard: 11.973 – 11.984 mm (0.4714 – 0.4718 in)

TOOL 09900-20205: Micrometer (0 – 25 mm)

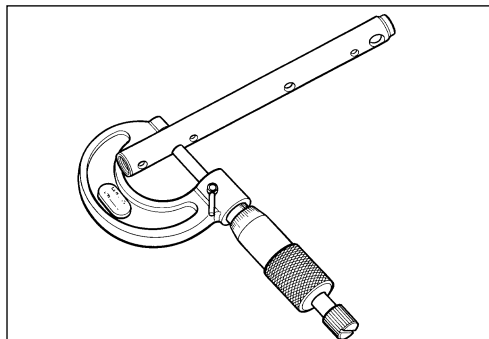**ROCKER ARM INSIDE DIAMETER INSPECTION**


Measure the rocker arm inside diameter in two directions at right angle to each other.

If the inside diameter measured exceeds the standard value, replace the rocker arm.


DATA Rocker arm I.D.

Standard: 12.000 – 12.018 mm (0.4724 – 0.4731 in)

TOOL 09900-20605: Dial calipers

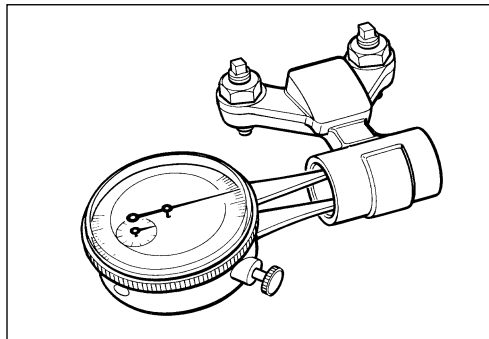**CYLINDER HEAD REASSEMBLY**

- Locate the plate (A) on the cylinder head of exhaust side.



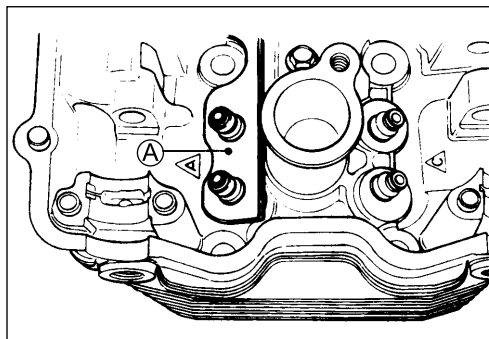


- Oil each oil seal ① and press-fit them into position using the valve guide installer.
- Install each valve spring seat ② (for intake side) and ③ (for exhaust side).

TOOL 09916-44310: Valve guide remover/installer

▲ CAUTION

Do not reuse the oil seals.

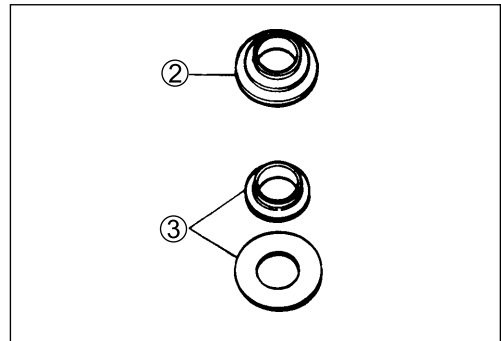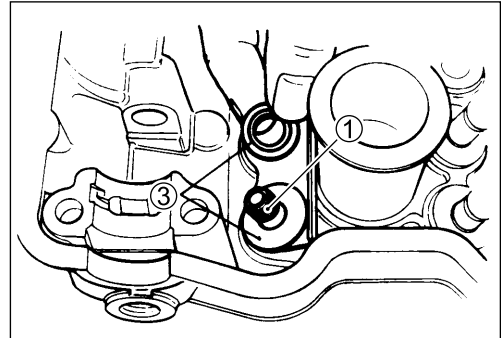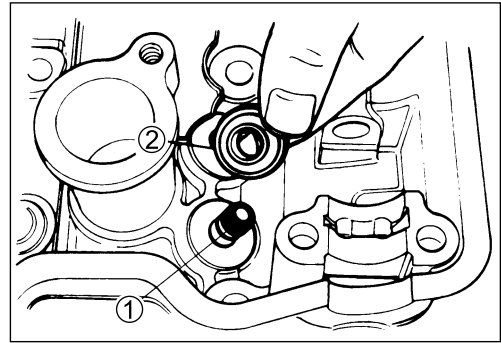



- Insert the valves with their stems coated with molybdenum oil solution (mixed engine oil/moly paste). Coat the entire stem making sure that there are no gaps.

▲ CAUTION

When inserting each valve, take care not to damage the lip of the oil seal.

MH 99000-25140: SUZUKI MOLY PASTE

- Install the valve springs with the smaller pitch (A) facing the cylinder head.
- ② Larger pitch
- ③ Up
- ④ Paint mark

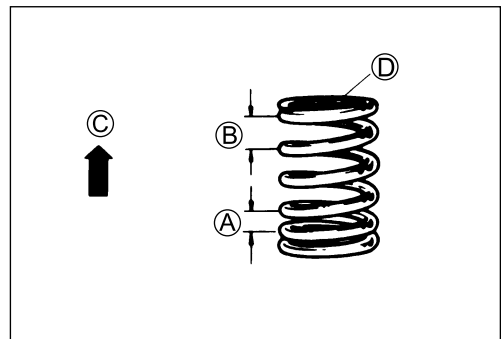
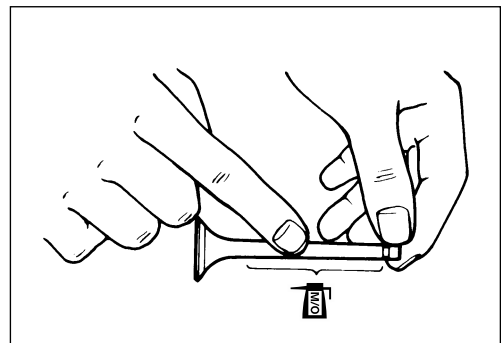


- Install the valve spring retainer, press down the springs using the valve lifter and then install the cotter halves on to the stem end. Then, release the valve lifter to allow the cotter ① to wedge between the retainer and the valve stem. Be sure that the rounded lip ① of the cotter fits snugly into the groove ② in the stem end.


TOOL 09916-14510: Valve lifter
 09916-14910: Valve lifter attachment
 09916-84511: Tweezers

▲ CAUTION

Be sure to install all of the parts in their original positions.

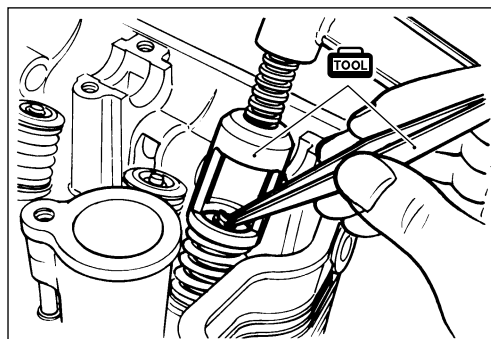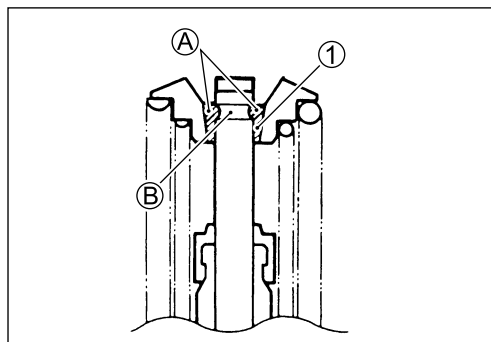


- Apply engine oil to the rocker arm shaft sufficiently.
- Install the rocker arms ②, the springs ③ and the rocker arm shaft.

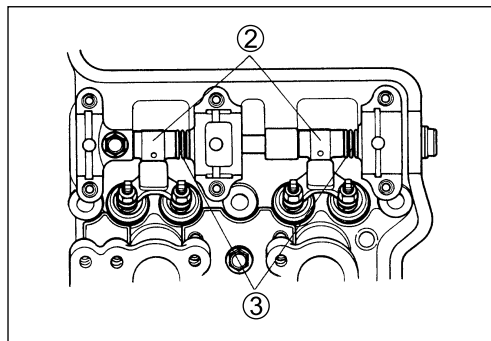

- Tighten the rocker arm shaft set bolt ④ and cylinder head plug ⑤ to the specified torque.

TOOL 09900-00410: Hexagon wrench set


🔧 Rocker arm shaft set bolt ④: 9 N·m (0.9 kgf·m, 6.5 lb-ft)
 Cylinder head plug ⑤: 28 N·m (2.8 kgf·m, 20.0 lb-ft)

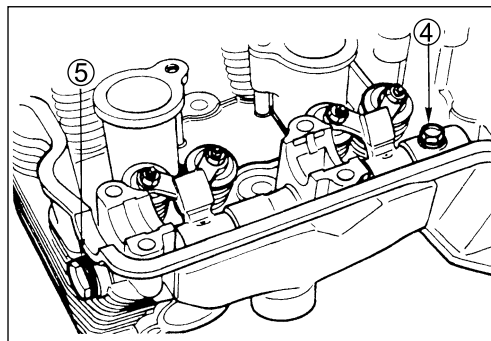

INTAKE PIPES

- When installing the intake pipe, apply SUZUKI SUPER GREASE "A" to the O-ring.

🔧 99000-25010: SUZUKI SUPER GREASE "A"

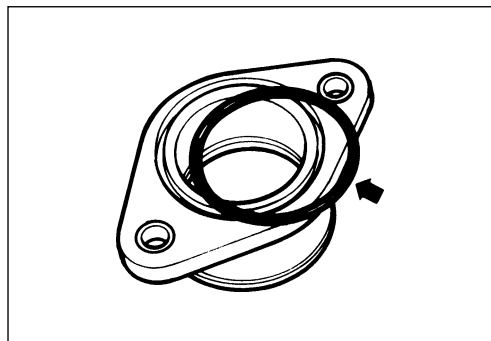

- When installing the intake pipe bolts, apply a small quantity of THREAD LOCK “1342” to these thread.


 99000-32050: THREAD LOCK “1342”

▲ CAUTION

Use a new O-ring to prevent the joint from sucking in any air.

NOTE:

- * When replacing the intake pipes, identify the different intake pipes according to each I.D. code ①
 - (1-32F0 for cylinder #1)
 - (1-32F0 for cylinder #2)
 - (3-32F0 for cylinder #3)
 - (3-32F0 for cylinder #4)
- * Make sure that the “UP” mark faces up.

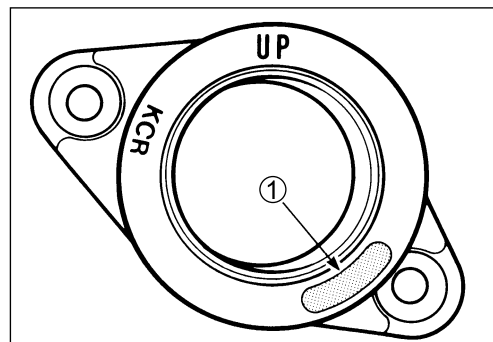


CYLINDER BLOCK/PISTON INSPECTION

CYLINDER BLOCK DISTORTION

Check the gasket surface of the cylinder block for distortion. Use a straightedge and thickness gauge. Take clearance readings at several places. If any reading exceeds the service limit, replace the cylinder block.


TOOL 09900-20803: Thickness gauge

DATA Cylinder block distortion
Service Limit: 0.2 mm (0.008 in)

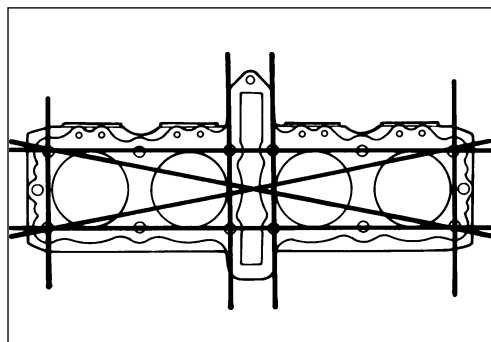


CYLINDER BORE

Measure the cylinder bore diameter at six places. If any one of the measurements exceed the limit, overhaul the cylinder and replace the piston with an oversize piston. The remaining cylinders must also be rebored accordingly; otherwise, the imbalance might cause excessive vibration.

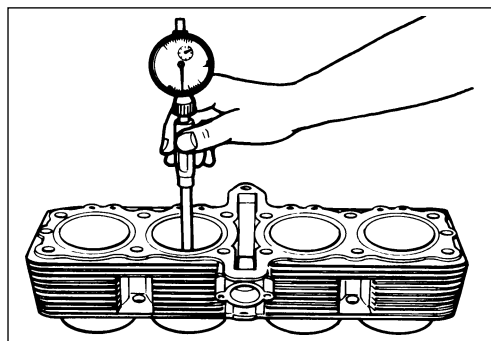

TOOL 09900-20508: Cylinder gauge set

DATA Cylinder bore
Standard: 79.000 – 79.015 mm (3.1102 – 3.1108 in)
Service Limit: 79.080 mm (3.1134 in)

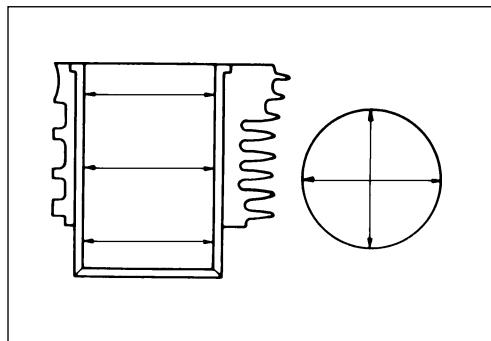



PISTON DIAMETER

Measure the piston diameter using the micrometer at 15 mm from the skirt end.

If the piston diameter is less than the service limit, replace the piston.

TOOL 09900-20204: Micrometer (75 – 100 mm)

DATA Piston diameter
Service Limit: 78.880 mm (3.1055 in)

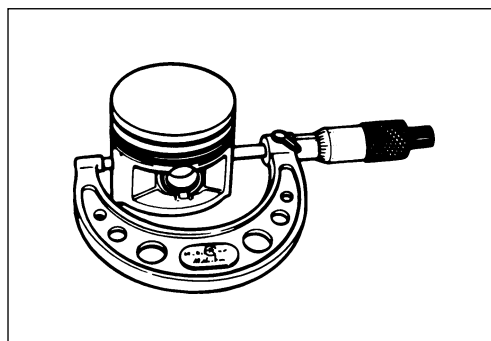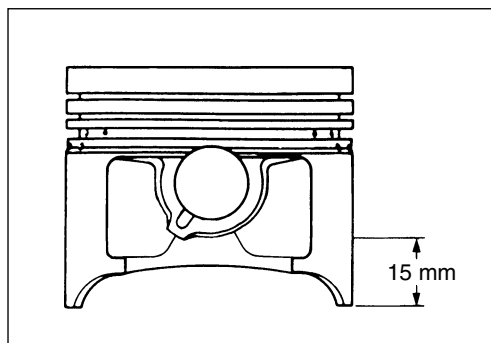

PISTON-TO-CYLINDER CLEARANCE

Subtract the piston diameter from the cylinder bore diameter. If the piston-to-cylinder clearance exceeds the service limit, rebore the cylinder and use an oversize piston or replace both the cylinder and the piston.

DATA **Piston-to-cylinder clearance**
Service Limit: 0.12 mm (0.0047 in)
Piston oversize: 0.5, 1.0 mm

PISTON-RING-TO-GROOVE CLEARANCE

Measure the side clearances of the 1st and 2nd piston rings using the thickness gauge. If any of the clearances exceed the limit, replace both the piston and piston rings.

TOOL 09900-20803: Thickness gauge
 09900-20205: Micrometer (0 – 25 mm)

DATA **Piston-ring-to-groove clearance**
Service Limit: (1st) : 0.18 mm (0.007 in)
(2nd) : 0.15 mm (0.006 in)

DATA **Piston ring groove width**
Standard: (1st) : 1.01 – 1.03 mm (0.040 – 0.041 in)
(2nd) : 1.01 – 1.03 mm (0.040 – 0.041 in)
(Oil) : 2.01 – 2.03 mm (0.079 – 0.080 in)

DATA **Piston ring thickness**
Standard: (1st) : 0.975 – 0.990 mm (0.038 – 0.039 in)
(2nd) : 0.970 – 0.990 mm (0.038 – 0.039 in)

PISTON RING FREE END GAP AND PISTON RING END GAP





Measure the piston ring free end gap using vernier calipers. Next, fit the piston ring squarely into the cylinder and measure the piston ring end gap using the thickness gauge. If any of the measurements exceed the service limit, replace the piston ring with a new one.

TOOL 09900-20102: Vernier calipers

DATA **Piston ring free end gap**
Service Limit: (1st) : 8.0 mm (0.31 in)
(2nd) : 9.6 mm (0.38 in)

TOOL 09900-20803: Thickness gauge

DATA **Piston ring end gap**
Service Limit: (1st) : 0.5 mm (0.02 in)
(2nd) : 1.0 mm (0.04 in)

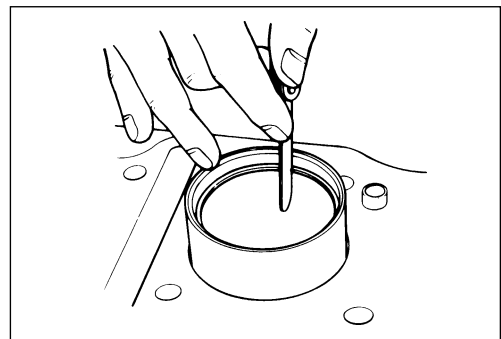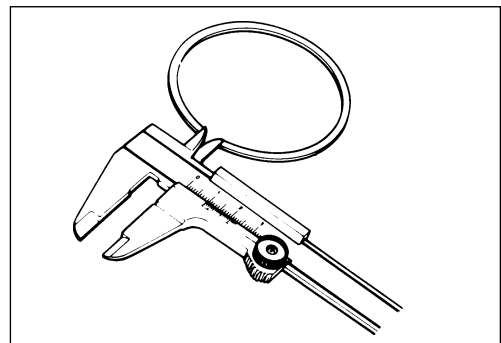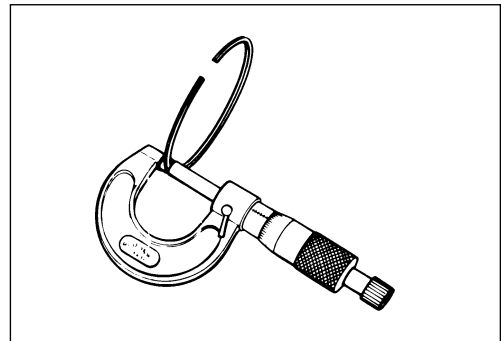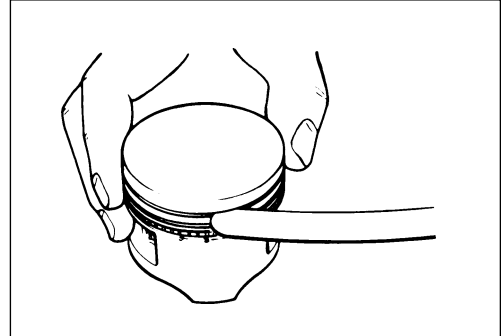

Overdose piston ring

The following two types of overdose piston rings are used. They bear the following identification numbers.

	1st	2nd
0.5 mm	50	50


Overdose oil ring

The following two types of overdose oil rings are available as optional parts. They bear the following identification marks.

SIZE	COLOR
STD	RED
0.5 mm O.S.	BLUE

Overdose side rail

Measure the outside diameter to identify the size.

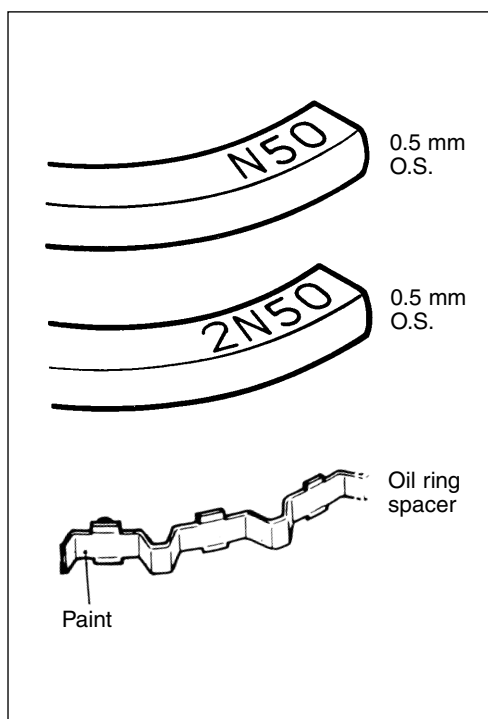


PISTON PINS AND PIN BORE

Measure the piston pin bore inside diameter using the small bore gauge. If either is out of specification or the difference between these measurement is more than the limits, replace the piston.

TOOL 09900-20602: Dial gauge (1/1000 mm)
09900-22403: Small bore gauge (18 – 35 mm)


DATA Piston pin bore I.D.
Service Limit: 20.030 mm (0.7886 in)

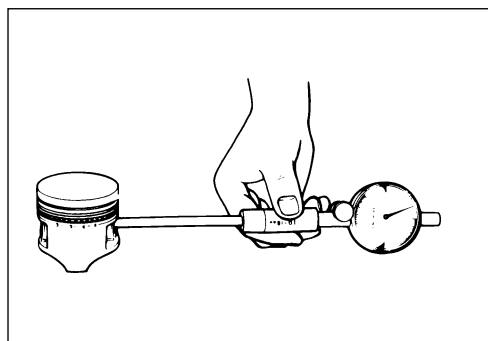

Measure the piston pin outside diameter at three positions using the micrometer. If any of the measurements are out of specification, replace the piston pin.

TOOL 09900-20205: Micrometer (0 – 25 mm)

DATA Piston pin O.D.
Service Limit: 19.980 mm (0.7866 in)

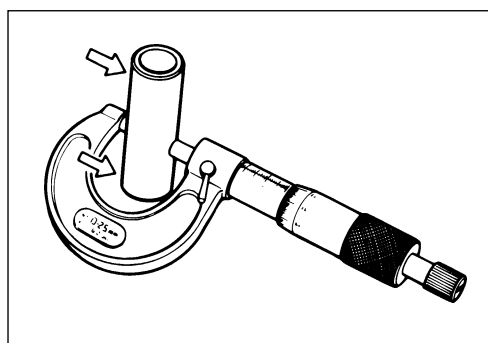


PISTON RING INSTALLATION


- Install the oil ring first, then the 2nd ring and finally the 1st ring.

NOTE:


The 1st ① and 2nd piston rings ② differ in shape.

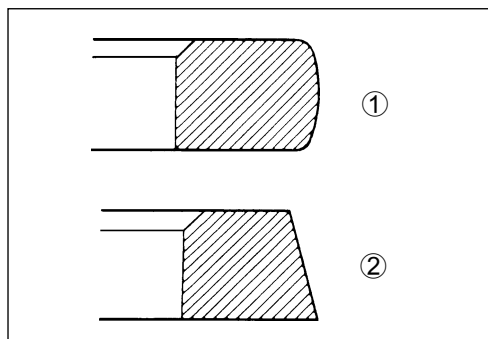

- The 1st ① and 2nd ② piston rings should be installed with the mark facing up.

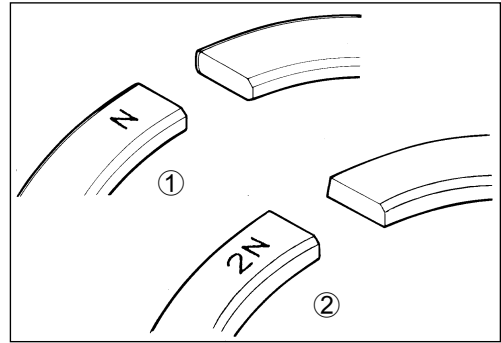


- First, install a spacer ③ into the oil ring groove and then install the two side rails ④. The spacer and side rails do not have a designated top and bottom. They can be installed in any position.

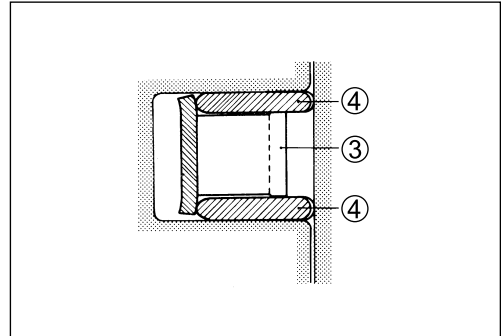

⚠ CAUTION


When installing the spacer, be careful not to allow its two ends to overlap in the groove.

- A INCORRECT
- B CORRECT

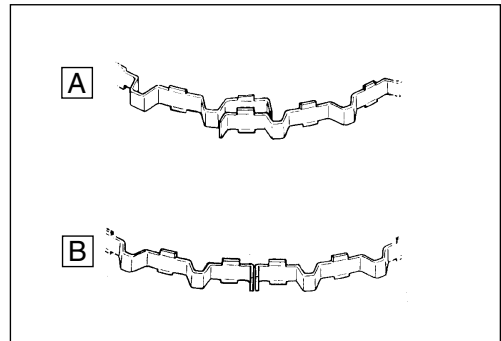


- Position the piston ring gaps as shown. Before inserting each piston into its cylinder, check that the gaps are properly positioned.

- Ⓐ Exhaust side
- Ⓑ Intake side
- ⑤ 2nd ring and lower side rail
- ⑥ Upper side rail
- ⑦ 1st ring and spacer

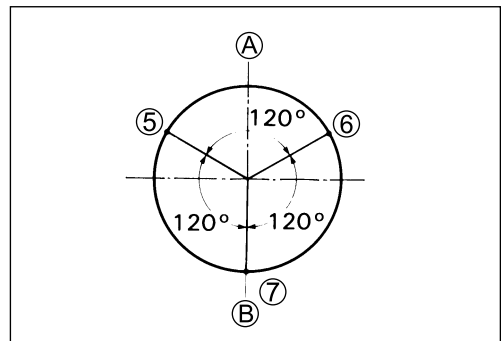

NOTE:

Install the pistons with the arrow mark facing towards the exhaust side.

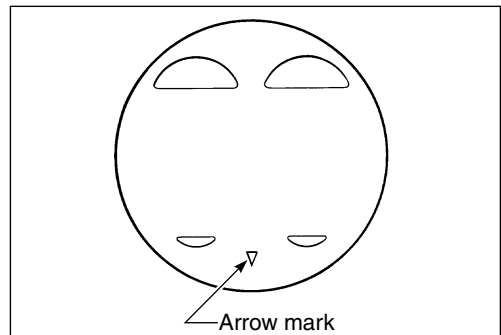


CLUTCH INSPECTION

CLUTCH DIAPHRAGM SPRING

Measure the free height of each diaphragm spring with a vernier calipers. If each diaphragm spring height is not within the specified limit, replace it with a new one.

TOOL 09900-20102: Vernier calipers

DATA Clutch spring free height
Service Limit: 3.1 mm (0.12 in)

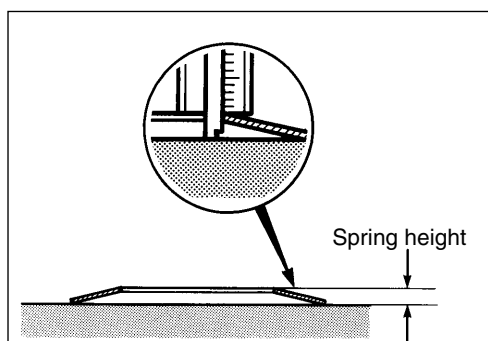

CLUTCH DRIVE AND DRIVEN PLATES

NOTE:

Wipe off the engine oil from the drive and driven plates with a clean rag.

Measure the thickness of drive plates with a vernier calipers. If each drive plate is not within the standard range, replace it with a new one.


TOOL 09900-20102: Vernier calipers

DATA Clutch drive plate thickness
Standard (No.1, No.2 and No.3 drive plates):
2.92 – 3.08 mm (0.115 – 0.121 in)


Measure the claw width of drive plates with a vernier calipers. Replace the drive plates found to have worn down to the limit.

TOOL 09900-20102: Vernier calipers

DATA Clutch drive plate claw width
Service Limit (No.1, No.2 and No.3 drive plates):
13.0 mm (0.51 in)

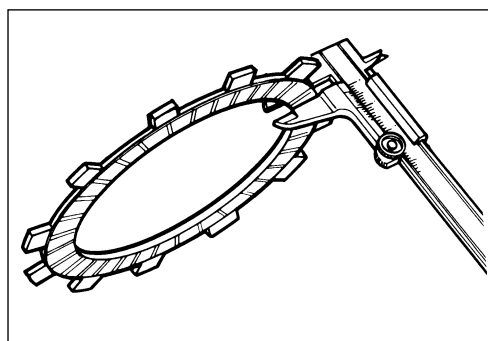

Measuring thickness

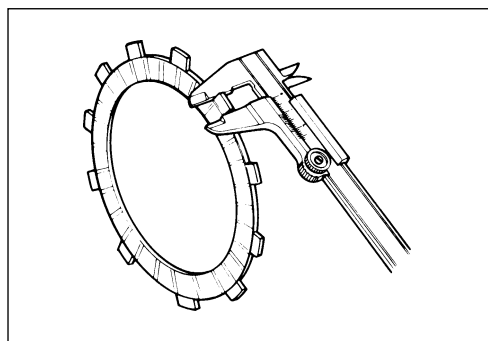


Measuring claw width

Measure each driven plate for distortion with a thickness gauge and surface plate.

Replace driven plates which exceed the limit.

TOOL 09900-20803: Thickness gauge

DATA Clutch driven plate distortion
Service Limit: 0.1 mm (0.04 in)

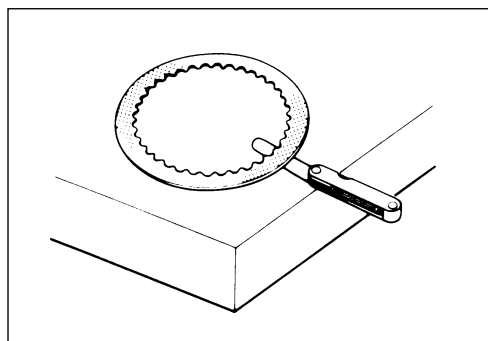

Measuring distortion


CLUTCH RELEASE BEARING

Inspect the clutch release bearing for any abnormality, especially cracks. When removing the bearing from the clutch, decide whether it can be reused or if it should be replaced.

Smooth engagement and disengagement of the clutch depends on the condition of this bearing.


NOTE:


The thrust washer is located between the clutch pressure plate and the clutch release bearing.

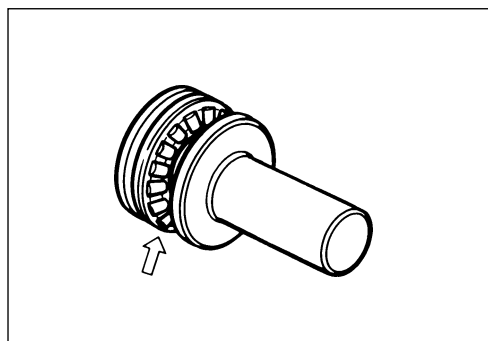

CLUTCH RELEASE CYLINDER

DISASSEMBLY

- Remove the gearshift lever and engine sprocket cover. ( 3-5)
- Remove the clutch hose by removing the union bolt ①.
- Remove the air bleeder valve ②.
- Remove the clutch release cylinder by removing the mounting bolts ③ and piston retainer screws ④.

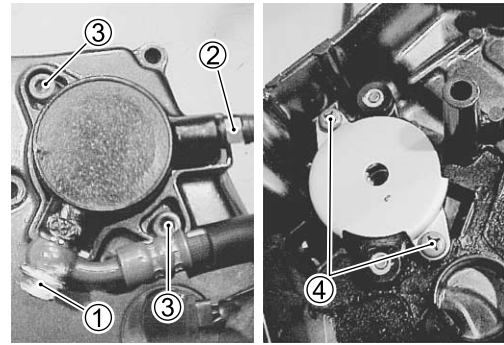


NOTE:

Completely wipe off any clutch fluid adhering to any part of motorcycle. The fluid reacts chemically with paint, plastics, rubber materials, etc.

- Place a rag over the piston to prevent popping up. Force out the piston by using air gun.

▲ CAUTION

Do not use high pressure air to prevent piston damage.

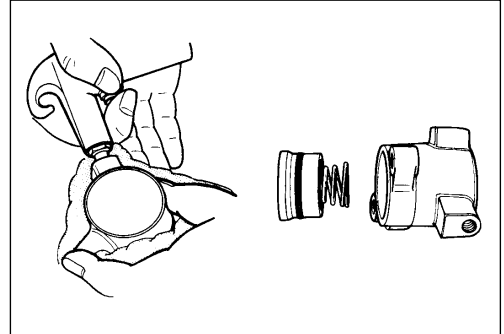



INSPECTION



Inspect the clutch cylinder bore wall for nicks, scratches or other damage. Inspect the oil seal for damage and wear. Inspect the piston surface for any scratches or other damage.

REASSEMBLY

Reassemble the clutch cylinder in the reverse order of disassembly and by taking the following steps.

▲ CAUTION

- * **Wash the clutch cylinder components with fresh brake fluid before reassembly.**
- * **Never use cleaning solvent or gasoline to wash them.**
- * **Apply brake fluid to the cylinder bore and piston to be inserted into the bore.**
- * **Bleed air from the system after reassembling the cylinder ( 2-13). ( 5-60 for the clutch master cylinder)**

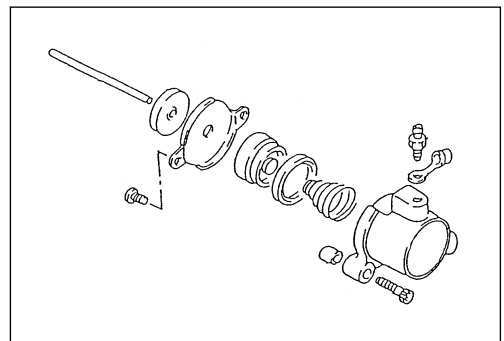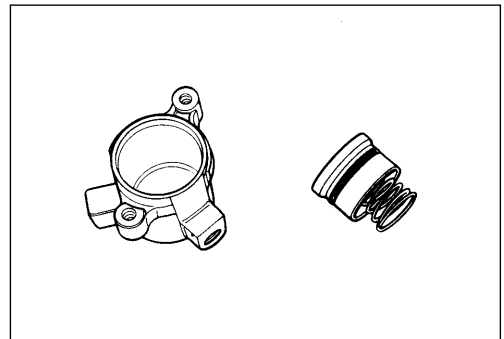

STARTER CLUTCH INSPECTION

STARTER CLUTCH INSPECTION

Install the starter driven gear onto the starter clutch and turn the starter driven gear by hand (the gear turns in only one direction). The starter driven gear should turn smoothly. If excessive resistance is felt while turning the starter driven gear, inspect the starter clutch. Also, inspect the surface of the starter driven gear which contacts the starter clutch, for wear or damage. If any wear or damage is found, replace the defective part(-s).



STARTER DRIVEN GEAR BEARING INSPECTION

Inspect the starter driven gear bearing for wear or damage.



GEARSHIFT LINKAGE INSPECTION

GEARSHIFT SHAFT/GEARSHIFT ARM INSPECTION

Check the gearshift shaft/gearshift arm for bends or wear.

Check the return spring on the gearshift arm for damage or fatigue.


If any defects are found, replace the defective part(-s).



OIL SEAL INSPECTION


Inspect the gearshift shaft oil seal's lip for damage or wear.

If any defects are found, replace the oil seal with a new one.

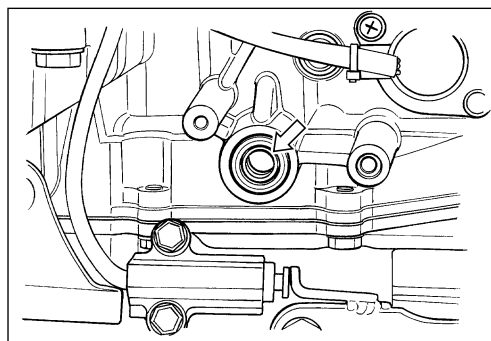

OIL SEAL REPLACEMENT

- Remove the gearshift shaft oil seal from the lower crankcase.

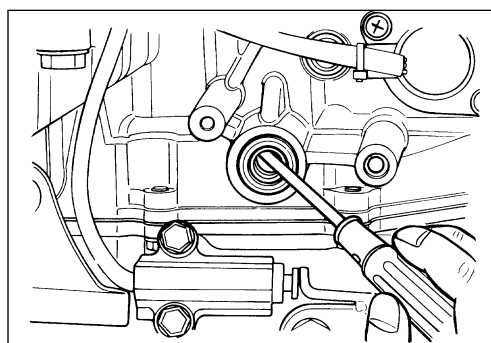

- Install the new oil seal using the special tool.

 09943-88211: Pinion bearing installer


CAUTION

The removed oil seal must be replaced with a new one.

NOTE:


Apply SUZUKI SUPER GREASE "A" onto the oil seal lip to prevent oil seal damage when installing the lower crankcase.

 99000-25010: SUZUKI SUPER GREASE "A"

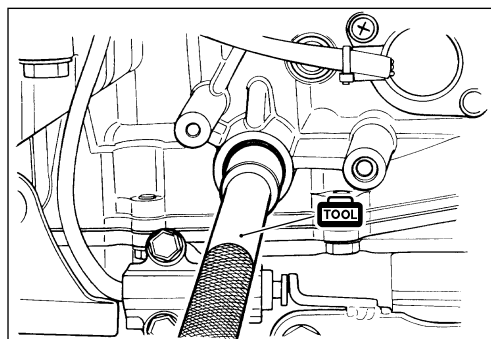

GEARSHIFT SHAFT HOLE INSPECTION

Check the gearshift shaft hole for damage or wear.

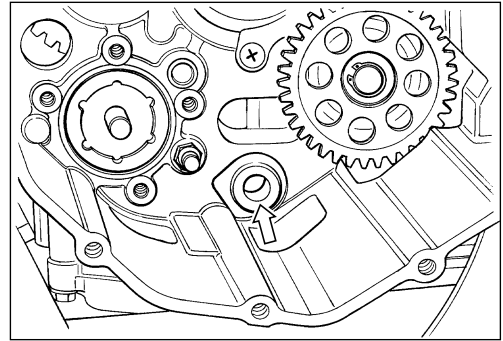

GEARSHIFT SHAFT REASSEMBLY

When installing the gearshift shaft return spring, position the stopper between the ends of the gearshift shaft return spring.



TRANSMISSION INSPECTION AND SERVICE

▲ CAUTION

Identify the position of each removed part. Organize the parts in their respective groups (i.e., drive or driven) so that they can be reinstalled in their original positions.

GEARSHIFT FORK-TO-GEARSHIFT FORK GROOVE CLEARANCE


Measure the gearshift fork clearance in the groove of its respective gear using the thickness gauge.

If the clearance exceeds the specification, replace the fork, its respective gear or both.

The clearance for each of the three gearshift forks plays an important role in the smoothness and positiveness of the shifting action.


TOOL 09900-20803: Thickness gauge
09900-20102: Vernier calipers

DATA Gearshift fork-to-gearshift fork groove clearance
Standard: 0.10 – 0.30 mm (0.004 – 0.012 in)
Service Limit: 0.50 mm (0.020 in)

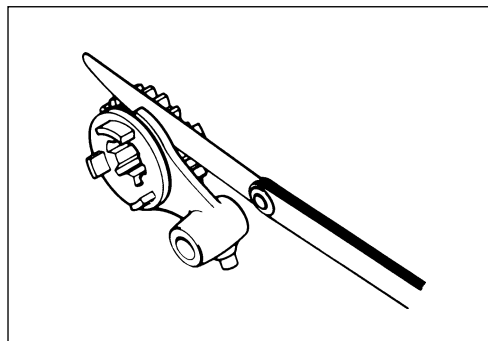


Checking clearance

DATA Gearshift fork groove width
Standard (#1, #2 & #3): 5.00 – 5.10 mm (0.197 – 0.201 in)

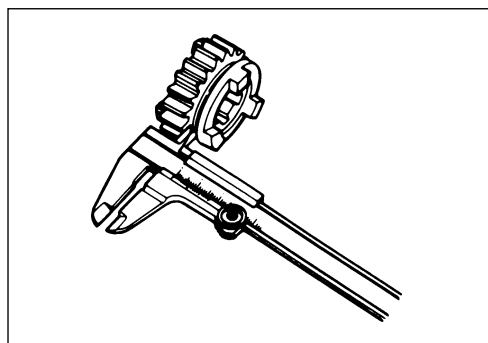

Checking groove width


DATA Gearshift fork thickness
Standard (#1, #2 & #3): 4.80 – 4.90 mm (0.189 – 0.193 in)

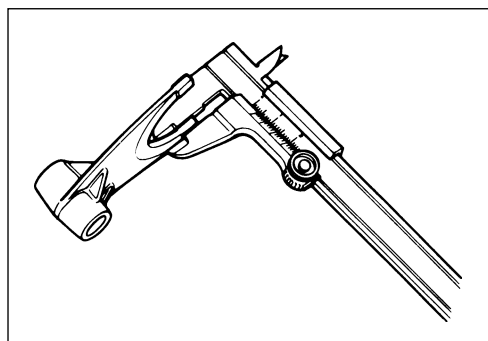

Checking thickness


DISASSEMBLY**Countershaft assembly**

- Remove the left end bearing ① and oil seal ②.

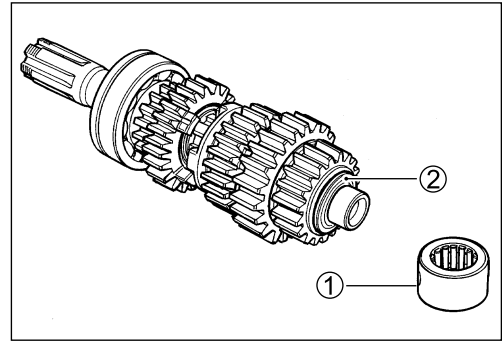


- Remove the 5th (top) drive gear circlip ③ from its groove and slide it towards the 3rd drive gear ④.

TOOL 09900-06107: Snap ring pliers

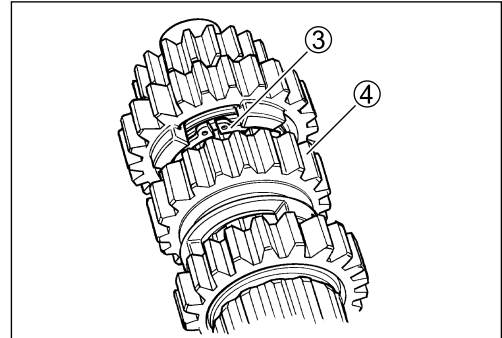


- Slide the lock washer ⑤ towards the 5th (top) drive gear ⑥, then turn the lock washer ⑦ and slide it towards the 5th (top) drive gear ⑥.

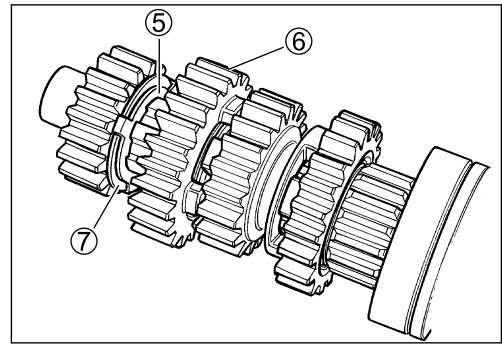


- Slide the 2nd drive gear ⑧ towards the 5th (top) drive gear ⑥, then remove the circlip ⑨.
- Remove the 3rd drive gear ④, 5th (top) drive gear ⑥ and 2nd drive gear ⑧.

TOOL 09900-06107: Snap ring pliers

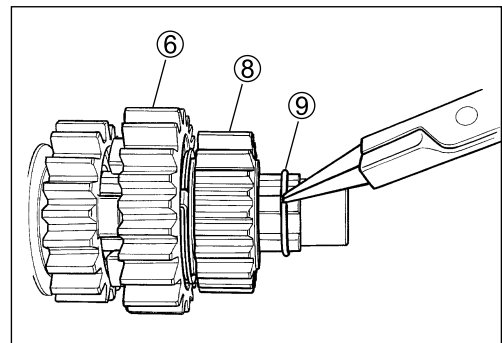

- Remove the circlip ⑪ and 4th drive gear ⑩.


TOOL 09900-06107: Snap ring pliers

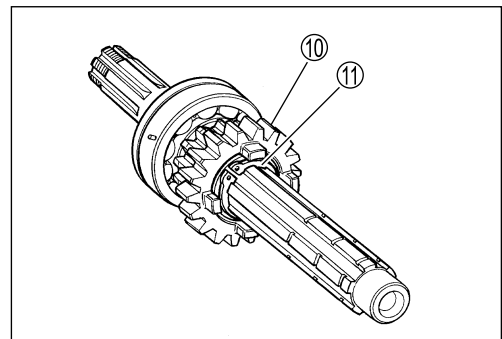

Driveshaft assembly

- Disassemble the driveshaft assembly as shown in the illustration.

- | | |
|-------------------------|-------------------|
| ① Bearing | ⑤ 4th driven gear |
| ② 2nd driven gear | ⑥ Low driven gear |
| ③ 5th (top) driven gear | ⑦ Bearing |
| ④ 3rd driven gear | |

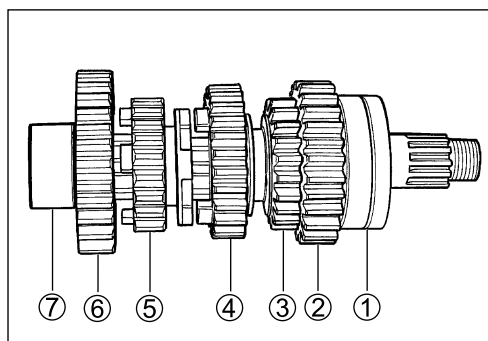**REASSEMBLY**

Assemble the countershaft and driveshaft assemblies in the reverse order of disassembly. Pay attention to the following points:

NOTE:

- * Before installing the gears, rotate the bearing by hand to inspect for abnormal noises and smooth rotation. Replace the bearing if there is anything unusual.
- * Before installing the gears, lightly coat the driveshaft, countershaft and bushings with molybdenum oil solution.
- * Before installing the oil seal, apply SUZUKI SUPER GREASE "A" to the oil seal lip.

 99000-25140: SUZUKI MOLY PASTE


 99000-25010: SUZUKI SUPER GREASE "A"

CAUTION

- * **Never reuse a circlip. After a circlip has been removed from a shaft, it should be discarded and a new circlip must be installed.**
- * **When installing a new circlip, do not expand the end gap larger than required to slip the circlip over the shaft.**
- * **After installing a circlip, make sure that it is completely seated in its groove and securely fitted.**


NOTE:

When reassembling the transmission, attention must be given to the locations and positions of washers and circlips. The cross sectional view shows the correct position of the gears, bushings, washers and circlips.

( 3-77)


- When installing a new circlip, pay attention to the direction of the circlip. Fit the circlip to the side where the thrust is, as shown. The rounded side should be against the gear surface.

- | |
|--------------|
| Ⓐ Thrust |
| Ⓑ Sharp edge |
| Ⓒ Circlip |

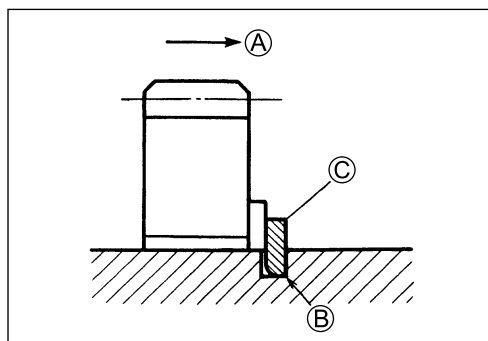


Driveshaft assembly


- Align the bushing oil hole ① with the shaft oil hole ②.

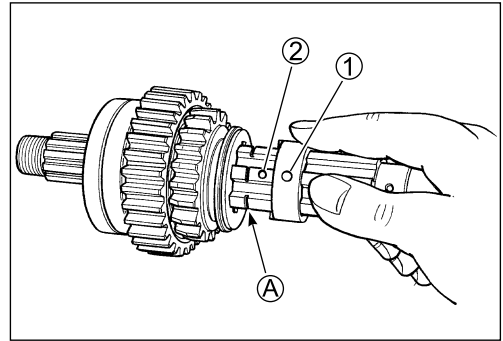

- With the lock washer turned in its groove (A), align the cutout (B) of the lock washer with the tab (C) on the gear bushing.

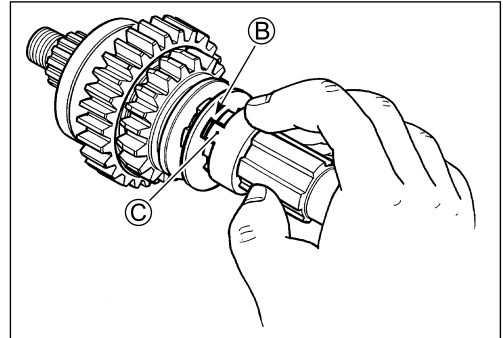


- Install the spacer (3) after installing the O-ring (4).

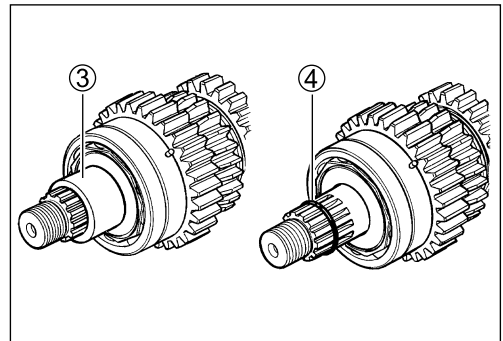


Countershaft assembly

- Align the bushing oil hole ① with the shaft oil hole ②.

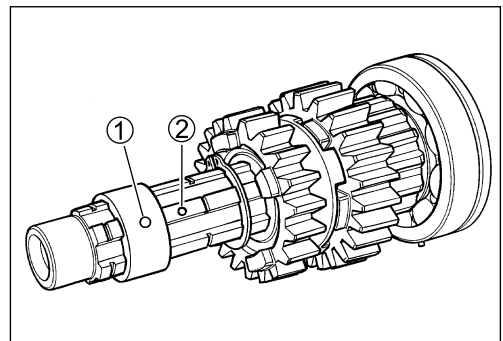



- With the lock washer (3) turned in its groove (A), align the cutout (B) of the lock washer (3) with the tab (C) on the lock washer (4).

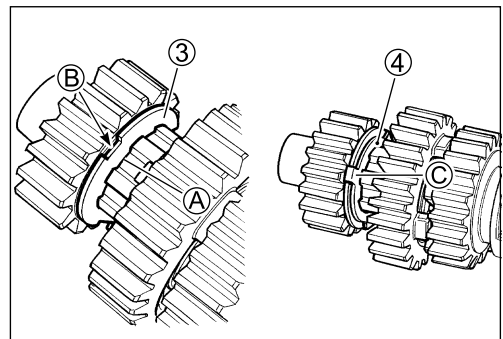


▲ CAUTION

Install the oil seal as shown in the illustration.

- ① Left end bearing
- ② Oil seal
- ③ 2nd drive gear
- ④ Countershaft

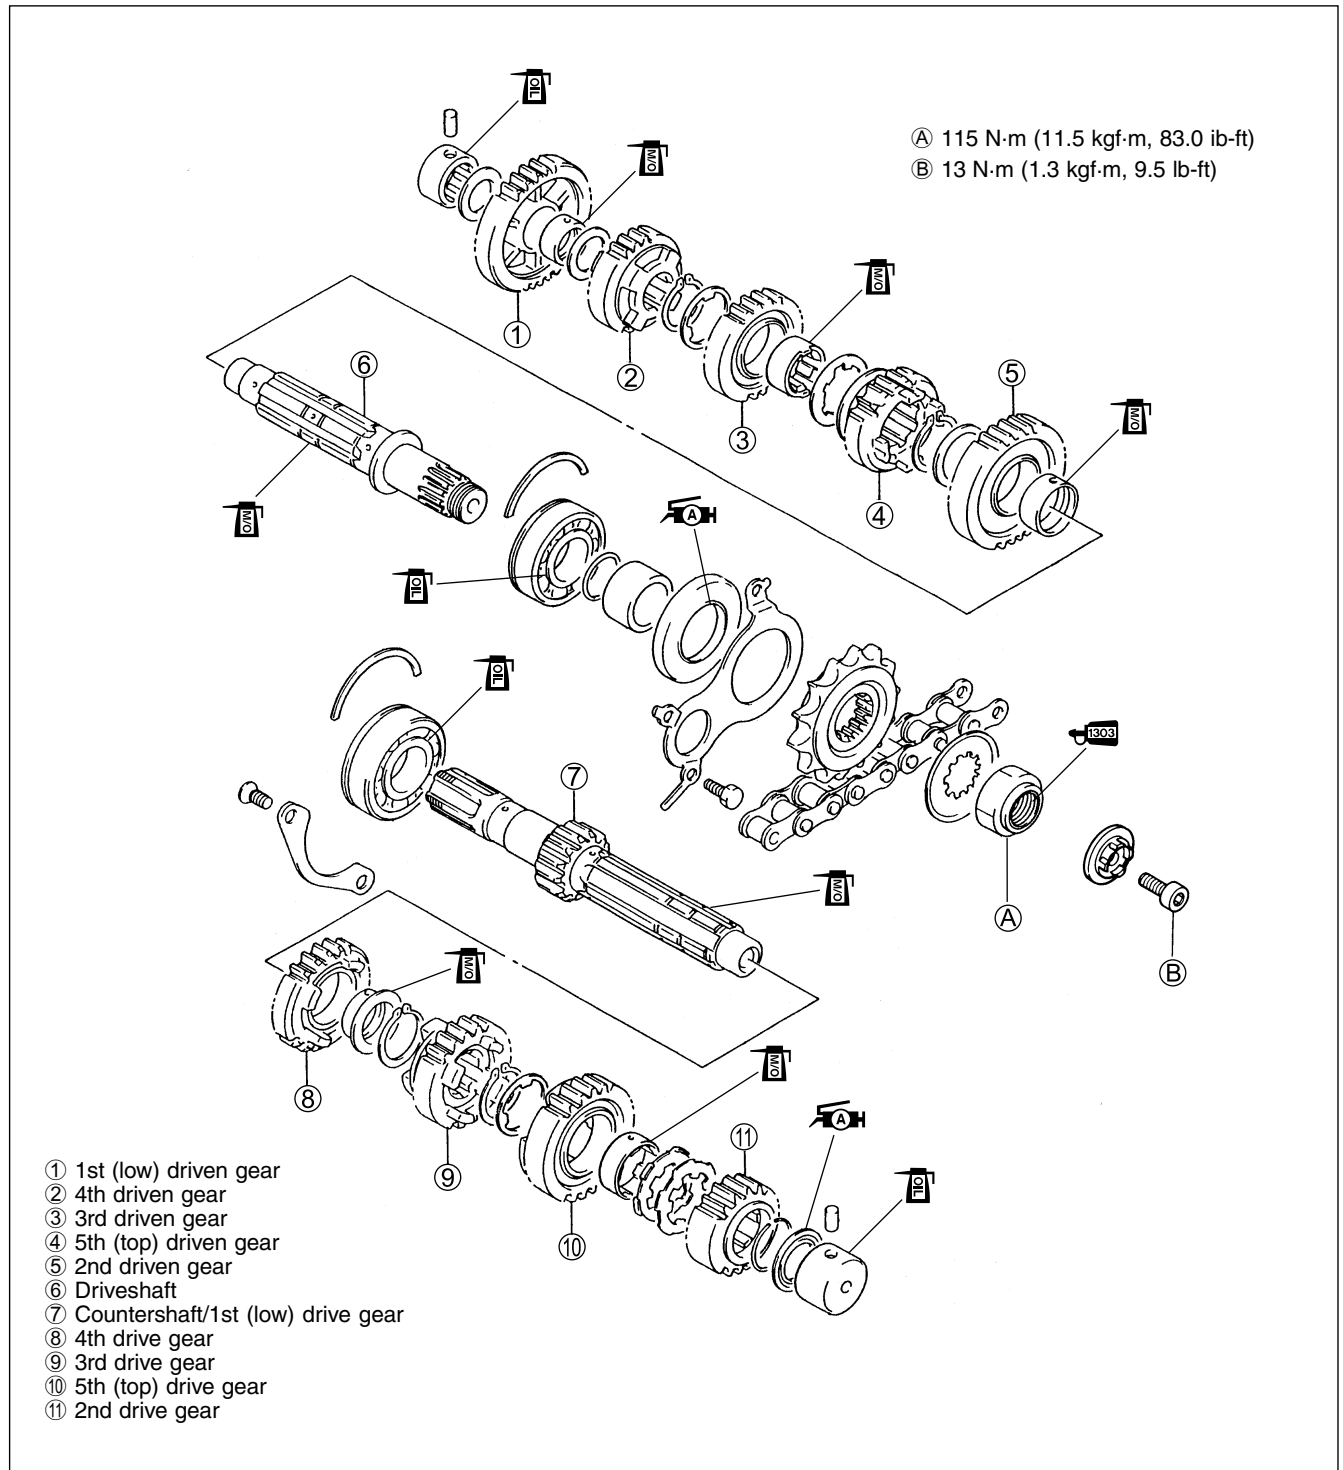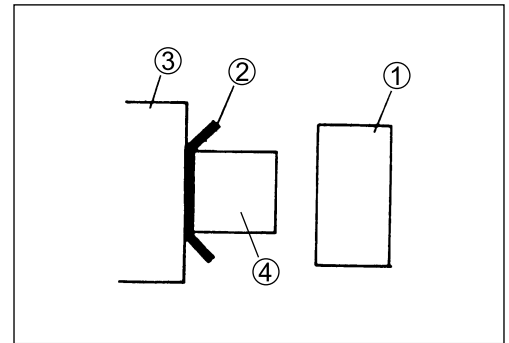

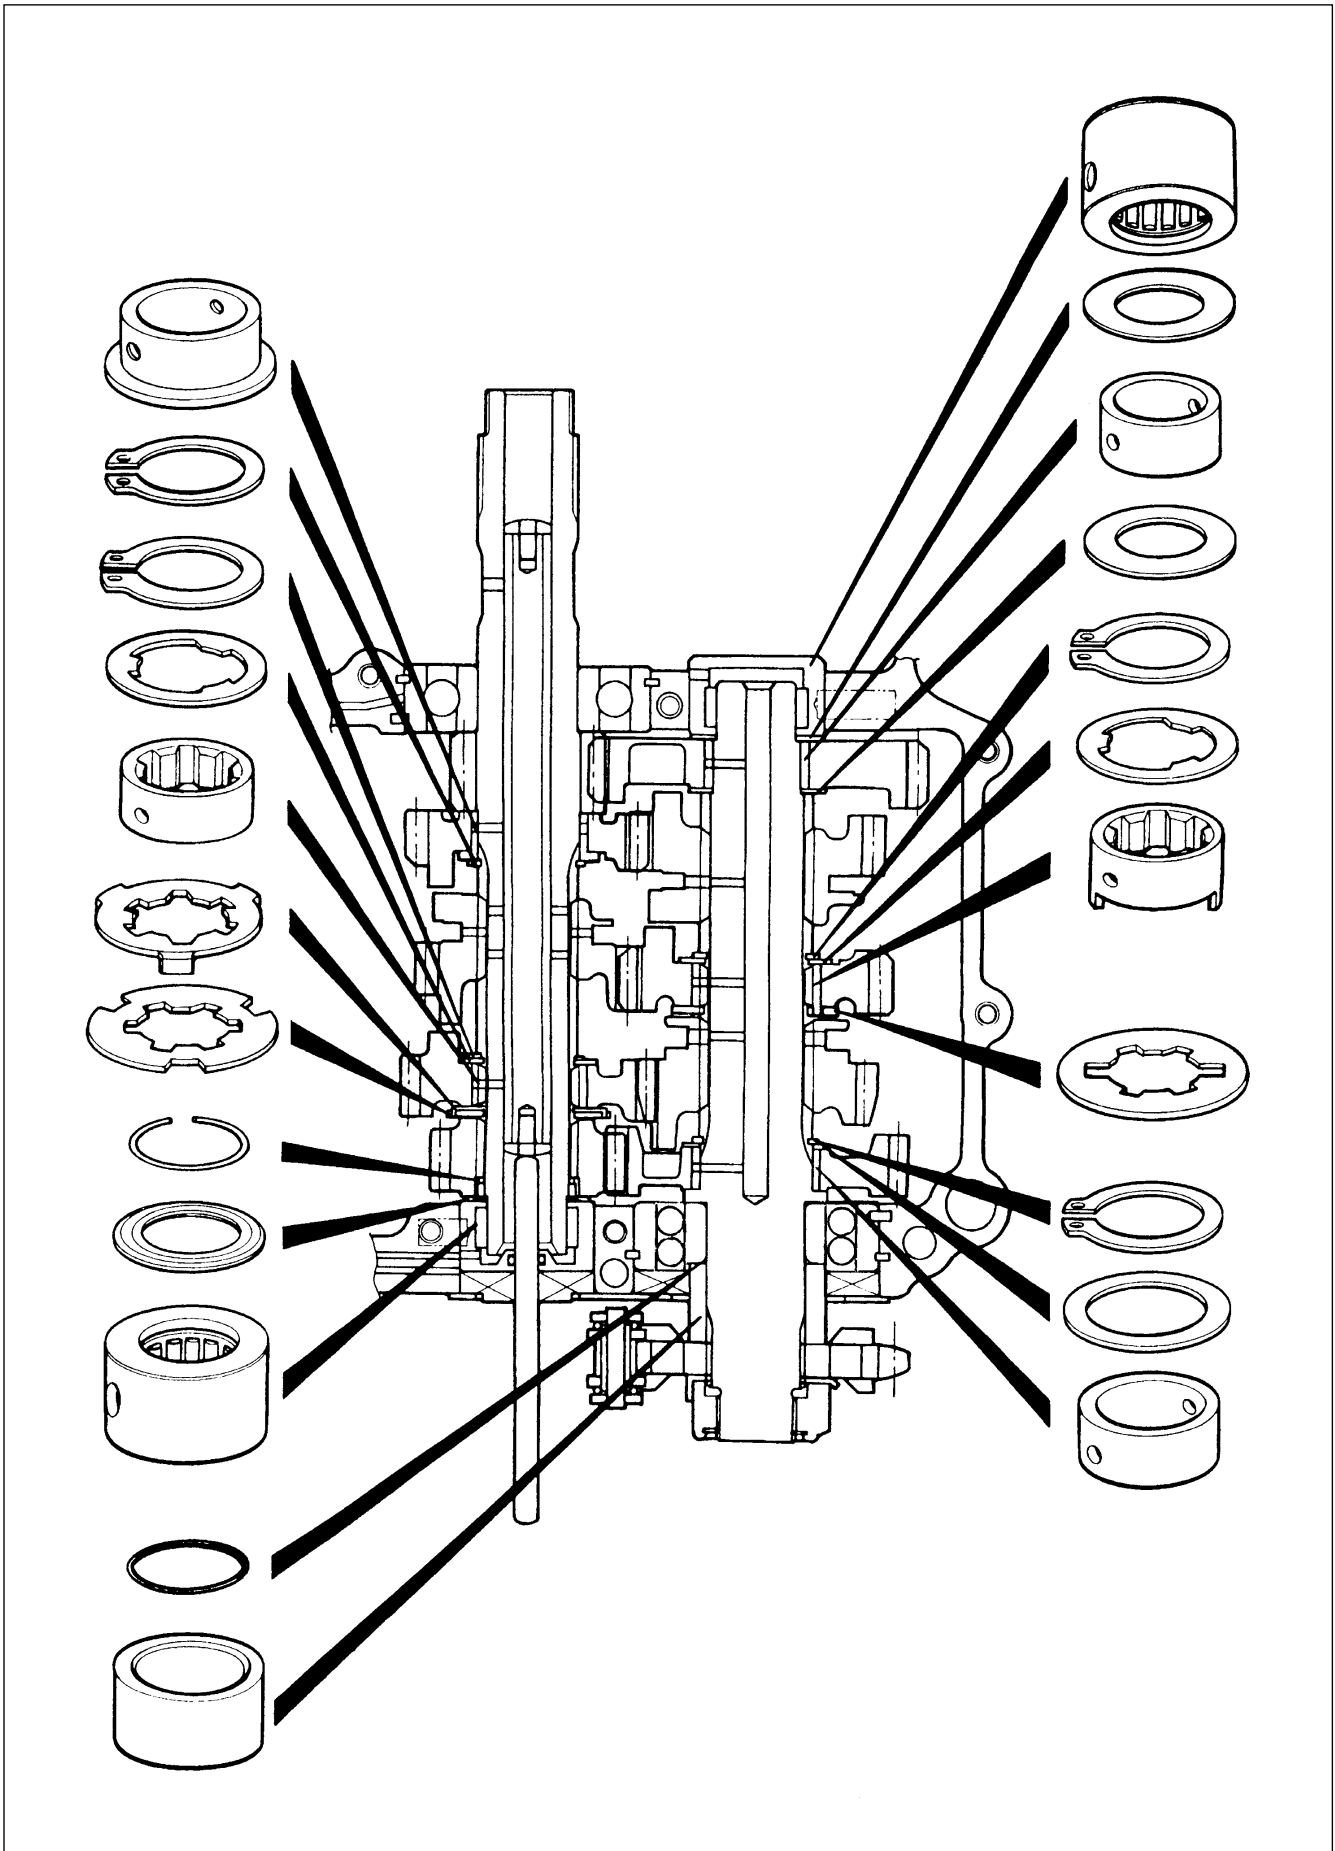

CONROD/CRANKSHAFT INSPECTION


CONROD SMALL END I.D.

Measure the conrod small end inside diameter using the small bore gauge.

If the conrod small end inside diameter exceeds the service limit, replace the conrod.

TOOL 09900-20602: Dial gauge (1/1000 mm)
09900-22403: Small bore gauge (18 – 35 mm)

DATA Conrod small end I.D.5th (top) drive gear
Service Limit: 20.040 mm (0.7890 in)

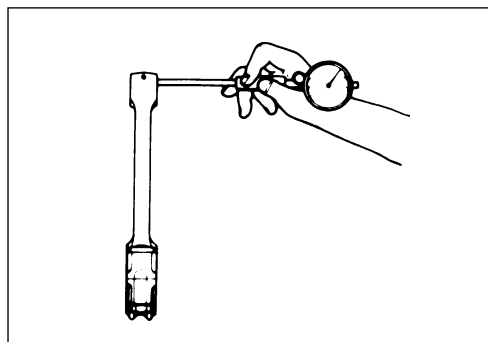

CONROD BIG END SIDE CLEARANCE

Check the conrod big end side clearance using the thickness gauge. If the clearance exceeds the limit, measure the conrod big end width and crank pin width.

If any of the measurements are out of specification, replace the defective part(-s).



TOOL 09900-20803: Thickness gauge

DATA Conrod big end side clearance
Service Limit: 0.3 mm (0.01 in)

TOOL 09900-20205: Micrometer (0 – 25 mm)
09900-20605: Dial calipers (10 – 34 mm)

DATA Conrod big end width
Standard: 20.95 – 21.00 mm (0.825 – 0.827 in)


DATA Crank pin width
Standard: 21.10 – 21.15 mm (0.831 – 0.833 in)

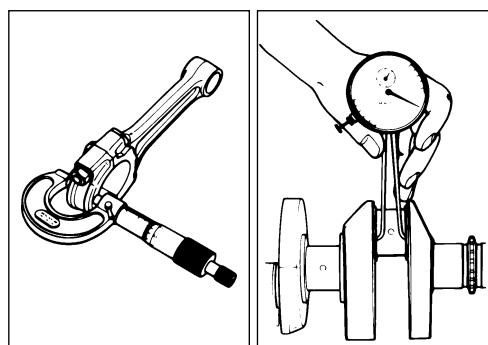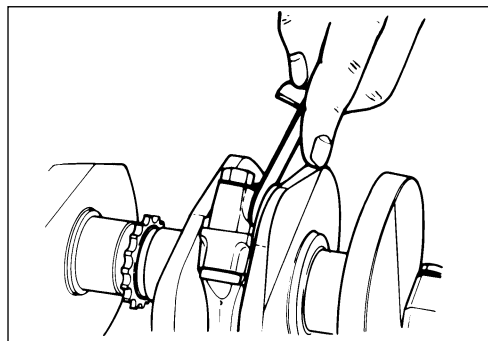


CONROD-CRANK PIN BEARING INSPECTION AND SERVICE

CONROD-CRANK PIN BEARING INSPECTION

- Loosen the bearing cap nuts and tap the bearing cap nut lightly using a plastic hammer to remove the bearing cap.

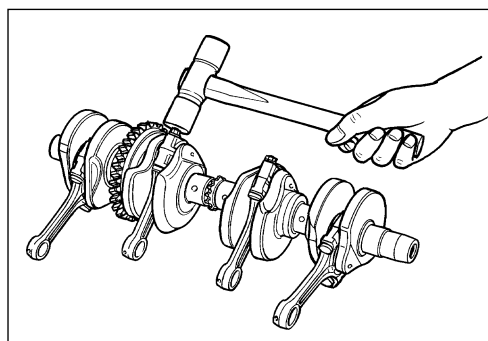

- Remove the conrods and mark them to identify their respective cylinders.
- Inspect the bearing surfaces for any signs of fusion, pitting, burns, or flaws. If there is any damage, replace them with the specified set of bearings.

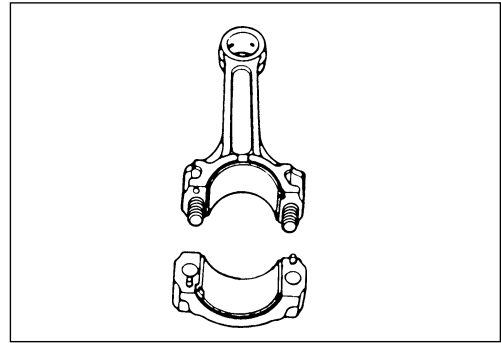


CONROD-CRANK PIN BEARING SELECTION

- Place the plastigauge axially along the crank pin, avoiding the oil hole, as shown.
- Tighten the conrod cap nuts to the specified torque, in two stages.

NOTE:

When installing the bearing cap to the crank pin, make sure that the number ① on the conrod faces towards the intake side.

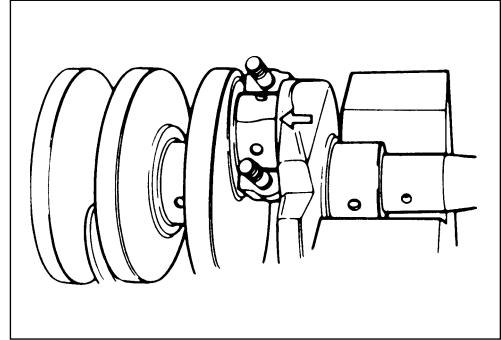

Conrod cap nut


(Initial): 25 N·m (2.5 kgf·m, 18.0 lb-ft)

(Final): 50 N·m (5.0 kgf·m, 36.0 lb-ft)

TOOL 09900-22301: Plastigauge

NOTE:

Never rotate the crankshaft or conrod when a piece of plastigauge is installed.

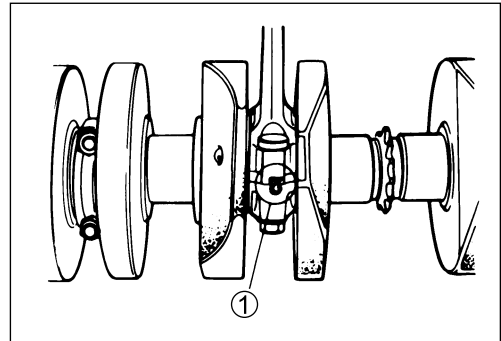


- Remove the bearing caps, and measure the width of the compressed plastigauge using the envelope scale. This measurement should be taken at the widest part of the compressed plastigauge.

DATA Conrod big end oil clearance


Standard: 0.032 – 0.056 mm (0.0013 – 0.0022 in)

DATA Conrod big end oil clearance

Service Limit: 0.080 mm (0.0031 in)

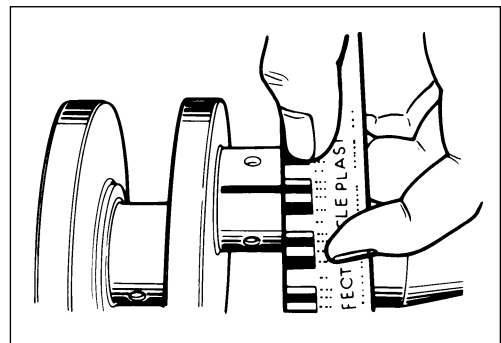


- If the oil clearance exceeds the service limit, select the specified bearings from the bearing selection table.
- Check the corresponding conrod I.D. code numbers (“1” or “2”) ②.

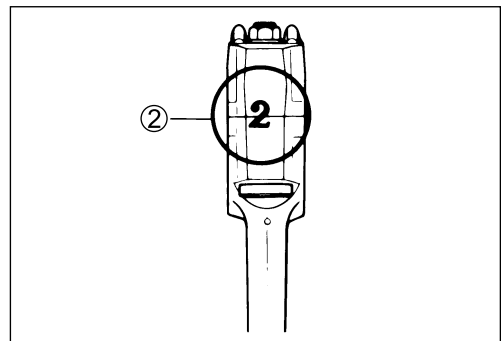

- Check the corresponding crank pin O.D. code numbers (“1”, “2” or “3”) ③.

Bearing selection table

	Code	Crank pin O.D. ③		
		1	2	3
Conrod	1	Green	Black	Brown
I.D. ②	2	Black	Brown	Yellow

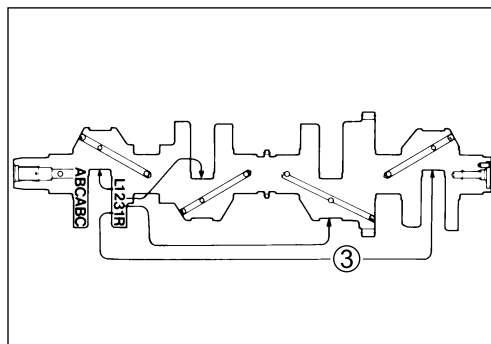


Conrod I.D. specification

Code	I.D. specification
1	41.000 – 41.008 mm (1.6142 – 1.6145 in)
2	41.008 – 41.016 mm (1.6145 – 1.6148 in)

Crank pin O.D. specification

Code	O.D. specification
1	37.992 – 38.000 mm (1.4957 – 1.4961 in)
2	37.984 – 37.992 mm (1.4954 – 1.4957 in)
3	37.976 – 37.984 mm (1.4951 – 1.4954 in)

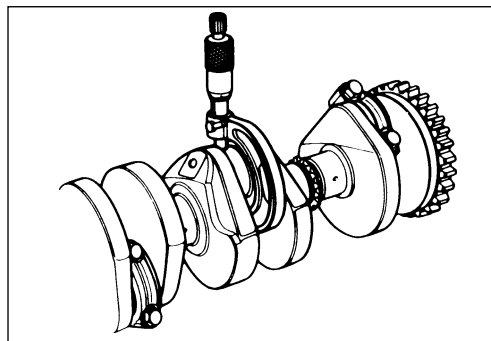

TOOL 09900-20202: Micrometer (25 – 50 mm)


Bearing thickness specification

Color (Part No.)	Thickness
Green (12164-46E01-0A0)	1.480 – 1.484 mm (0.0583 – 0.0584 in)
Black (12164-46E01-0B0)	1.484 – 1.488 mm (0.0584 – 0.0586 in)
Brown (12164-46E01-0C0)	1.488 – 1.492 mm (0.0586 – 0.0587 in)
Yellow (12164-46E01-0D0)	1.492 – 1.496 mm (0.0587 – 0.0589 in)

Ⓐ Color code


▲ CAUTION

The bearings should be replaced as a set.

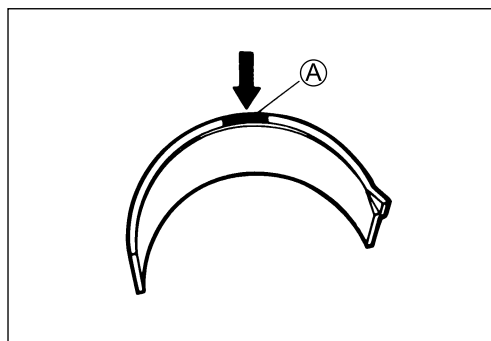


BEARING ASSEMBLY

- When installing the bearings into the bearing cap and conrod, be sure to install the tab ① first, and then press in the opposite side of the bearing.

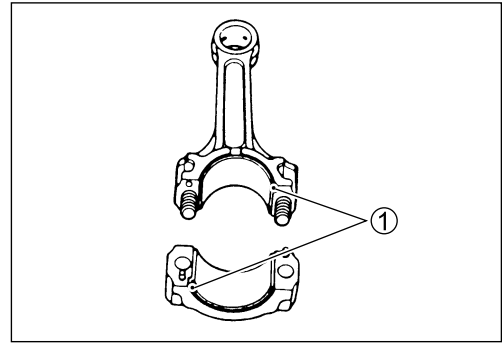

- Apply molybdenum oil solution to the crank pin and bearing surface.

 99000-25140: SUZUKI MOLY PASTE

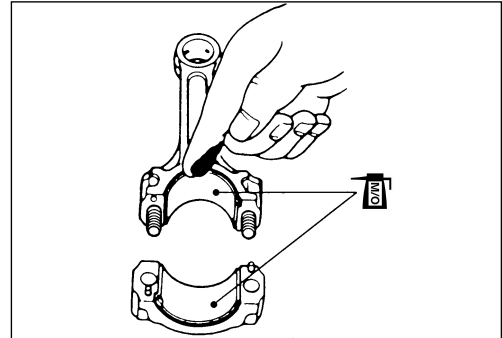


- When mounting the conrod on the crankshaft, make sure that the numbers ① on the conrod faces towards the intake side.
- Tighten the conrod cap nuts to the specified torque.

 Conrod cap nut


(Initial): 25 N·m (2.5 kgf·m, 18.0 lb-ft)

(Final): 50 N·m (5.0 kgf·m, 36.0 lb-ft)

- Check that the conrod moves smoothly.

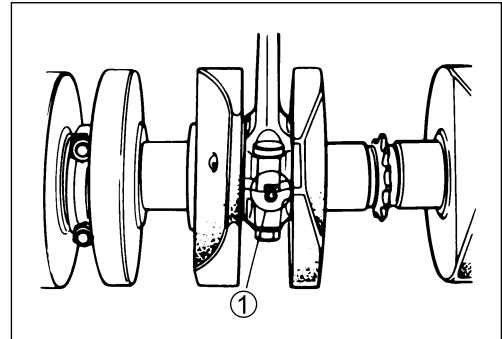**CRANKCASE-CRANKSHAFT BEARING INSPECTION AND SERVICE****CRANKCASE-CRANKSHAFT BEARING INSPECTION**

- Inspect each upper and lower crankcase bearing for any damage.

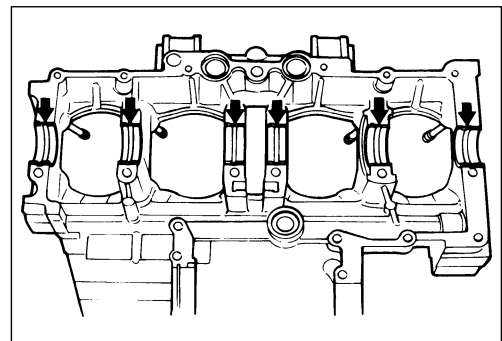
**CRANKCASE-CRANKSHAFT BEARING SELECTION**

- Install the plastigauge onto each crankshaft journal as shown.

 09900-22301: Plastigauge

NOTE:


Do not place the plastigauge on the oil hole and do not rotate the crankshaft when a piece of plastigauge is installed.

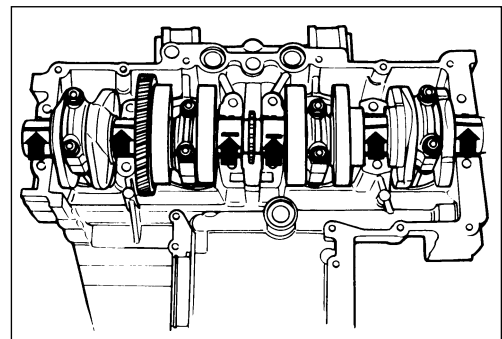

- Mate the lower crankcase with the upper crankcase and tighten the crankshaft bolts to the specified torque and in the proper tightening sequence.

🔧 Crankcase bolt


(Initial): 13 N·m (1.3 kgf·m, 9.5 lb-ft)
(Final): 23 N·m (2.3 kgf·m, 16.5 lb-ft)

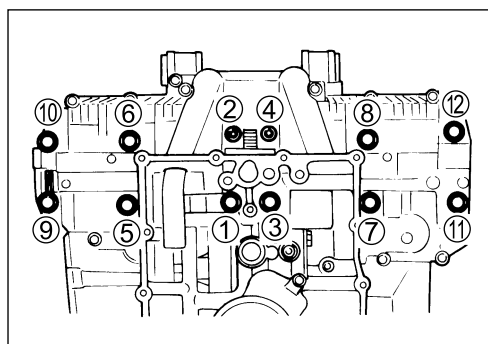

- Remove the lower crankcase and measure the width of compressed plastigauge using the envelope scale. This measurement should be taken at the widest part of the compressed plastigauge.


DATA Crankshaft journal oil clearance
Standard: 0.020 – 0.044 mm (0.0008 – 0.0017 in)

DATA Crankshaft journal oil clearance
Service Limit: 0.08 mm (0.0031 in)

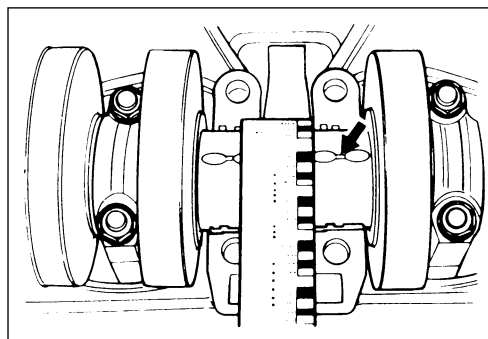

- If the width at the widest part of the compressed plastigauge exceeds the limit, replace the set of bearings with new ones. Refer to the selection table.


- Check the corresponding crankcase journal I.D. codes (“A” or “B”) ①, which are stamped on the rear of the upper crankcase.

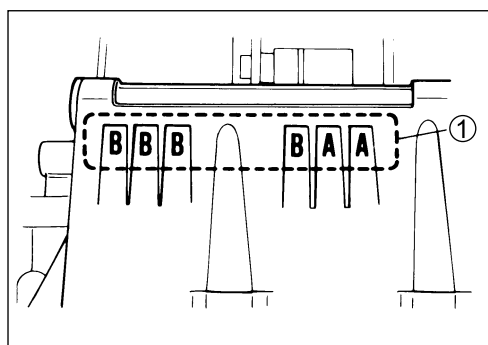

- Check the corresponding crankshaft journal O.D. codes (“A”, “B” or “C”) ②, which are stamped on the crankshaft.


Bearing selection table

Crankcase I.D. ①	Code	Crankshaft O.D. ②		
		A	B	C
A	A	Green	Black	Brown
B	B	Black	Brown	Yellow

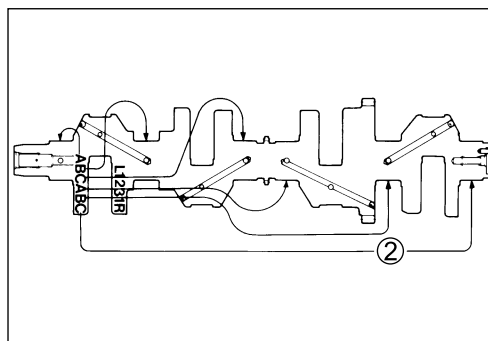

Crankcase journal I.D. specification

Code	I.D. specification
A	39.000 – 39.008 mm (1.5354 – 1.5357 in)
B	39.008 – 39.016 mm (1.5357 – 1.5361 in)

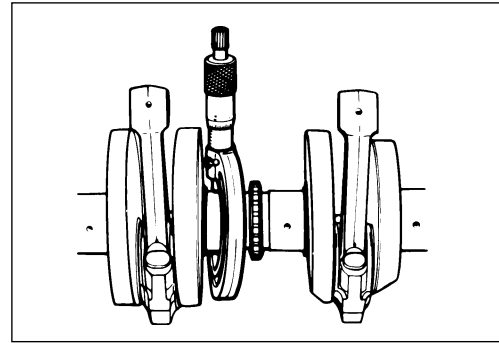

Crankshaft journal O.D. specification


Code	O.D. specification
A	35.992 – 36.000 mm (1.4170 – 1.4173 in)
B	35.984 – 35.992 mm (1.4167 – 1.4170 in)
C	35.976 – 35.984 mm (1.4164 – 1.4167 in)

 09900-20202: Micrometer (25 – 50 mm)

Bearing thickness specification

Color (Part No.)	Thickness
Green (12229-06B00-0A0) ... ① (12229-06B10-0A0) ... ②	1.486 – 1.490 mm (0.0585 – 0.0587 in)
Black (12229-06B00-0B0) ... ① (12229-06B10-0B0) ... ②	1.490 – 1.494 mm (0.0587 – 0.0588 in)
Brown (12229-06B00-0C0) ... ① (12229-06B10-0C0) ... ②	1.494 – 1.498 mm (0.0588 – 0.0590 in)
Yellow (12229-06B00-0D0) ... ① (12229-06B10-0D0) ... ②	1.498 – 1.502 mm (0.0590 – 0.0591 in)

- ① Grooved bearing with oil hole (for lower crankcase)
- ② Grooved bearing (for upper crankcase)
- ③ Color code

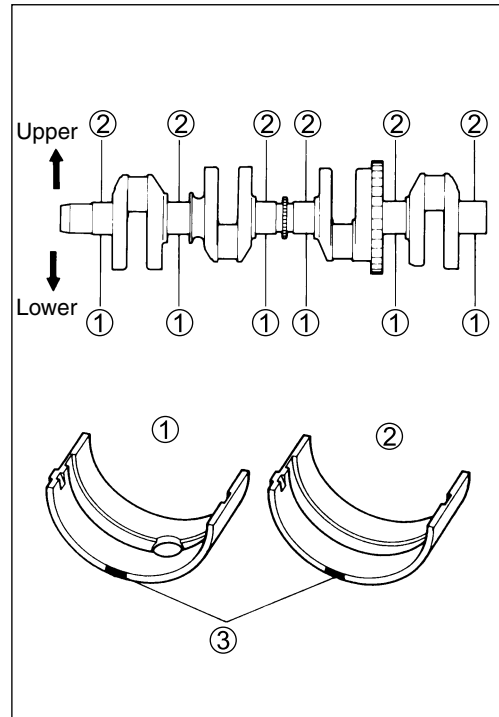


CRANKSHAFT THRUST CLEARANCE ADJUSTMENT

- With the crankshaft's right-side and left-side thrust bearings inserted into the upper crankcase, measure the thrust clearance between the left-side thrust bearing and the crankshaft using the thickness gauge.

Ⓡ: Right-side thrust bearing

Ⓛ: Left-side thrust bearing

Ⓐ: Front side

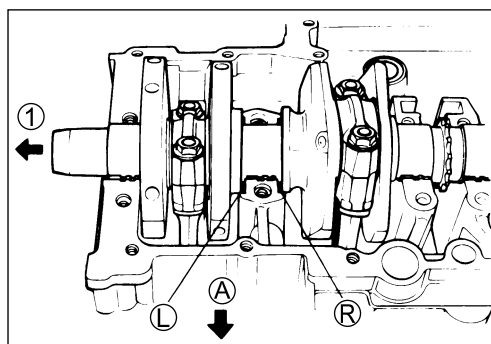


NOTE:

Pull ① the crankshaft to the left so that there is no clearance on the right-side thrust bearing.

DATA Crankshaft thrust clearance

Standard: 0.04 – 0.08 mm (0.0016 – 0.0031 in)


If the thrust clearance exceeds the standard range, adjust the thrust clearance as follows:

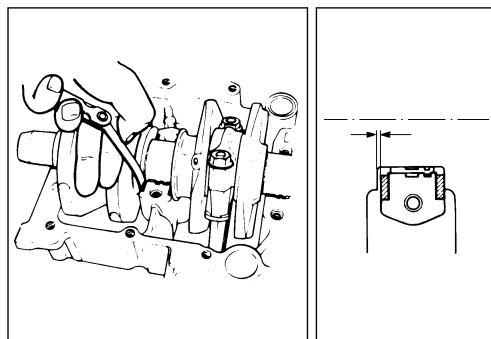


- Remove the right-side thrust bearing and measure its thickness using the micrometer. If the thickness of the right-side thrust bearing is below standard, replace it with a new bearing and measure the thrust clearance again, as described above.

DATA Right-side thrust bearing thickness

Standard: 2.42 – 2.44 mm (0.0953 – 0.0961 in)

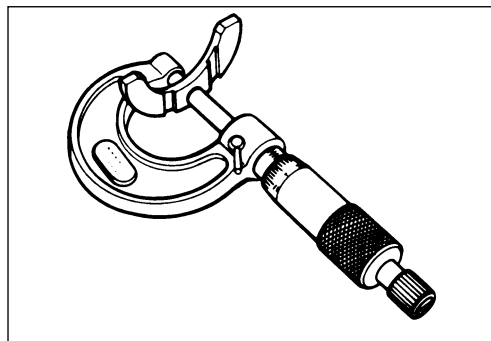

- If the right-side thrust bearing is within the standard range, reinsert the right-side thrust bearing and remove the left-side thrust bearing.
- With the left-side thrust bearing removed, measure the clearance using the thickness gauge as shown. Then, select a left-side thrust bearing from the selection table. (☞ 3-86)

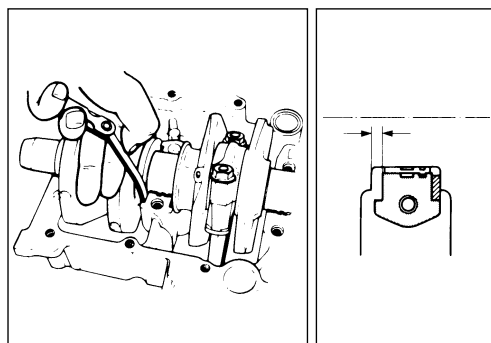


Left-side thrust bearing selection table

Clearance before inserting the left-side thrust bearing	Color ① (Part No.)	Thrust bearing thickness	Thrust clearance
2.42 – 2.44 mm (0.0953 – 0.0961 in)	Black (12228-48B00-0H0)	2.36 – 2.38 mm (0.0929 – 0.0937 in)	0.04 – 0.08 mm (0.0016 – 0.0031 in)
2.44 – 2.46 mm (0.0961 – 0.0969 in)	Orange (12228-48B00-0G0)	2.38 – 2.40 mm (0.0937 – 0.0945 in)	
2.46 – 2.48 mm (0.0969 – 0.0976 in)	Blue (12228-48B00-0F0)	2.40 – 2.42 mm (0.0945 – 0.0953 in)	
2.48 – 2.50 mm (0.0976 – 0.0984 in)	Green (12228-48B00-0E0)	2.42 – 2.44 mm (0.0953 – 0.0961 in)	
2.50 – 2.52 mm (0.0984 – 0.0992 in)	Yellow (12228-48B00-0D0)	2.44 – 2.46 mm (0.0961 – 0.0969 in)	
2.52 – 2.54 mm (0.0992 – 0.1000 in)	Red (12228-48B00-0C0)	2.46 – 2.48 mm (0.0969 – 0.0976 in)	
2.54 – 2.56 mm (0.1000 – 0.1008 in)	Brown (12228-48B00-0B0)	2.48 – 2.50 mm (0.0976 – 0.0984 in)	0.04 – 0.07 mm (0.0016 – 0.0028 in)
2.56 – 2.57 mm (0.1008 – 0.1012 in)	Pink (12228-48B00-0A0)	2.50 – 2.52 mm (0.0984 – 0.0992 in)	

- After selecting a left-side thrust bearing, install it and then measure the thrust clearance again.

NOTE:


The right-side thrust bearing color code ① and part number are as follows. GREEN (12228-48B00-0E0).

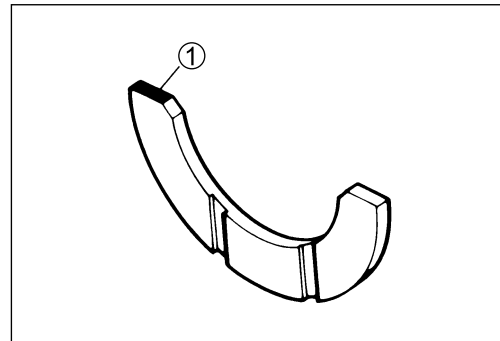**CRANKSHAFT RUNOUT**

Support the crankshaft using V-blocks as shown, with the two end journals resting on the blocks. Set up the dial gauge as shown, and rotate the crankshaft slowly to read the runout. Replace the crankshaft if the runout exceeds the service limit.

- TOOL** 09900-20606: Dial gauge (1/100 mm)
 09900-20701: Magnetic stand
 09900-21304: V-block set (100 mm)

- DATA** Crankshaft runout
 Service Limit: 0.05 mm (0.002 in)

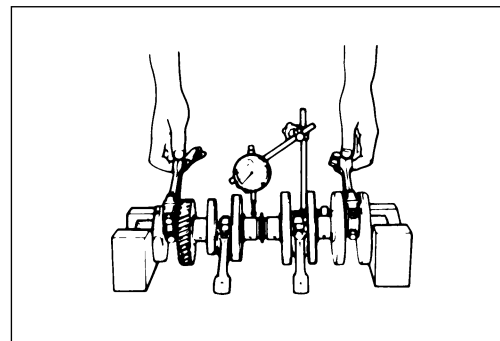

ENGINE LUBRICATION SYSTEM

OIL PUMP

REMOVAL

The crankcase must be separated to service the oil pump.

The oil pump service requires engine removal and disassembly.


Refer to the engine removal and the engine disassembly sections for oil pump removal. (☞ 3-25)

INSPECTION

Rotate the oil pump by hand and check that it moves smoothly. If it does not move smoothly, replace the oil pump assembly.

▲ CAUTION

**Do not attempt to disassemble the oil pump assembly.
The oil pump is available only as an assembly.**

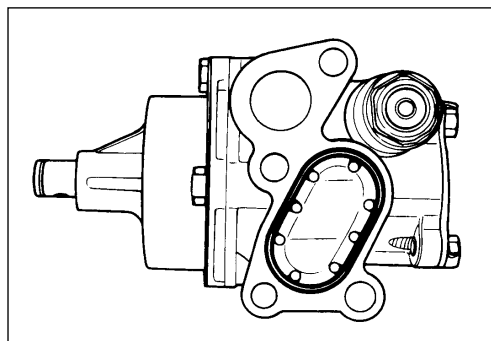

INSTALLATION

- Refer to the engine reassembly and the engine installation sections to install the oil pump. (☞ 3-26)

OIL SUMP FILTER/OIL PRESSURE REGULATOR

REMOVAL

After draining the engine oil, the following components must be removed in the described order before removing the oil sump filter and the oil pressure regulator.

NOTE:

Refer to the following pages for the details of each step.

Drain:


- Engine oil (☞ 2-9)

Remove:


- Exhaust pipe/muffler assembly (☞ 3-6)
- Oil cooler hose union bolts
- Oil pan (☞ 3-21)



- Oil pressure regulator

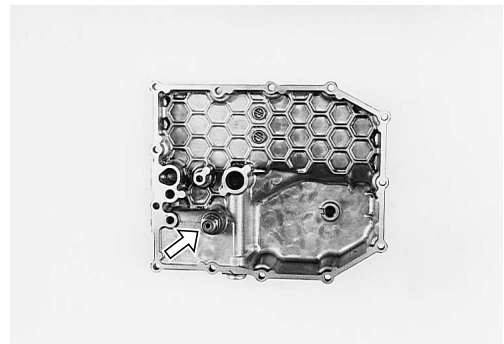


- Oil sump filter

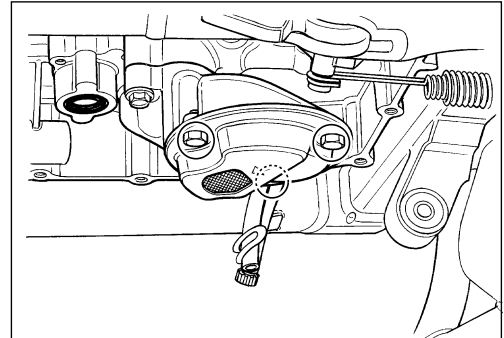


OIL PRESSURE REGULATOR INSPECTION

Check the operation of the oil pressure regulator by pushing on the piston with an appropriately shaped tool. If the piston does not operate, replace the oil pressure regulator with a new one.

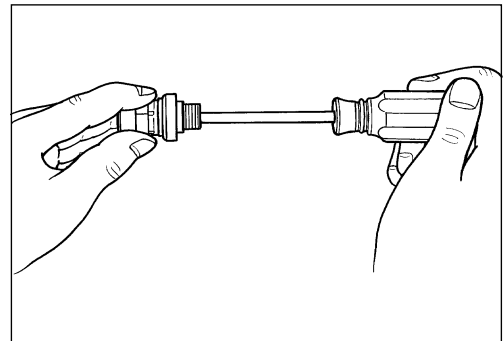


OIL SUMP FILTER CLEANING

Clean the oil sump filter using compressed air.

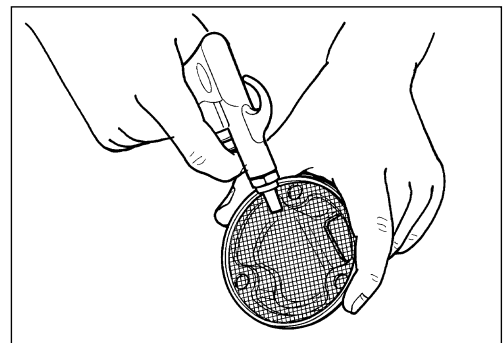

OIL PAN

Wash the oil pan with kerosine.

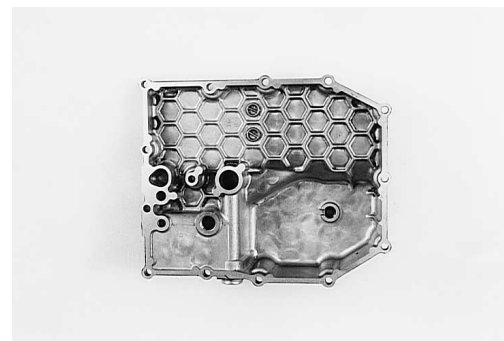

OIL SUMP FILTER/OIL PRESSURE REGULATOR INSTALLATION

Installation is in the reverse order of removal.

NOTE:


Refer to the following pages for the details of each step.

Install:


- Oil sump filter


NOTE:



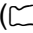
- * When installing the oil sump filter, make sure that the arrow mark **A** points towards the front of the motorcycle.
- * Do not lose the O-ring **1** and shim **2**.

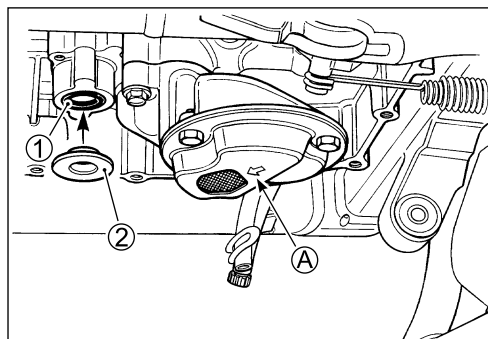

- Oil pressure regulator

 Oil pressure regulator: 28 N·m (2.8 kgf·m, 20.0 lb-ft)

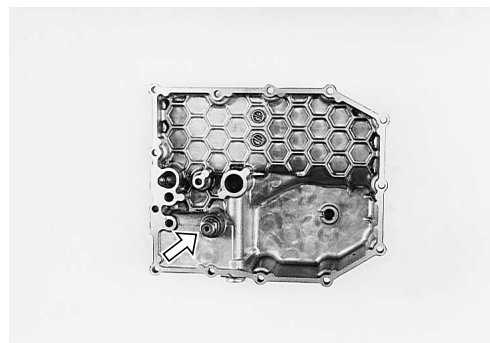

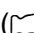- Oil pan ( 3-32)
- Oil cooler hose union bolts ( 3-9)
- Exhaust pipe/muffler assembly ( 3-9)



Adjust the following item to specification.

- * Engine oil  2-9

OIL PRESSURE SWITCH/OIL COOLER

REMOVAL

After draining the engine oil, remove the oil pressure switch and the oil cooler.

NOTE:


Refer to the following pages for the details of each step.

Drain:


- Engine oil (👉 2-9)

Remove:


- Signal generator cover.

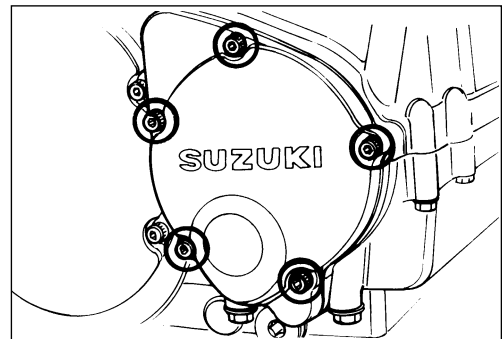

- Oil pressure switch.

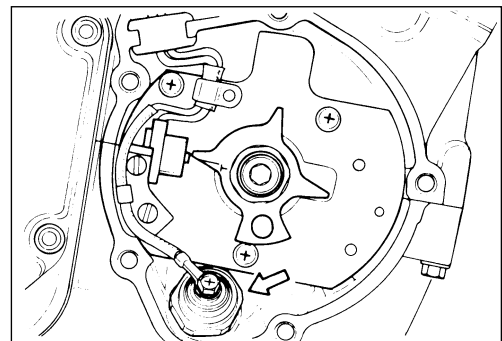

- Oil cooler

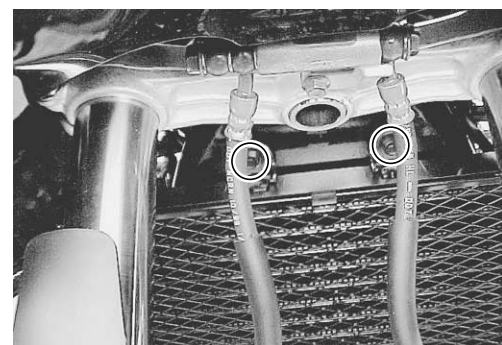


OIL PRESSURE SWITCH INSPECTION

👉 6-36

OIL COOLER HOSE INSPECTION

Inspect the oil cooler hoses for damage and oil leaks. If any defects are found, replace the oil cooler hose(-s) with a new one.

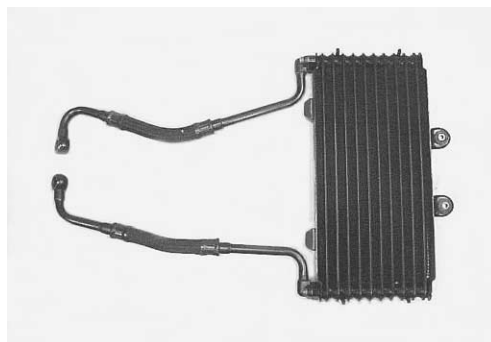

OIL COOLER INSPECTION AND CLEANING

Remove any foreign matter that is stuck in the oil cooler fins using compressed air.

Inspect the oil cooler for oil leaks. If any defects are found, replace the oil cooler with a new one.

If the fins are bent or dented, repair them by carefully straightening them with the blade of a small screwdriver.



INSTALLATION


Installation is in the reverse order of removal.

NOTE:


Refer to the following pages for the details of each step.

Install:


- Oil cooler (📄 3-9)

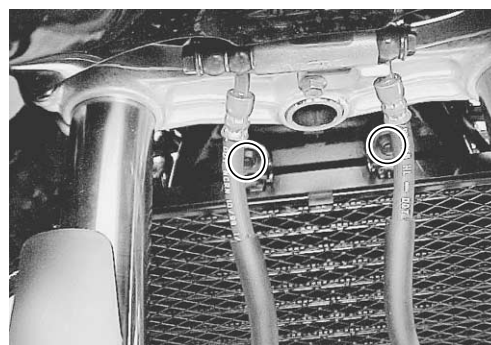

- Oil pressure switch (📄 3-39)

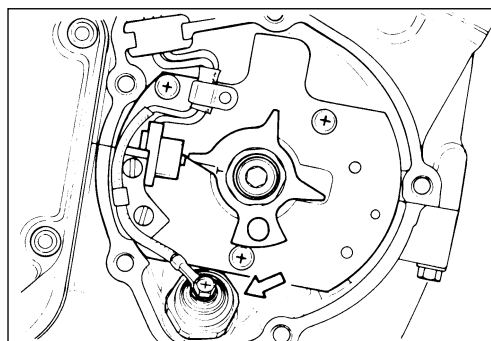

- Signal generator cover (👉3-48)

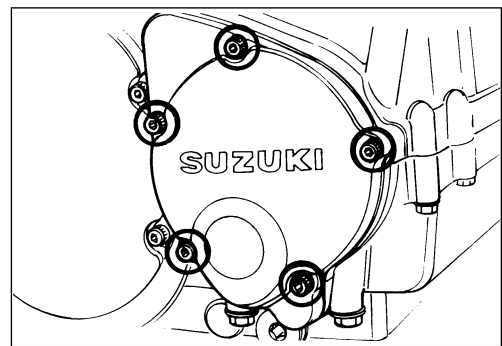

Adjust the following item to specification.

- * Engine oil 👉2-9

OIL FILTER

👉2-10

OIL PRESSURE

👉2-25

OIL JET

OIL JET (for the cylinder head) REMOVAL

- The oil jet (for the cylinder head) can be removed after removing the cylinder block.

NOTE:


Refer to the following pages for the details of each step.

Drain:

- Engine oil (👉2-9)

Remove:

- Cylinder block (👉3-15)
- Oil jet (for the cylinder head) ①

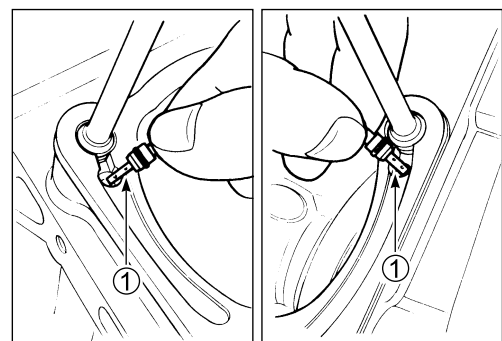



OIL JET (for piston cooling and the transmission)

REMOVAL

- The oil jet (for piston cooling and the transmission) can be removed after separating the crankcase.

Remove:

- Oil jet (for piston cooling) ①
- Oil jet (for the transmission) ②

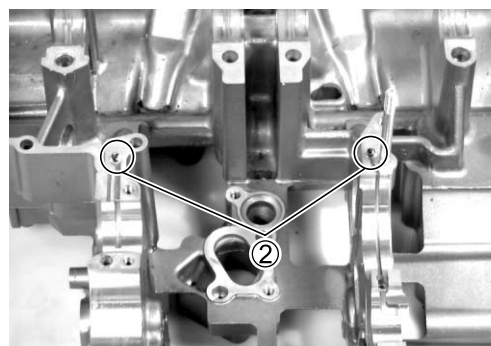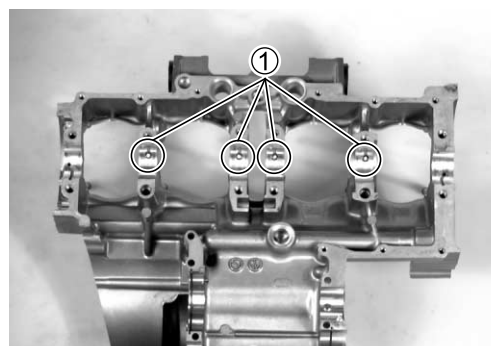

INSPECTION

Make sure that the oil jets are not clogged. If they are clogged, clean their oil passage using a wire of the proper size and compressed air.




INSTALLATION

Refer to the cylinder block installation, engine reassembly and engine installation sections.


NOTE:

Before installing the oil jets, apply a light coat of engine oil to the O-rings.


ENGINE LUBRICATION SYSTEM CHART

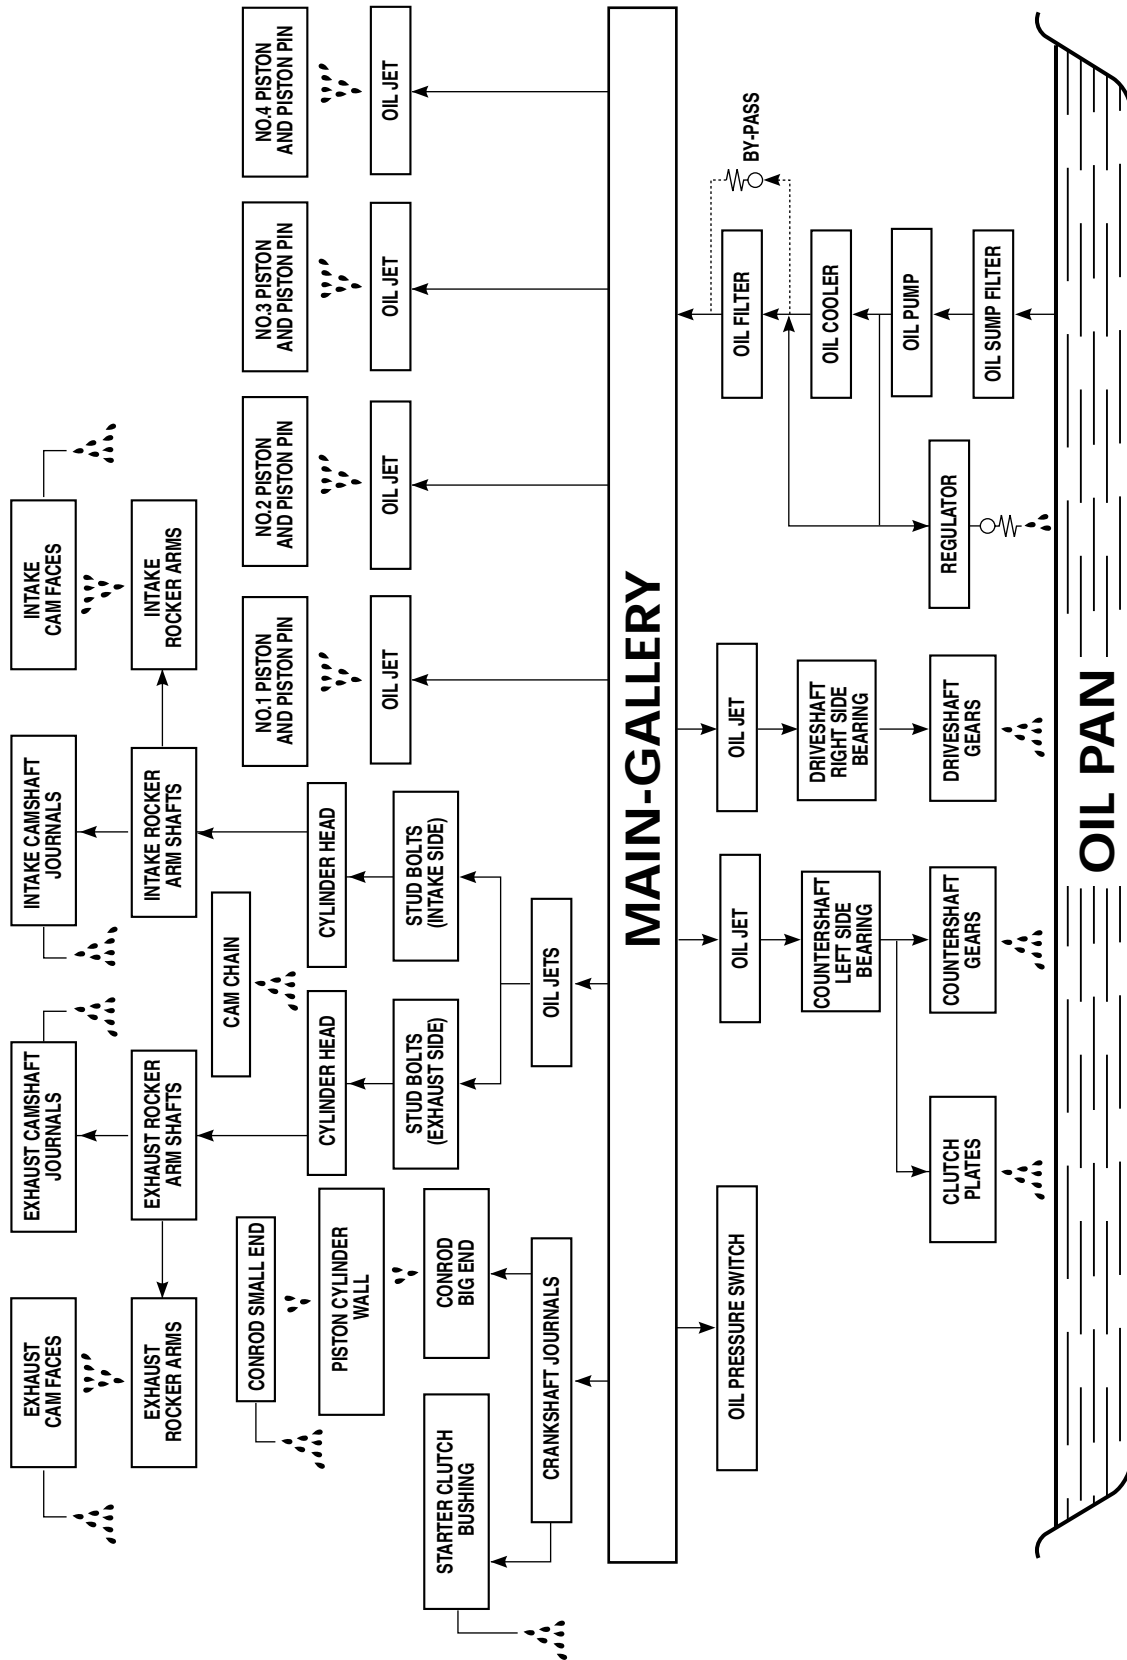


ENGINE LUBRICATION SYSTEM

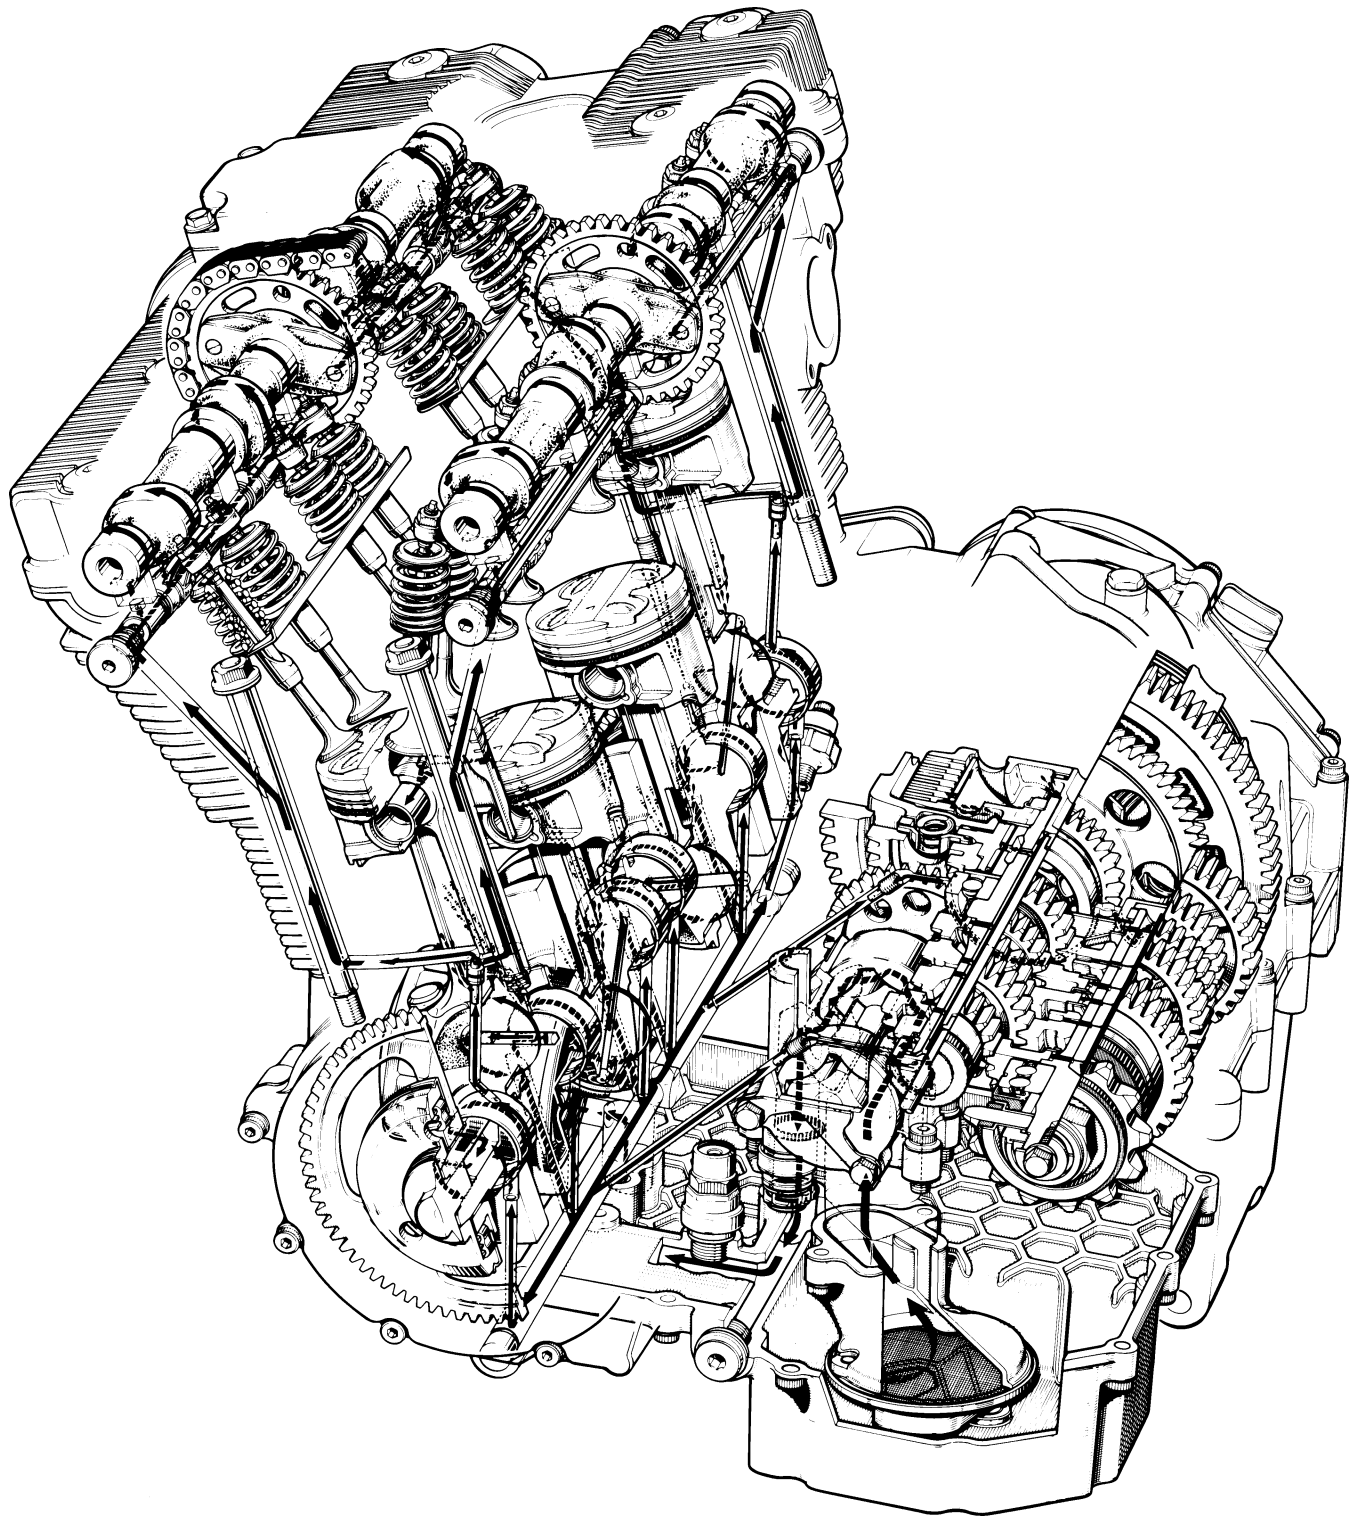

CYLINDER HEAD COOLING SYSTEM CHART

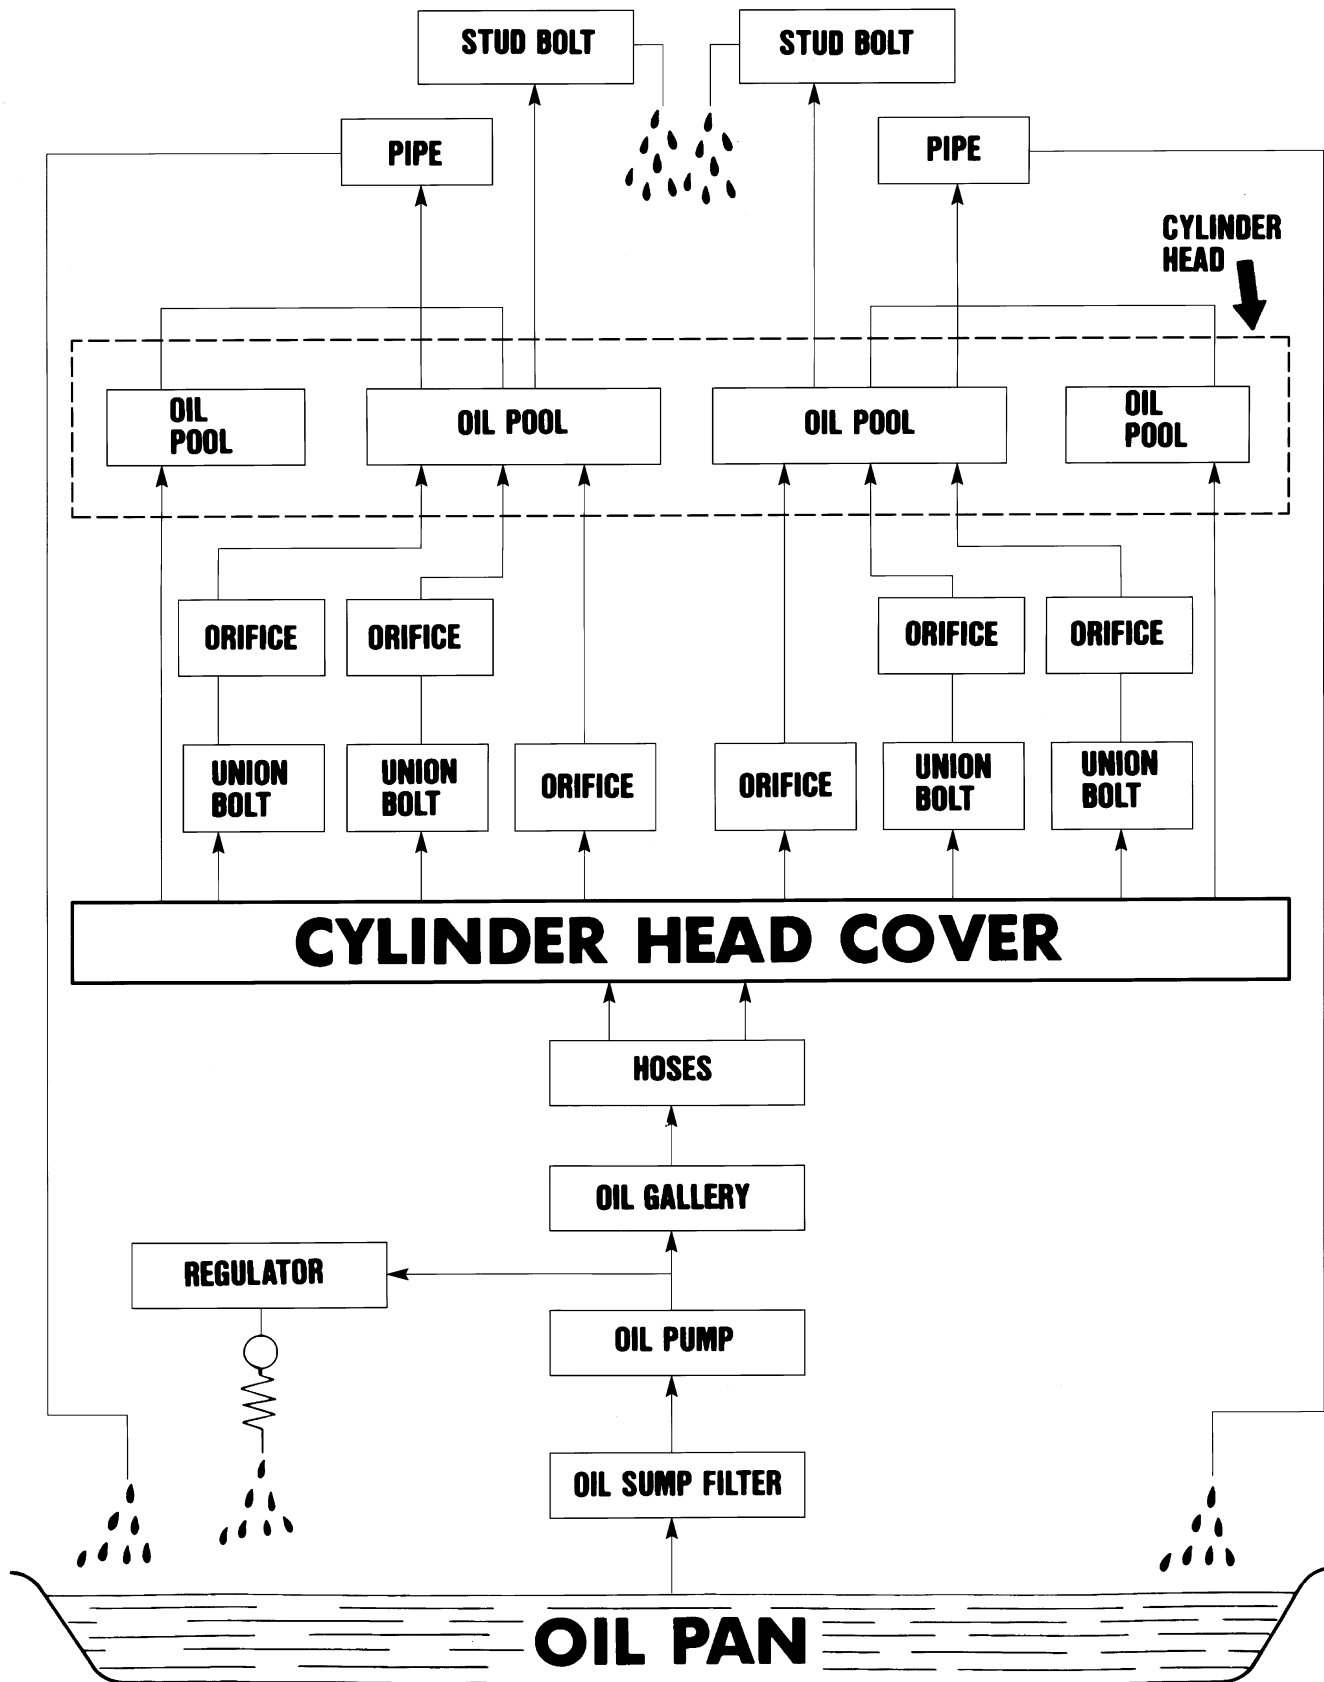

CYLINDER HEAD COOLING SYSTEM

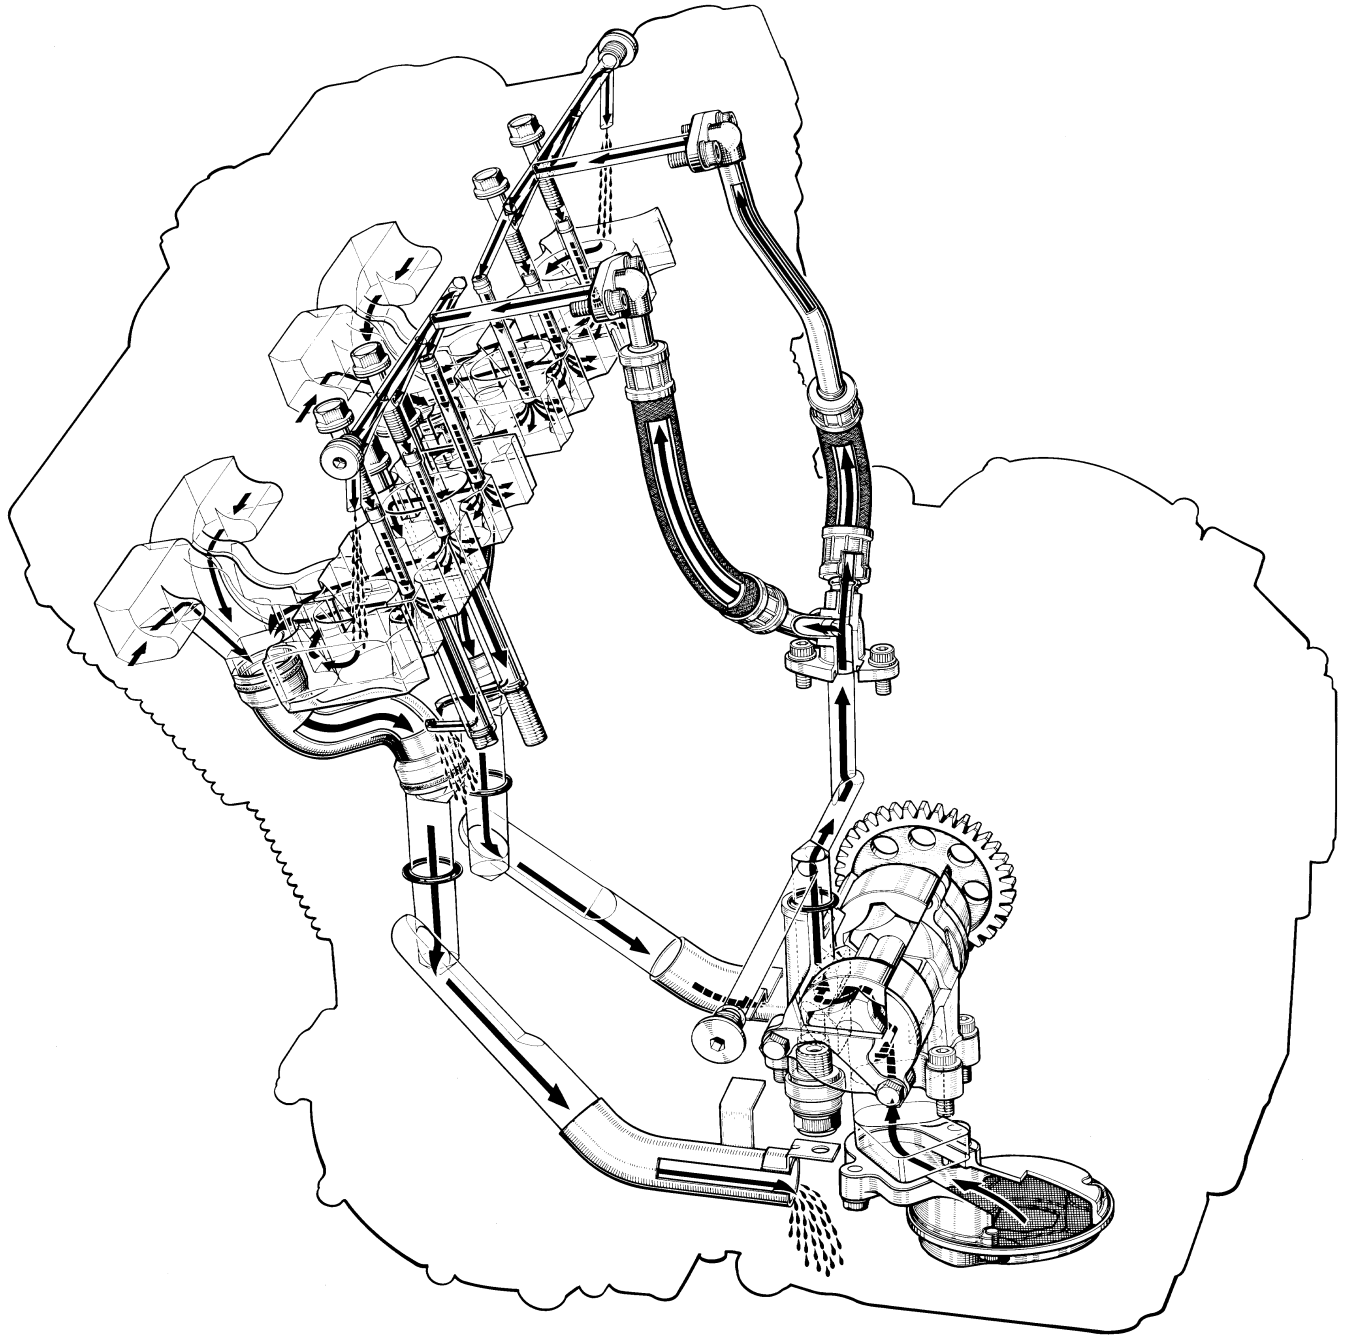


PAIR (AIR SUPPLY) SYSTEM

PAIR SYSTEM REMOVAL


- Remove the fuel tank. (☞ 4-3)
- Disconnect all of the PAIR valve hoses.

- ① Vacuum hose
- ② Air cleaner hose
- ③ PAIR hose No. 1
- ④ PAIR hose No. 2
- ⑤ PAIR hose No. 3
- ⑥ PAIR hose No. 4

- Remove the PAIR valve.

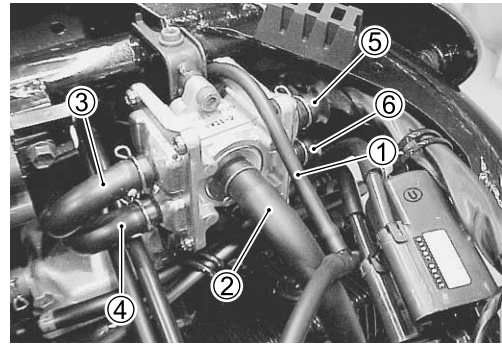

- Remove the PAIR pipes from each cylinder.

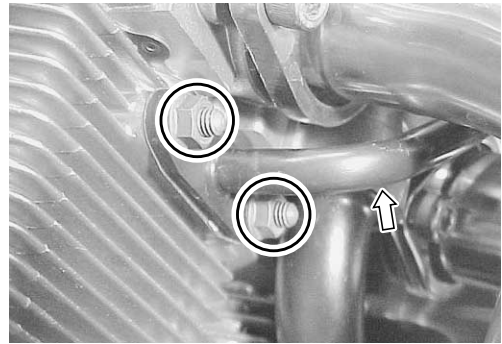


PAIR SYSTEM INSTALLATION

Installation is in the reverse order of removal. (☞ 3-100)

- Tighten the PAIR valve mounting bolt to the specified torque.

🔩 PAIR valve mounting bolt: 10 N·m (1.0 kgf·m, 7.0 lb-ft)

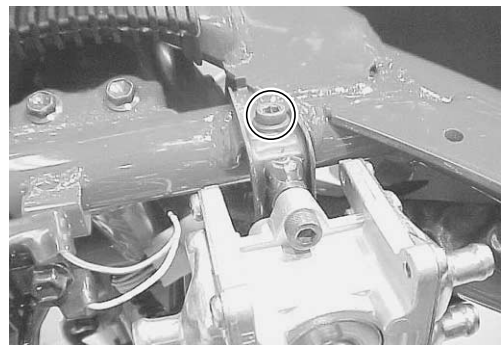


- Tighten the PAIR pipe mounting nuts to the specified torque.

🔩 PAIR pipe mounting nut: 10 N·m (1.0 kgf·m, 7.0 lb-ft)

⚠ CAUTION

Use a new gasket to prevent exhaust gas leakage.

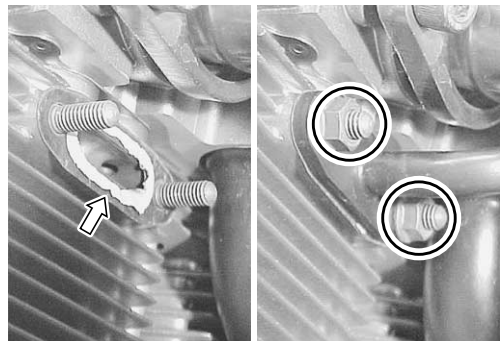

PAIR (AIR SUPPLY) SYSTEM INSPECTION

HOSES AND PIPES

- Inspect the hoses and pipes for wear or damage.
- Inspect that the hoses and pipes are securely connected.

PAIR VALVE

- Remove the PAIR valve. (☞ 3-98)
- Inspect the PAIR valve body for damage.




REED VALVE

- Remove the PAIR valve cover.
- Inspect the reed valve for the carbon deposit.
- If the carbon deposit is found in the reed valve, replace the PAIR valve with a new one.



PAIR VALVE

- Inspect that air flows through the PAIR valve air inlet port (A) to the air outlet parts (B).
- If air does not flow out, replace the PAIR valve with a new one.

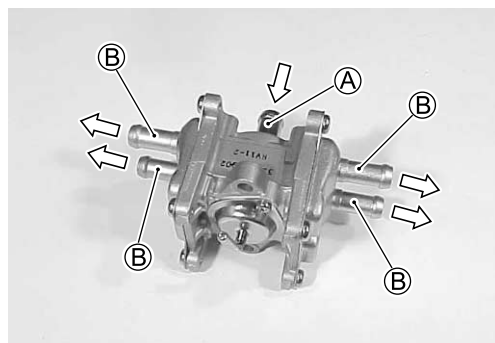



- Connect the vacuum pump gauge to the vacuum port of the PAIR valve as shown in the photograph.
- Apply negative pressure slowly to the PAIR valve and inspect the air flow.
- If air does not flow out within the specification, the PAIR valve is in normal condition.
- If the PAIR valve does not function within the specification, replace the PAIR valve with a new one.

DATA Negative pressure range: 44 – 65.3 kPa
(330 – 490 mmHg)


TOOL 09917-47010: Vacuum pump gauge

▲ CAUTION

Use a hand operated vacuum pump to prevent the PAIR valve damage.

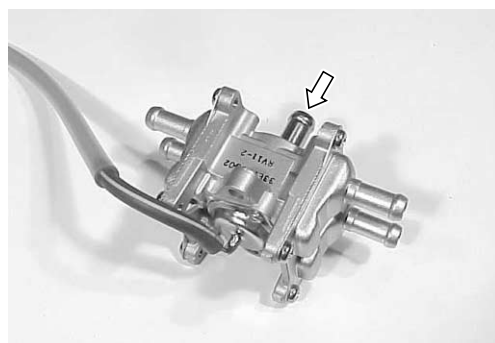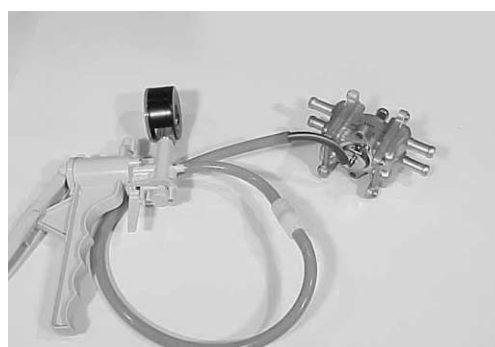

PAIR (AIR SUPPLY) SYSTEM HOSE ROUTING

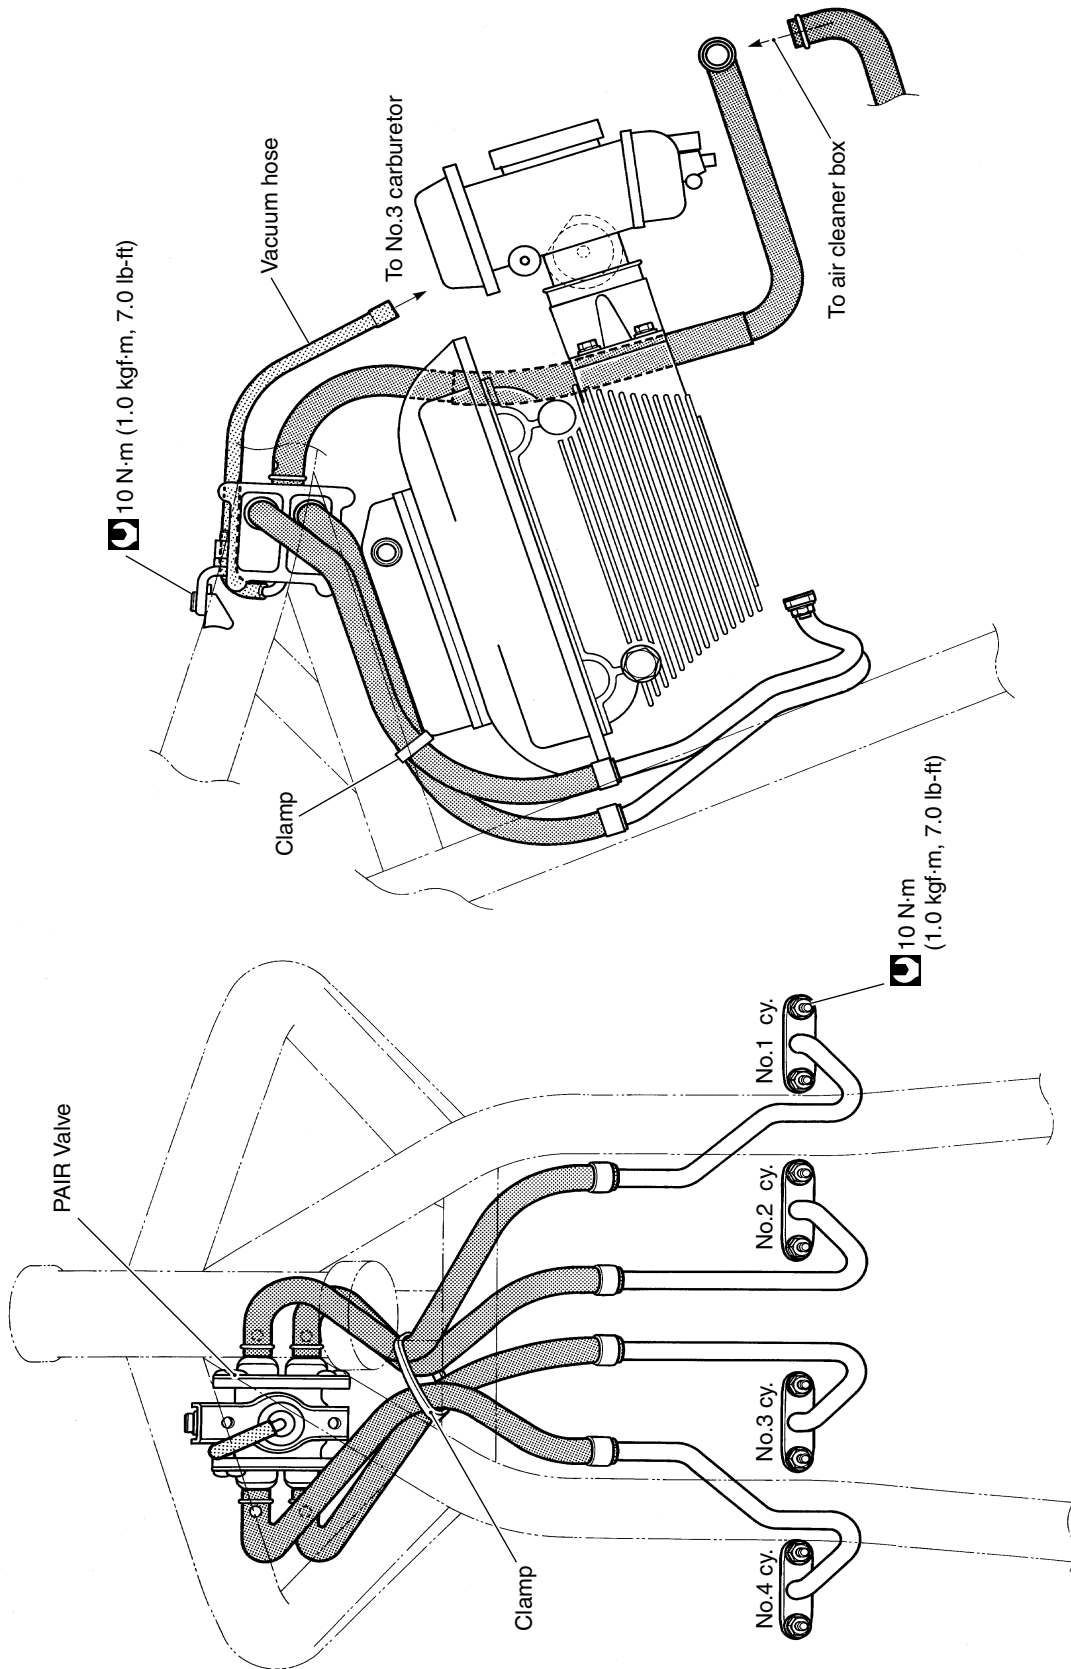


FUEL SYSTEM

CONTENTS

FUEL SYSTEM	4- 2
FUEL TANK	4- 3
REMOVAL	4- 3
REMountING	4- 3
FUEL VALVE	4- 4
REMOVAL	4- 5
INSPECTION AND CLEANING	4- 5
REMountING	4- 5
FUEL LEVEL GAUGE	4- 6
REMOVAL	4- 6
INSPECTION	4- 6
INSTALLATION	4- 6
CARBURETOR	4- 7
CONSTRUCTION	4- 7
SPECIFICATIONS	4- 8
I.D. NO. LOCATION	4- 9
DIAPHRAGM AND PISTON OPERATION	4-10
SLOW SYSTEM	4-11
MAIN SYSTEM	4-12
STARTER (ENRICHER) SYSTEM	4-13
FLOAT SYSTEM	4-13
REMOVAL	4-14
DISASSEMBLY	4-15
CARBURETOR CLEANING	4-19
CARBURETOR HEATER INSPECTION	4-19
THERMO-SWITCH INSPECTION	4-19
CARBURETOR INSPECTION	4-20
REASSEMBLY	4-21
REMountING	4-23
CARBURETOR SYNCHRONIZATION	4-24

FUEL SYSTEM


The fuel system consists of a fuel tank, fuel valve, vacuum hose, fuel hose and carburetor assembly. When there is negative pressure (vacuum) in the combustion chamber, the fuel is able to flow from the fuel tank, through the fuel valve and then to the carburetor assembly.

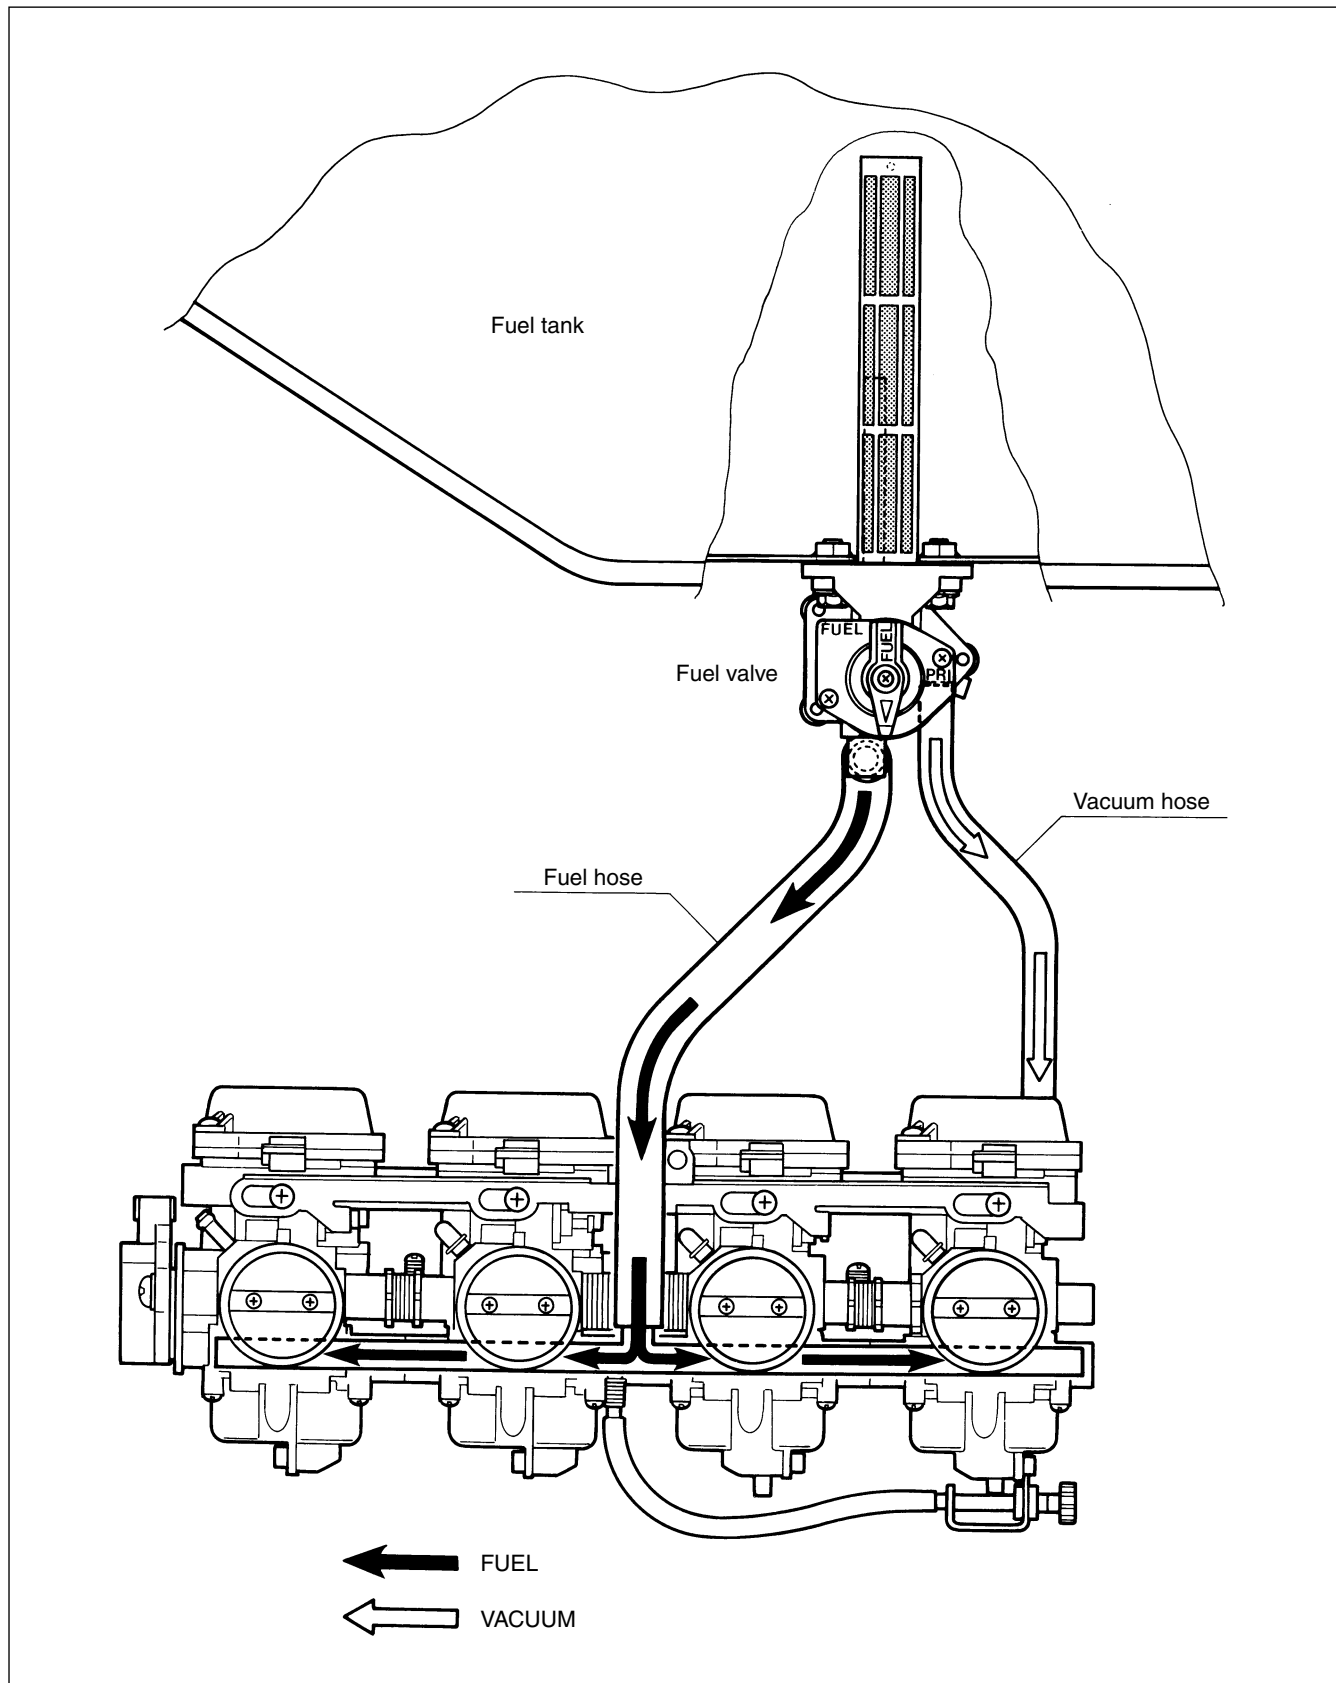


FUEL TANK

REMOVAL

- Remove the seat. (👉 5-5)
- Remove the fuel tank mounting bolts ①.

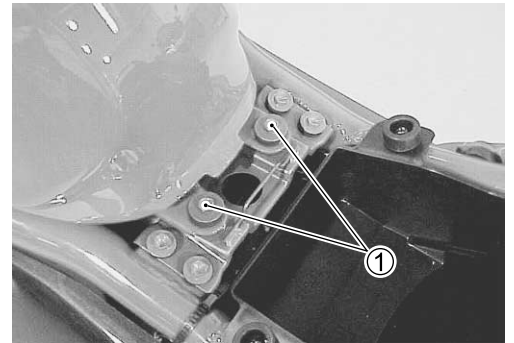


- Turn the fuel valve knob to the “ON” position.
- Remove the fuel valve knob ② by removing its mounting screw.

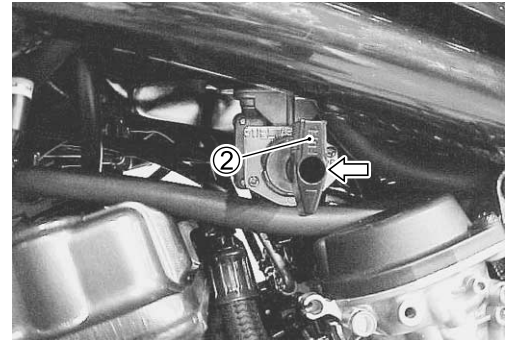


- Disconnect the vacuum hose ③ and fuel hose ④.

⚠ WARNING

**Gasoline is highly flammable and explosive.
Keep heat, sparks and flames away from gasoline.**

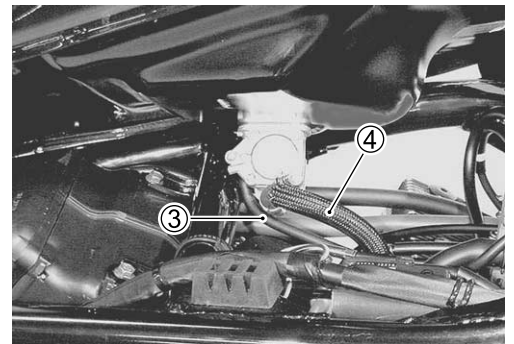

- Disconnect the fuel tank air breather hose ⑤ and water drain hose ⑥.
- Disconnect the fuel level gauge lead wire coupler ⑦.
- Remove the fuel tank.

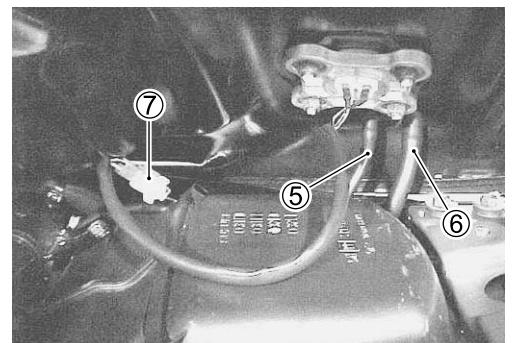

REMOUNTING

Remount the fuel tank in the reverse order of removal.

⚠ CAUTION


Be careful not to bend the fuel hose when remounting the fuel tank.

(👉 7-17)


FUEL VALVE

When the engine is not operating, the fuel valve ① is kept closed by the tension of the spring ②, which closes the fuel passageway and stops the flow of fuel to the carburetors.


When the engine has started, negative pressure (vacuum) Ⓐ is generated in the combustion chamber and reaches the diaphragm through a passage in the carburetor's main bore and the vacuum hose. This negative pressure (vacuum) Ⓐ is higher than the spring pressure which causes the diaphragm to force open the fuel valve ① and allow fuel to flow to the carburetor assembly.

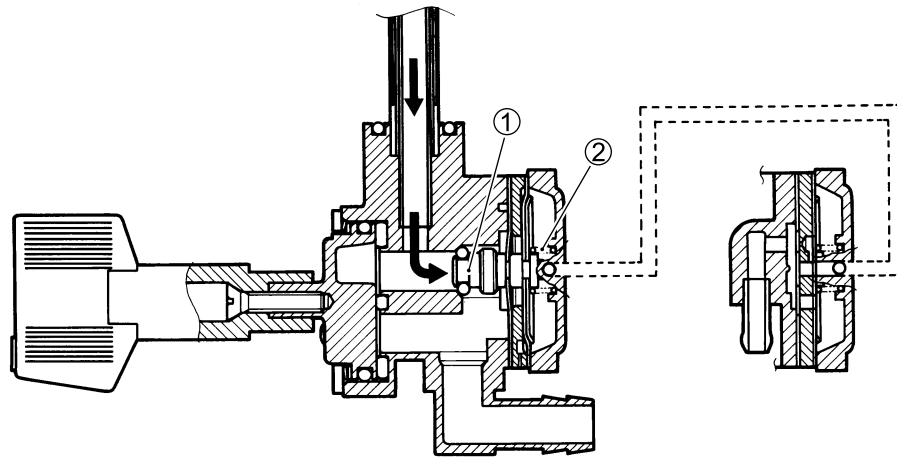

"Fuel stop" condition

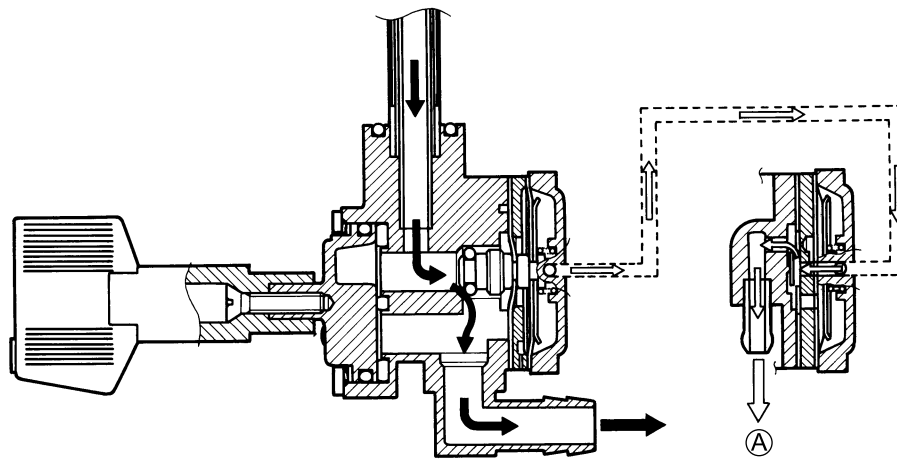


"Fuel flow" condition




REMOVAL

- Remove the fuel tank. (☞ 4-3)
- Remove the fuel valve ①.

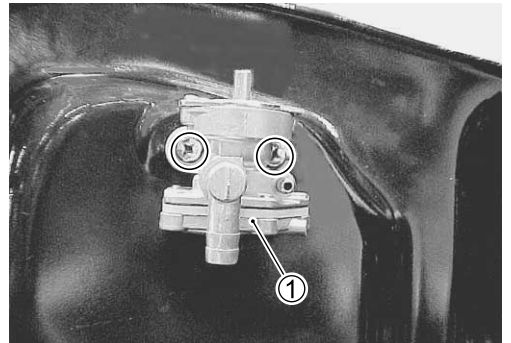


⚠ WARNING

- * Gasoline is very explosive. Extreme care must be taken.
- * The gaskets ② and O-ring ③ must be replaced with new ones to prevent fuel leakage.

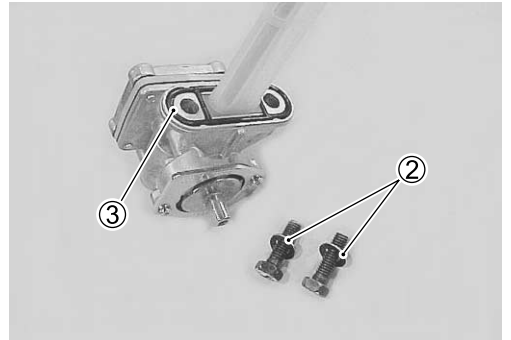

INSPECTION AND CLEANING

If the fuel filter is dirty with sediment or rust, fuel will not flow smoothly and loss in engine power may result. Clean the fuel filter with compressed air.

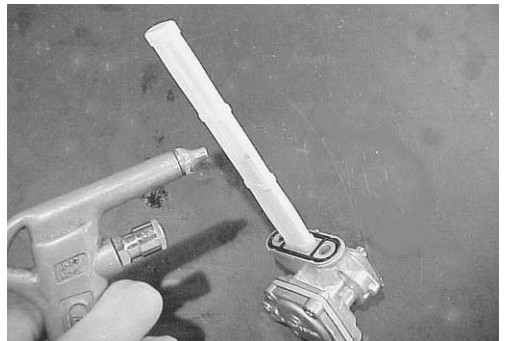

REMOUNTING

Remount the fuel valve in the reverse order of removal.


FUEL LEVEL GAUGE

REMOVAL

- Remove the fuel tank. (☞ 4-3)
- Remove the fuel level gauge ①.

⚠ WARNING

Gasoline is very explosive. Extreme care must be taken.

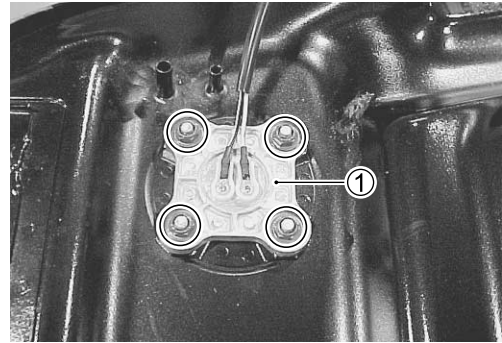


INSPECTION

Measure the resistance between the lead wire terminals when the float is at the position listed below.

TOOL 09900-25008: Multi-circuit tester

Float position	Resistance between terminals
Full (F)	8 – 10 Ω
Empty (E)	90 – 93 Ω

If the resistance measured is out of the specification, replace the gauge assembly with a new one.

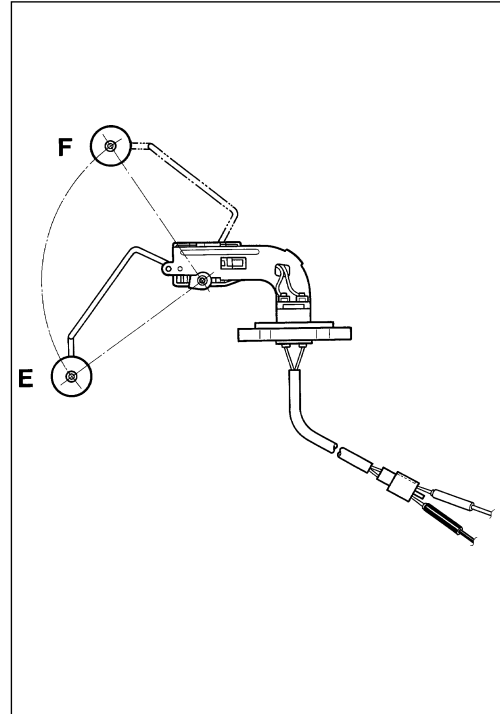


INSTALLATION

Install the fuel level gauge in the reverse order of removal. Pay attention to the following points.

- Apply thin coat of the engine oil to the O-ring ①.

⚠ CAUTION

Replace the O-ring ① with a new one.

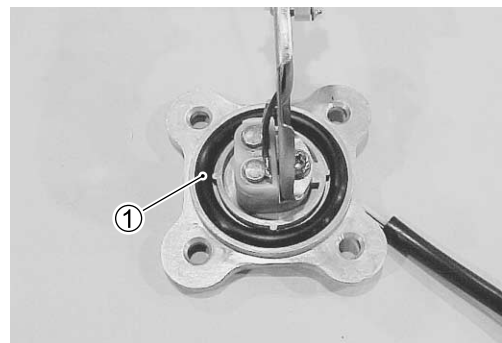


- Install the fuel level gauge correctly and tighten the nuts to the specified torque diagonally.

🔧 Fuel level gauge mounting nut: 6 N·m (0.6 kgf·m, 4.5 lb-ft)


NOTE:

When installing the fuel level gauge to the fuel tank, the lead wire Ⓐ on the fuel level gauge must be faced to the right side of the motorcycle.

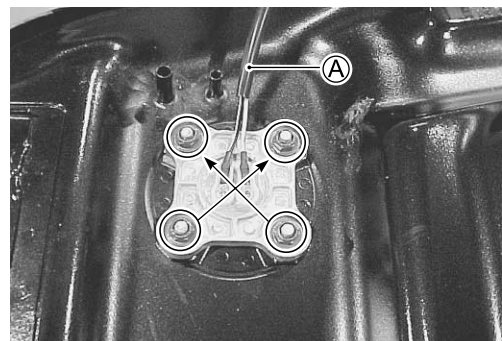

CARBURETOR CONSTRUCTION

- ① Top cap
- ② O-ring
- ③ Spring
- ④ Jet needle stopper
- ⑤ O-ring
- ⑥ Spring
- ⑦ Washer
- ⑧ E-ring
- ⑨ Spacer
- ⑩ Jet needle
- ⑪ Diaphragm
- ⑫ Piston valve
- ⑬ Pilot air jet
- ⑭ Starter (enricher) plunger
- ⑮ Needle valve assy
- ⑯ Float
- ⑰ Float pin
- ⑱ Needle jet
- ⑲ O-ring
- ⑳ Main jet holder
- ㉑ Main jet
- ㉒ Pilot jet
- ㉓ Starter jet

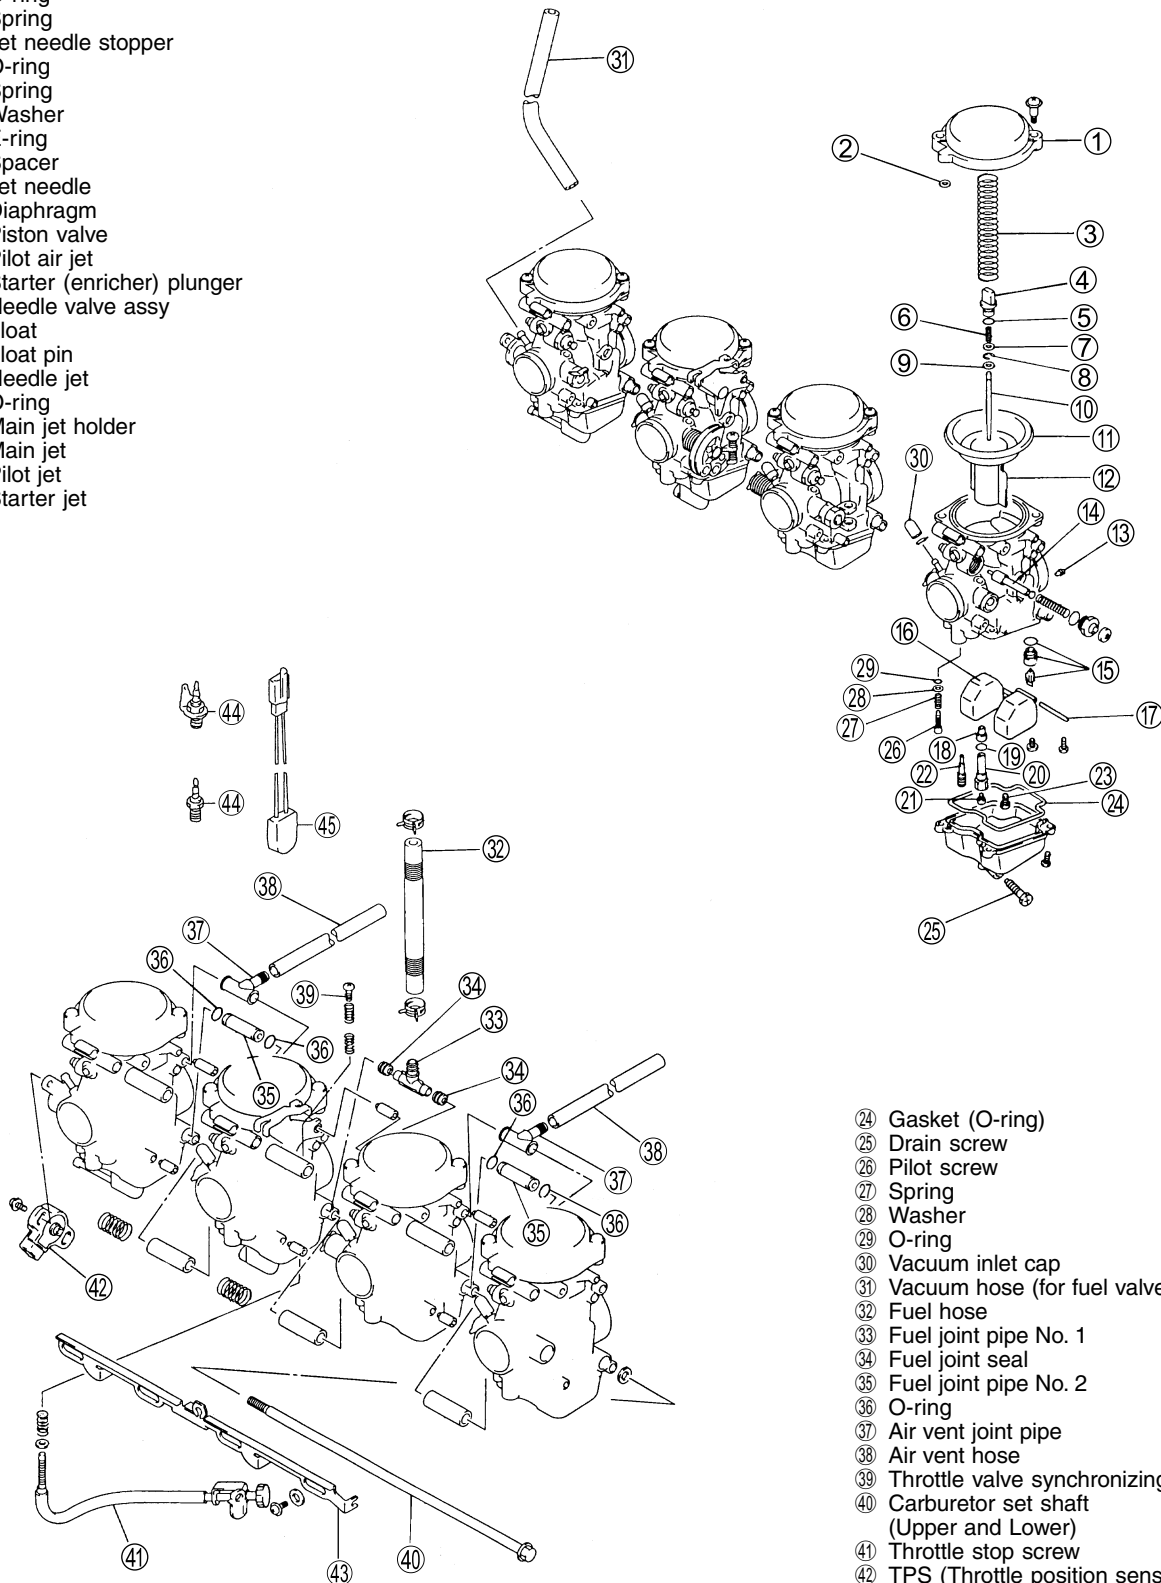

- ㉔ Gasket (O-ring)
- ㉕ Drain screw
- ㉖ Pilot screw
- ㉗ Spring
- ㉘ Washer
- ㉙ O-ring
- ㉚ Vacuum inlet cap
- ㉛ Vacuum hose (for fuel valve)
- ㉜ Fuel hose
- ㉝ Fuel joint pipe No. 1
- ㉞ Fuel joint seal
- ㉟ Fuel joint pipe No. 2
- ㊱ O-ring
- ㊲ Air vent joint pipe
- ㊳ Air vent hose
- ㊴ Throttle valve synchronizing screw
- ㊵ Carburetor set shaft (Upper and Lower)
- ㊶ Throttle stop screw
- ㊷ TPS (Throttle position sensor)
- ㊸ Starter (enricher) plate
- ㊹ Carburetor heater (For E-02)
- ㊺ Thermo-switch (For E-02)

SPECIFICATIONS


ITEM	SPECIFICATION	
	E-02, 19, 24, 54	E-03, 28
Carburetor type	MIKUNI BSR36SS	←
Bore size	36 mm	←
I.D. No.	32F0	32F1
Idle r/min.	1 200 ± 100 r/min.	←
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)	←
Main jet (M.J.)	#100	# <i>100</i>
Jet needle (J.N.)	5C70-3rd	5C71-1st
Needle jet (N.J.)	P-0M	<i>P-0M</i>
Throttle valve (Th. V.)	#100	←
Pilot jet (P.J.)	#15	# <i>15</i>
Pilot screw (P.S.)	PRE-SET (3 turns back)	←
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)	←
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)	←

ITEM	SPECIFICATION	
	E-33	
Carburetor type	MIKUNI BSR36SS	
Bore size	36 mm	
I.D. No.	32F2	
Idle r/min.	1 200 ± 100 r/min.	
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)	
Main jet (M.J.)	# <i>100</i>	
Jet needle (J.N.)	5C71-1st	
Needle jet (N.J.)	<i>P-0M</i>	
Throttle valve (Th. V.)	# <i>100</i>	
Pilot jet (P.J.)	# <i>15</i>	
Pilot screw (P.S.)	PRE-SET (3 turns back)	
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)	
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)	

E-02: UK E-03: USA E-19: European markets E-24: Australia E-28: Canada E-33: California (USA)
E-54: Israel

I.D. NO. LOCATION

Each carburetor has an I.D. number ① printed on its body.

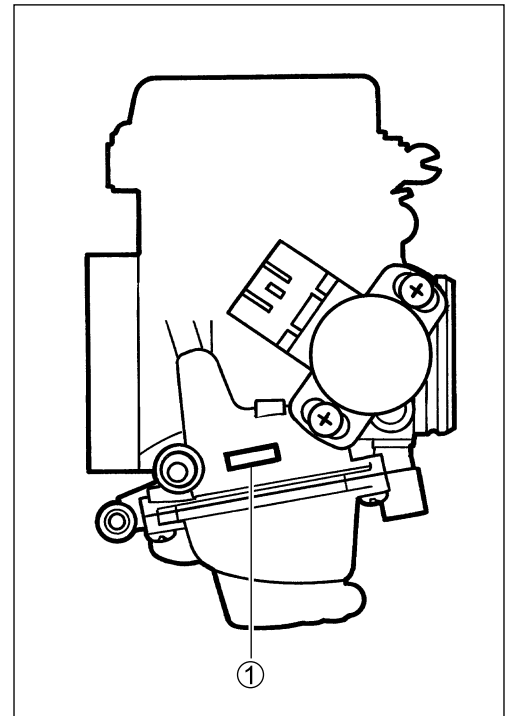


DIAPHRAGM AND PISTON OPERATION


The carburetor is a variable-venturi type, whose venturi cross sectional area is increased or decreased automatically by the piston valve ①. The piston valve moves according to the negative pressure present on the downstream side of the venturi (A). Negative pressure is admitted into the diaphragm chamber ② through an orifice ③ provided in the piston valve ①.

Rising negative pressure overcomes the spring ④ force, causing the piston valve ① to rise into the diaphragm chamber and prevent the air velocity from increasing. Thus, air velocity in the venturi passage is kept relatively constant for improved fuel atomization and the precise air/fuel mixture.

LOWER POSITION OF PISTON VALVE

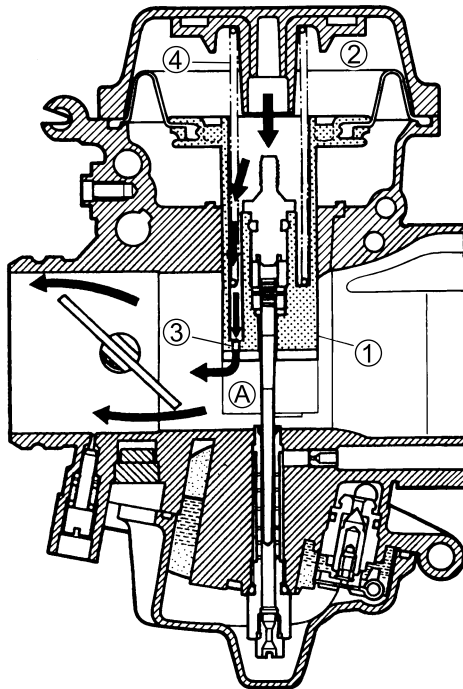


UPPER POSITION OF PISTON VALVE

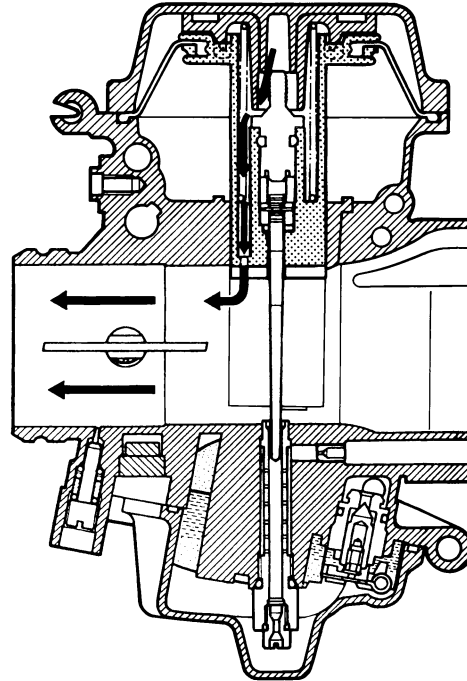

← NEGATIVE PRESSURE

SLOW SYSTEM

This system supplies fuel during engine operation when the throttle valve ① is closed or slightly opened. The fuel from the float chamber ② is metered by the pilot jet ③ where it mixes with air coming in through the pilot air jet ④. This mixture, rich with fuel, then goes up through the pilot passage to the pilot screw ⑤. Part of the mixture is discharged into the main bore through bypass ports ⑥. The mixture is metered by the pilot screw ⑤ and sprayed into the main bore through the pilot outlet port ⑦.

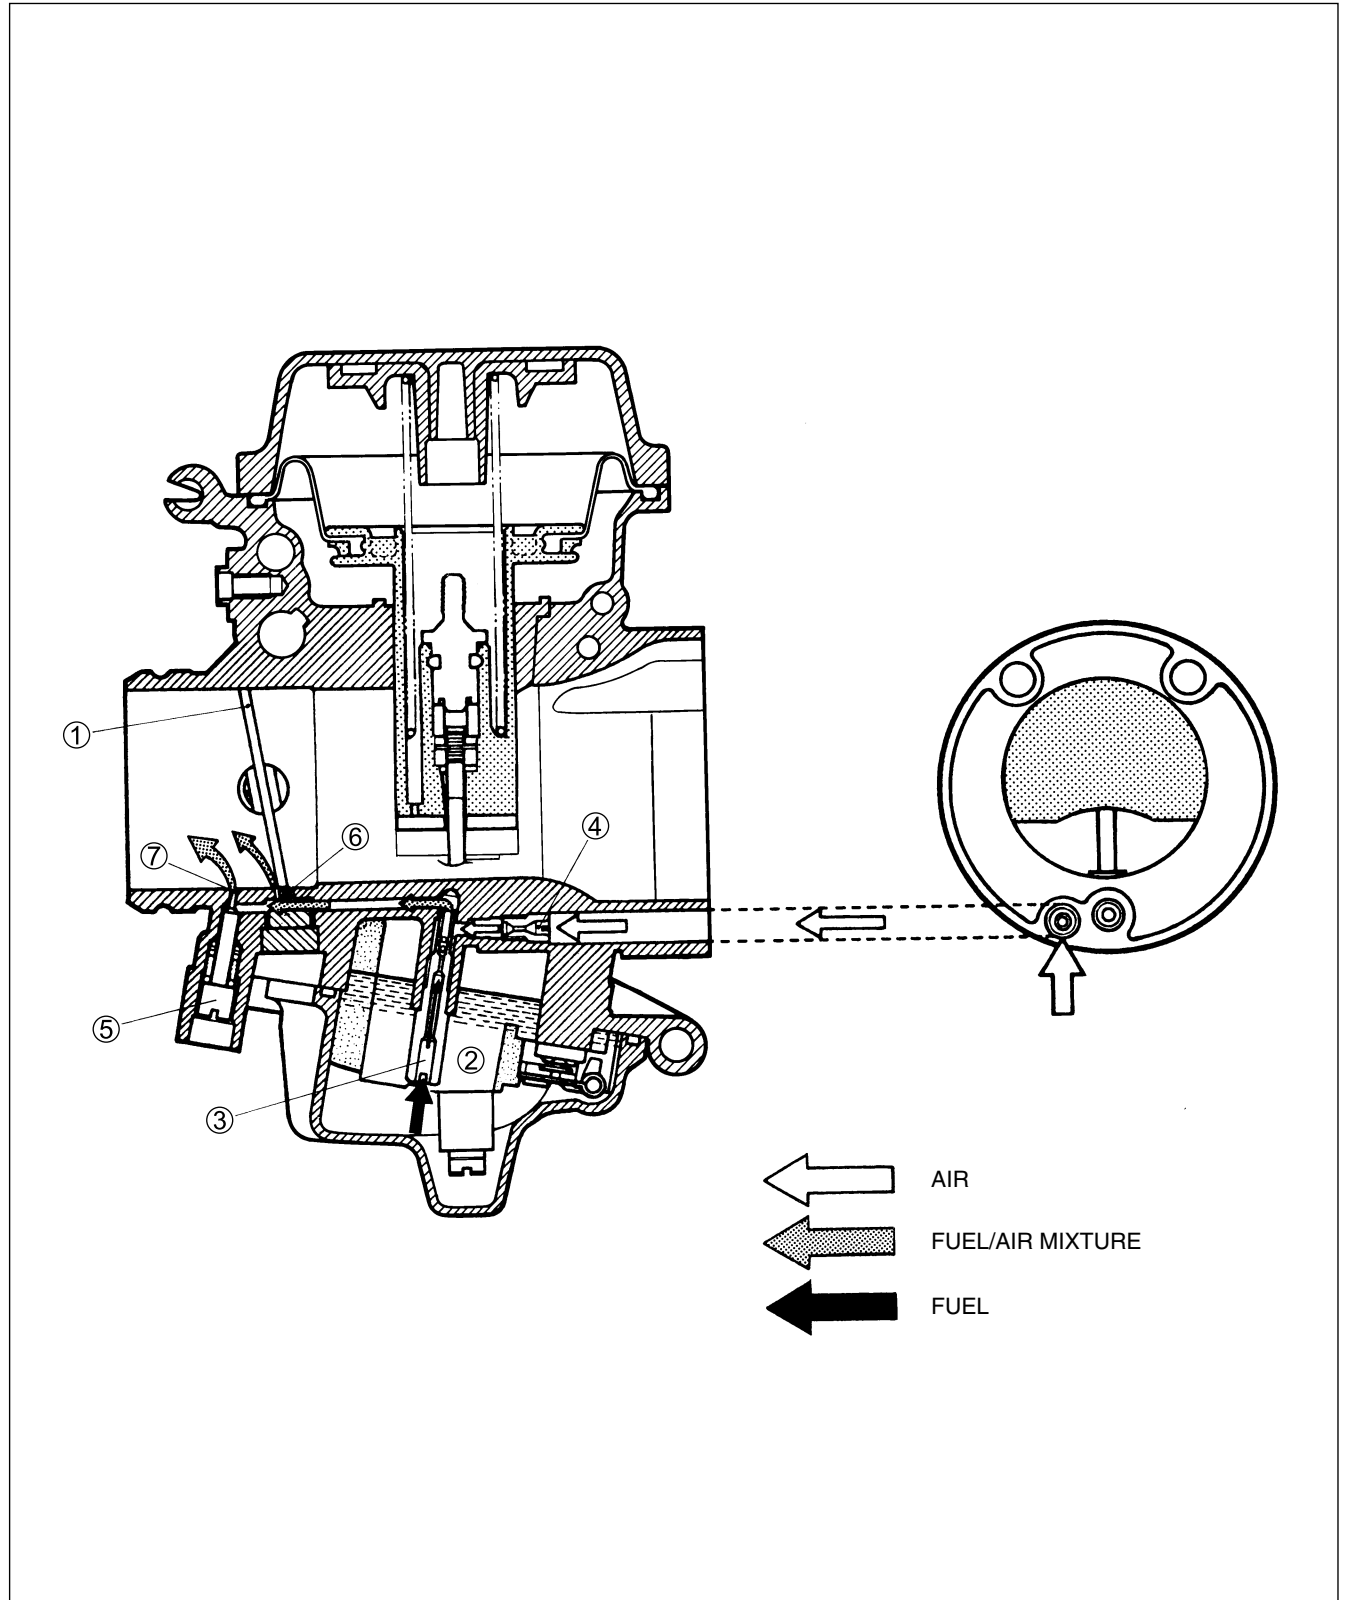


MAIN SYSTEM

As the throttle valve ① is opened, engine speed rises and negative pressure in the venturi (A) increases. This causes the piston valve ② to move upward.

The fuel in the float chamber ③ is metered by the main jet ④. The metered fuel enters the needle jet ⑤, mixes with the air admitted through the main air jet ⑥ and forms an emulsion.

The emulsified fuel then passes through the clearance between the needle jet ⑤ and jet needle ⑦ and is discharged into the venturi (A), where it meets the main air stream being drawn by the engine.

Mixture proportioning is accomplished in the needle jet ⑤. The clearance through which the emulsified fuel must flow ultimately depends on throttle position.

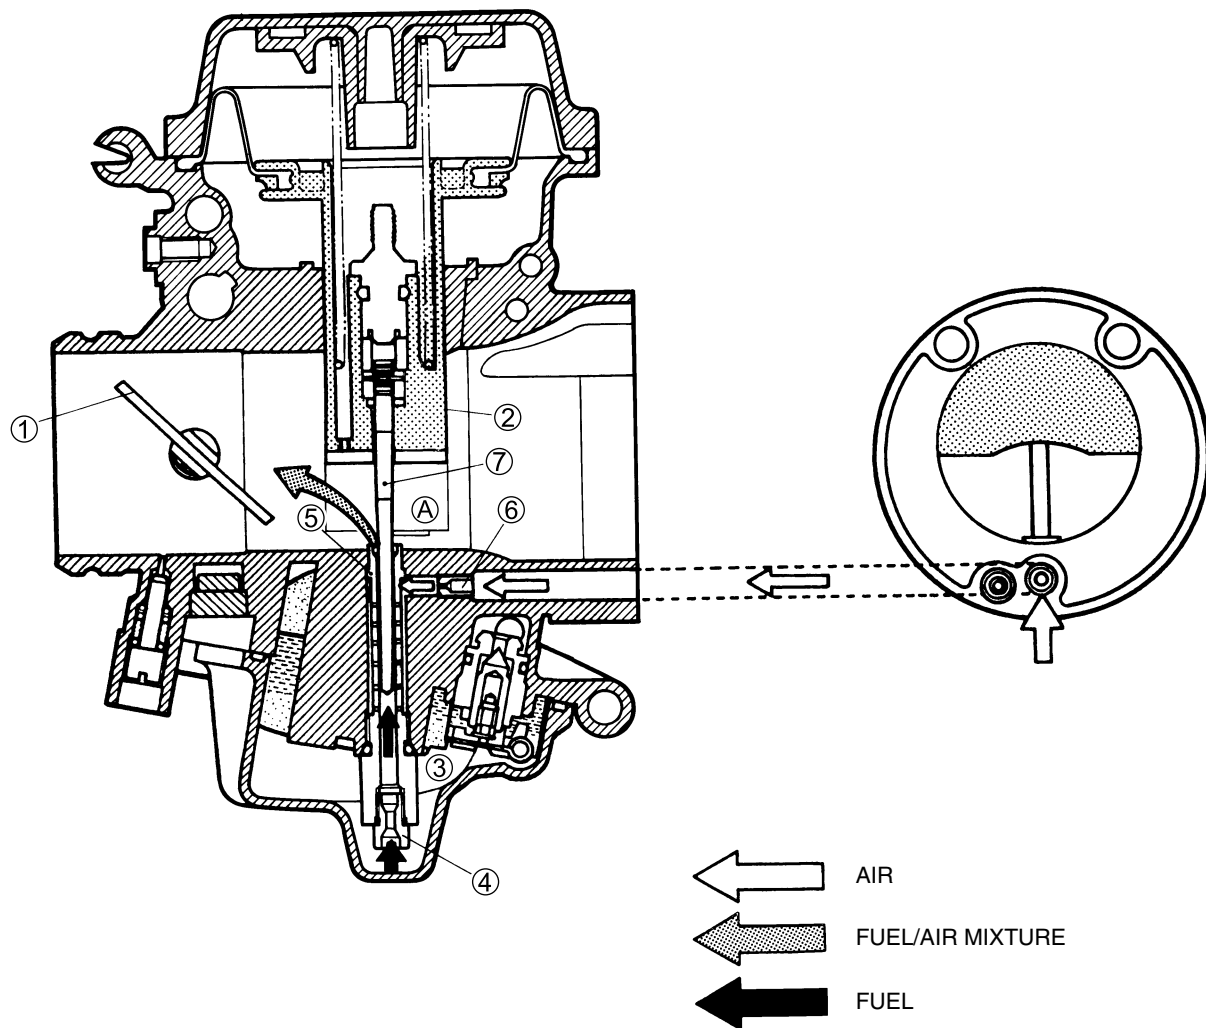


STARTER (ENRICHER) SYSTEM

Pulling the starter (enricher) plunger causes fuel to be drawn into the starter circuit from the float chamber ①. The starter jet ② meters this fuel. The fuel then flows into the fuel pipe ③ and mixes with the air coming from the float chamber ①. The mixture, rich in fuel, reaches the starter plunger ④ and mixes again with the air coming through a passage extending from behind the diaphragm.

The two successive mixtures of the fuel with the air provide the proper air/fuel mixture for starting. This occurs when the mixture is sprayed through the starter outlet port ⑤ into the main bore.

NOTE:

A starter (enricher) system is operated almost the same way as a choke.

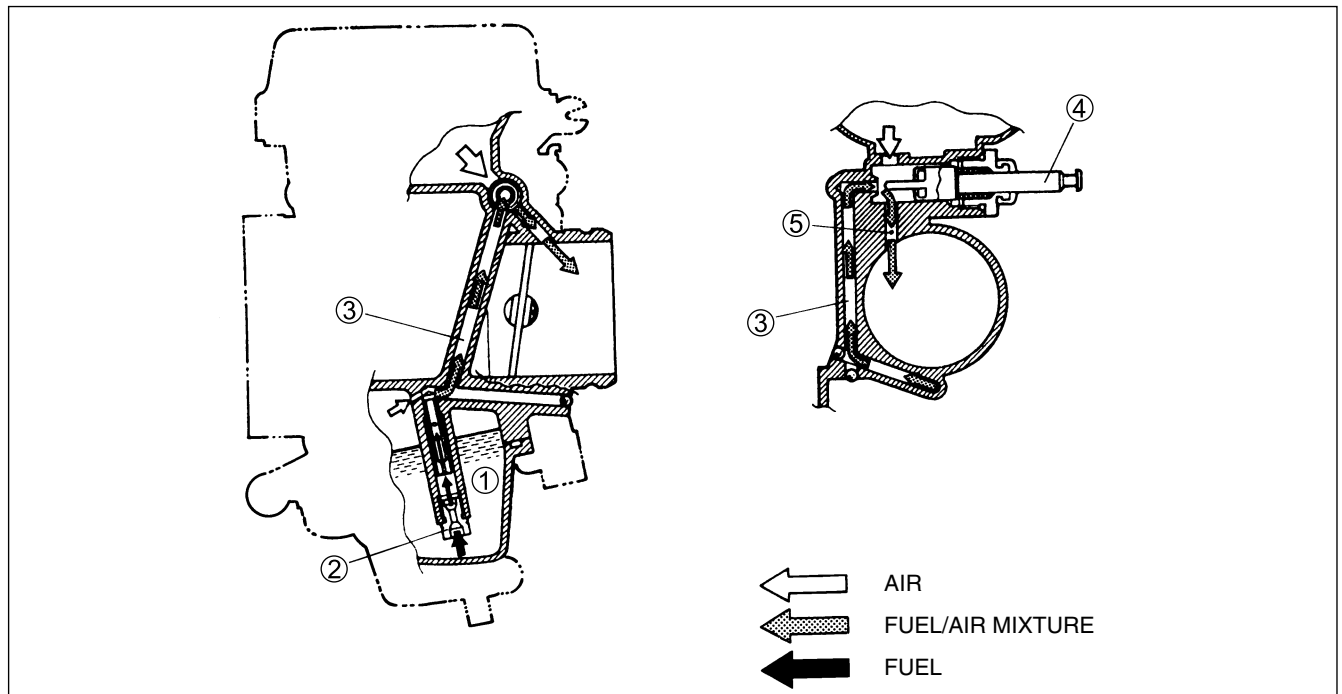


FLOAT SYSTEM

The float ① and needle valve ② work in conjunction with one another. As the float ① moves up and down, so does the needle valve ②.

When there is a high fuel level in the float chamber ③, the float ① rises and the needle valve ② pushes up against the valve seat. When this occurs, no fuel enters the float chamber ③.


As the fuel level falls, the float ① lowers and the needle valve ② unseats itself; admitting fuel into the float chamber ③.

In this manner, the needle valve ② admits and shuts off fuel to maintain the appropriate fuel level inside the float chamber ③.

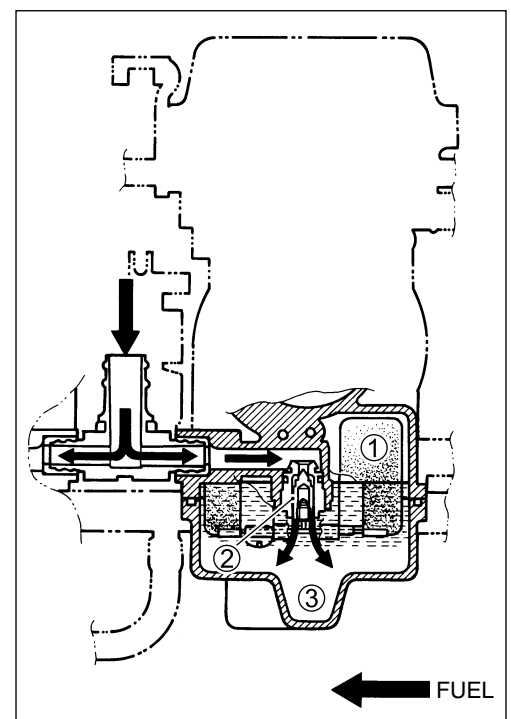


REMOVAL


- Remove the fuel tank. (🔧 4-3)
- Remove the frame side covers. (🔧 5-6)
- Remove the fuel tank bracket bolts ①.
- Remove the air cleaner box mounting bolts ②.

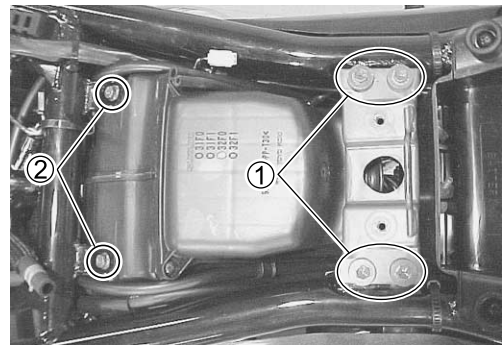


- Disconnect the throttle position sensor coupler ③.

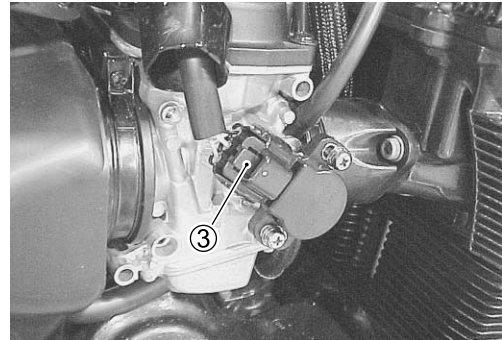

- Loosen the respective carburetor clamp screws.
- Slightly move the air cleaner box ④ back.

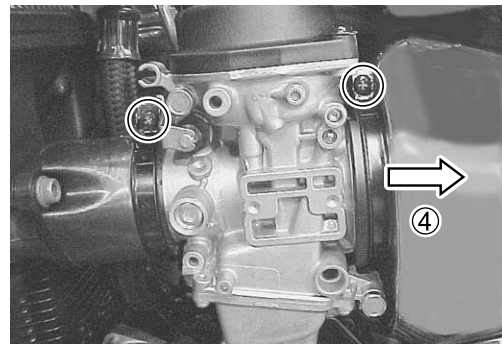

- Remove the carburetor assembly by disconnecting the starter cable ⑤ and throttle cables ⑥.

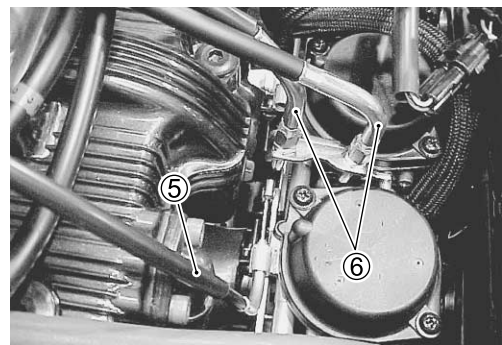

DISASSEMBLY

Before disassembly, prepare a clean and well lit work place where carburetor components can be laid out neatly and will not get lost. Study the service manual carburetor diagram and familiarize yourself with component locations and the different fuel circuits and their routing through the carburetor. (☞ 4-10, -11, -12 and -13)

▲ CAUTION





The throttle position sensor is preset at the factory. Prior to disassembly, mark the throttle position sensor's original position with paint or a scribe for accurate reinstallation.

Avoid removing the throttle position sensor from the carburetor body unless absolutely necessary.

- Disconnect the fuel hose ①.
- Disconnect the vacuum hose ② (for fuel valve).
- Disconnect the air vent hoses ③.

- Remove the starter (enricher) plate ④ by removing the fitting screws.


- Remove the upper and lower carburetor set shafts.
- Separate the carburetor assembly.

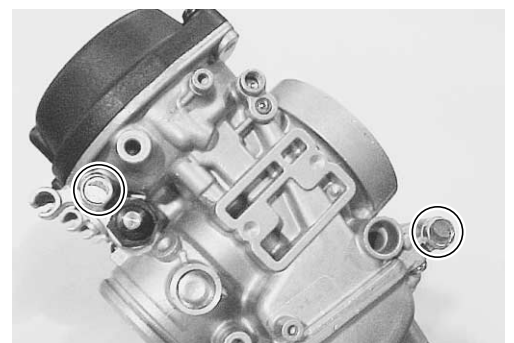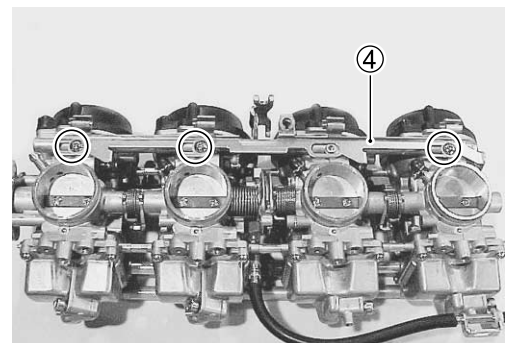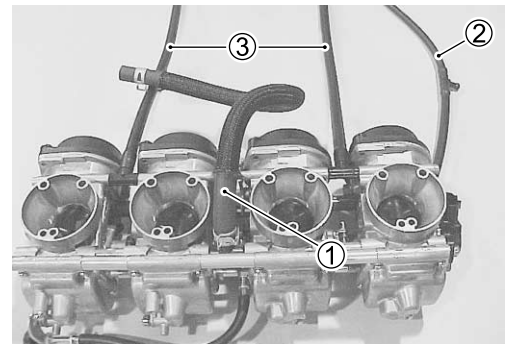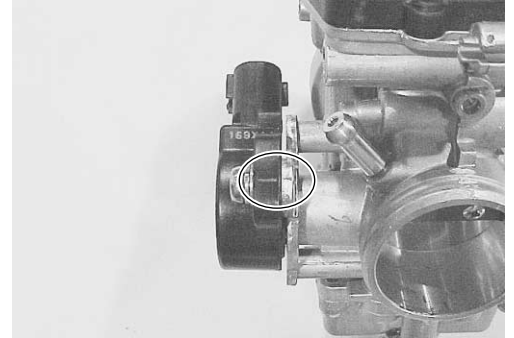


- Remove the top cap ①.

▲ CAUTION


Do not use compressed air on the carburetor body, before removing the diaphragm; this may damage the diaphragm.

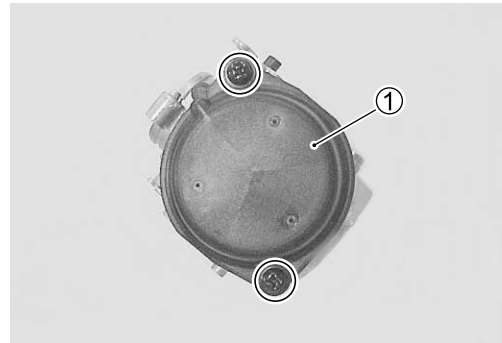

- Remove the spring ② and the piston valve along with its diaphragm ③.
- Remove the O-ring ④.

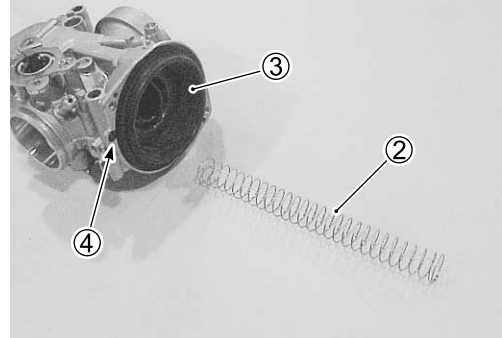


- Remove the jet needle stopper ⑤, spring ⑥, washer ⑦, spacer ⑧ and jet needle ⑨.

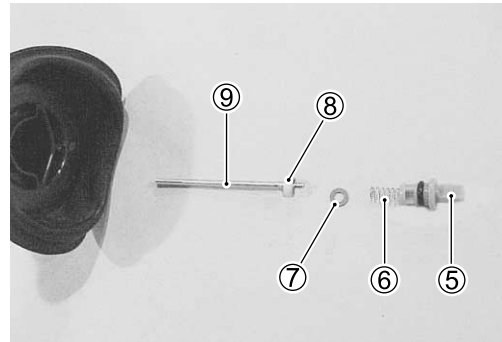

- Remove the float chamber ⑩.


TOOL 09900-09004: Impact driver set

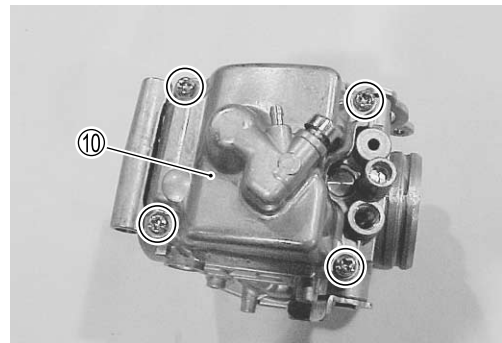


- Remove the O-ring ⑪.

▲ CAUTION

Use a new O-ring to prevent fuel leakage.

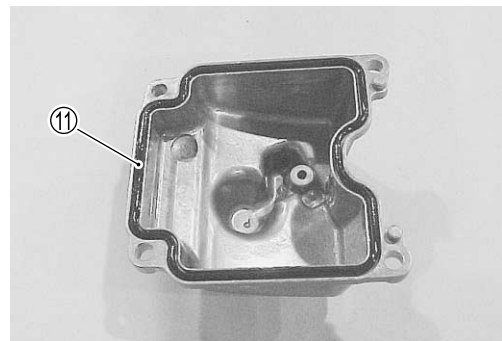


- Remove the float pin ① and then remove the float ② and needle valve ③.

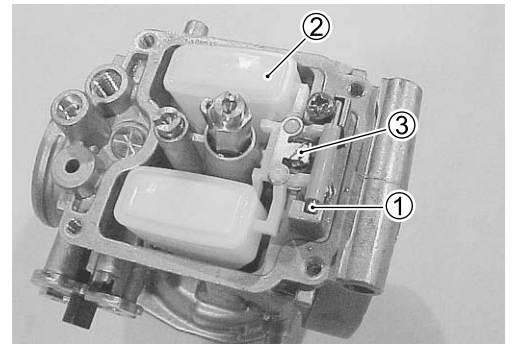

- Remove the following parts.

- ④ Main jet
- ⑤ Needle jet
- ⑥ Pilot jet
- ⑦ Pilot screw
- ⑧ Starter (enricher) jet
- ⑨ Valve seat

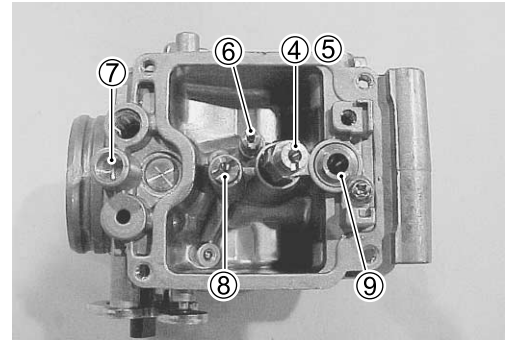

NOTE:


Before removing the pilot screw ⑦, its setting must be determined. Slowly turn the pilot screw clockwise and count the number of turns until it is lightly seated. Make a note of how many turns were made.

When reassembling the pilot screw, you will want to set it to its original position.

▲ CAUTION

Do not use a wire to clean the passages, valve seat and jets.


- Remove the starter (enricher) plunger assembly ⑩.

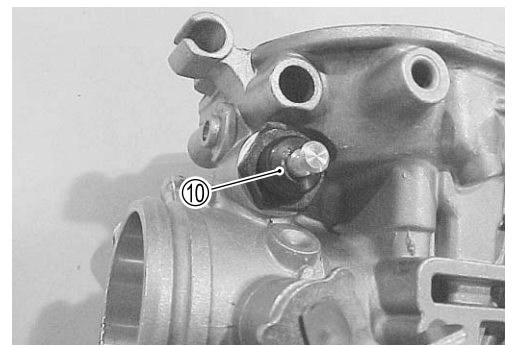


▲ CAUTION

* Do not remove the main air jet ⑫.
 * It is press fitted at the factory and attempting to remove it will cause damage.

- Remove the pilot air jet ⑪.

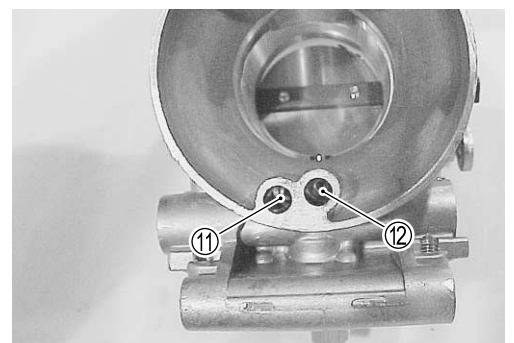

- Remove the throttle valve.

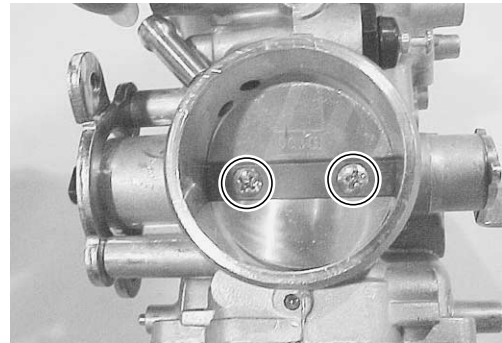


PILOT SCREW REMOVAL (For with plug type)

Because harsh cleaning solvents can damage the O-ring seals in the pilot system, the pilot system components should be removed before cleaning.

- Use a 1/8" size drill bit with a drill-stop to remove the pilot screw plug. Set the drill-stop 6 mm from the end of the bit to prevent drilling into the pilot screw. Carefully drill through the plug.
- Thread a self-tapping sheet metal screw into the plug. Pull on the screw head with pliers to remove the plug. Carefully clean any metal shavings from the area.
- Slowly turn the pilot screw clockwise and count the number of turns until the screw is lightly seated. Make a note of how many turns were made so the screw can be reset correctly after cleaning.
- Remove the pilot screw along with the spring, washer, and O-ring.
- After cleaning, reinstall the pilot screw to the original setting by turning the screw in until it lightly seats, and then backing it out the same number of turns counted during disassembly.
- Install a new plug by tapping it into place with a punch.

- ① Drill-stop
- ② Plug
- ③ Pilot screw
- ④ Carburetor body

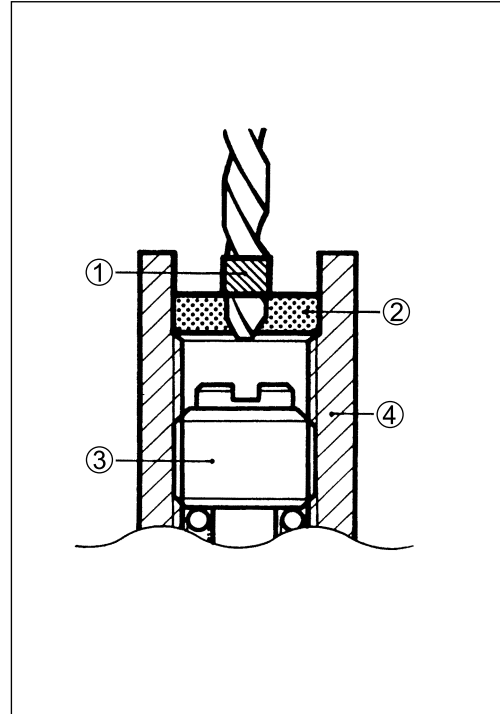

CARBURETOR CLEANING

⚠ WARNING

Some carburetor cleaning chemicals, especially dip-type soaking solutions, are very corrosive and must be handled carefully. Always follow the chemical manufacturer's instructions on proper use, handling and storage.

- Clean all jets with a spray-type carburetor cleaner and dry them using compressed air.
- Clean all circuits of the carburetor thoroughly – not just the perceived problem area. Clean the circuits in the carburetor body with a spray-type cleaner and allow each circuit to soak, if necessary, to loosen dirt and varnish. Blow the body dry using compressed air.

⚠ CAUTION

Do not use a wire to clean the jets or passageways. A wire can damage the jets and passageways. If the components cannot be cleaned with a spray cleaner it may be necessary to use a dip-type cleaning solution and allow them to soak. Always follow the chemical manufacturer's instructions for proper use and cleaning of the carburetor components.

- After cleaning, reassemble the carburetor with new seals and gaskets.

CARBURETOR HEATER INSPECTION

(Only for E-02)

- Remove the carburetor assembly. (↪ 4-14)
- Disconnect the carburetor heater terminal lead wires.
- Connect the positive ⊕ terminal of a 12V battery to the terminal ① of the carburetor heater and the battery negative ⊖ terminal to the terminal ②.
- Check that the heater section Ⓐ is heated in 5 minutes after the battery has been connected. If the carburetor heater is not heated up, replace the carburetor heater with a new one.

⚠ WARNING

Do not touch the carburetor heater directly to prevent burn.

THERMO-SWITCH INSPECTION




(Only for E-02)

- Cool the thermo-switch ① with ice water and check for continuity.

TOOL 09900-25008: Multi-circuit tester

DATA

Thermo-switch continuity	Below 8 – 14°C	Yes
	Above 15 – 21°C	No

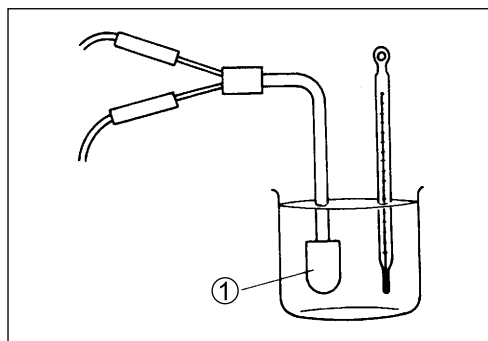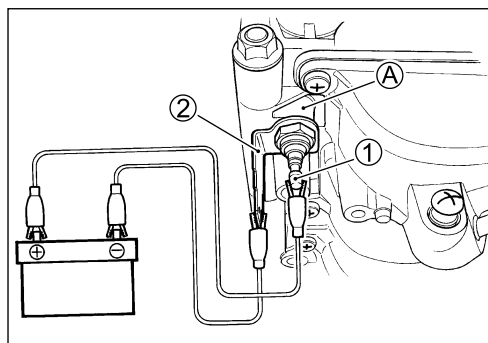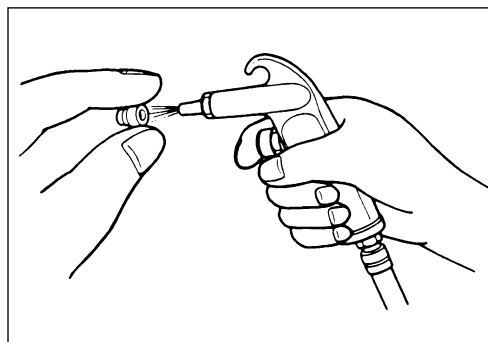


CARBURETOR INSPECTION

Check the following items for any damage or clogging.

- * Pilot jet
- * Main jet
- * Main air jet
- * Pilot air jet
- * Needle jet air bleeding hole
- * Float
- * Needle valve
- * Jet needle
- * Valve seat
- * Piston valve
- * Starter (enricher) jet
- * Gasket and O-ring
- * Throttle shaft oil seal
- * Diaphragm
- * Pilot outlet and by-pass ports

NEEDLE VALVE INSPECTION

If foreign matter is caught between the valve seat and the needle valve, the gasoline will continue flowing and overflow. If the valve seat and needle valve are worn beyond the permissible limits, similar trouble will occur. Conversely, if the needle valve sticks, the gasoline will not flow into the float chamber. Clean the float chamber and float parts with gasoline. If the needle valve is worn, as shown in the illustration, replace it along with a new valve seat. Clean the fuel passage of the mixing chamber using compressed air.

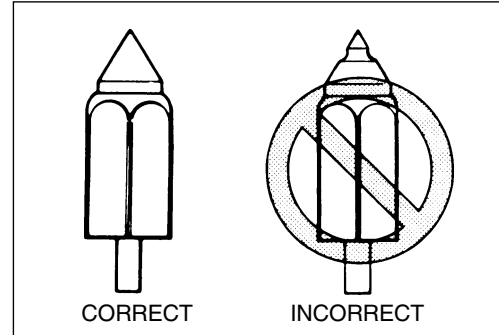


FLOAT HEIGHT ADJUSTMENT

To check the float height, turn the carburetor upside down. Measure the float height (A) while the float arm is just contacting the needle valve using vernier calipers. Bend the tongue (1) as necessary to bring the float height (A) to the specified level.

TOOL 09900-20102: Vernier calipers

DATA Float height (A): 13.0 ± 0.5 mm (0.51 ± 0.04 in)

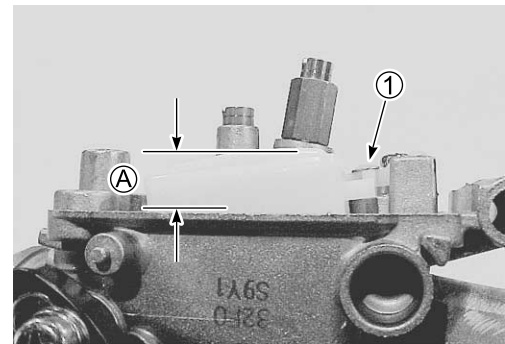

THROTTLE POSITION SENSOR INSPECTION


Measure the resistance between the terminals as shown.

TOOL 09900-25008: Multi circuit tester set

DATA Throttle position sensor resistance: 3.5 – 6.5 k Ω

NOTE:

When performing this test, it is not necessary to remove the throttle position sensor.

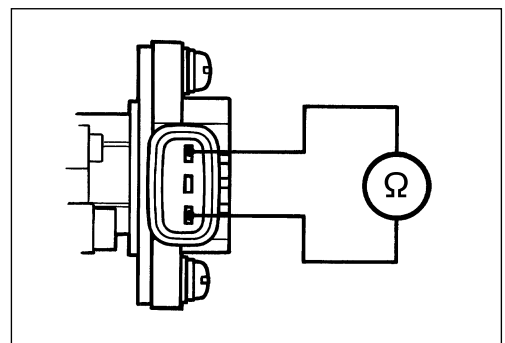


REASSEMBLY

Reassemble the carburetors in the reverse order of disassembly. Pay attention to the following points.

THROTTLE VALVE

- Turn the throttle stop screw and throttle valve synchronizing screw until the throttle valve's bottom end ① is aligned with the foremost by-pass port ② as shown.
- Apply a small quantity of THREAD LOCK "1342" to the throttle valve mounting screws and tighten them.

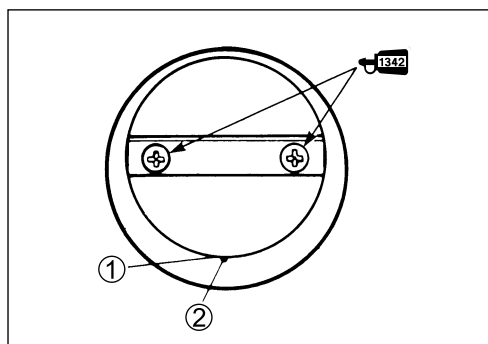

 99000-32050: THREAD LOCK "1342"

▲ CAUTION

Face the stamped side of the throttle valve out.

O-RING

- Apply thin coat of the grease "A" to each new O-ring.

 99000-25010: SUZUKI SUPER GREASE "A"




▲ CAUTION

Replace the O-ring with a new one.

- Install the new O-ring to its groove properly.

▲ CAUTION


Replace the O-ring with a new one.

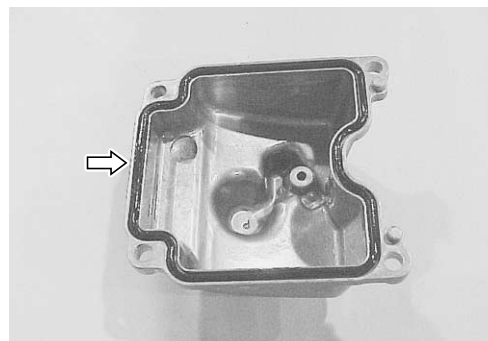

- Before installing the top cap, install the new O-ring.

▲ CAUTION

Replace the O-ring with a new one.

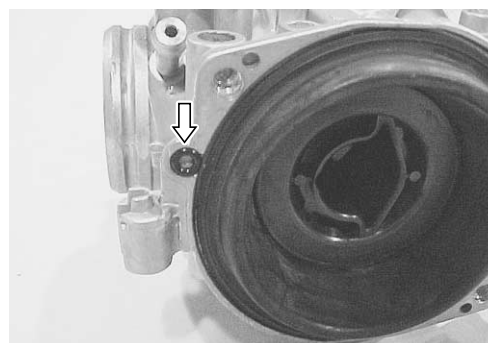


PILOT SCREW

- After cleaning, reinstall the pilot screw to the original setting by turning the screw in until it lightly seats, and then backing it out the same number of turns counted during disassembly.



▲ CAUTION

Replace the O-ring with a new one.

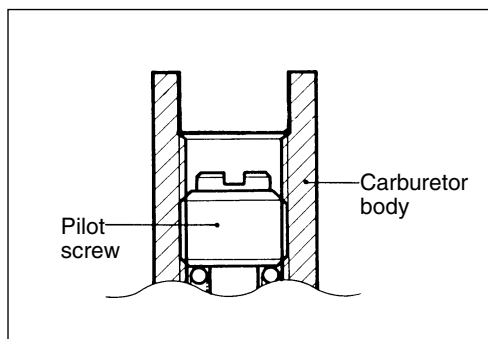

CARBURETOR ENGAGEMENT

- Position the throttle valve control lever ① between the throttle valve synchronizing screw and spring as shown.

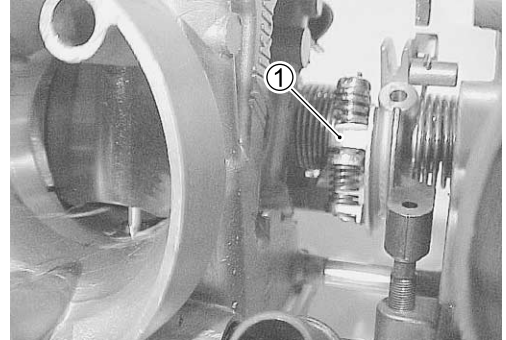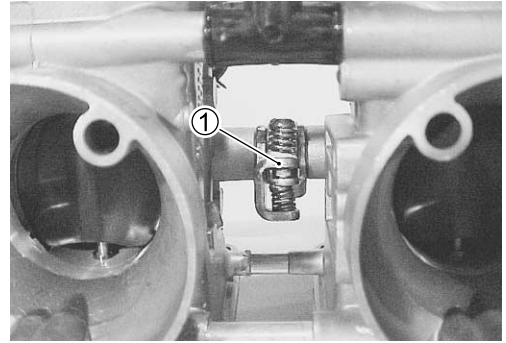


- Apply thin coat of the grease “A” to the fuel joint pipe O-rings.

99000-25010: SUZUKI SUPER GREASE “A”


CAUTION

Replace the O-ring with a new one.

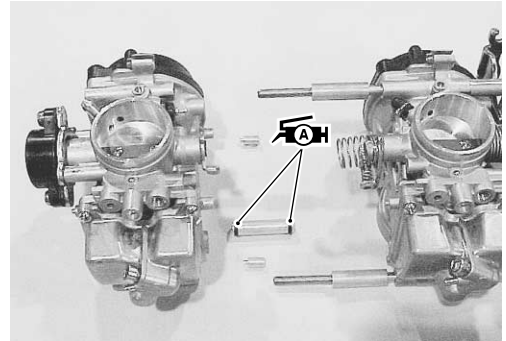

- Place the carburetor assembly on the surface plate (engine side downward) and tighten the upper and lower carburetor set shafts to the specified torque.

Carburetor set shaft: 5.0 N·m (0.5 kgf·m, 1.5 lb-ft)

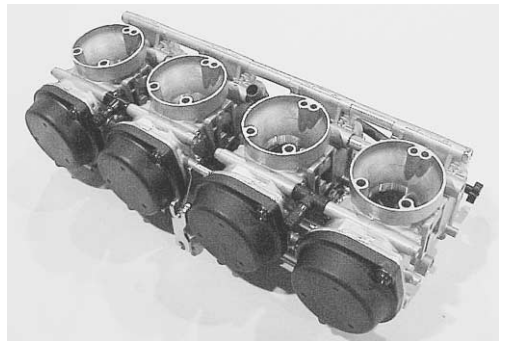


CARBURETOR HEATER

- Apply thermo-grease to the threads and tighten the carburetor heater. (Only for E-02)

99000-59029: THERMO-GREASE

Carburetor heater: 3 N·m (0.3 kgf·m, 2 lb-ft)

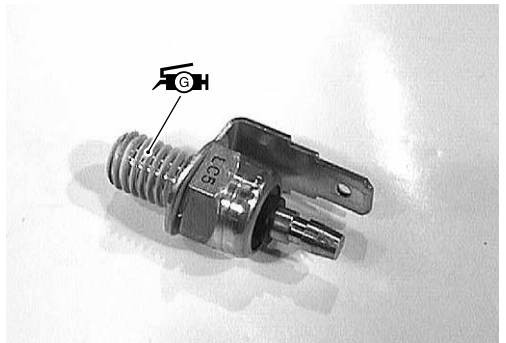

THROTTLE POSITION SENSOR POSITIONING

Install the throttle position sensor as described below.

- Measure the resistance (Ω_1) between the throttle position sensor terminals as shown.

TOOL 09900-25008: Multi circuit tester set

DATA Throttle position sensor resistance (Ω_1): 3.5 – 6.5 k Ω

- Measure the resistance (Ω_2) between the throttle position sensor terminals as shown.
- Fully open the throttle valve with the throttle lever.
- Under above condition, position the throttle position sensor until resistance (Ω_2) is 2.66 – 4.94 k Ω .
- When the resistance (Ω_2) is within specification, tighten the throttle position sensor mounting screws.



DATA Throttle position sensor resistance (Ω_2): 2.66 – 4.94 k Ω

U Throttle position sensor screw:
2.0 N·m (0.2 kgf·m, 1.5 lb-ft)

NOTE:

The throttle position sensor correct position to have the resistance (Ω_2) as 76% of the resistance (Ω_1).

For example: When (Ω_1) is 5 k Ω , (Ω_2) should be 3.8 k Ω

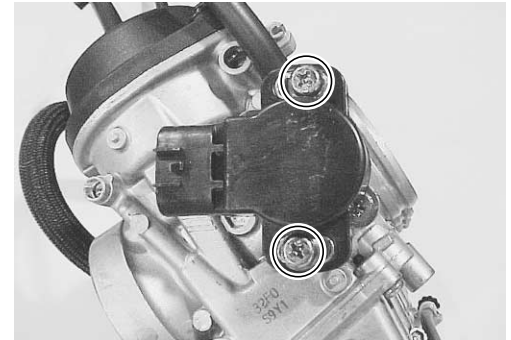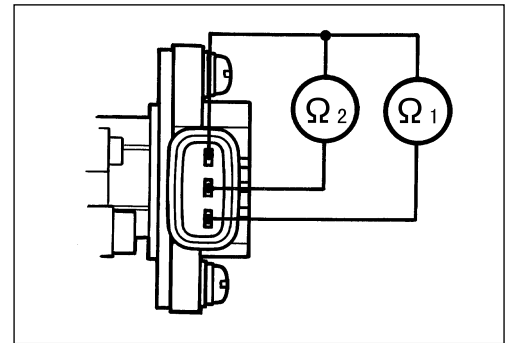


REMountING

Remount the carburetor assembly in the reverse order of removal. Pay attention to the following points.

CARBURETOR CLAMPS

Position the carburetor clamps as shown.


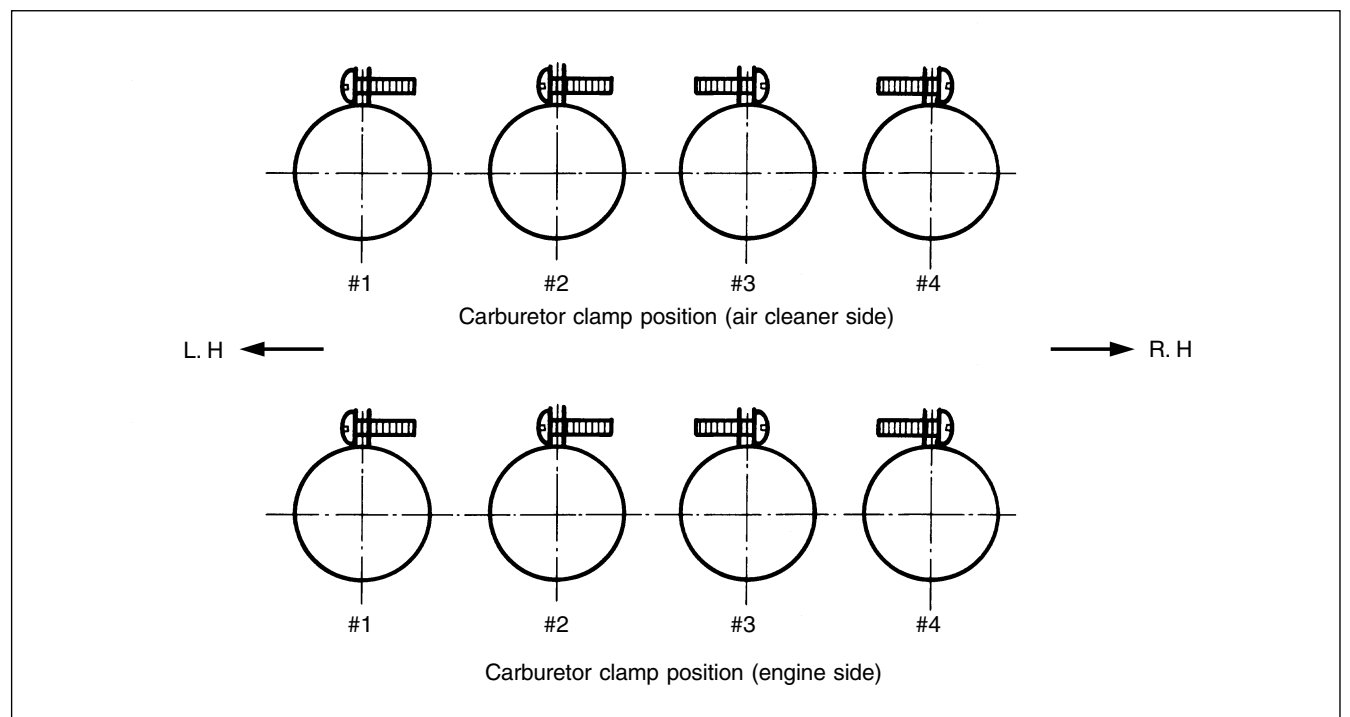


THROTTLE CABLE ADJUSTMENT (MAJOR ADJUSTMENT)

NOTE:

Minor adjustment can be made by the throttle grip side adjuster. (☞ 2-11)

- Remove the fuel tank. (☞ 4-3)
- Loosen the lock nut ① of the throttle returning cable.
- Turn the returning cable adjuster ② to obtain proper cable play.
- Loosen the lock nut ③ of the throttle pulling cable.
- Turn the pulling cable adjuster ④ in or out until the throttle cable play A of 2.0 – 4.0 mm (0.08 – 0.16 in) at the throttle grip is obtained.
- Tighten the lock nut ③ securely while holding the adjuster ④.
- While holding the throttle grip at the fully closed position, slowly turn the returning cable adjuster ② to obtain a cable slack B of 1.0 mm (0.04 in).
- Tighten the lock nut ① securely.
- After all of the work has been completed, install the carburetor

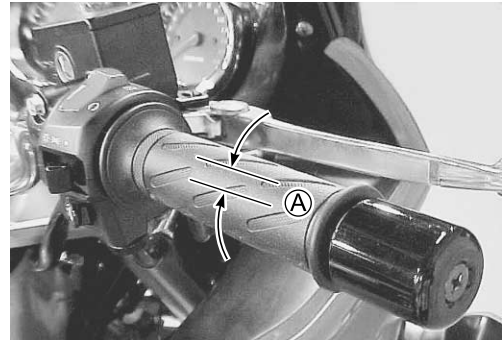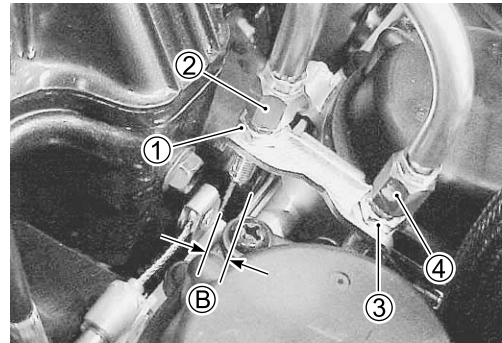

assembly onto the engine and perform the following adjustments.

- * Engine idle speed ☞ 2-11
- * Throttle cable play ☞ 2-11
- * Carburetor synchronization ☞ 4-24

CARBURETOR SYNCHRONIZATION


Check and adjust the carburetor synchronization among the four carburetors as follows.

NOTE:

Remove the fuel tank and connect a remote fuel bottle to the fuel hose.


CALIBRATING THE CARBURETOR BALANCER

- Disconnect the vacuum hose ① (for fuel valve and PAIR valve) from carburetor #4, and install a cap of the proper size to the #4 carburetor's vacuum inlet.
- Start the engine and let it run at idle until it is warmed up.
- Stop the engine.

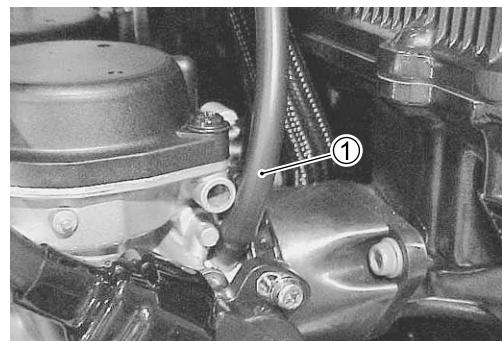


- Remove the vacuum inlet cap from the carburetor (for cylinders #1 or #4).
- Connect one of the carburetor balancer's rubber hoses to this inlet.

TOOL 09913-13121: Carburetor balancer

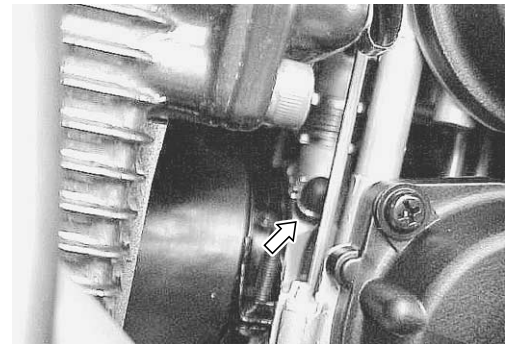


NOTE:


If it is difficult to connect the carburetor balancer's rubber hoses to the vacuum inlets, slightly move the carburetor assembly backward after loosening the carburetor clamps.

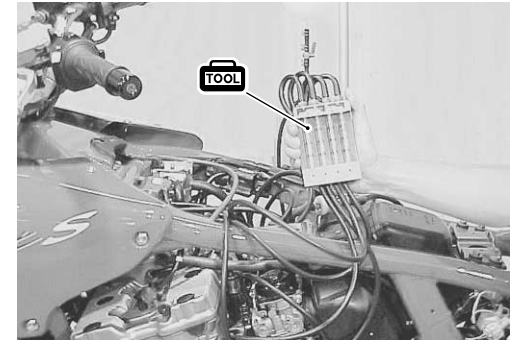


- Start the engine and let it run at 1 750 r/min. Adjust the engine speed by turning the throttle stop screw.

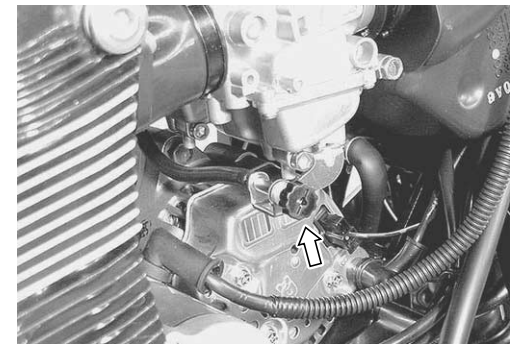

- Turn the air screw ① of the carburetor balancer so that the vacuum pressure causes the steel ball ② to rise to the center line ③ of the tube.

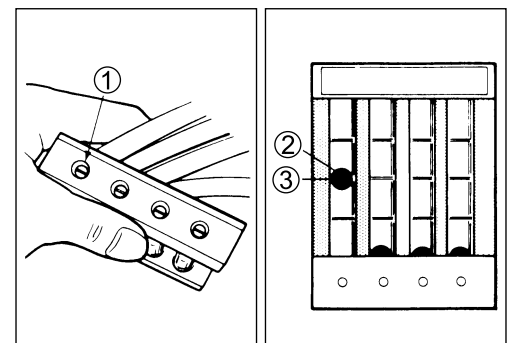



- After making sure that the steel ball remains at the center line, disconnect the hose from the vacuum inlet and connect the next hose to the vacuum inlet.
- Turn the air screw for this tube until the steel ball ④ is at the center line of its respective tube.
- Repeat the above procedure on the third and fourth hoses. The carburetor balancer is now ready to be used to synchronize the carburetors.

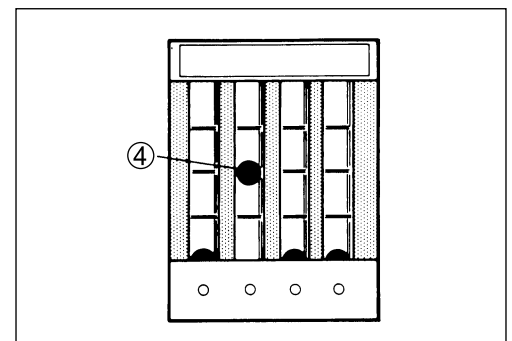



CARBURETOR SYNCHRONIZATION

Remove all of the vacuum inlet caps, before synchronizing the carburetors. Connect the carburetor balancer hoses to these vacuum inlets and then adjust the carburetors as follows.

- Start the engine and keep it running at 1 750 r/min.
Observe the tachometer reading.
- When the steel balls in tubes #1, #2, #3 and #4 are at the same level, the carburetor is correctly adjusted.

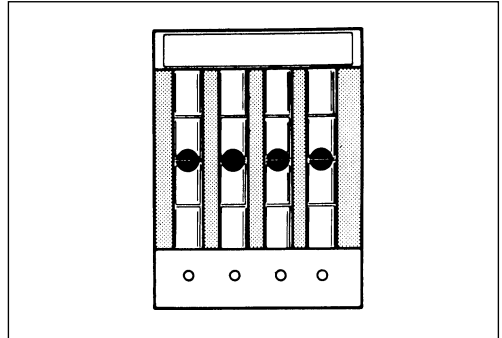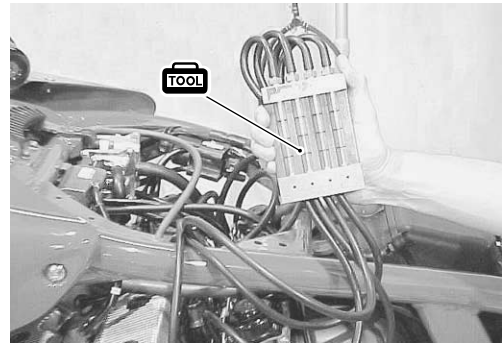

- If the steel balls are not at the same level, adjust the throttle valve synchronizing screws ①, ② and ③.
Adjusting order is as follows.
① → ② → ③

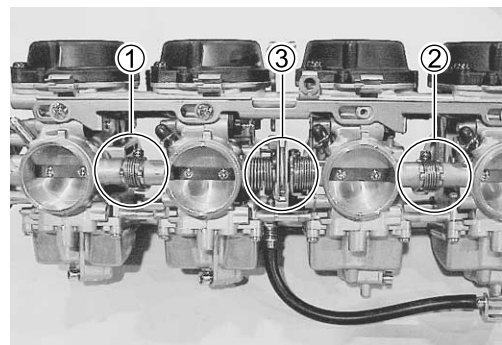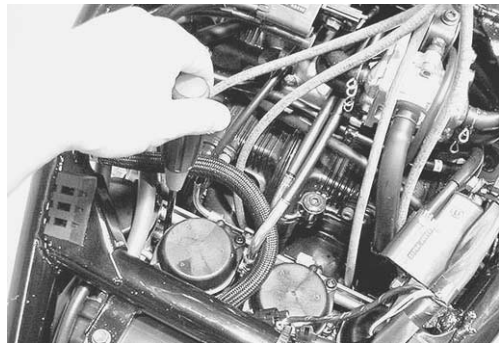

- After balancing the carburetor, set the engine speed by turning the throttle stop screw.
Observe the tachometer reading.

DATA Engine speed: 1 200 ± 100 r/min




CHASSIS

CONTENTS

EXTERIOR PARTS	5- 2
CONSTRUCTION	5- 2
REMOVAL	5- 3
REMOUNTING	5- 6
FRONT WHEEL	5- 7
CONSTRUCTION	5- 7
REMOVAL	5- 9
INSPECTION AND DISASSEMBLY	5- 9
REASSEMBLY	5-10
REMOUNTING	5-11
FRONT FORK	5-12
CONSTRUCTION	5-12
REMOVAL AND DISASSEMBLY	5-13
INSPECTION	5-16
REASSEMBLY AND REMOUNTING	5-16
STEERING	5-22
CONSTRUCTION	5-22
REMOVAL AND DISASSEMBLY	5-22
INSPECTION AND DISASSEMBLY	5-24
REASSEMBLY AND REMOUNTING	5-24
STEERING TENSION ADJUSTMENT	5-27
REAR WHEEL	5-28
CONSTRUCTION	5-28
REMOVAL	5-30
INSPECTION AND DISASSEMBLY	5-31
REASSEMBLY	5-32
REMOUNTING	5-33
REAR SUSPENSION	5-34
CONSTRUCTION	5-34
REMOVAL	5-36
INSPECTION AND DISASSEMBLY	5-37
REASSEMBLY	5-39
REAR SHOCK ABSORBER DISPOSAL	5-40
REMOUNTING	5-41
FINAL INSPECTION AND ADJUSTMENT	5-42
SUSPENSION SETTING	5-42
FRONT BRAKE	5-43
CONSTRUCTION	5-43
BRAKE PAD REPLACEMENT	5-44
BRAKE FLUID REPLACEMENT	5-44
BRAKE CALIPER REMOVAL AND DISASSEMBLY	5-45
BRAKE CALIPER INSPECTION	5-46
BRAKE CALIPER REASSEMBLY AND REMOUNTING	5-46
BRAKE DISC INSPECTION	5-48
BRAKE DISC REMOVAL AND REMOUNTING	5-48
MASTER CYLINDER REMOVAL AND DISASSEMBLY	5-49
MASTER CYLINDER INSPECTION	5-50
MASTER CYLINDER REASSEMBLY AND REMOUNTING	5-51
REAR BRAKE	5-53
CONSTRUCTION	5-53
BRAKE PAD REPLACEMENT	5-54
BRAKE FLUID REPLACEMENT	5-54
BRAKE CALIPER REMOVAL AND DISASSEMBLY	5-55
BRAKE CALIPER INSPECTION	5-56
BRAKE CALIPER REASSEMBLY AND REMOUNTING	5-56
MASTER CYLINDER REMOVAL AND DISASSEMBLY	5-57
MASTER CYLINDER INSPECTION	5-58
MASTER CYLINDER REASSEMBLY AND REMOUNTING	5-59
CLUTCH MASTER CYLINDER	5-60
CONSTRUCTION	5-60
REMOVAL	5-60
DISASSEMBLY AND REASSEMBLY	5-60
TIRES AND WHEELS	5-61
TIRE REMOVAL	5-61
INSPECTION	5-61
TIRE INSTALLATION	5-62

EXTERIOR PARTS CONSTRUCTION

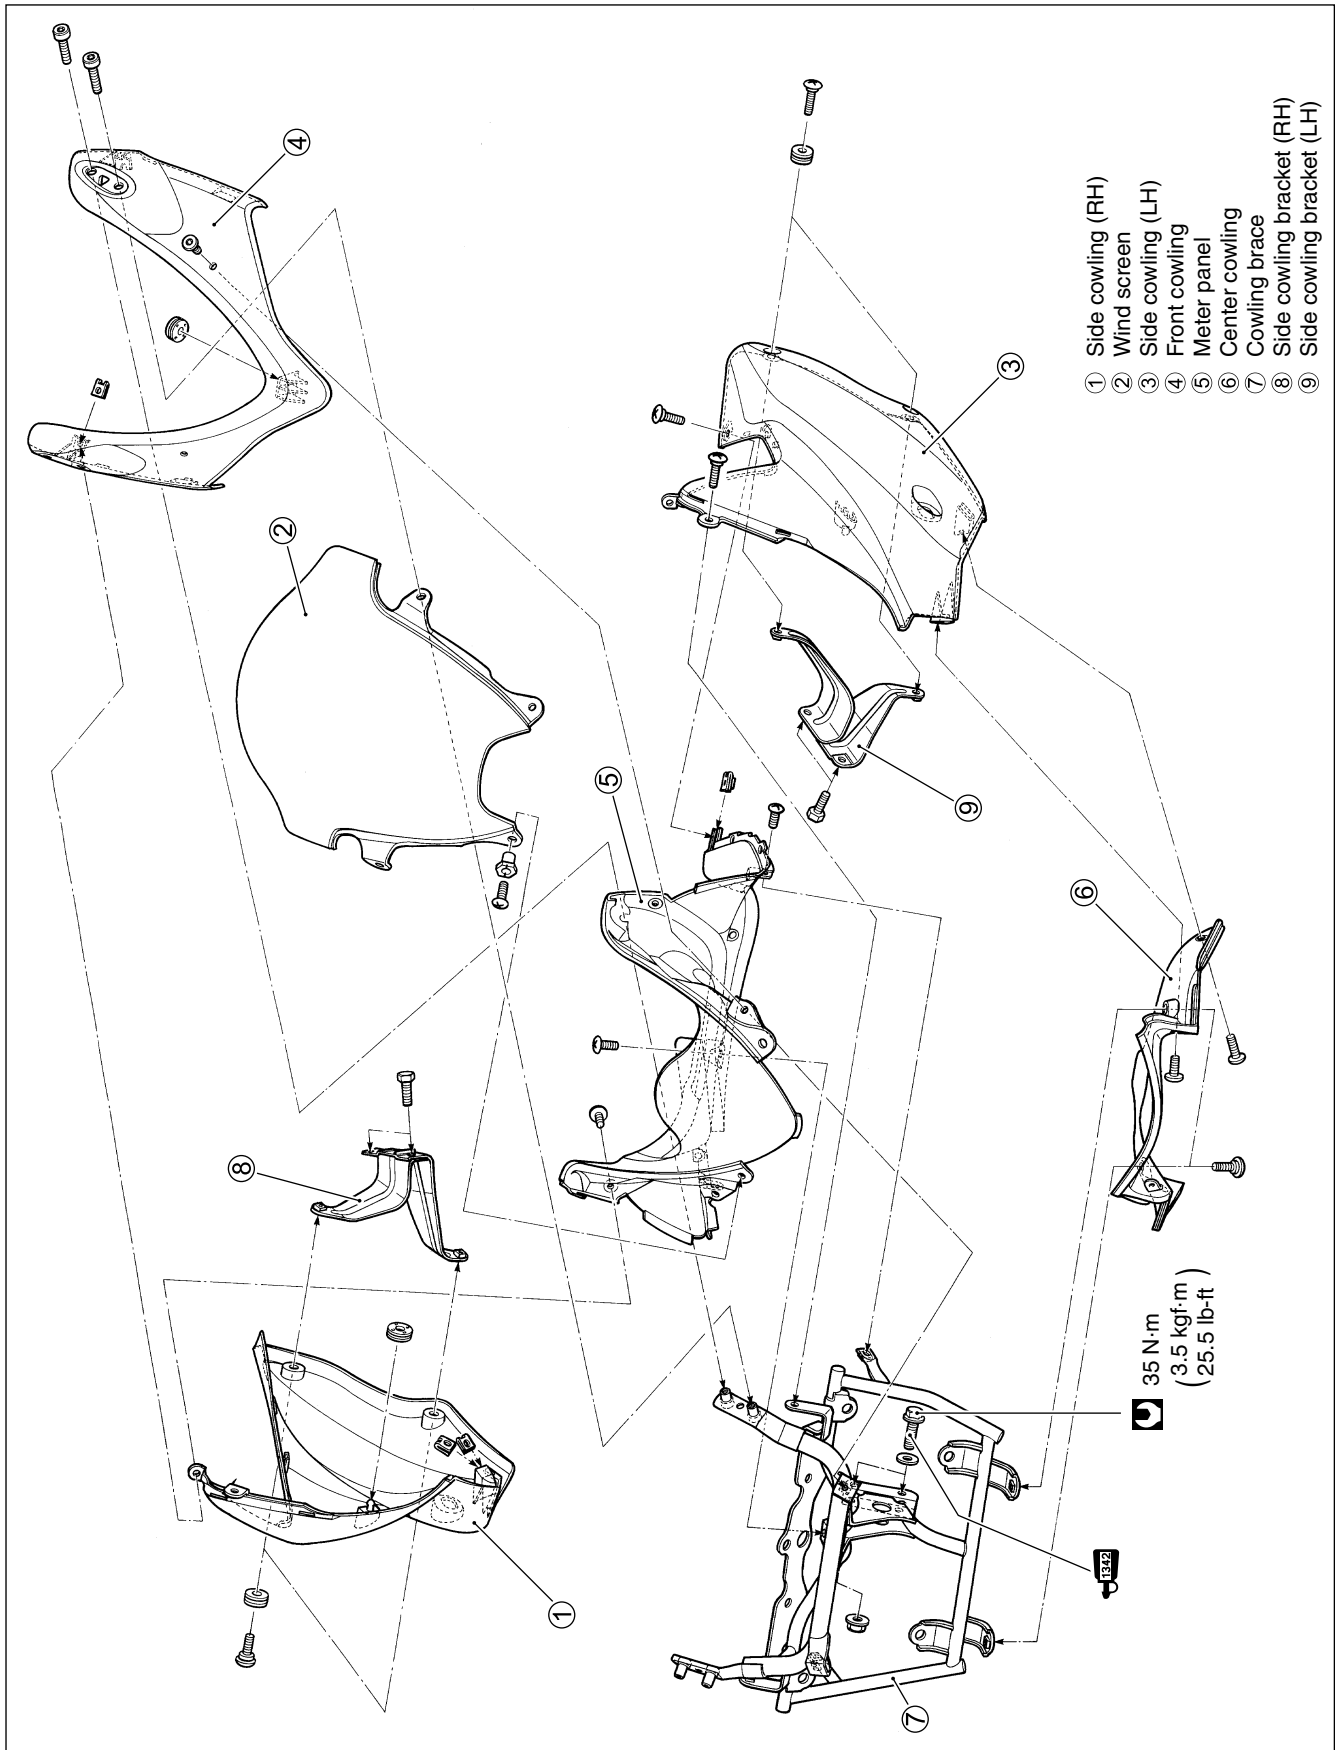


REMOVAL

COWLING AND COWLING BRACE (Except for GSF1200)

- Remove the two screws.




- Remove the rear view mirrors ① and the front cowling ②.

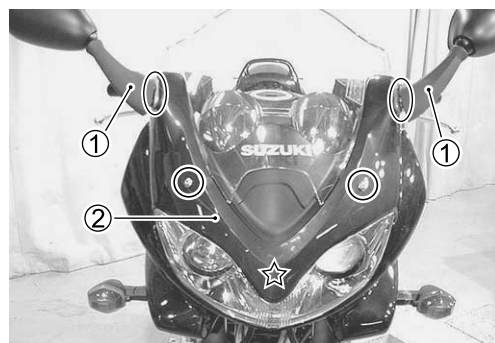

☆ Hooked part

- Remove the center cowling ③.

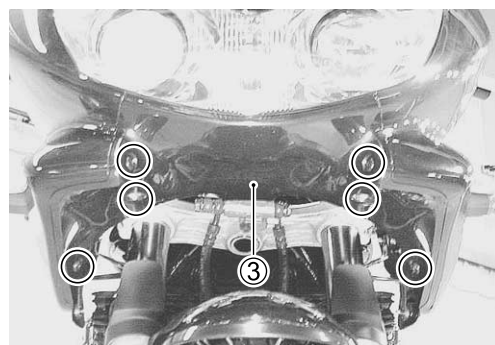


- Remove the side cowlings ④, left and right.
- Disconnect the turn signal lead wire coupler.




☆ Hooked part


- Remove the screen ⑤.

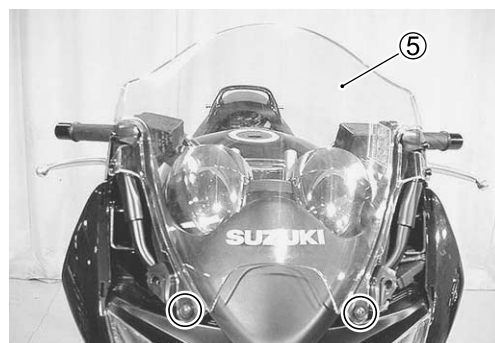


- Disconnect the headlight and position light lead wire couplers.
- Remove the headlight assy ⑥.
(Remove the nuts at both left and right sides.)

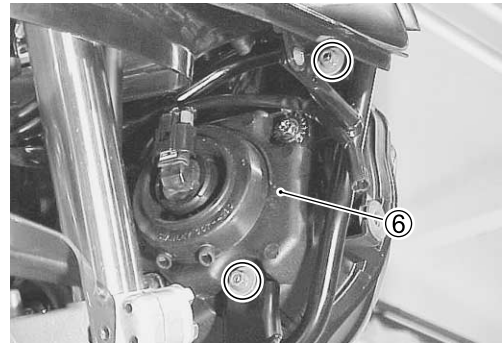


- Remove the combination meter ⑦. (☞6-33)

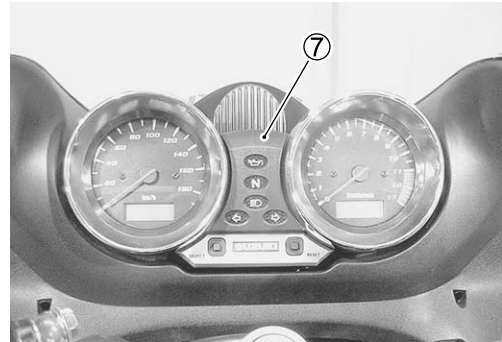

- Remove the three screws and the upper panel ⑧.

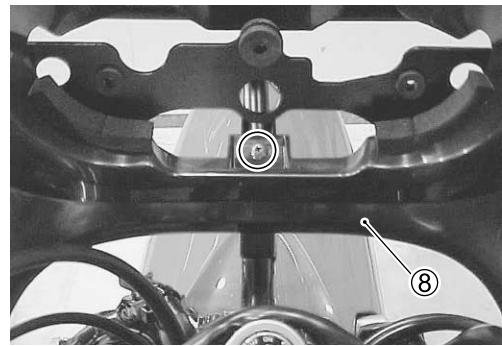


- Remove the wiring harness clamps.
- Remove the fairing brace ⑨.

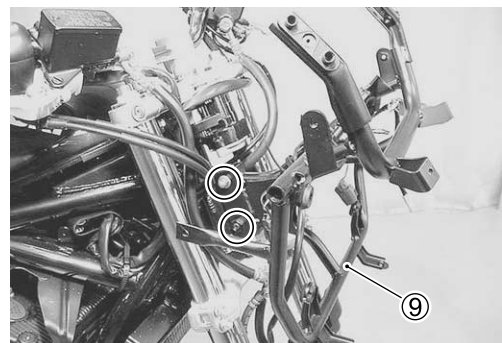


SEAT


- Remove the seat ① by using the ignition key.

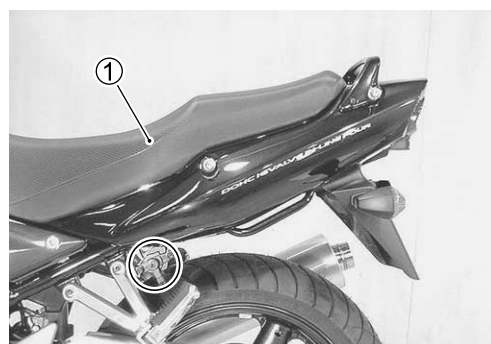**DOCUMENT TRAY**


- Remove the seat. (☞ 5-5)
- Remove the document tray ①.

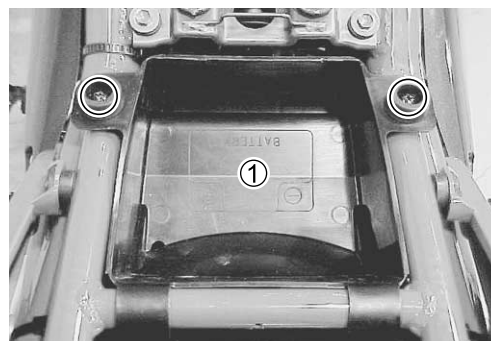**FRAME COVER**


- Remove the seat. (☞ 5-5)
- Remove the passenger grab handle ①.

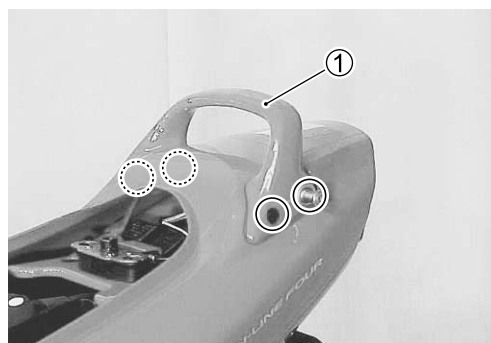

- Disconnect the brake light/taillight coupler ②.

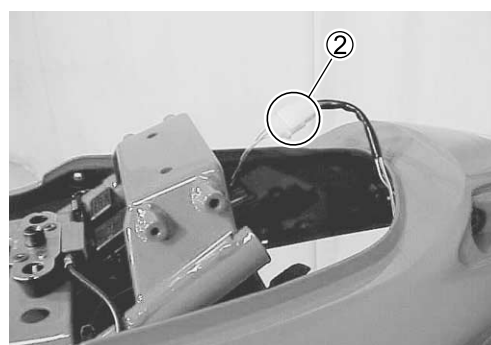


- Remove the frame covers ③, left and right.

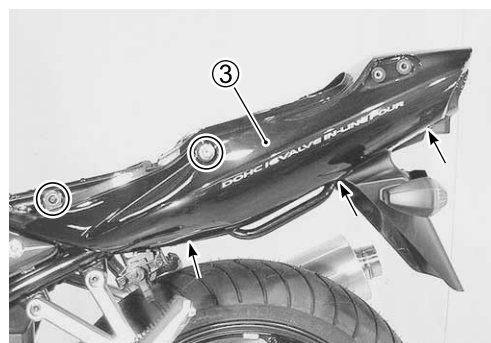

FRAME SIDE COVER

- Remove the frame side covers ①, left and right.

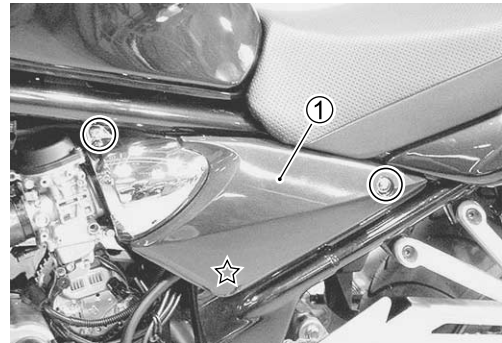



☆ Hooked part

REMOUNTING

Remount the cowling, cowling brace, seat and frame covers in the reverse order of removal.


FRONT WHEEL CONSTRUCTION

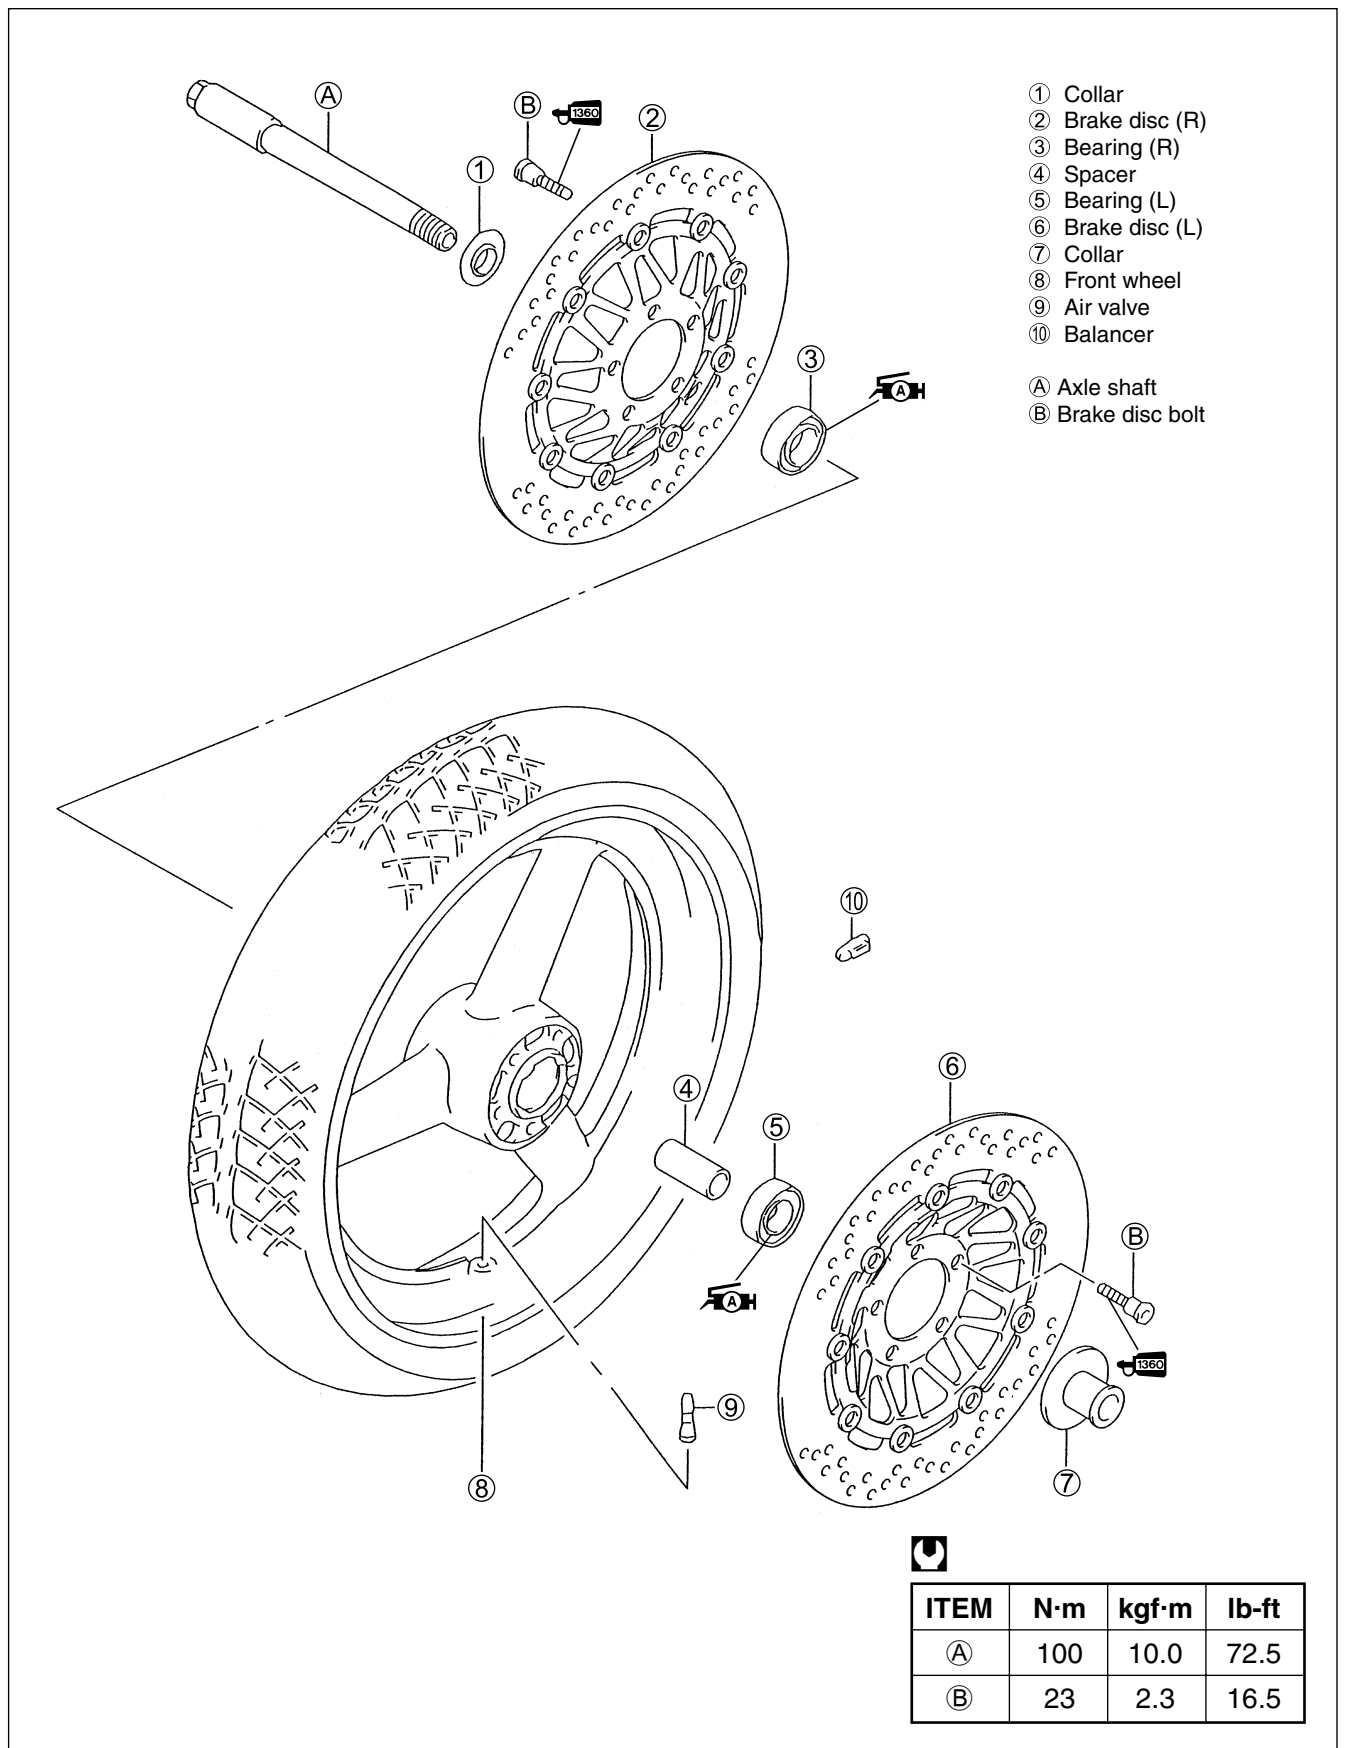

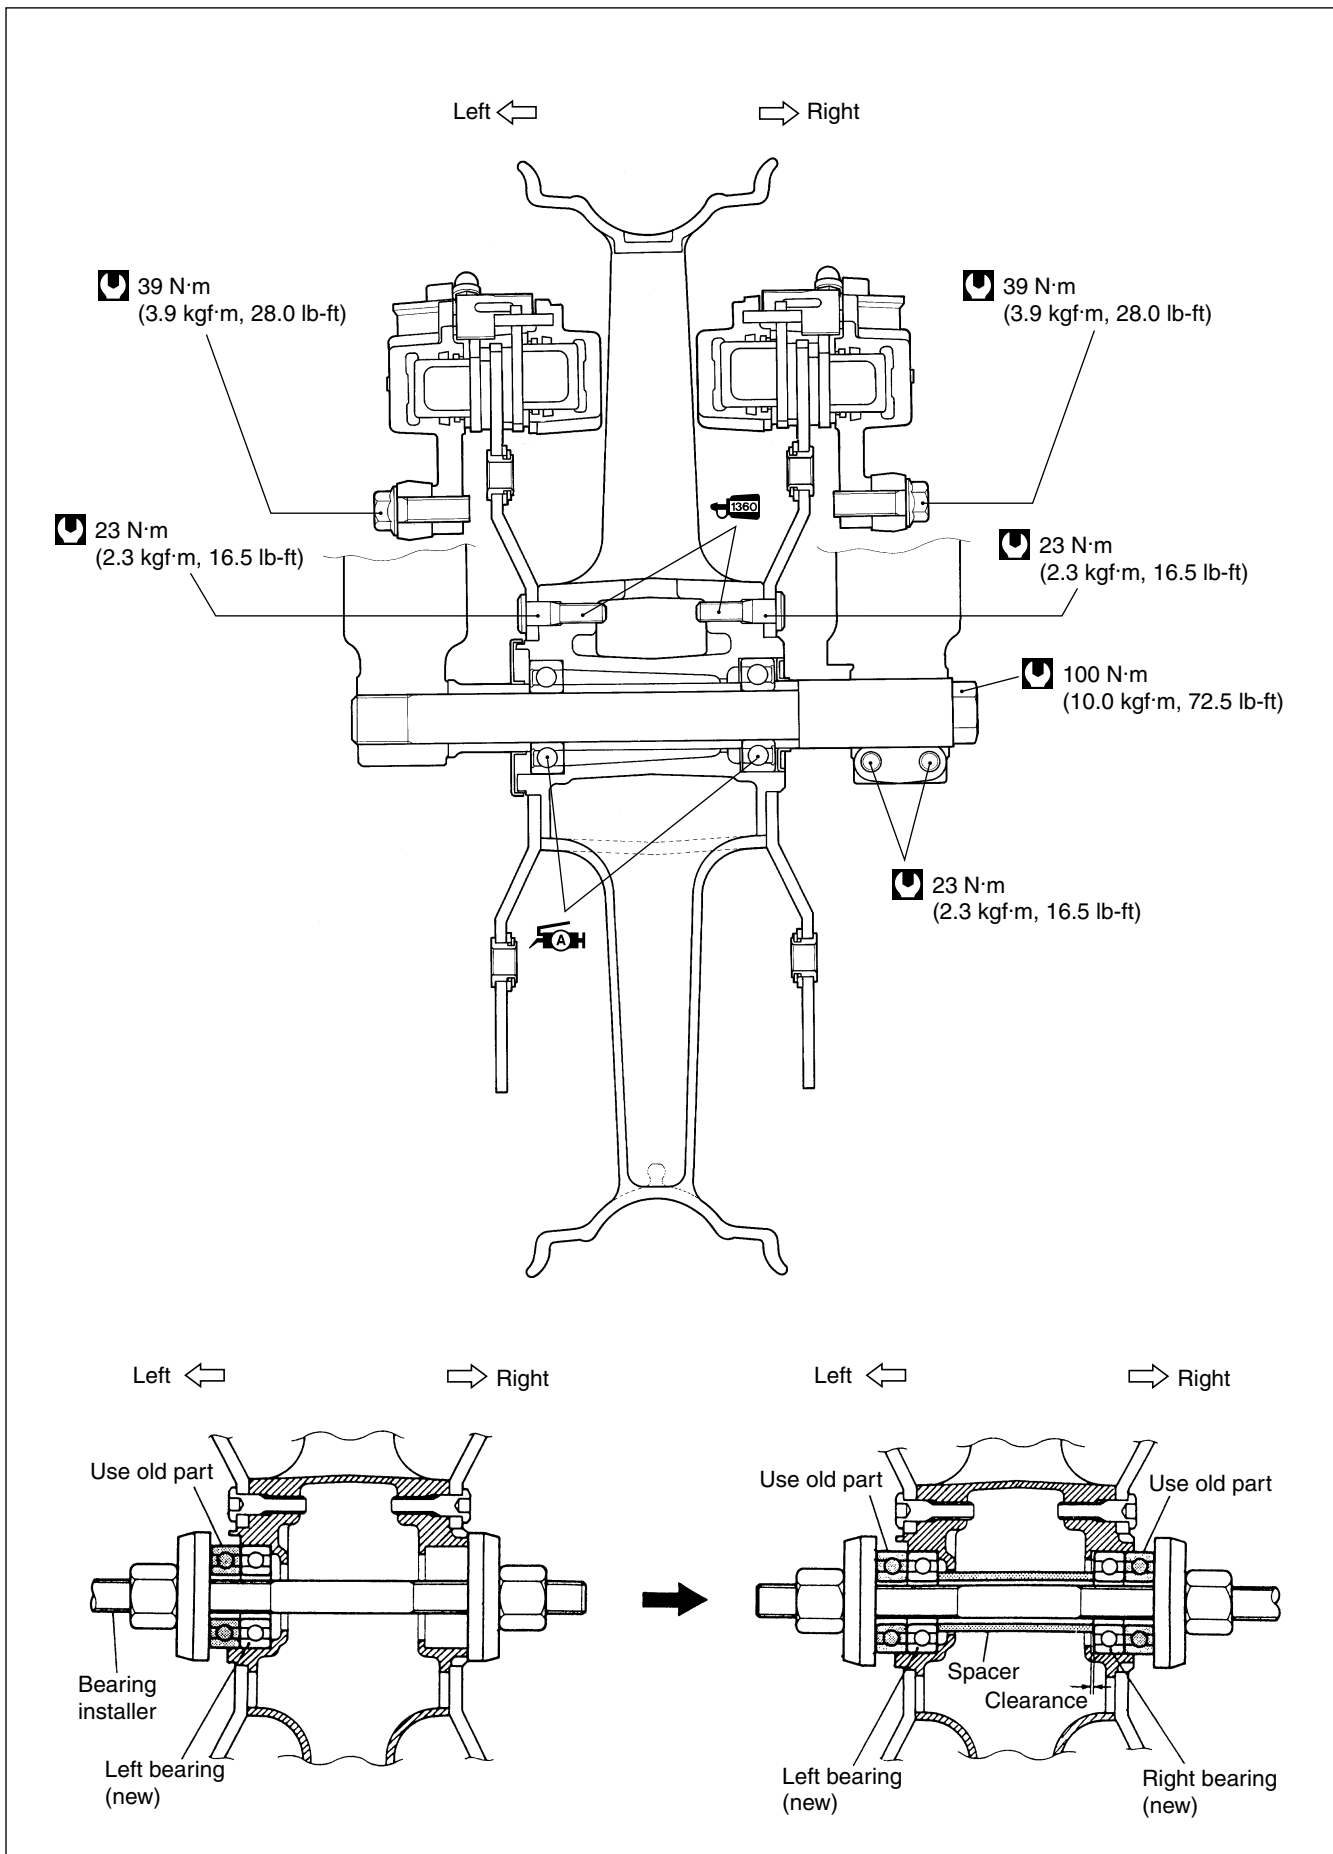

REMOVAL


- Remove the reflectors. (For E-03, E-28, E-33)
- Remove the brake caliper mounting bolts ①.

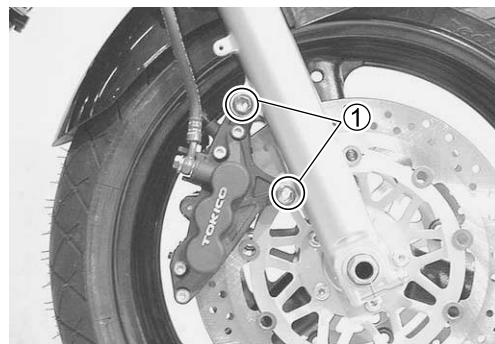

- Loosen the front axle pinch bolts ②.
- Loosen the front axle ③.
- Raise the front wheel off the ground using a jack or wooden block.
- Remove the front wheel.

▲ CAUTION

Do not operate the brake lever during or after brake caliper removal.

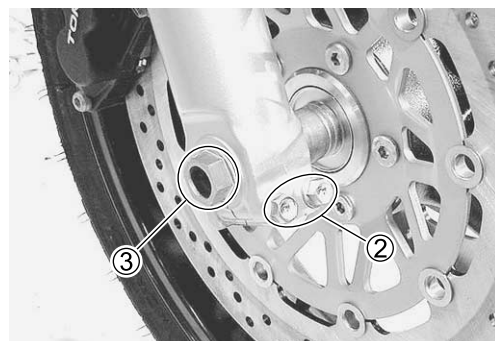

NOTE:

After removing the front wheel, temporarily install the brake calipers.


INSPECTION AND DISASSEMBLY

TIRE (📄 5-61)

FRONT WHEEL

Make sure that the wheel runout (axial and radial) does not exceed the service limit when checked as shown. An excessive amount of runout is usually due to worn or loose wheel bearings and can be corrected by replacing the bearings. If bearing replacement fails to reduce the runout, replace the wheel.


DATA Wheel rim runout (axial and radial)
Service Limit: 2.0 mm (0.08 in)

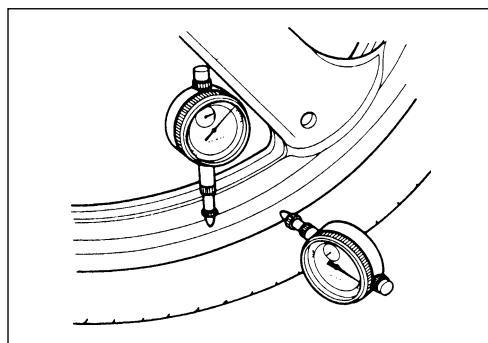

WHEEL BEARINGS

Inspect the play of the wheel bearings by hand while they are in the wheel. Rotate the inner race by hand to inspect it for abnormal noise and smooth rotation.

Replace the wheel bearings if there is anything unusual. Remove the wheel bearings as follows:

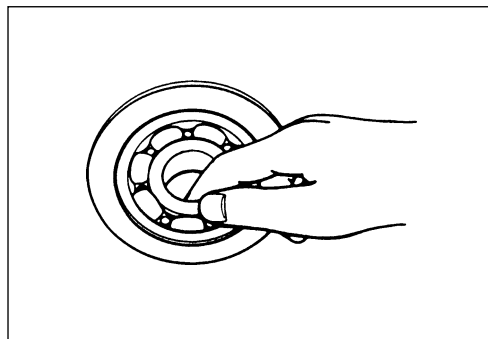


- Remove the bearing using the special tool.

TOOL 09921-20220: Bearing remover set

CAUTION

- * The removed bearings should be replaced with new ones.
- * Do not stress the brake discs by using wooden block under the wheel.

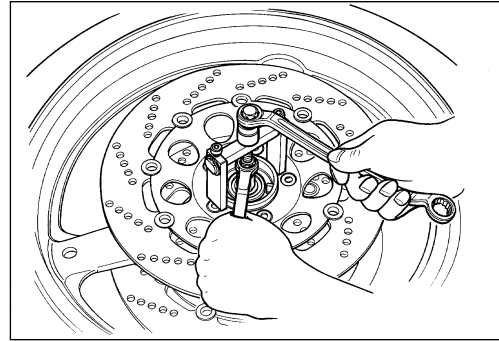

FRONT AXLE

Measure the front axle runout using the dial gauge.
If the runout exceeds the service limit, replace the front axle.


TOOL 09900-20606: Dial gauge (1/100 mm)

09900-20701: Magnetic stand

09900-21304: V-block set (100 mm)

DATA Wheel axle runout

Service Limit: 0.25 mm (0.010 in)

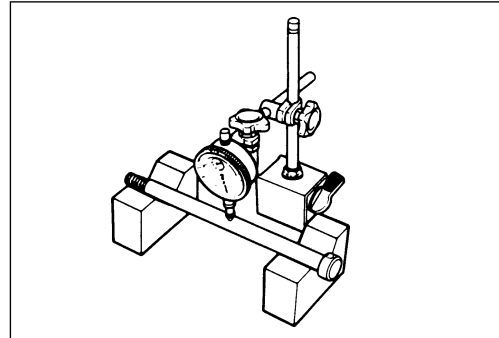

REASSEMBLY


- Apply SUZUKI SUPER GREASE “A” to the bearings before installation.

For USA

AH 99000-25030: SUZUKI SUPER GREASE “A”

For the other countries

AH 99000-25010: SUZUKI SUPER GREASE “A”

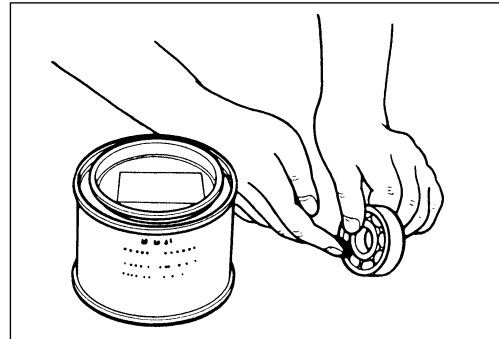


- Install the wheel bearings using the used bearings and special tool as described 5-8 page.

TOOL 09924-84510: Bearing installer set

CAUTION

- First install the left wheel bearing, then install the right wheel bearing. (↔ 5-8)
- The sealed cover on the bearing must face to the outside.

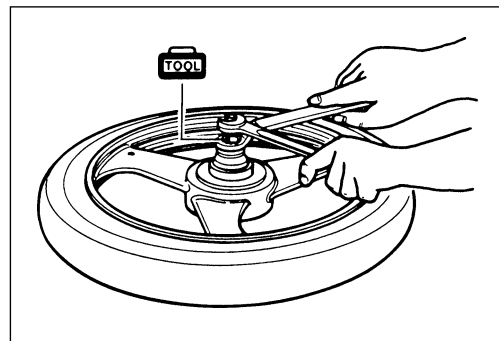

REMOUNTING

Remount the front wheel in the reverse order of removal. Pay attention to the following points:

- Install the front wheel.

⚠ WARNING

Face the arrow mark **Ⓐ** on the tire to the direction of wheel rotation, when remounting the wheel.




- Tighten the front axle **①** to the specified torque.

🔧 Front axle: 100 N·m (10.0 kgf·m, 72.5 lb-ft)

- Tighten the front axle pinch bolts **②** to the specified torque.

🔧 Front axle pinch bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

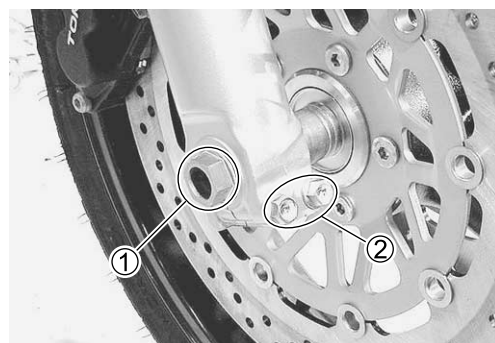

NOTE:

Before tightening the front axle nut and front axle nut pinch bolts, move the front fork up and down four or five times.




- Tighten the brake caliper mounting bolts **①** to the specified torque.


🔧 Brake caliper mounting bolt: 39 N·m (3.9 kgf·m, 28.0 lb-ft)

NOTE:

After remounting the brake calipers, pump the brake lever a few times to check for proper brake operation.

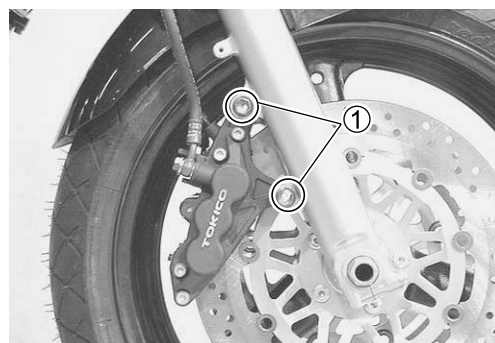

FRONT FORK CONSTRUCTION

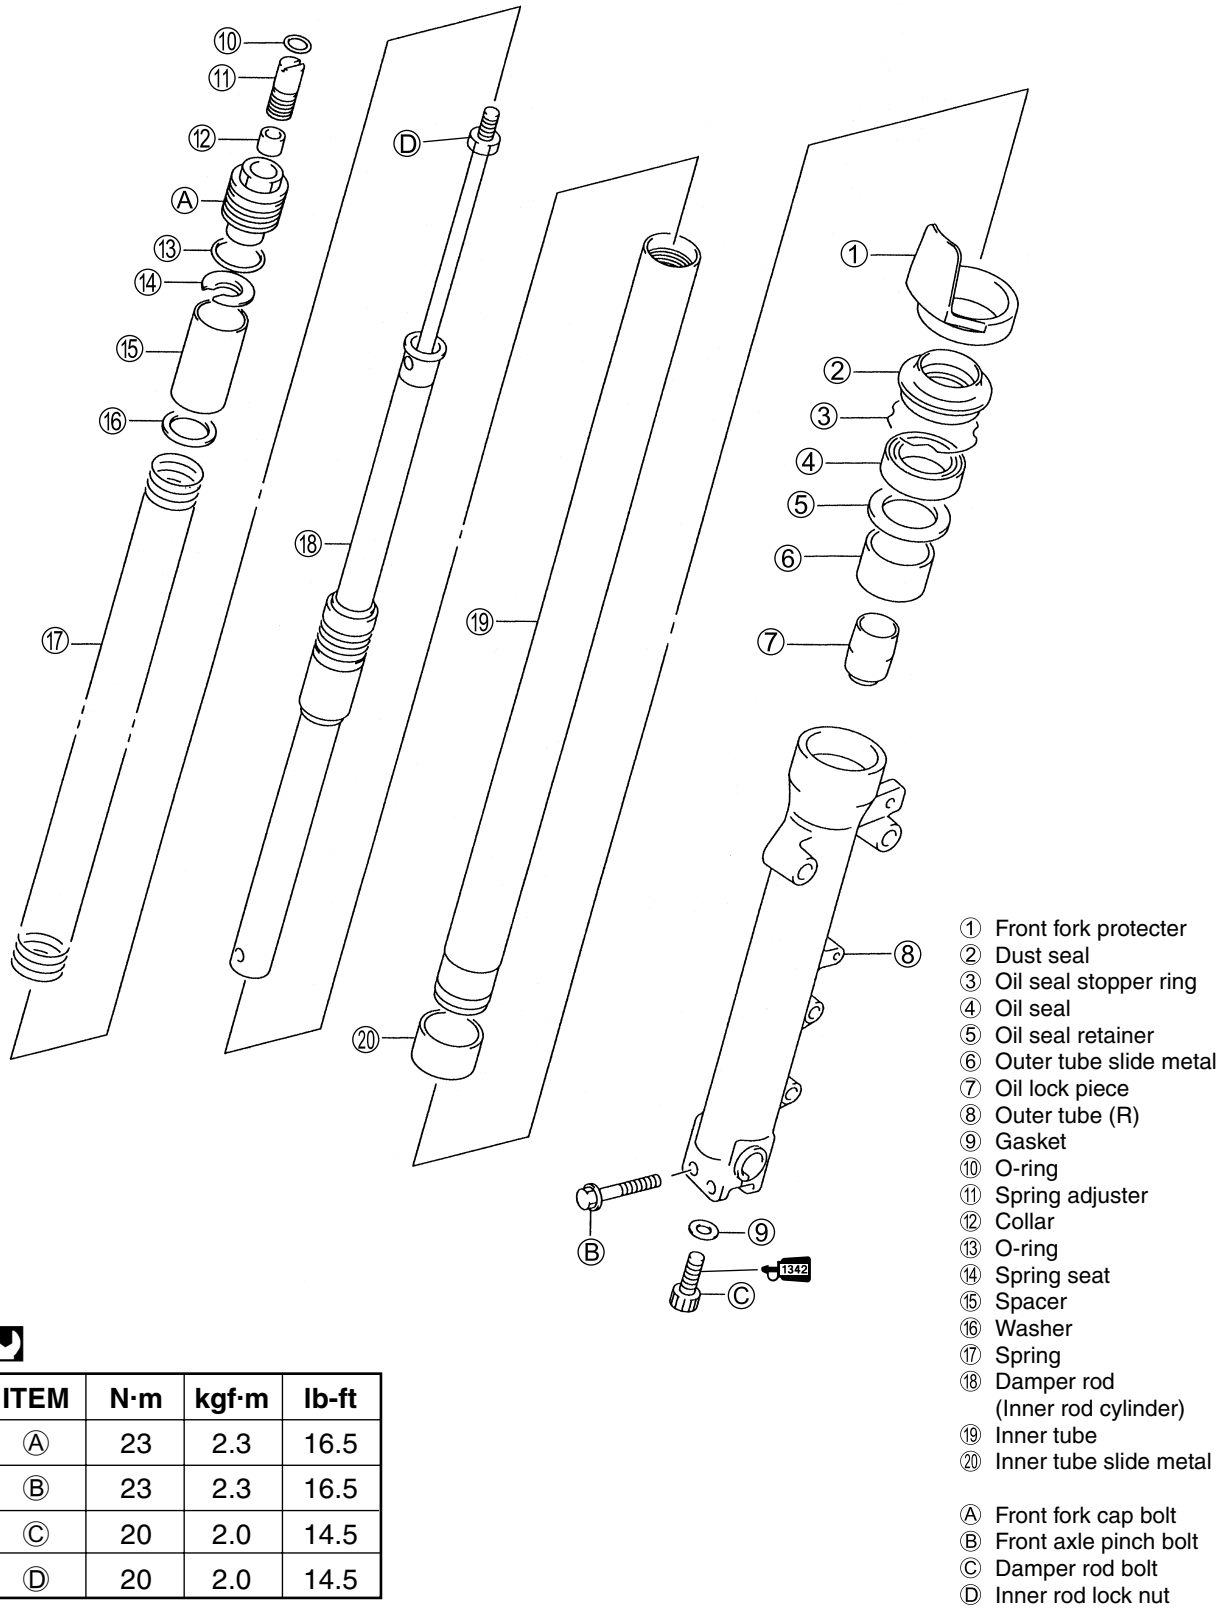


ITEM	N-m	kgf-m	lb-ft
Ⓐ	23	2.3	16.5
Ⓑ	23	2.3	16.5
Ⓒ	20	2.0	14.5
Ⓓ	20	2.0	14.5

REMOVAL AND DISASSEMBLY

- Remove the center cowling. (☞ 5-3)
- Remove the front wheel. (☞ 5-9)


- Remove the front fender mounting bolts ①, left and right.
- Remove the front fender ②.
- Remove the brake hose clamp bolts ③, left and right.

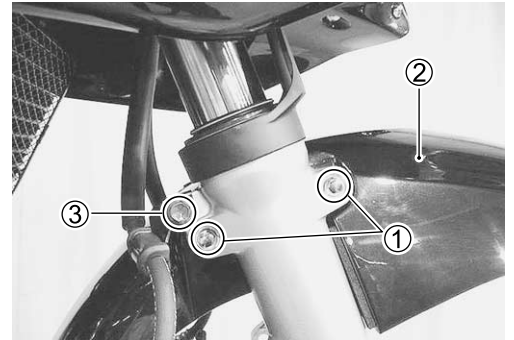


- Loosen the front fork upper clamp bolts ④, left and right.

NOTE:


Slightly loosen the front fork cap bolt ⑤ to facilitate later disassembly.

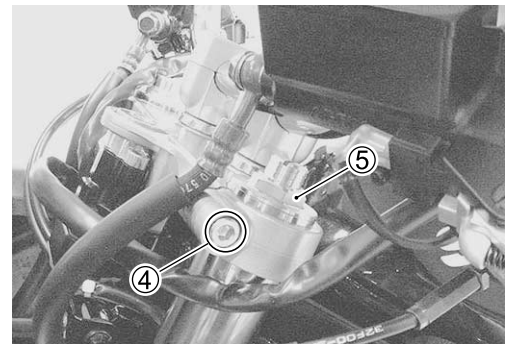


- Loosen the front fork lower clamp bolts ⑥, left and right.
- Remove the front forks, left and right.

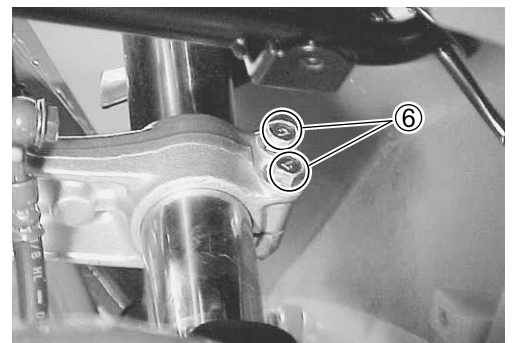


- Remove the protector ⑦.

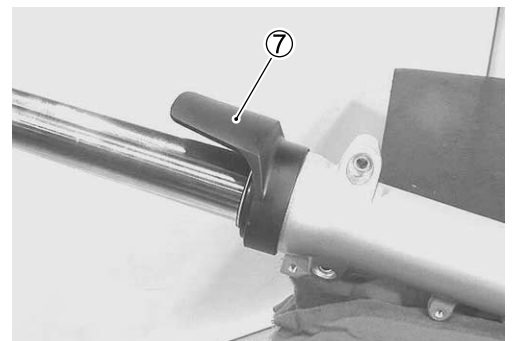

- Remove the front fork cap bolt with spring adjuster ① by loosening the inner rod lock nut.

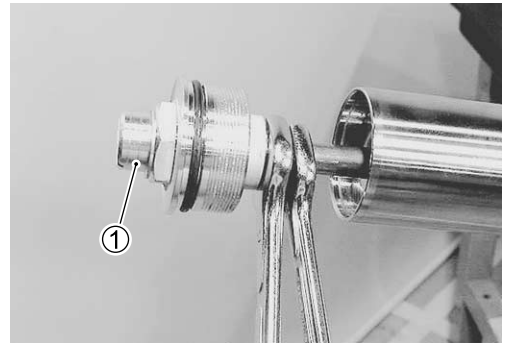


- Remove the spring seat ②.

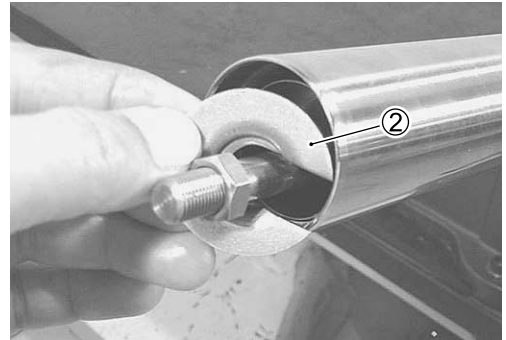

- Remove the spacer, washer and spring.



- Invert the fork and stroke it several times to drain out fork oil.
- Hold the fork inverted for a few minutes to drain oil.

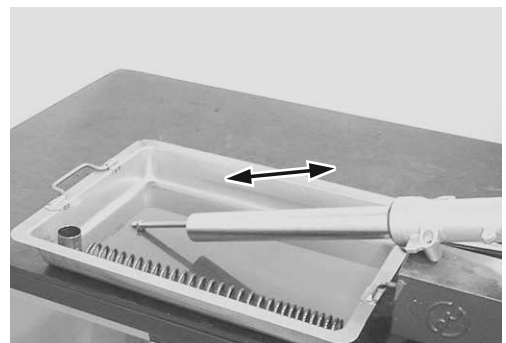

- Remove the dust seal.



- Remove the oil seal stopper ring.



- Remove the damper rod bolt.



- Remove the inner rod cylinder.




- Remove the oil seal by slowly pulling out the inner tube.

NOTE:

Be careful not to damage the inner tube.


▲ CAUTION

The outer and inner tube's slide metals must be replaced along with the oil seal and dust seal when assembling the front fork.

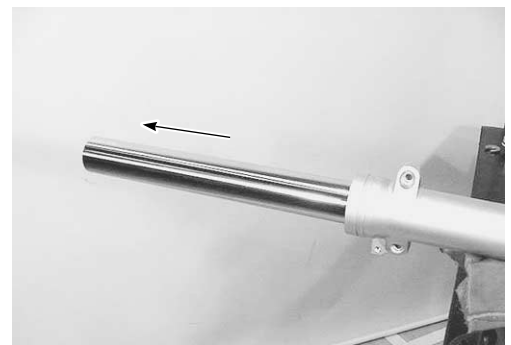

- Remove the following parts.


- ① Oil seal
- ② Oil seal retainer
- ③ Outer tube slide metal
- ④ Inner tube slide metal
- ⑤ Oil lock piece

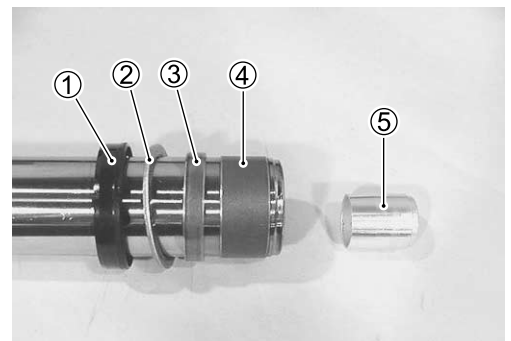

INSPECTION

INNER AND OUTER TUBES

Inspect the inner tube sliding surface and outer tube sliding surface for scuffing.

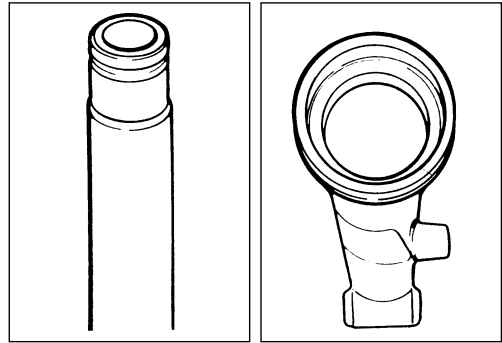


FORK SPRING

Measure the fork spring free length. If it is shorter than the service limit, replace it with a new one.

DATA Front fork spring free length


Service Limit: 366 mm (14.4 in)..... For E-03, 28, 33

370 mm (14.6 in)..... For the others

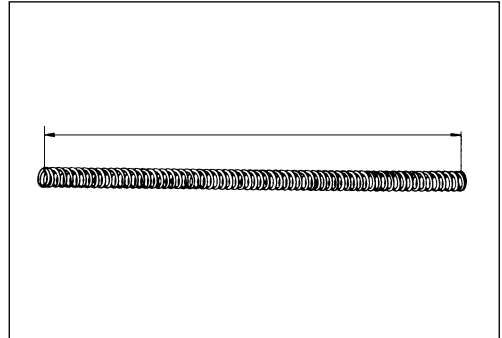

DAMPER ROD

Move the inner rod by hand to inspect it if operating smoothly.

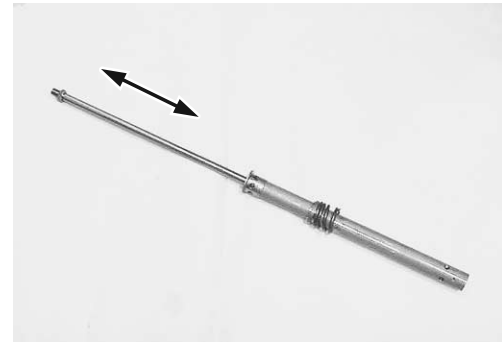

REASSEMBLY AND REMOUNTING


Reassemble and remount the front fork in the reverse order of removal and disassembly. Pay attention to the following points:

SLIDE METALS AND OIL SEAL

- Hold the inner tube vertically, clean the metal groove and install the inner tube slide metal by hand.


▲ CAUTION

Do not damage the Teflon coated surface of the inner tube's slide metal when mounting it.

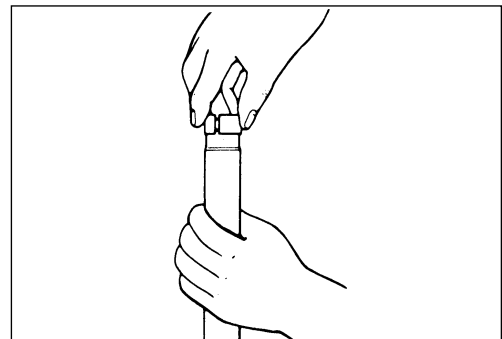

- Insert the inner tube into the outer tube and install the oil seal ① using the special tool.

 **09940-52861: Front fork oil seal installer**

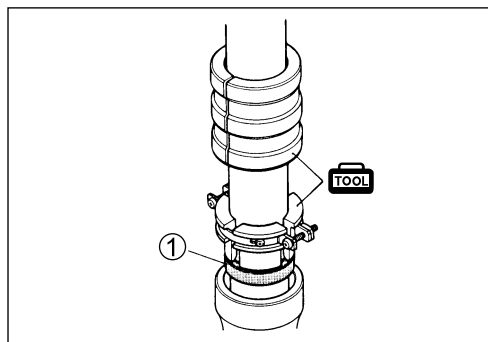


- Install the oil seal stopper ring ②.

▲ CAUTION


Make sure that the oil seal stopper ring is fitted securely.

- Install the dust seal ③.

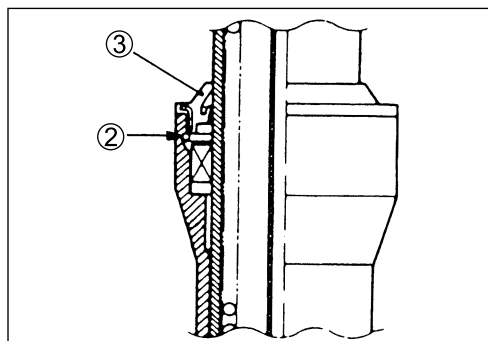

DAMPER ROD BOLT

- Insert the inner rod/damper rod (cartridge) ① and the oil lock piece ② into the inner tube.

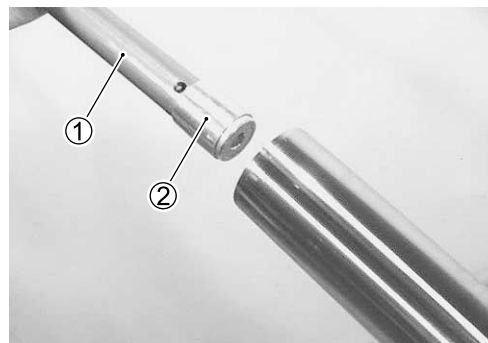


- Apply THREAD LOCK “1342” to the damper rod bolt and tighten it to the specified torque with a 6-mm hexagon wrench and special tools.

 **99000-32050: THREAD LOCK “1342”**

 **Damper rod bolt: 20 N·m (2.0 kgf·m, 14.5 lb-ft)**


▲ CAUTION

Use a new damper rod bolt gasket to prevent oil leakage.

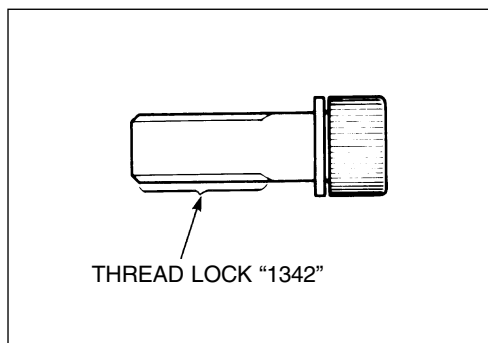

FORK OIL

- Place the front fork vertically without spring.
- Compress it fully.
- Pour specified front fork oil up to the top level of the outer tube.

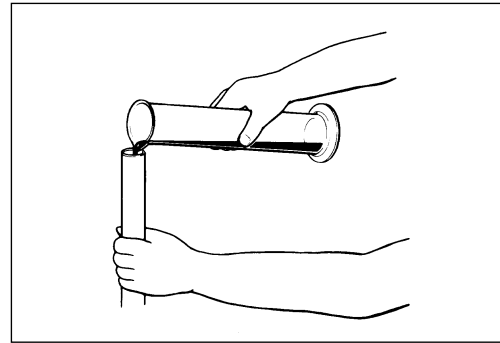


- Move the inner rod slowly with the special tool more than ten times until bubbles do not come out from the oil.

TOOL 09940-52841: Inner rod holder

NOTE:

Refill front fork oil up to the top of the outer tube to find bubbles while bleeding air.

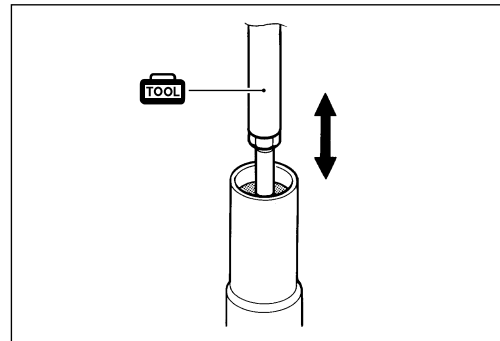


- Refill specified front fork oil up to the top level of the outer tube again. Move the outer tube up and down several strokes until bubbles do not come out from the oil.
- Keep the front fork vertically and wait 5 – 6 minutes.

NOTE:

* Always keep oil level over the cartridge top end, or air may enter the cartridge during this procedure.

* Take extreme attention to pump out air completely.

- Hold the front fork vertically and adjust fork oil level with the special tool.

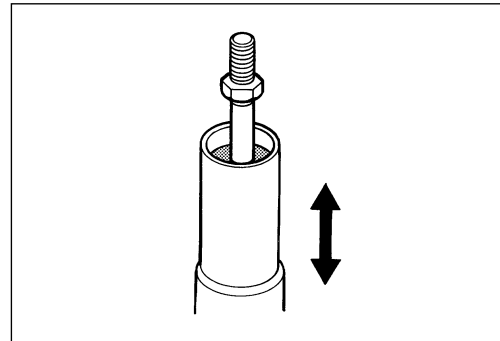

NOTE:

When adjusting the fork oil level, remove the fork spring and compress the outer tube fully.

TOOL 09943-74111: Front fork oil level gauge


DATA Fork oil level: 107 mm (4.2 in) For E-03, 28, 33
 105 mm (4.1 in) For the others

FORK 99000-99001-SS8: SUZUKI FORK OIL SS-08
 99000-99044-10G: SUZUKI FORK OIL #10 or an equivalent fork oil

DATA Capacity (each leg):

507 ml (17.1/17.9 US/Imp oz) For E-03, 28, 33

509 ml (17.2/17.9 US/Imp oz) For the others

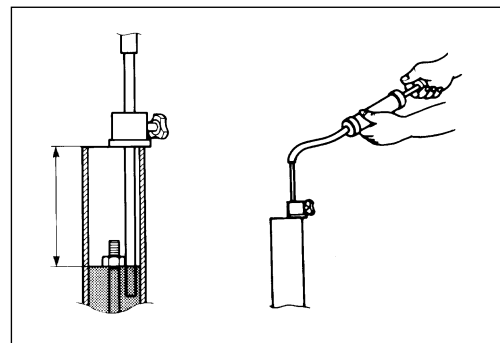


FORK SPRING

- Install the fork spring as shown.


NOTE:

The smaller pitch \textcircled{A} should face to the bottom of the front fork.

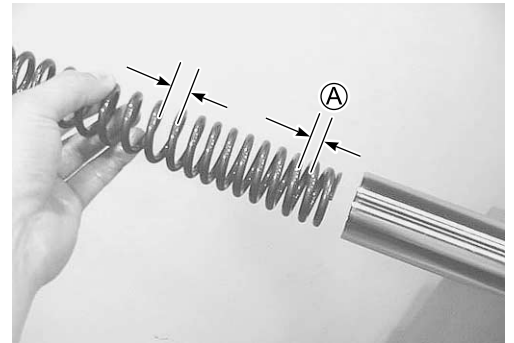**INNER ROD AND LOCK NUT**

- Install the special tool and pull up the inner rod.

 **09940-52840: Front fork inner rod holder**

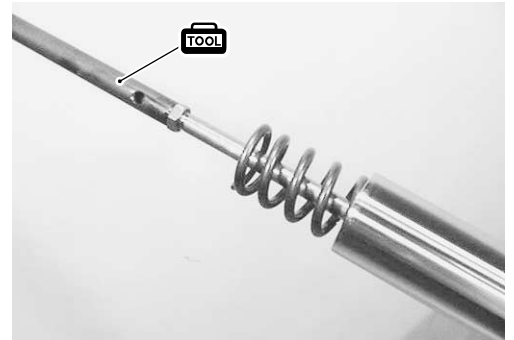


- Install the front fork cap.

NOTE:

Before installing the front fork cap, turn the inner rod lock nut $\textcircled{1}$ completely to the lower position as shown in the photograph.



- Tighten the lock nut to the specified torque.

 **Lock nut: 20 N·m (2.0 kgf·m, 14.5 lb-ft)**



- Install the O-ring to the front fork cap bolt.
- Apply fork oil lightly to the O-ring.

CAUTION

Use a new O-ring to prevent oil leakage.

- Install the front fork cap bolt to the inner tube temporarily.



- Install the front fork protector.

NOTE:


Fit the projection of the front fork protector to the depression of the front fork outer tube.



- Set the upper surface **(A)** of the inner tube at the height **(C)** from the upper surface **(B)** of the steering stem upper bracket and tighten the front fork lower clamp bolts to the specified torque.

🔩 Front fork lower clamp bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

Height **(C) : 2.0 mm (0.08 in) For E-03, 28, 33**
: 3.0 mm (0.12 in) For the others

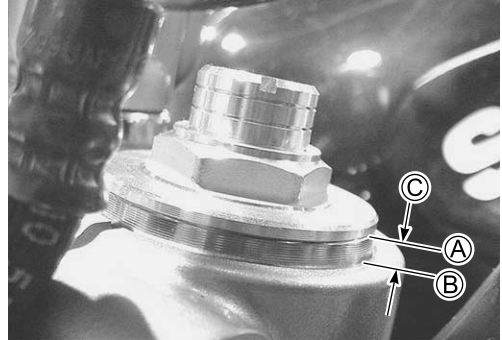


- Tighten the front fork cap bolt to the specified torque and recheck the front fork inner tube upper surface height **(C)** from the upper surface of the steering stem upper bracket.

🔩 Front fork cap bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

- Tighten the front fork upper clamp bolt.


🔩 Front fork upper clamp bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

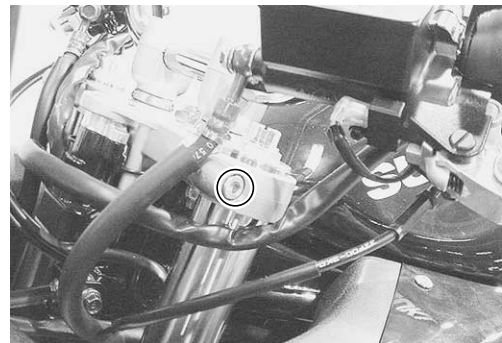

- Install the front fender.

NOTE:

Face the triangle mark on the front fender plate to front side.

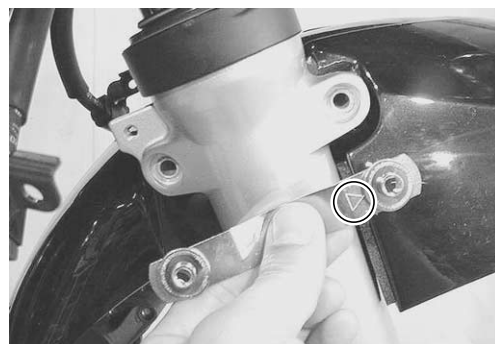

- Install the front wheel. (↗5-11)
- Remount the center cowling. (↗5-3)

NOTE:

Before tightening the front axle and front axle pinch bolts, move the front fork up and down four or five times.




SUSPENSION SETTING

After installing the front fork, adjust the spring pre-load as follows.

SPRING PRE-LOAD ADJUSTMENT

There are four grooved lines on the side of the spring adjuster. Position 0 provides the maximum spring pre-load and position 5 provides the minimum spring pre-load.


(STD position: "3")

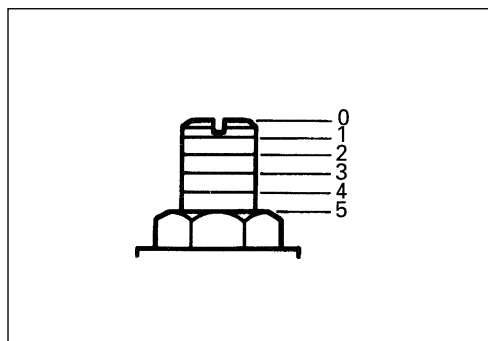

▲ WARNING


Be sure to adjust the spring pre-load on both front fork legs equally.

STEERING CONSTRUCTION

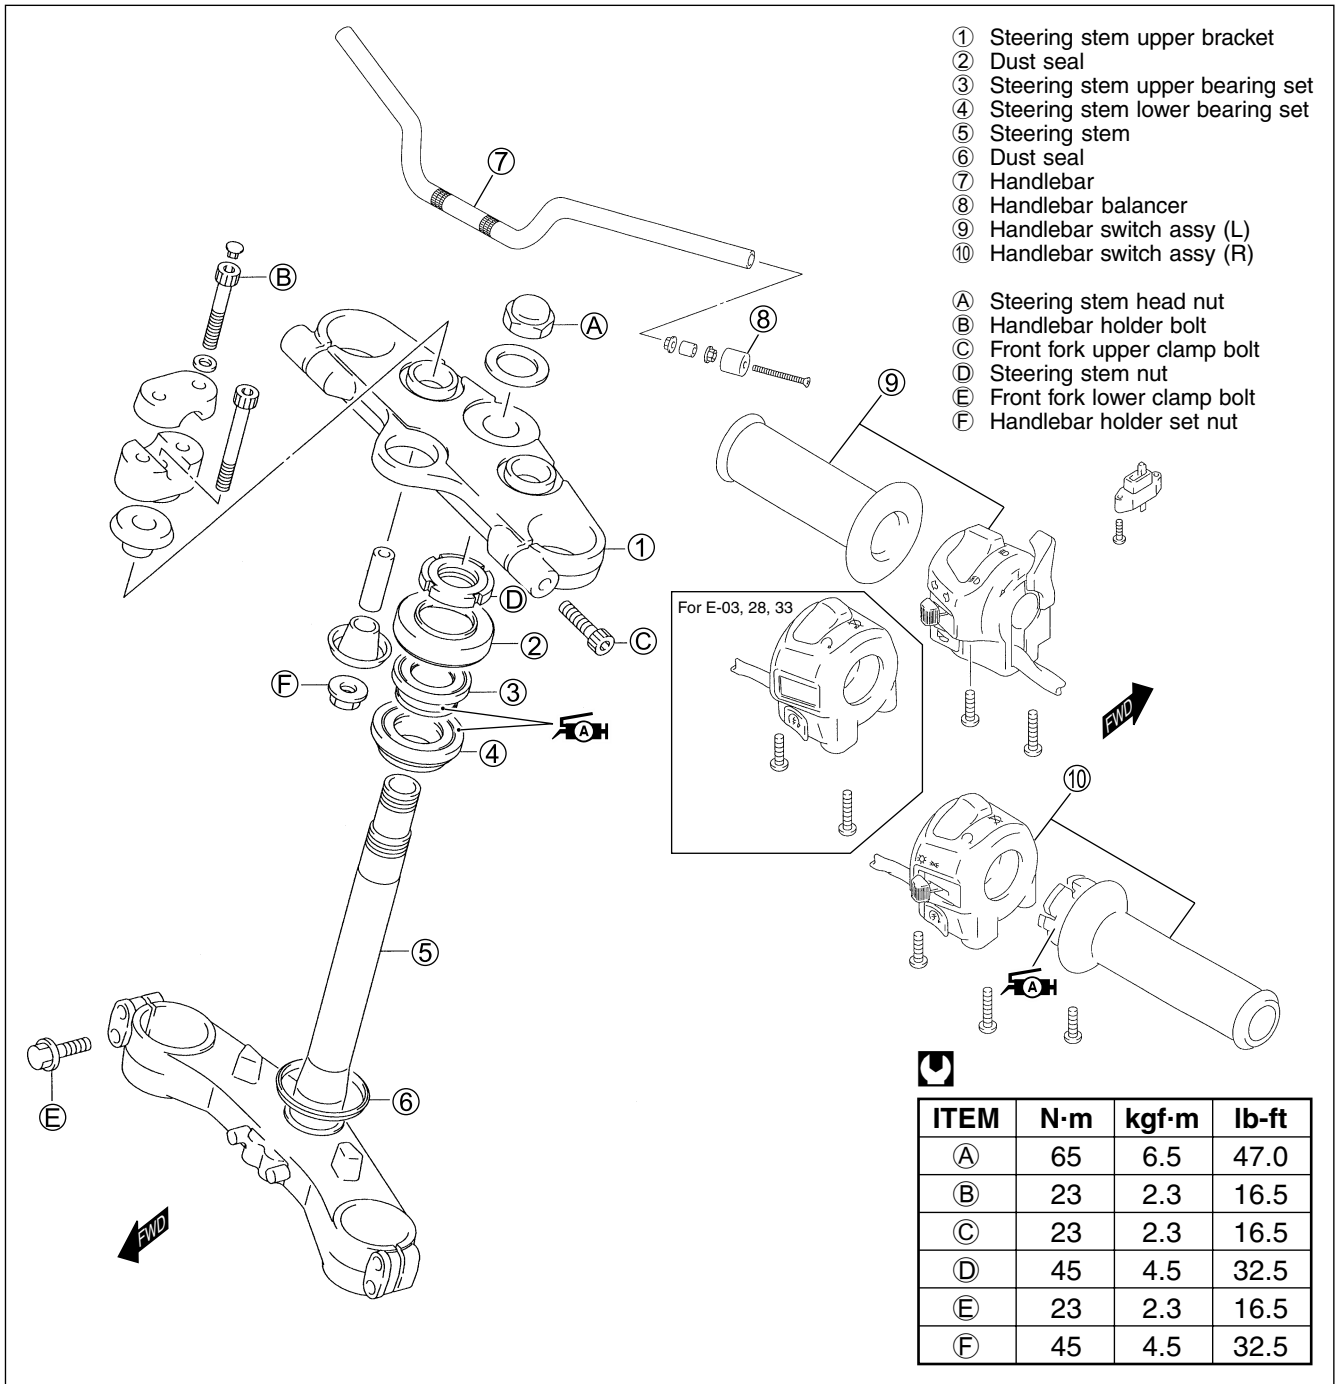

REMOVAL AND DISASSEMBLY


- Remove the front wheel. (➔ 5-9)
- Remove the front forks. (➔ 5-13)
- Remove the brake hose joint mounting bolt.

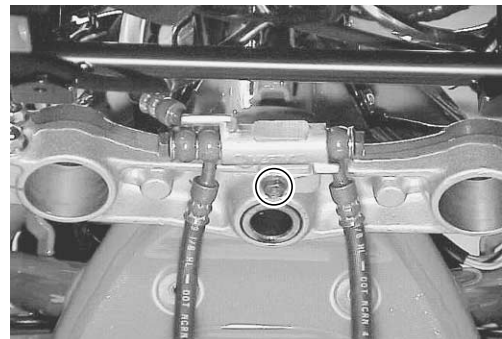


- Remove the handlebars ①.

NOTE:

Place the rag on the fuel tank to prevent the fuel tank scratches.

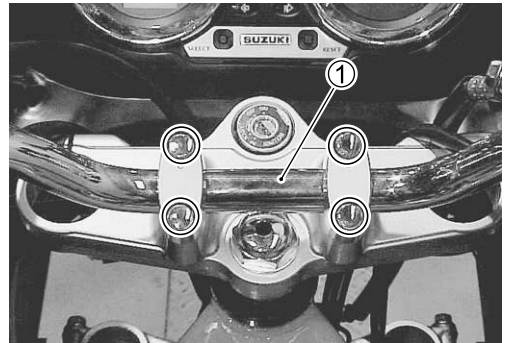

- Remove the steering stem upper bracket ②.

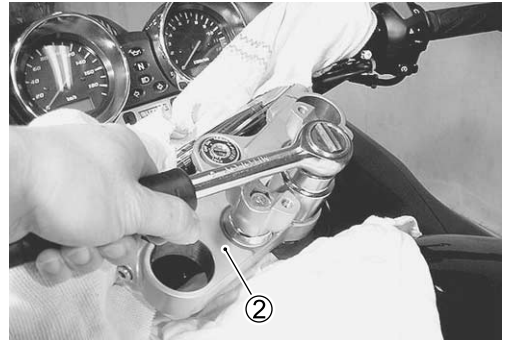

- Remove the steering stem nut using the special tool.

TOOL 09940-14911: Steering stem nut wrench


- Remove the steering stem lower bracket.

NOTE:


Hold the steering stem lower bracket to prevent it from falling.



- Remove the dust seal ③ and upper bearing inner race ④.

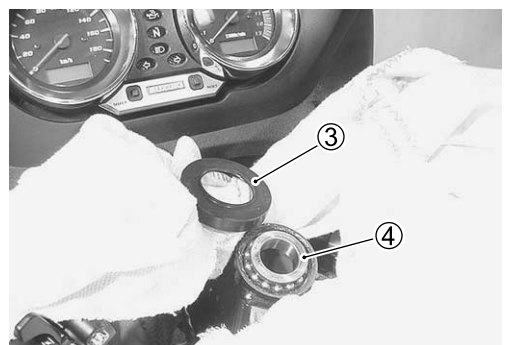


- Remove the steering stem upper bearing ⑤.

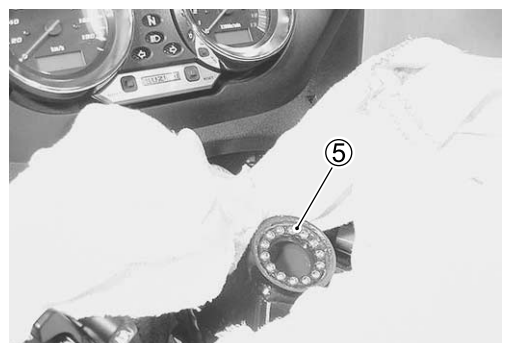

- Remove the ignition switch ⑥ using a Torx wrench.

TOOL 09930-11920: Torx bit
09930-11940: Bit holder

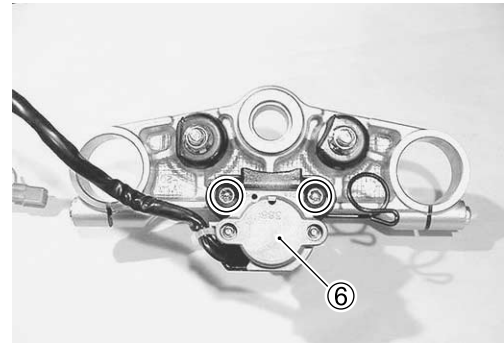

INSPECTION AND DISASSEMBLY

Inspect the removed parts for the following abnormalities.


- *Handlebar distortion
- *Race wear or damage
- *Bearing wear or damage
- *Abnormal bearing noise
- *Distortion of the steering stem



- Remove the steering stem lower bearing inner race using a chisel.


⚠ CAUTION

The removed bearing inner race should be replaced with a new one.

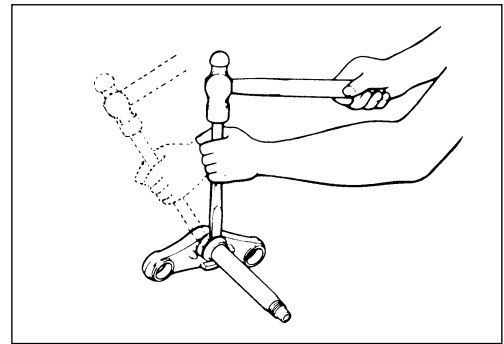

- Remove the steering stem upper and lower bearing races using the special tools.

TOOL 09941-54911: Bearing outer race remover
09941-74911: Steering bearing installer

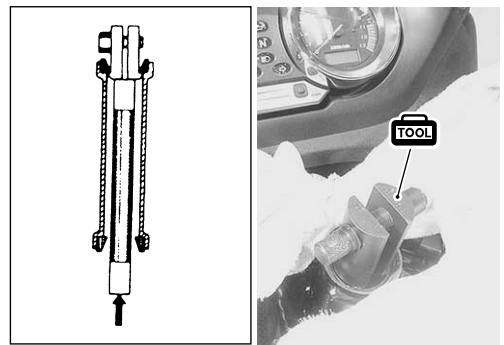


REASSEMBLY AND REMOUNTING

Reassemble and remount the steering stem in the reverse order of removal and disassembly. Pay attention to the following points.

OUTER RACES

- Press in the upper and lower outer races using the special tool.


TOOL 09941-34513: Steering outer race installer

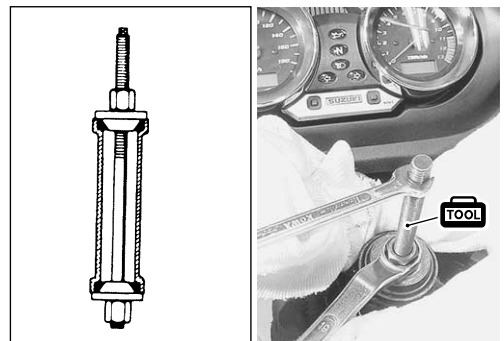

INNER RACE

- Press in the lower inner race using the special tool

 **09941-74911: Steering bearing installer**

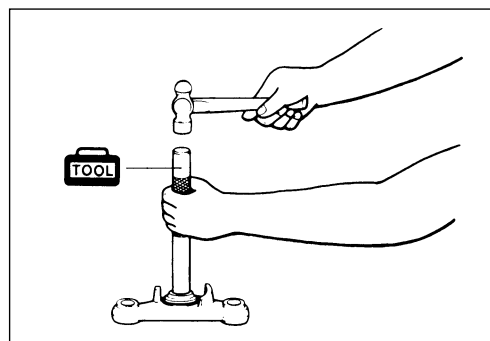**BEARINGS**


- Apply SUZUKI SUPER GREASE "A" to the upper and lower bearings and the lip of the dust seals before remounting the steering stem.

For USA


 **99000-25030: SUZUKI SUPER GREASE "A"**

For the other countries

 **99000-25010: SUZUKI SUPER GREASE "A"**

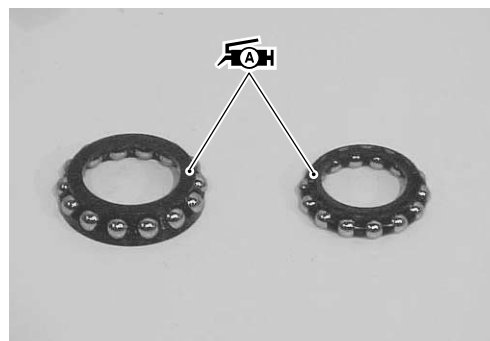


- Install the bearings.

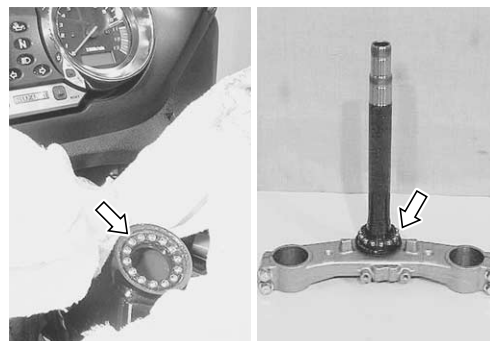**STEERING STEM NUT**

- Tighten the steering stem nut to the specified torque using the special tool.

 **09940-14911: Steering stem nut wrench**


 **Stem nut: 45 N·m (4.5 kgf·m, 32.5 lb-ft)**




- Turn the steering stem lower bracket about five or six times to the left and right so that the angular ball bearings seat properly.
- Loosen the steering stem nut 1/4-1/2 of a turn (A).

NOTE:

This adjustment will vary from motorcycle to motorcycle.

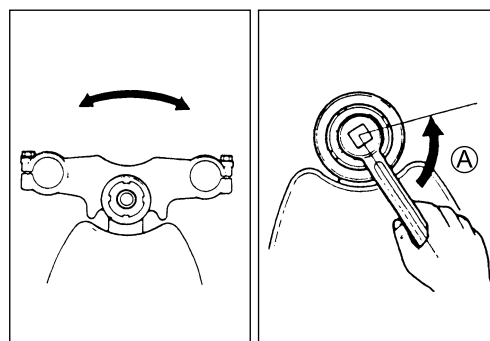

- Tighten the steering stem head nut to the specified torque.

 **Steering stem head nut: 65 N·m (6.5 kgf·m, 47.0 lb-ft)**


NOTE:


Before tightening the steering stem head nut, temporarily install the front forks.




HANDLEBAR AND FRONT FORK

- When remounting the front forks, set the upper surface of the inner tube to the specified height from the steering stem upper bracket. (↖ 5-20)
- Tighten the front fork lower clamp bolt ① and front fork upper clamp bolt ② to the specified torque.

 **Front fork lower clamp bolt ①:**
23 N·m (2.3 kgf·m, 16.5 lb-ft)
Front fork upper clamp bolt ②:
23 N·m (2.3 kgf·m, 16.5 lb-ft)

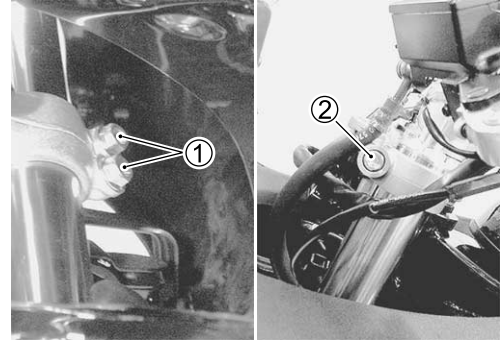


- Set the handlebar to match its punched mark to the mating surface of the handlebar holder.
- Set the punched mark (FWD mark) on the handlebar holders as shown in the photograph.
- Tighten the handlebar holder bolts ③.

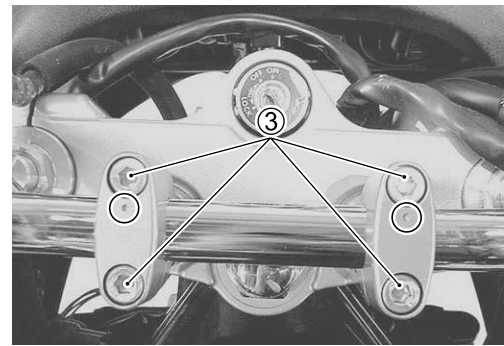


NOTE:

First tighten the handlebar holder bolts ③ to the specified torque.

 **Handlebar holder bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)**

- Install the front wheel. (↖ 5-11)

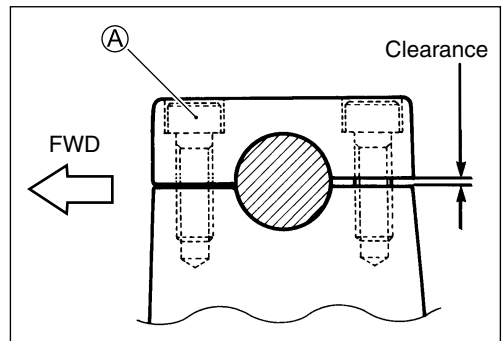

STEERING TENSION ADJUSTMENT

Check the steering tension as follows

- Support the motorcycle using a jack and raise the front wheel off the floor 20 – 30 mm (0.8 – 1.2 in).
- Make sure that the cables and wire harness are properly routed.
- With the front wheel pointing straight ahead, attach the spring scale onto the end of the handlebar as shown.
- When the handlebar starts moving, record the reading on the spring scale. This reading is referred to as the “initial force”.
- Repeat the same procedure on the end of the other handlebar.


 **09940-92720: Spring scale**

Initial force: 200 – 500 grams


- If the initial force reading is out of specification, adjust the steering tension as follows.
 - 1) First, loosen the front fork upper clamp bolts and the steering stem head nut. Then, adjust the steering stem nut by either loosening or tightening it.
 - 2) Tighten the steering stem head nut and front fork upper clamp bolts to the specified torque and recheck the initial force as described above.
 - 3) Continue adjusting the steering stem nut until the initial force is within specification.

NOTE:

Hold the front fork legs, move them back and forth and make sure that the steering is not loose.

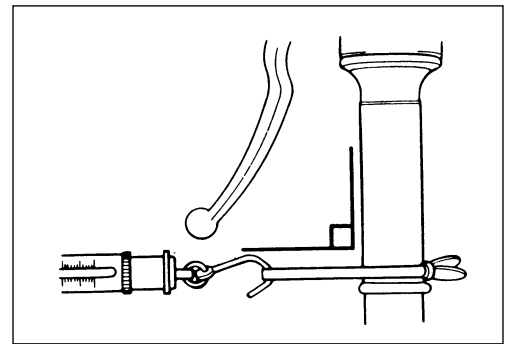


REAR WHEEL CONSTRUCTION

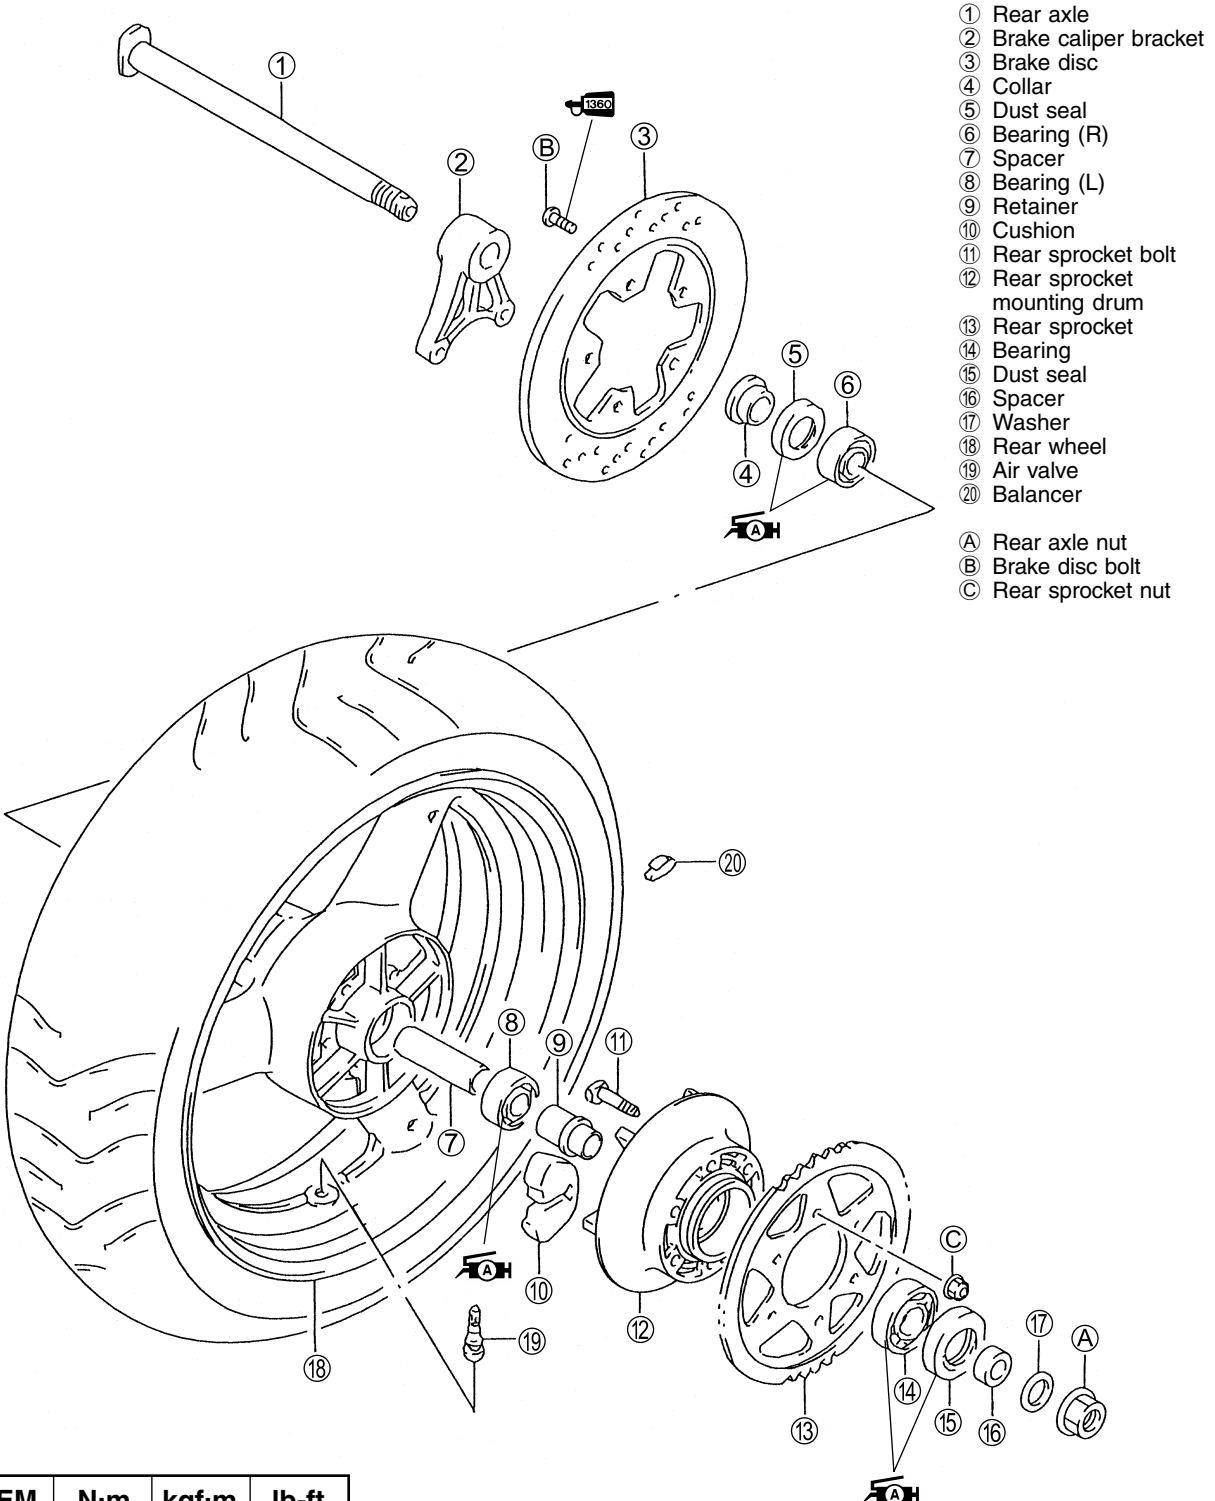


- ① Rear axle
 - ② Brake caliper bracket
 - ③ Brake disc
 - ④ Collar
 - ⑤ Dust seal
 - ⑥ Bearing (R)
 - ⑦ Spacer
 - ⑧ Bearing (L)
 - ⑨ Retainer
 - ⑩ Cushion
 - ⑪ Rear sprocket bolt
 - ⑫ Rear sprocket mounting drum
 - ⑬ Rear sprocket
 - ⑭ Bearing
 - ⑮ Dust seal
 - ⑯ Spacer
 - ⑰ Washer
 - ⑱ Rear wheel
 - ⑲ Air valve
 - ⑳ Balancer
- (A) Rear axle nut
 - (B) Brake disc bolt
 - (C) Rear sprocket nut



ITEM	N-m	kgf-m	lb-ft
(A)	100	10.0	72.5
(B)	23	2.3	16.5
(C)	60	6.0	43.5

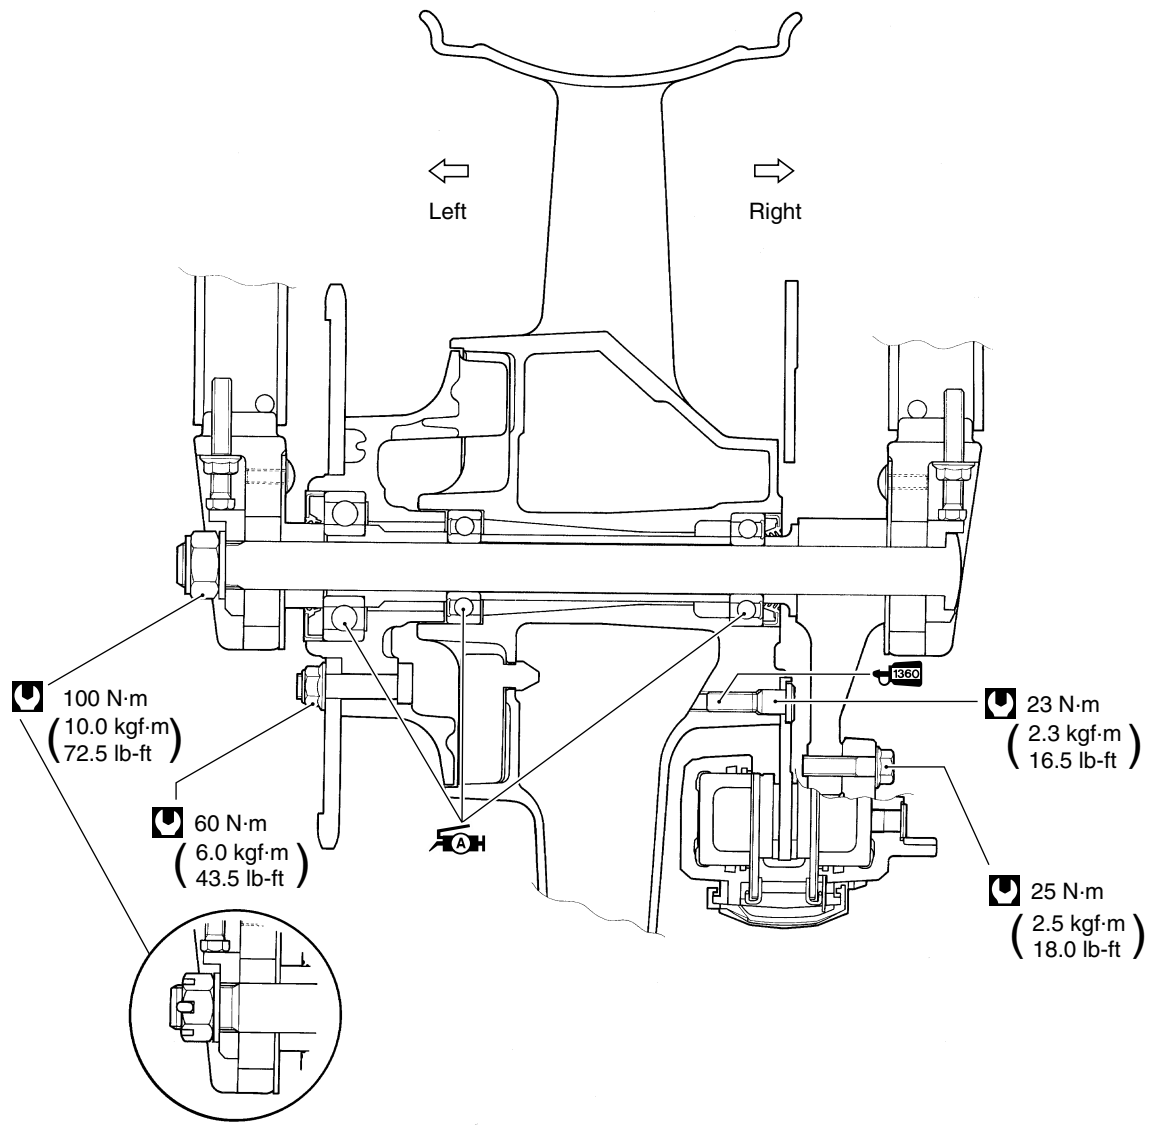


(For E-03, E-28, E-33)

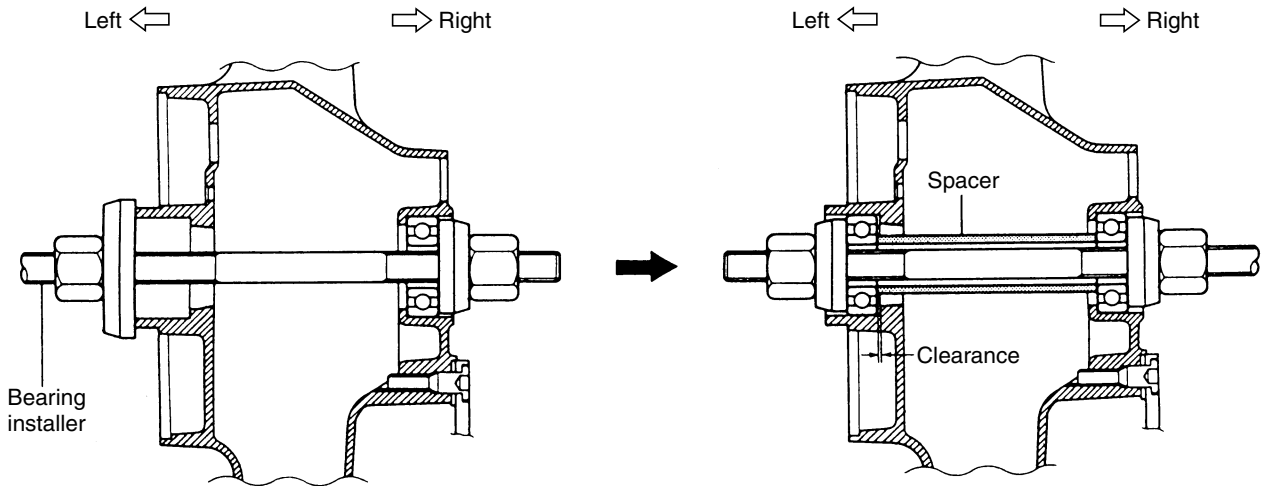

REMOVAL

- Support the motorcycle with center stand.
- Remove the cotter pin. (For E-03, 28, 33)
- Remove the axle nut ①.

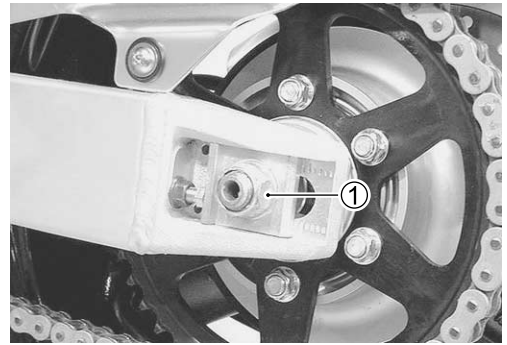

- Remove the rear axle and disengage the drive chain from the rear sprocket.
- Remove the rear wheel.

▲ CAUTION

Do not operate the brake pedal during or after rear wheel removal.




- Draw out the rear sprocket mounting drum along with the rear sprocket from the rear wheel.

NOTE:


Before removing the rear sprocket mounting drum, slightly loosen the rear sprocket nuts.



- Remove the rear sprocket ② from the rear sprocket mounting drum.
- Remove the spacer ③.

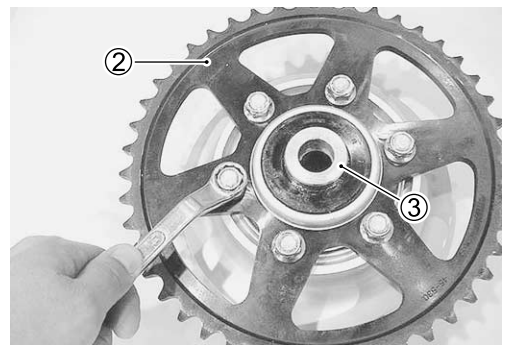

- Remove the retainer ④.

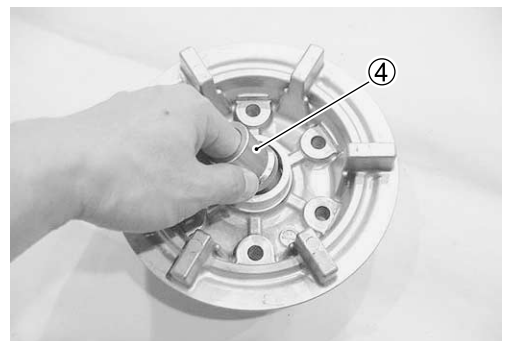

INSPECTION AND DISASSEMBLY

TIRE (☞ 5-61)

REAR WHEEL (☞ 5-9)


WHEEL BEARING (☞ 5-9)

Rear wheel and its bearing inspection manner is the same as the front one.


REAR SPROCKET MOUNTING DRUM BEARING


Inspect the play of the bearing by hand while it is in the rear sprocket mounting drum.

Rotate the inner race by hand to inspect it for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual.

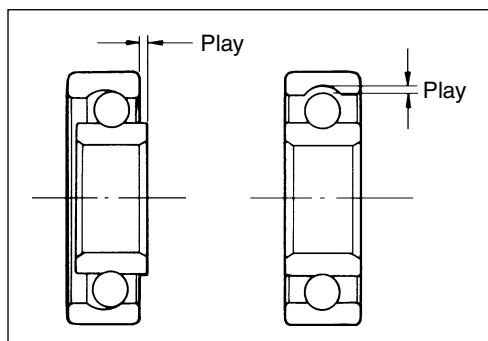

- Remove the rear sprocket mounting drum dust seal using the special tool.

 **09913-50121: Oil seal remover**


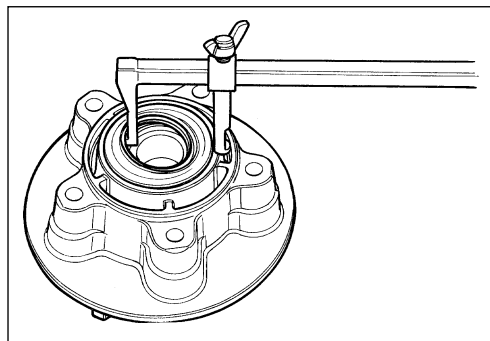


- Remove the bearings using the special tool.

 **09921-20220: Bearing remover set**


CAUTION

The removed dust seal and bearing must be replaced with new ones.

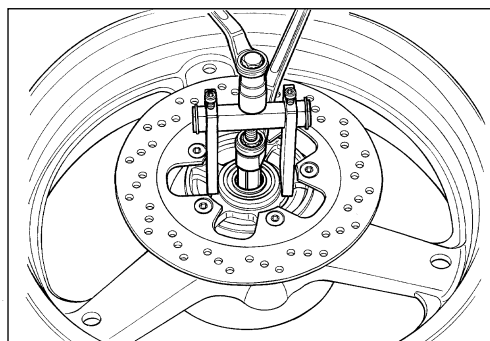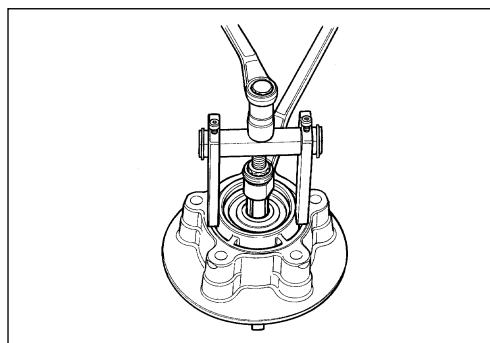


REAR AXLE

Measure the rear axle runout using the dial gauge. If the runout exceeds the service limit, replace the rear axle.

-  **09900-20606: Dial gauge (1/100 mm)**
09900-20701: Magnetic stand
09900-21304: V-block set (100 mm)

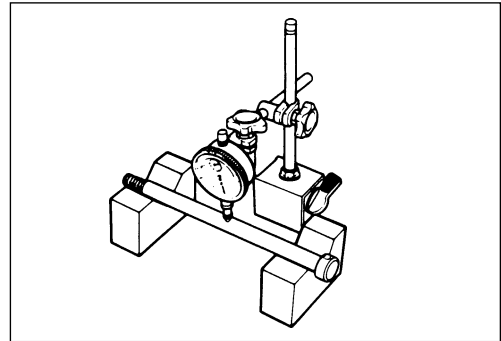

 **Wheel axle runout**
Service Limit: 0.25 mm (0.01 in)


**CUSHION**

Inspect the cushions for wear and damage.
 Replace the cushions if there is anything unusual.

**REAR SPROCKET**

Inspect the rear sprocket's teeth for wear. If they are worn, replace the sprockets and drive chain as a set.

-  Normal wear
 Excessive wear

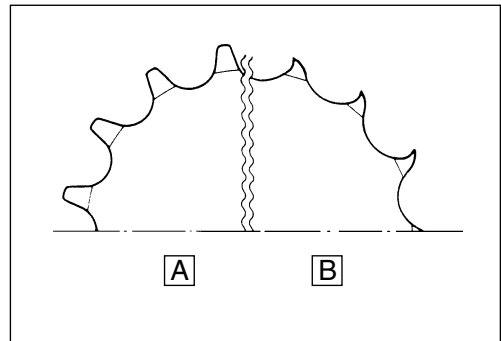**REASSEMBLY****WHEEL BEARINGS**

- Apply SUZUKI SUPER GREASE "A" to the bearings before installation.

For USA

 **99000-25030: SUZUKI SUPER GREASE "A"**

For the other countries

 **99000-25010: SUZUKI SUPER GREASE "A"**



- Install the wheel bearings using the special tool.

 **09941-34513: Bearing installer set**

CAUTION

First install the right wheel bearing, then install the left wheel bearing. (👉 5-29)

The sealed cover on the bearing must face to the outside.

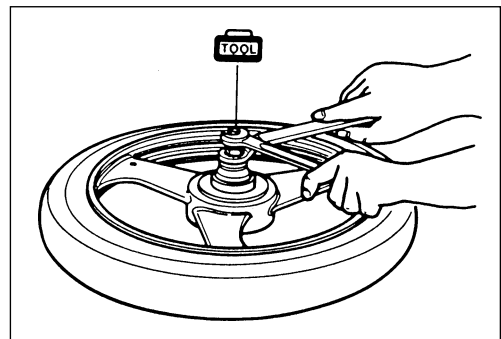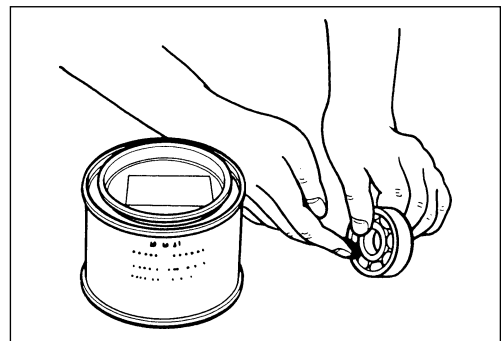

REAR SPROCKET MOUNTING DRUM BEARING AND DUST SEAL

- Install the new bearing and new dust seal using the special tool.

 **09913-75520: Bearing installer**

NOTE:

Apply *SUZUKI SUPER GREASE "A"* to the bearing and dust seal lip before assembling the rear sprocket mounting drum.

For USA

 **99000-25030: SUZUKI SUPER GREASE "A"**

For the other countries

 **99000-25010: SUZUKI SUPER GREASE "A"**



REMOUNTING


Remount the rear wheel in the reverse order of removal.

Pay attention to the following points:

- Make sure that the brake disc is clean and free of any grease. Apply **THREAD LOCK SUPER "1360"** to the brake disc bolts and tighten them to the specified torque.

 **99000-32130: THREAD LOCK SUPER "1360"**

 **Brake disc bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)**

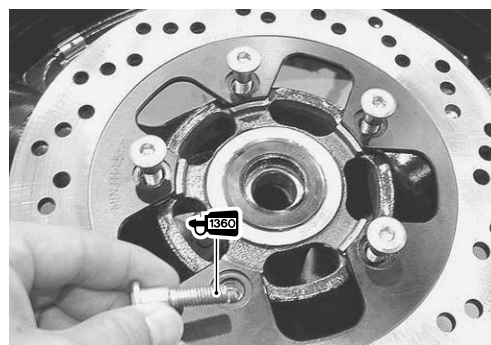

- Tighten the rear sprocket nuts to the specified torque.

 **Rear sprocket nut: 60 N·m (6.0 kgf·m, 43.5 lb-ft)**

NOTE:

The stamped mark ① on the rear sprocket should face to the outside.




- Adjust the drive chain slack after installing the rear wheel. (👉 2-15)
- Tighten the rear axle nut ② to the specified torque.

 **Rear axle nut: 100 N·m (10.0 kgf·m, 72.5 lb-ft)**

- Install a new cotter pin. (For E-03, 28, 33)
- Tighten both chain adjuster lock nuts securely.
- After remounting the rear wheel, pump the brake pedal a few times to check for proper brake operation.



REAR SUSPENSION CONSTRUCTION

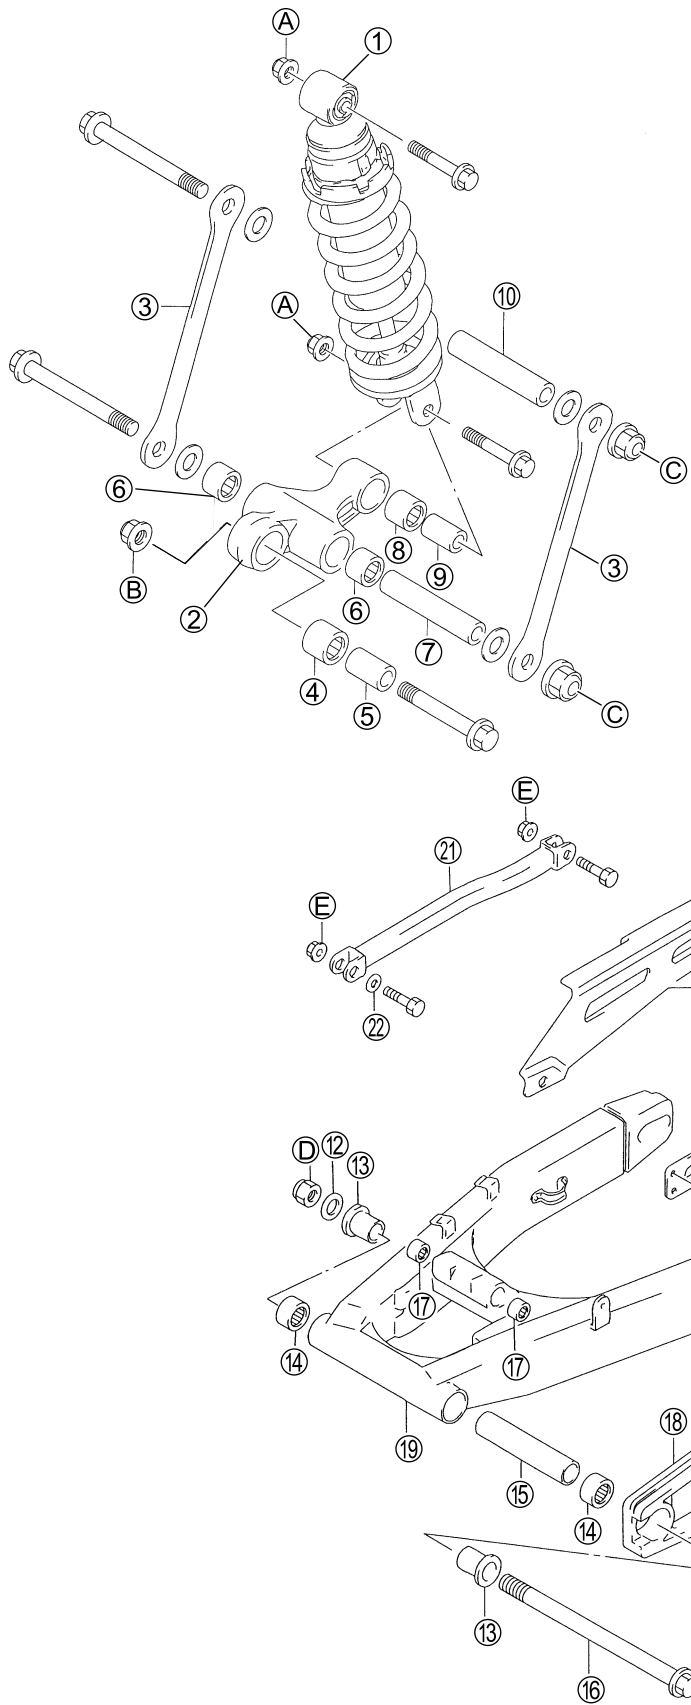


- ① Rear shock absorber
- ② Rear cushion lever
- ③ Rear cushion lever rod
- ④ Bearing
- ⑤ Spacer
- ⑥ Bearing
- ⑦ Spacer
- ⑧ Bearing
- ⑨ Spacer
- ⑩ Spacer
- ⑪ Chain adjuster plate
- ⑫ Washer
- ⑬ Spacer
- ⑭ Bearing
- ⑮ Spacer
- ⑯ Pivot shaft
- ⑰ Bearing
- ⑱ Chain buffer
- ⑲ Swingarm
- ⑳ Chain case
- ㉑ Torque link
- ㉒ Washer

- Ⓐ Rear shock absorber mounting nut
- Ⓑ Cushion lever mounting nut
- Ⓒ Cushion lever rod mounting nut
- Ⓓ Swingarm pivot nut
- Ⓔ Rear torque link nut




ITEM	N·m	kgf·m	lb·ft
Ⓐ	50	5.0	36.0
Ⓑ	78	7.8	56.5
Ⓒ	78	7.8	56.5
Ⓓ	100	10.0	72.5
Ⓔ	35	3.5	25.5

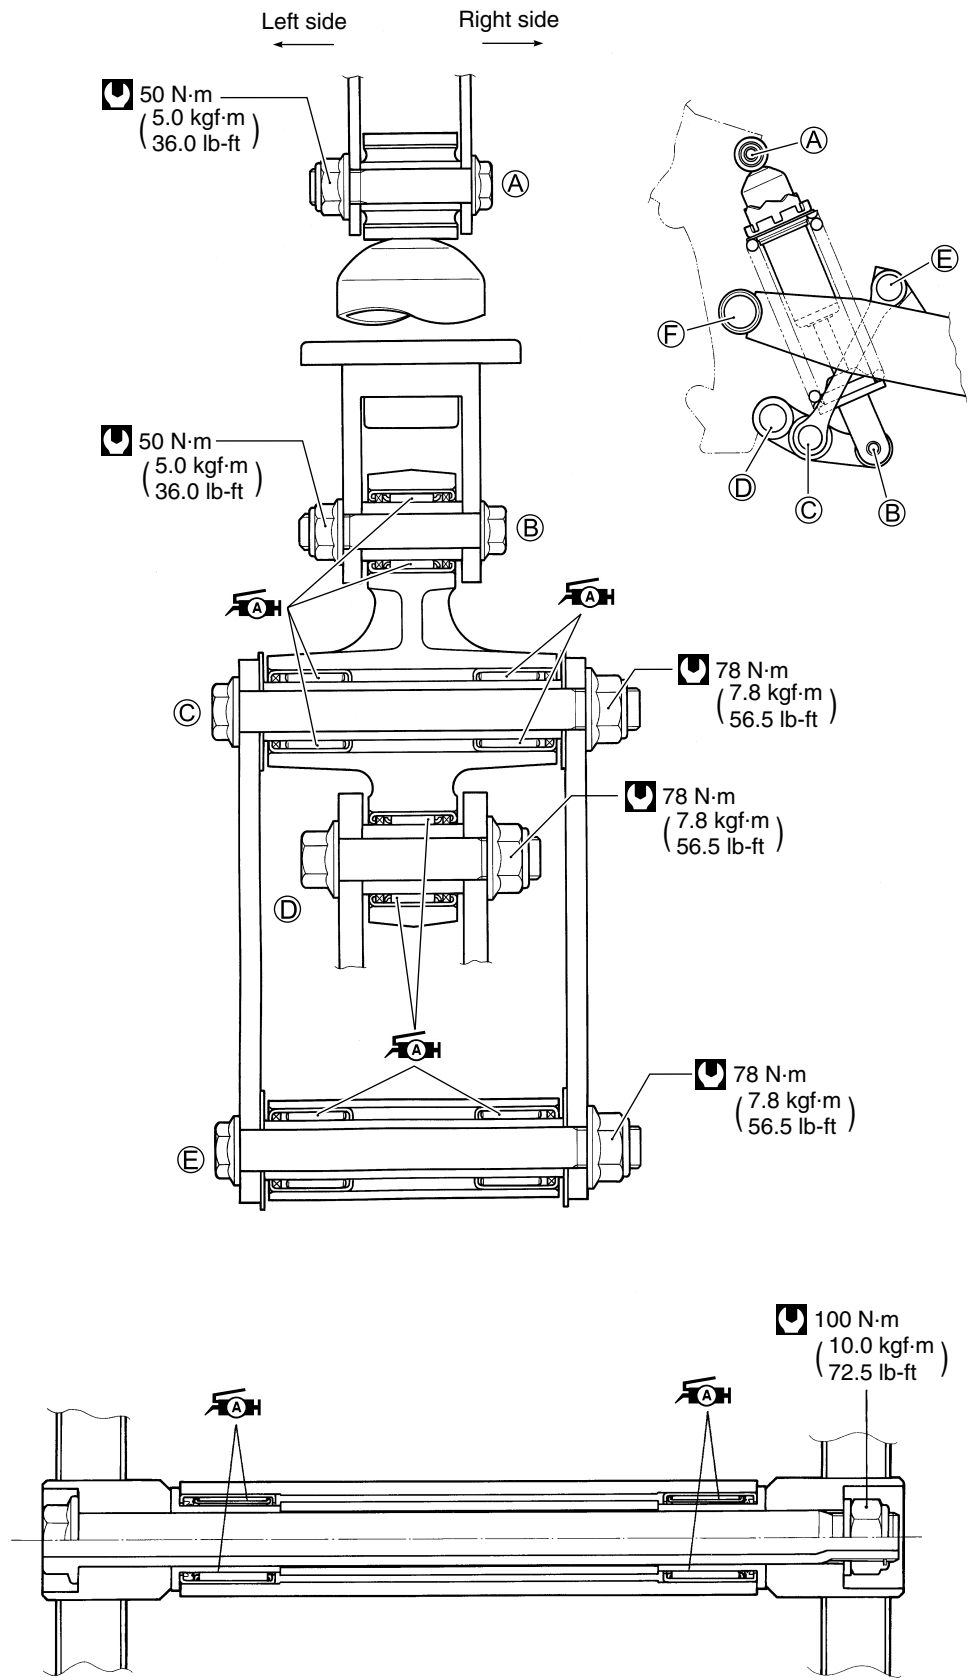


REMOVAL

- Remove the rear wheel. (☞ 5-30)
- Remove the drive chain case ①.

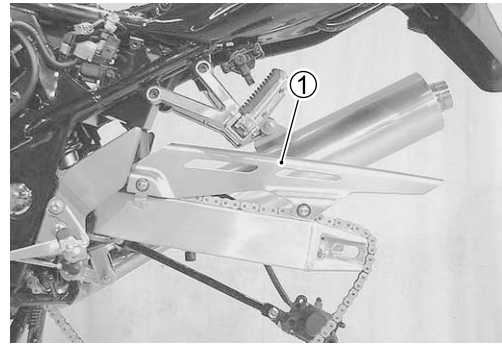


- Remove the rear torque link nut ②.

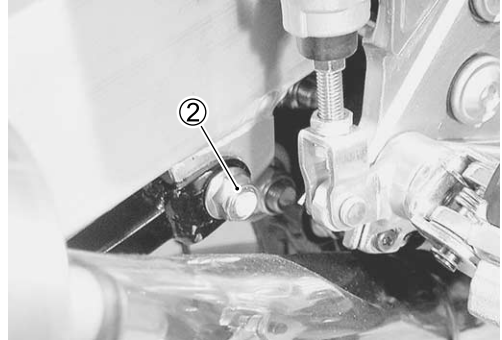


- Remove the brake hose union bolt ③.
- Remove the brake hose from the brake hose guide and hose clamps.

▲ CAUTION

Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials etc.

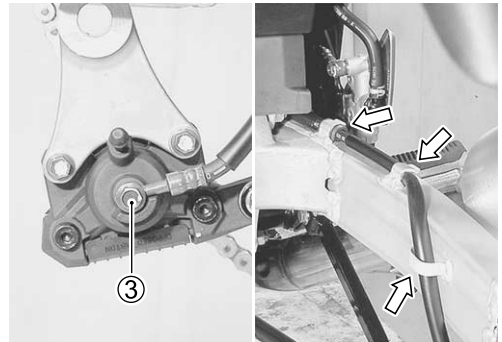


- Remove frame side cover (left side only). (☞ 5-6)
- Remove the rear shock absorber upper mounting bolt and nut ④.

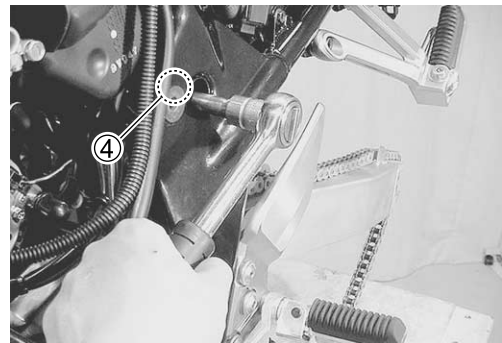


- Remove the cushion lever mounting bolt and nut ⑤.

NOTE:


Slightly loosen the cushion lever rod mounting nuts and rear shock absorber lower mounting nut to facilitate later disassembly.

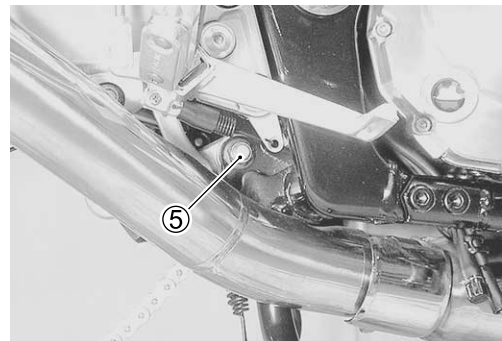

- Remove the right and left pivot shaft end caps ⑥.
- Remove the swingarm by removing the pivot shaft nut and pivot shaft.

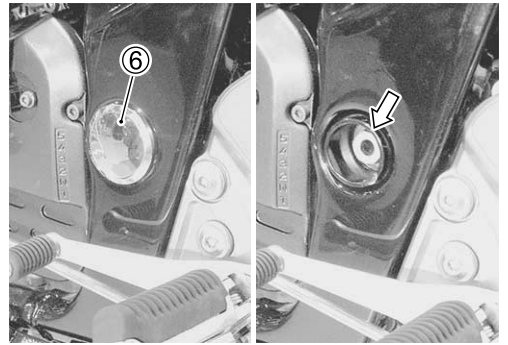


- Remove the rear shock absorber ⑦, cushion lever ⑧, cushion lever rods ⑨.

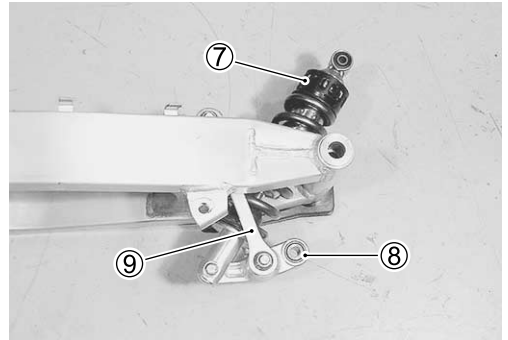

INSPECTION AND DISASSEMBLY


DUST SEALS AND SPACERS

- Remove the dust seals, washers and spacers from the swingarm and cushion lever.
- Inspect the spacers for any flaws or other damage. If any defects are found, replace the spacers with new ones.

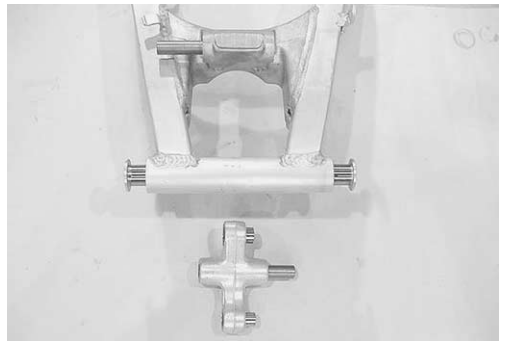

CHAIN BUFFER


- Remove the chain buffer ①.
- Inspect the chain buffer for wear and damage. If any defects are found, replace the chain buffer with a new one.

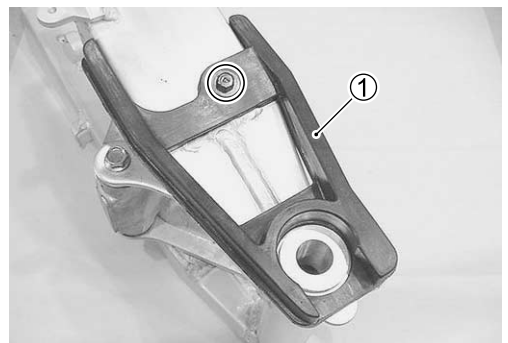

SWINGARM NEEDLE BEARINGS

Insert the spacers into the needle bearings, move the spacer up and down and check for any play.

If there is excessive play, replace the bearing(-s) with a new one.

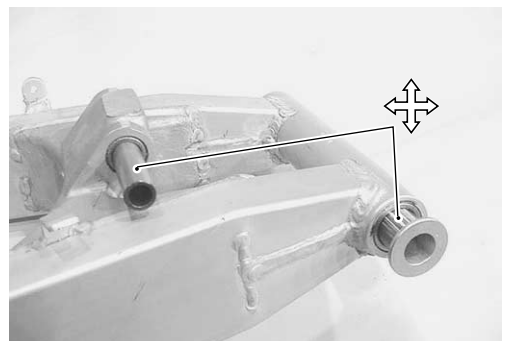


- Remove the swingarm needle bearings and spacer using the special tools.

TOOL 09923-74510: Bearing remover
 09930-30102: Sliding shaft


▲ CAUTION

The removed needle bearings should be replaced with new ones.

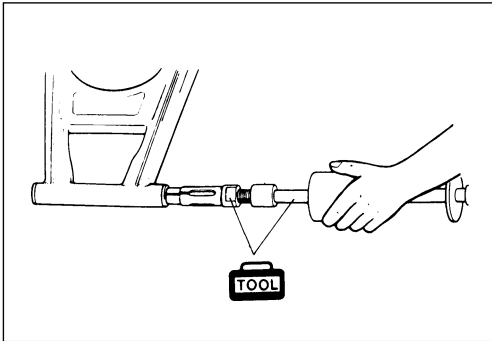

SWINGARM


Inspect the swingarm for damage.

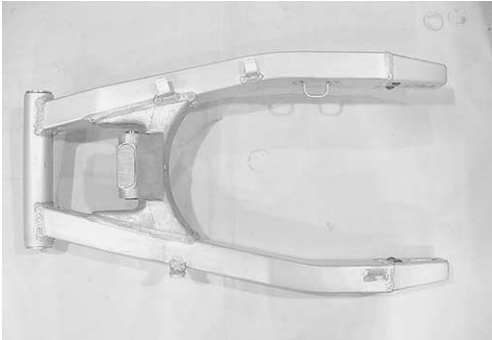

CUSHION LEVER NEEDLE BEARINGS




Insert the spacers into the needle bearings, move the spacer up and down and check for any play.

If there is excessive play, replace the bearing(-s) with a new one.

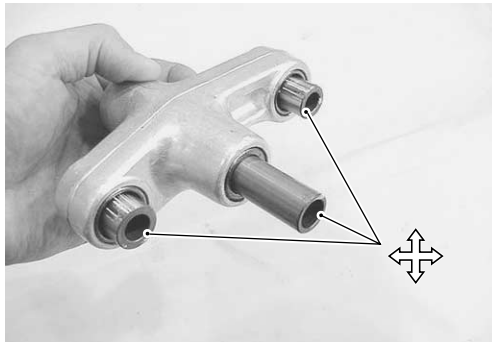

- Remove the cushion lever needle bearings using the special tools.

TOOL 09923-73210: Bearing remover
 09930-30102: Sliding shaft
 09925-98221: Bearing remover
 09943-88211: Bearing remover

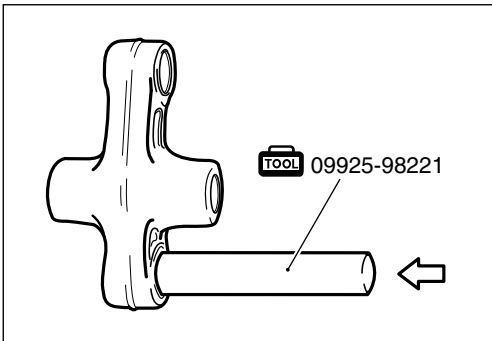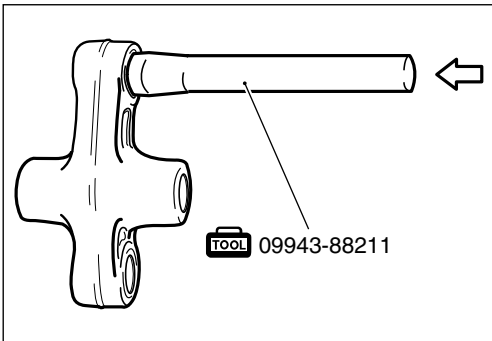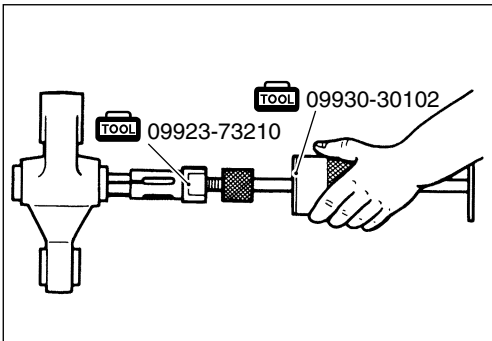


CUSHION LEVER AND CUSHION LEVER RODS


Inspect the cushion lever and cushion lever rods for damage.




PIVOT SHAFT

Measure the pivot shaft runout using the dial gauge. If the runout exceeds the service limit, replace the pivot shaft.

-  **09900-20606: Dial gauge (1/100 mm)**
- 09900-20701: Magnetic stand**
- 09900-21304: V-block set (100 mm)**

 **Swingarm pivot shaft runout**
Service Limit: 0.3 mm (0.01 in)

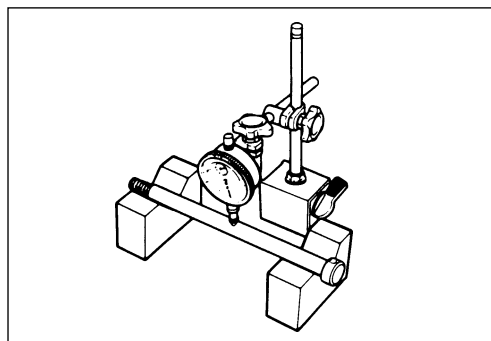

REAR SHOCK ABSORBER

Inspect the rear shock absorber for damage and oil leakage. If any defects are found, replace the rear shock absorber with a new one.

CAUTION

**Do not attempt to disassemble the rear shock absorber.
 It is unserviceable.**



REASSEMBLY

SWINGARM NEEDLE BEARINGS

- Before installing the needle bearings, install the spacer.
- Press the needle bearings into the swingarm pivot using the special tool.

 **09941-34513: Steering outer race installer**

NOTE:

Install the needle bearings with the stamped mark facing out.


- Apply SUZUKI SUPER GREASE "A" to the spacers, dust seals and needle bearings.

For USA

 **99000-25030: SUZUKI SUPER GREASE "A"**

For the other countries

 **99000-25010: SUZUKI SUPER GREASE "A"**

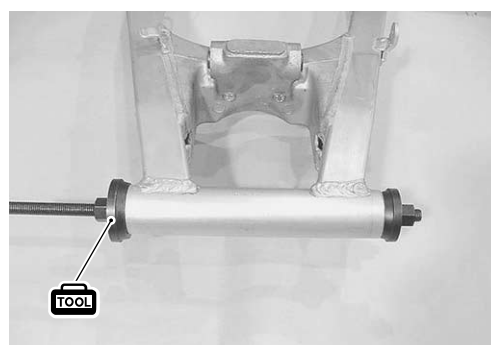

CUSHION LEVER NEEDLE BEARINGS

- Press the needle bearings into the cushion lever using the special tool.

09941-34513: Steering outer race installer


- Apply SUZUKI SUPER GREASE "A" to the spacers and needle bearings.

For USA

 99000-25030: SUZUKI SUPER GREASE "A"

For the other countries

 99000-25010: SUZUKI SUPER GREASE "A"

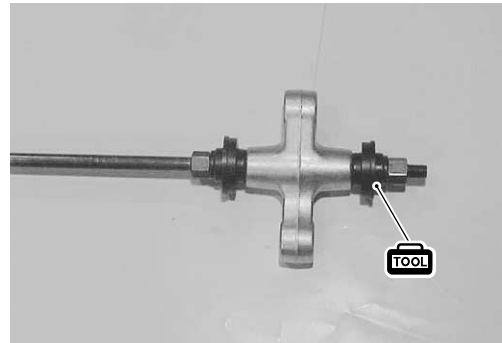

REAR SHOCK ABSORBER DISPOSAL


WARNING

The rear shock unit contains high-pressure nitrogen gas. Mishandling can cause explosion.

- * Keep away from fire and heat. High gas pressure caused by heat can cause an explosion.
- * Release gas pressure before disposing.

GAS PRESSURE RELEASE


- Mark the drill hole with a center punch.

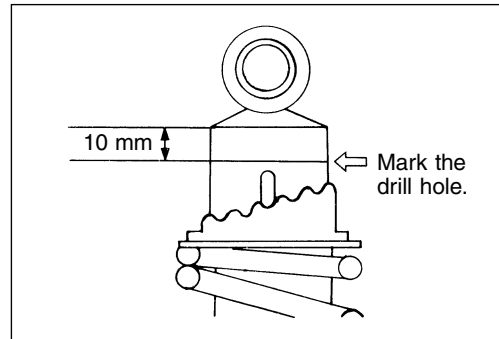

- Cover the rear shock absorber with a transparent vinyl bag ①.
- Hold the rear shock absorber ② with a vice.
- Drill a hole with a 3 mm drill bit.

WARNING


Wear eye protection to protect your eyes from released gas and metal chips.

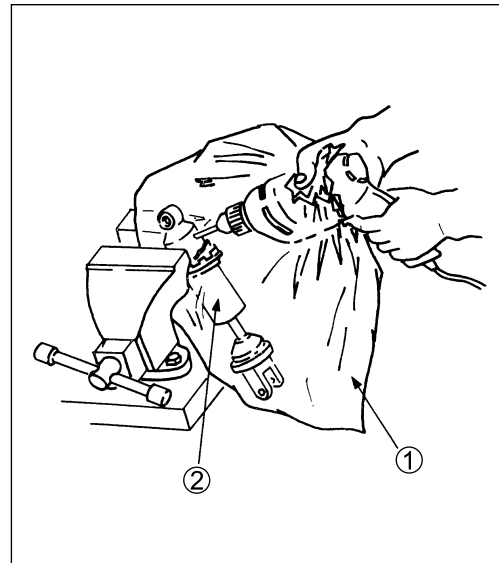

REMOUNTING

Remount the swingarm and rear shock absorber in the reverse order of removal. Pay attention to the following points:

- When remount the rear shock absorber and cushion lever, set the index punched mark rearward.

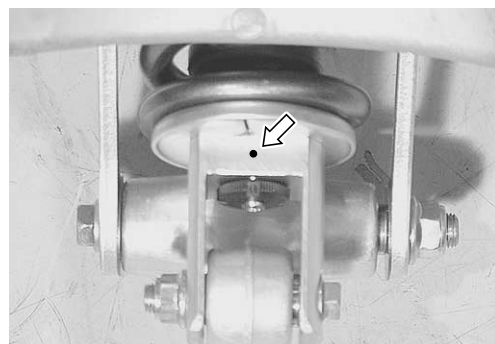


- Tighten the cushion lever rod mounting nuts ① and rear shock absorber lower mounting nut ② to the specified torque.

Cushion lever rod mounting nut ①:

78 N·m (7.8 kgf·m, 56.5 lb-ft)


Rear shock absorber lower mounting nut ②:

50 N·m (5.0 kgf·m, 36.0 lb-ft)

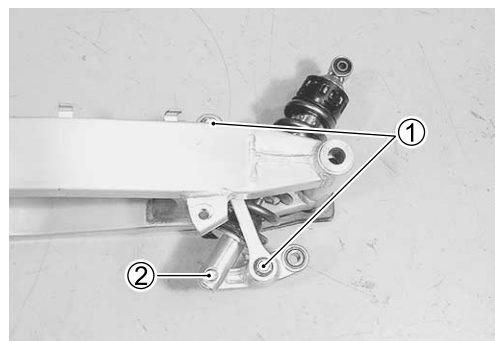


- Tighten the pivot shaft nut ③ to the specified torque.

Pivot shaft nut: 100 N·m (10.0 kgf·m, 72.5 lb-ft)

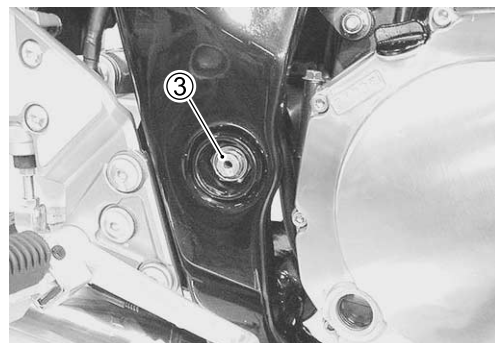

- Tighten the cushion lever mounting nut ④ to the specified torque.


Cushion lever mounting nut: 78 N·m (7.8 kgf·m, 56.5 lb-ft)

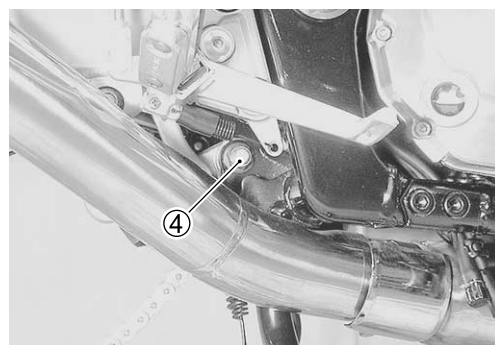


- Tighten the rear shock absorber upper mounting nut ⑤ to the specified torque.


Rear shock absorber upper mounting nut:

50 N·m (5.0 kgf·m, 36.0 lb-ft)

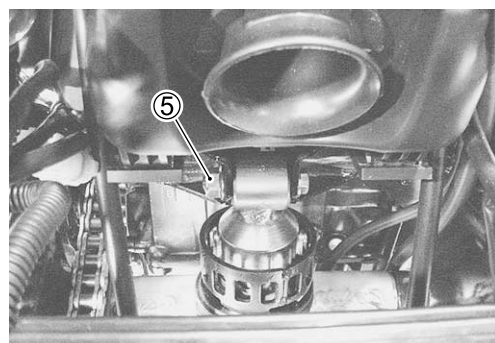


- Tighten the brake hose union bolt ⑥ to the specified torque.

 **Brake hose union bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)**

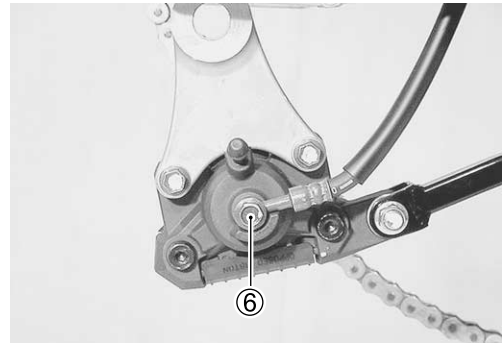


- Tighten the rear torque link nut ⑦ to the specified torque.


 **Rear torque link nut: 35 N·m (3.5 kgf·m, 25.5 lb-ft)**

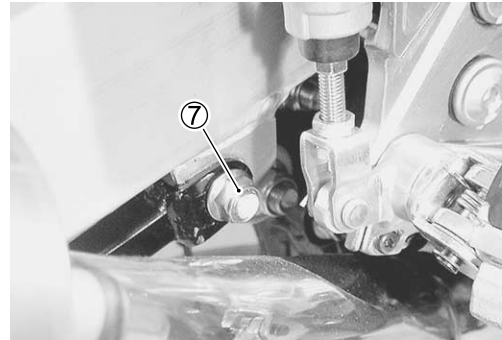

REAR WHEEL


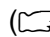
 5-33)

REAR BRAKE

Bleed air from the brake system after remounting the brake caliper. ( 2-18)


FINAL INSPECTION AND ADJUSTMENT

After installing the rear suspension and rear wheel, adjust the following before riding.

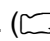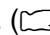- * Drive chain ( 2-15)
- * Tire pressure ( 2-20)


SUSPENSION SETTING

After installing the rear suspension, adjust the spring pre-load and damping force as follows.

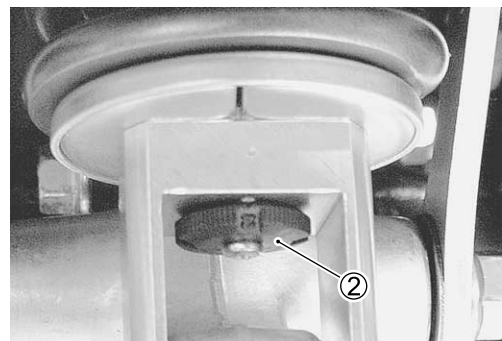

Spring pre-load adjuster ①	Rebound damping force adjuster ②
4th	2nd

FRONT BRAKE CONSTRUCTION

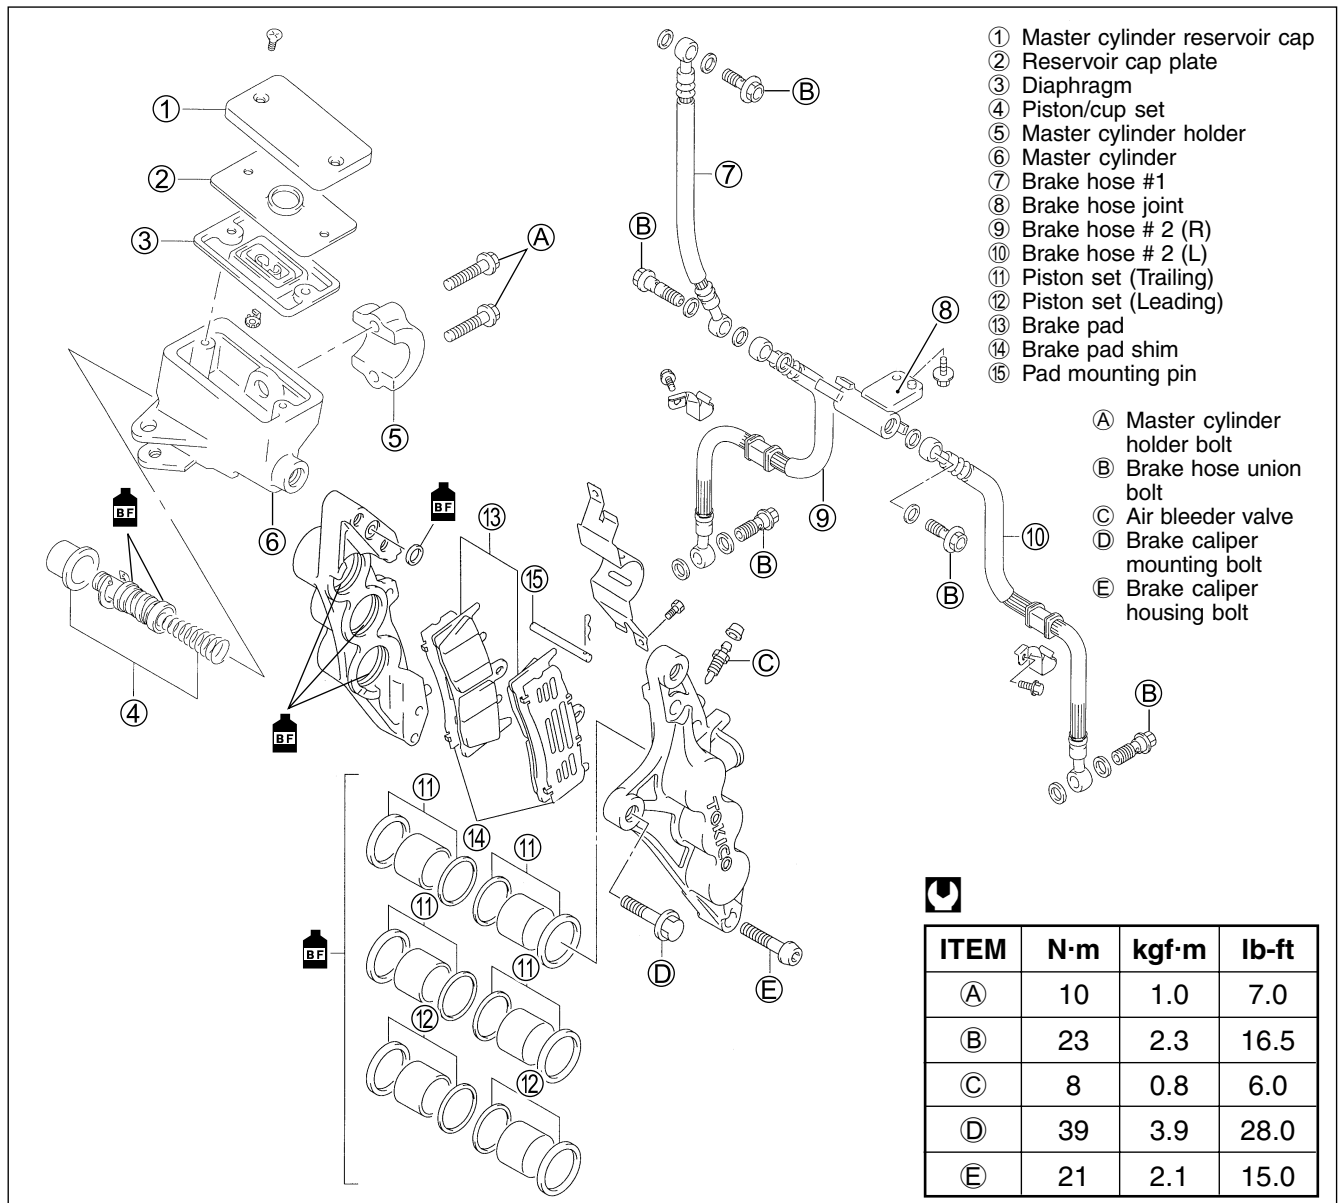

▲ WARNING

- * This brake system is filled with an ethylene glycol-based DOT 4 brake fluid. Do not use or mix different types of fluid, such as silicone-based or petroleum-based brake fluids.
- * Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or which has been stored for long periods of time.
- * When storing brake fluid, seal the container completely and keep it away from children.
- * When replenishing brake fluid, take care not to get dust into the fluid.
- * When washing brake components, use new brake fluid. Never use cleaning solvent.
- * A contaminated brake disc or brake pad reduces braking performance. Discard contaminated pads and clean the disc with high quality brake cleaner or a neutral detergent.

▲ CAUTION

Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials etc.

BRAKE PAD REPLACEMENT

- Remove the spring ①.
- Remove the brake pads by removing the clip ② and pad mounting pin ③.


⚠ CAUTION

- * Do not operate the brake lever while dismantling the pads.
- * Replace the brake pads as a set, otherwise braking performance will be adversely affected.

- Install the new brake pads.


NOTE:

After replacing the brake pads, pump the brake lever few times to check for proper brake operation and then check the brake fluid level.

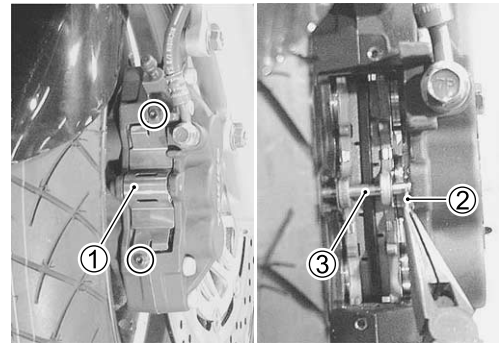

BRAKE FLUID REPLACEMENT

- Place the motorcycle on a level surface and keep the handlebars straight.
- Remove the brake fluid reservoir cap and diaphragm.
- Suck up the old brake fluid as much as possible.
- Fill the reservoir with new brake fluid.

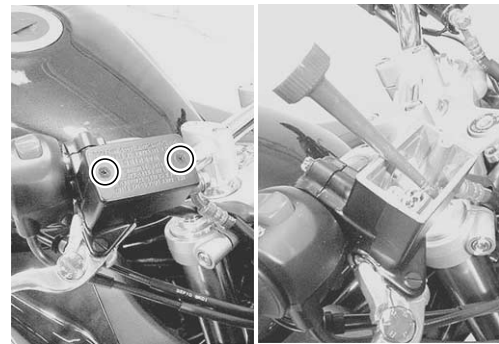


- Connect a clear hose to the caliper air bleeder valve and insert the other end of hose into a receptacle.
- Loosen the air bleeder valve and pump the brake lever until old brake fluid flows out of the bleeder system.
- Close the caliper air bleeder valve and disconnect a clear hose. Fill the reservoir with new fluid to the upper mark of the reservoir.

BF Specification and Classification: DOT 4

⚠ CAUTION

Bleed air from the brake system. (👉 2-18)

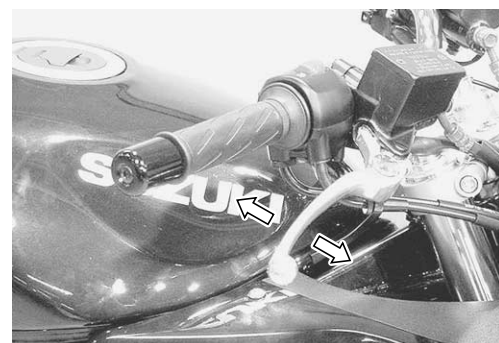


CALIPER REMOVAL AND DISASSEMBLY

- Remove the brake hose from the caliper by removing the union bolt ① and catch the brake fluid in a suitable receptacle.

NOTE:

Place a rag underneath the union bolt on the brake caliper to catch any spilt brake fluid.

- Remove the brake caliper by removing the caliper mounting bolts ②.

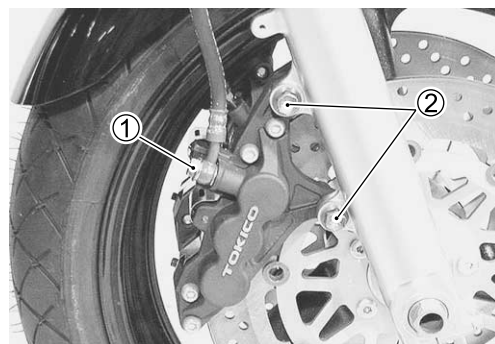

⚠ CAUTION

Never reuse the brake fluid left over from previous servicing and stored for long periods of time.

⚠ WARNING

Brake fluid, if it leaks, will interfere with safe running and discolor painted surfaces. Check the brake hose and hose joints for cracks and fluid leakage.

NOTE:

Slightly loosen the caliper housing bolts before removing the caliper mounting bolts to facilitate later disassembly.

- Remove the brake pads. (➡ 5-44)
- Separate the caliper halves to remove the caliper housing bolts.



- Remove the O-rings.

⚠ CAUTION

Replace the O-rings with new ones.



- Place a rag over the pistons to prevent it from popping out and then force out the pistons using compressed air.

⚠ CAUTION

Do not use high pressure air to prevent piston damage.



- Remove the dust seals and piston seals.

▲ CAUTION

Do not reuse the dust seals and piston seals to prevent fluid leakage.

CALIPER INSPECTION

BRAKE CALIPER

Inspect the brake caliper cylinder wall for nicks, scratches or other damage.

BRAKE CALIPER PISTON

Inspect the brake caliper piston surface for any scratches or other damage.



CALIPER REASSEMBLY AND REMOUNTING



Reassemble the caliper in the reverse order of removal and disassembly. Pay attention to the following points:

- Wash the caliper bores and pistons with specified brake fluid. Particularly wash the dust seal grooves and piston seal grooves.

BF **Specification and Classification: DOT 4**

▲ CAUTION

- * Wash the caliper components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to wash them.
- * Do not wipe the brake fluid off after washing the components.
- * When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvent such as gasoline, kerosine or the others.
- * Replace the piston seals and dust seals with new ones when reassembly. Apply the brake fluid to both seals when installing them.

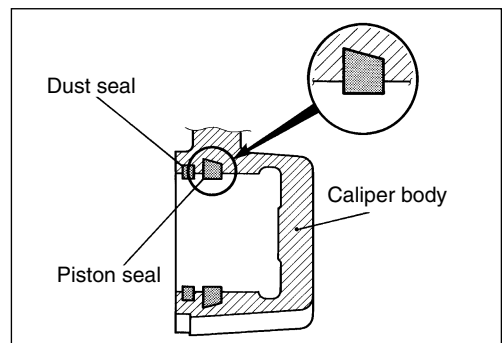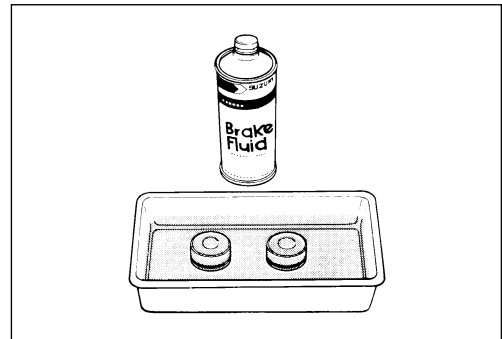

PISTON SEAL

- Install the piston seals as shown in the right illustration.

O-ring

- Install the O-rings and put caliper halves together.



- Tighten each bolt to the specified torque.

 **Front brake caliper housing bolt ①:**
21 N·m (2.1 kgf·m, 15.0 lb-ft)

Front brake caliper mounting bolt ②:
39 N·m (3.9 kgf·m, 28.0 lb-ft)


Front brake hose union bolt ③:
23 N·m (2.3 kgf·m, 16.5 lb-ft)

NOTE:

Before remounting the caliper, push the piston all the way into the caliper.

▲ CAUTION

Bleed air from the system after reassembling the caliper.
 2-18

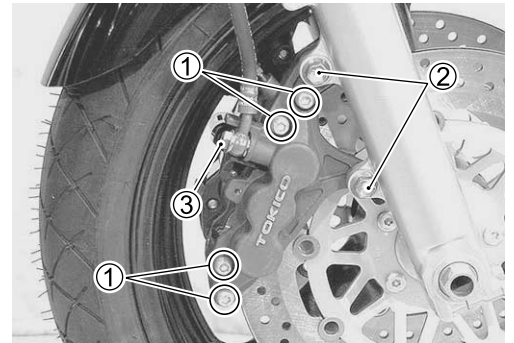

BRAKE DISC INSPECTION

- Remove the front and rear wheels. (☞ 5-9 and -30)
- Check the brake disc for damage or cracks. Measure the thickness using the micrometer.
- Replace the brake disc if the thickness is less than the service limit or if damage is found.

TOOL 09900-20205: Micrometer (0 – 25 mm)

DATA Brake disc thickness



Service Limit (front) : 4.0 mm (0.16 in)
(rear) : 4.5 mm (0.18 in)

- Measure the runout using the dial gauge.
- Replace the disc if the runout exceeds the service limit.

TOOL 09900-20606: Dial gauge (1/100 mm)
09900-20701: Magnetic stand


DATA Brake disc runout

Service Limit (front and rear): 0.3 mm (0.012 in)

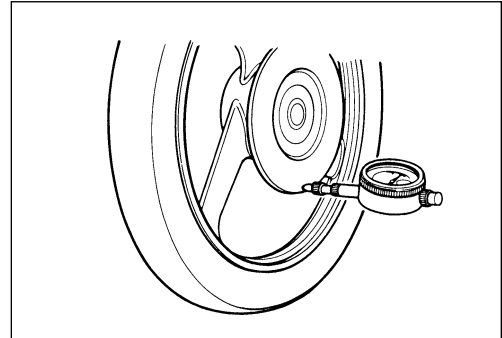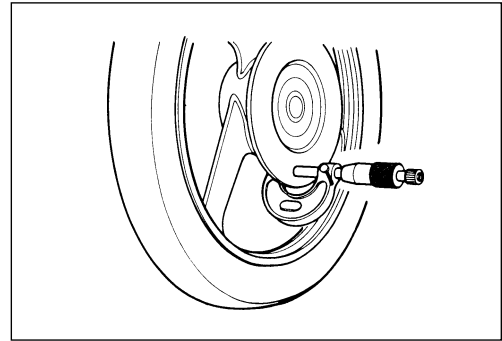

BRAKE DISC REMOVAL AND REMOUNTING

- Remove the front and rear wheels. (☞ 5-9 and -30)
- Remove the front and rear brake discs.

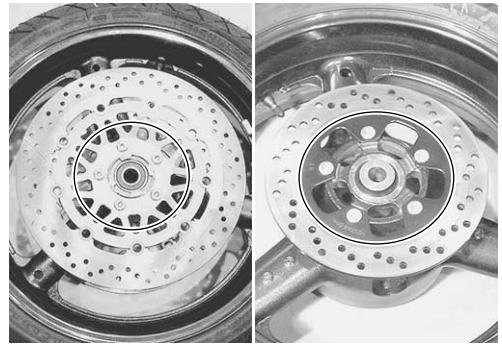


When remounting the brake discs, pay attention to the following points:

- Make sure that the brake discs are clean and free of any grease. Apply THREAD LOCK SUPER “1360” to the brake disc bolts and tighten them to the specified torque.


1360 99000-32130: THREAD LOCK SUPER “1360”

U Brake disc bolts: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

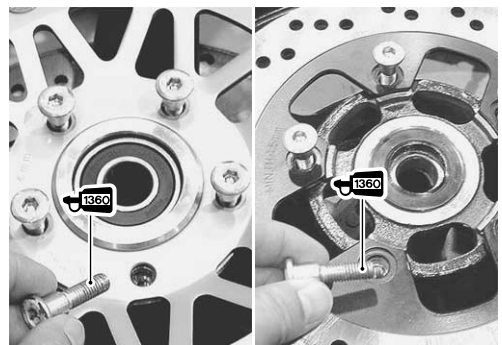


MASTER CYLINDER REMOVAL AND DISASSEMBLY

- Disconnect the front brake light switch lead wires ①.

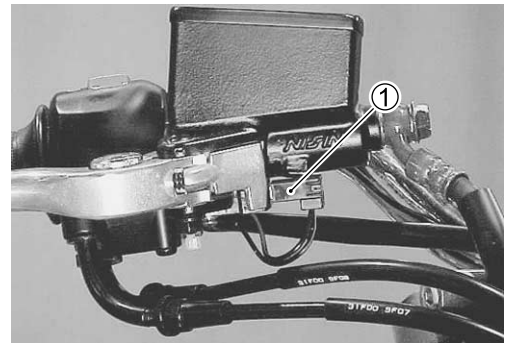


- Place a rag underneath the brake hose union bolt on the master cylinder to catch any spilt brake fluid. Remove the brake hose union bolt and disconnect the brake hose.

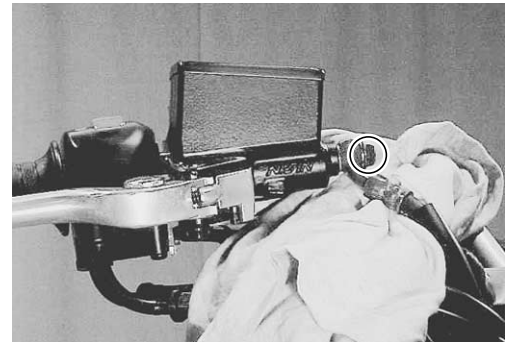


▲ CAUTION

Immediately wipe off any brake fluid contacting any part of the motorcycle. The brake fluid reacts chemically with paint, plastics and rubber materials, etc., and will damage them severely.


- Remove the master cylinder assembly.

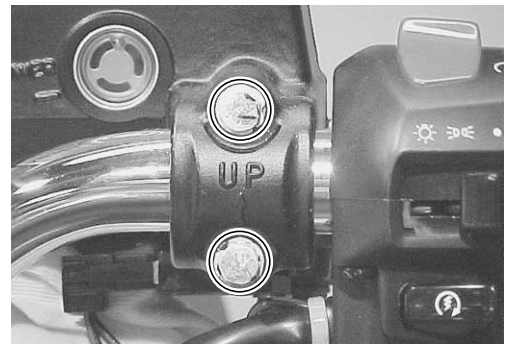

- Remove the brake lever ② and brake light switch ③.

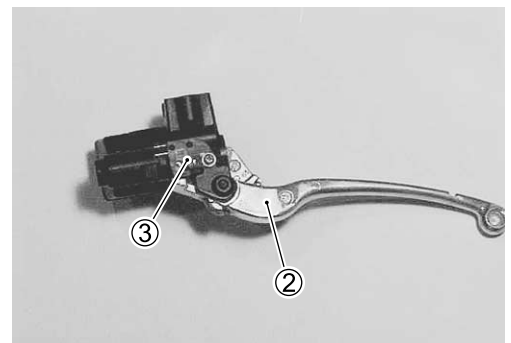


- Remove the reservoir cap ④, plate ⑤ and diaphragm ⑥.
- Drain the brake fluid.

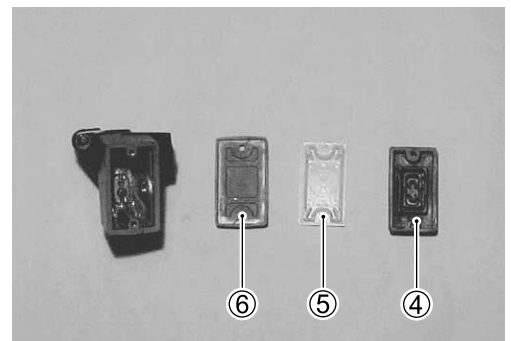


- Pull out the dust boot ① and remove the circlip ②.

TOOL 09900-06108: Snap ring pliers

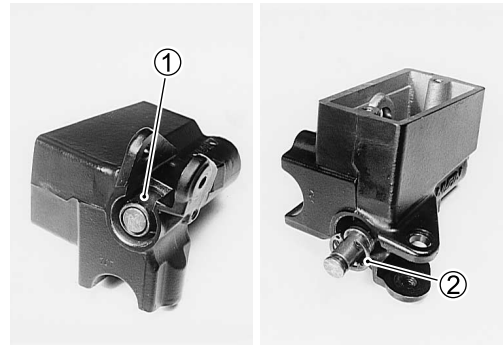

- Remove the piston/secondary cup, primary cup and spring.

- ③ Secondary cup
- ④ Piston
- ⑤ Primary cup
- ⑥ Spring

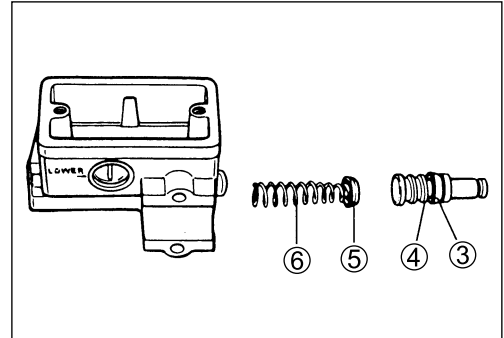


MASTER CYLINDER INSPECTION

MASTER CYLINDER

Inspect the master cylinder bore for any scratches or other damage.


PISTON

Inspect the piston surface for any scratches or other damage.

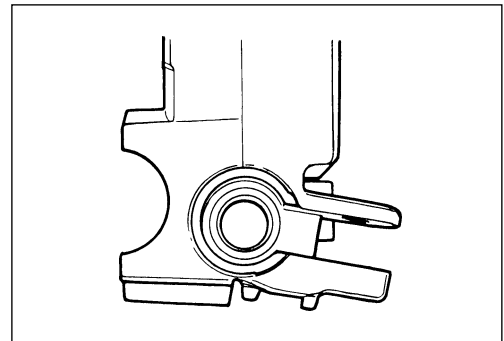

RUBBER PARTS

Inspect the primary cup, secondary cup and dust seal for wear or damage.

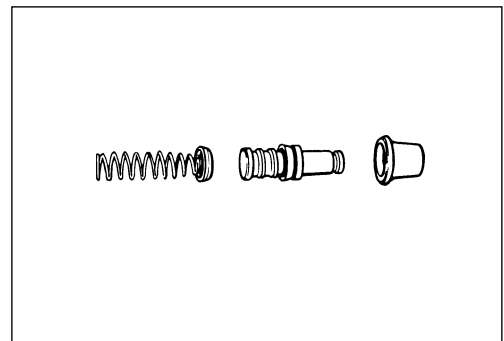

MASTER CYLINDER REASSEMBLY AND REMOUNTING

Reassemble and remount the master cylinder in the reverse order of removal and disassembly. Pay attention to the following points:


▲ CAUTION

- * Wash the master cylinder components with new brake fluid before reassembly.
- * Do not wipe the brake fluid off after washing the components.
- * When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvents such as gasoline, kerosine, etc.
- * Apply brake fluid to the master cylinder bore and all of the master cylinder components before reassembly.



Specification and classification: DOT 4


- When installing the brake light switch, align the projection on the switch with the hole in the master cylinder.

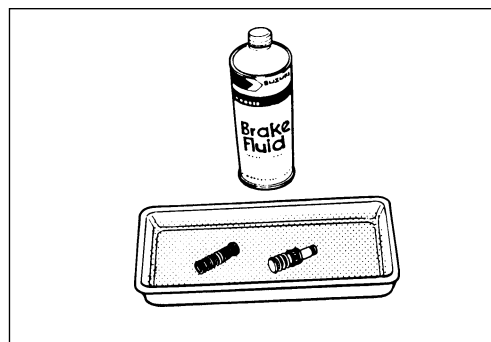


- When remounting the master cylinder onto the handlebar, align the master cylinder holder's mating surface ① with the punched mark ② on the handlebar and tighten the upper holder bolt first.




- Ⓐ Master cylinder
- Ⓑ Master cylinder upper holder bolt
- Ⓒ Handlebar
- Ⓓ Clearance

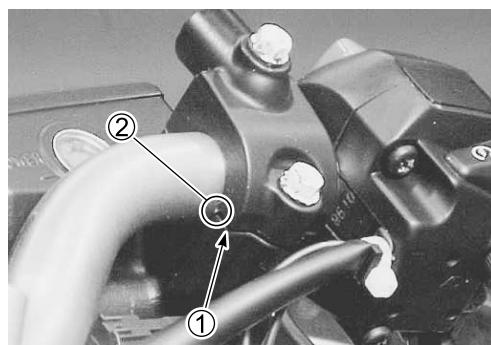

 **Master cylinder holder bolt (upper and lower):**
10 N·m (1.0 kgf·m, 7.0 lb-ft)

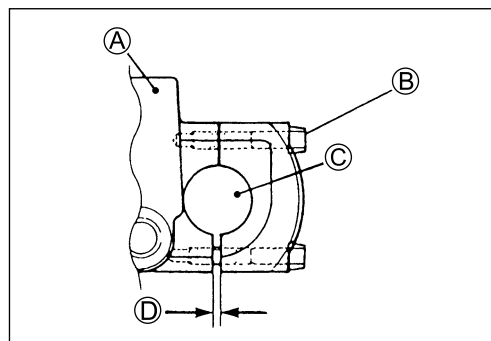


- Tighten the brake hose union bolt to the specified torque.


 **Brake hose union bolt: 23 N·m (2.3 kgf·m, 16.5 lb-ft)**

▲ CAUTION

Bleed air from the brake system after reassembling the master cylinder. (👉 2-18)

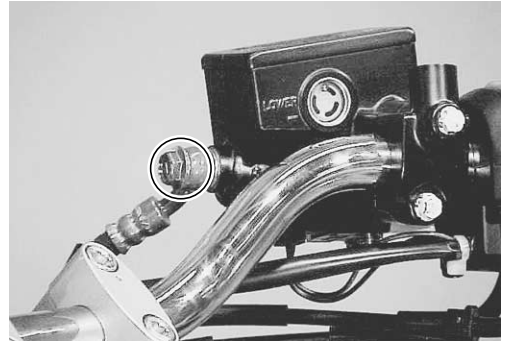

REAR BRAKE CONSTRUCTION

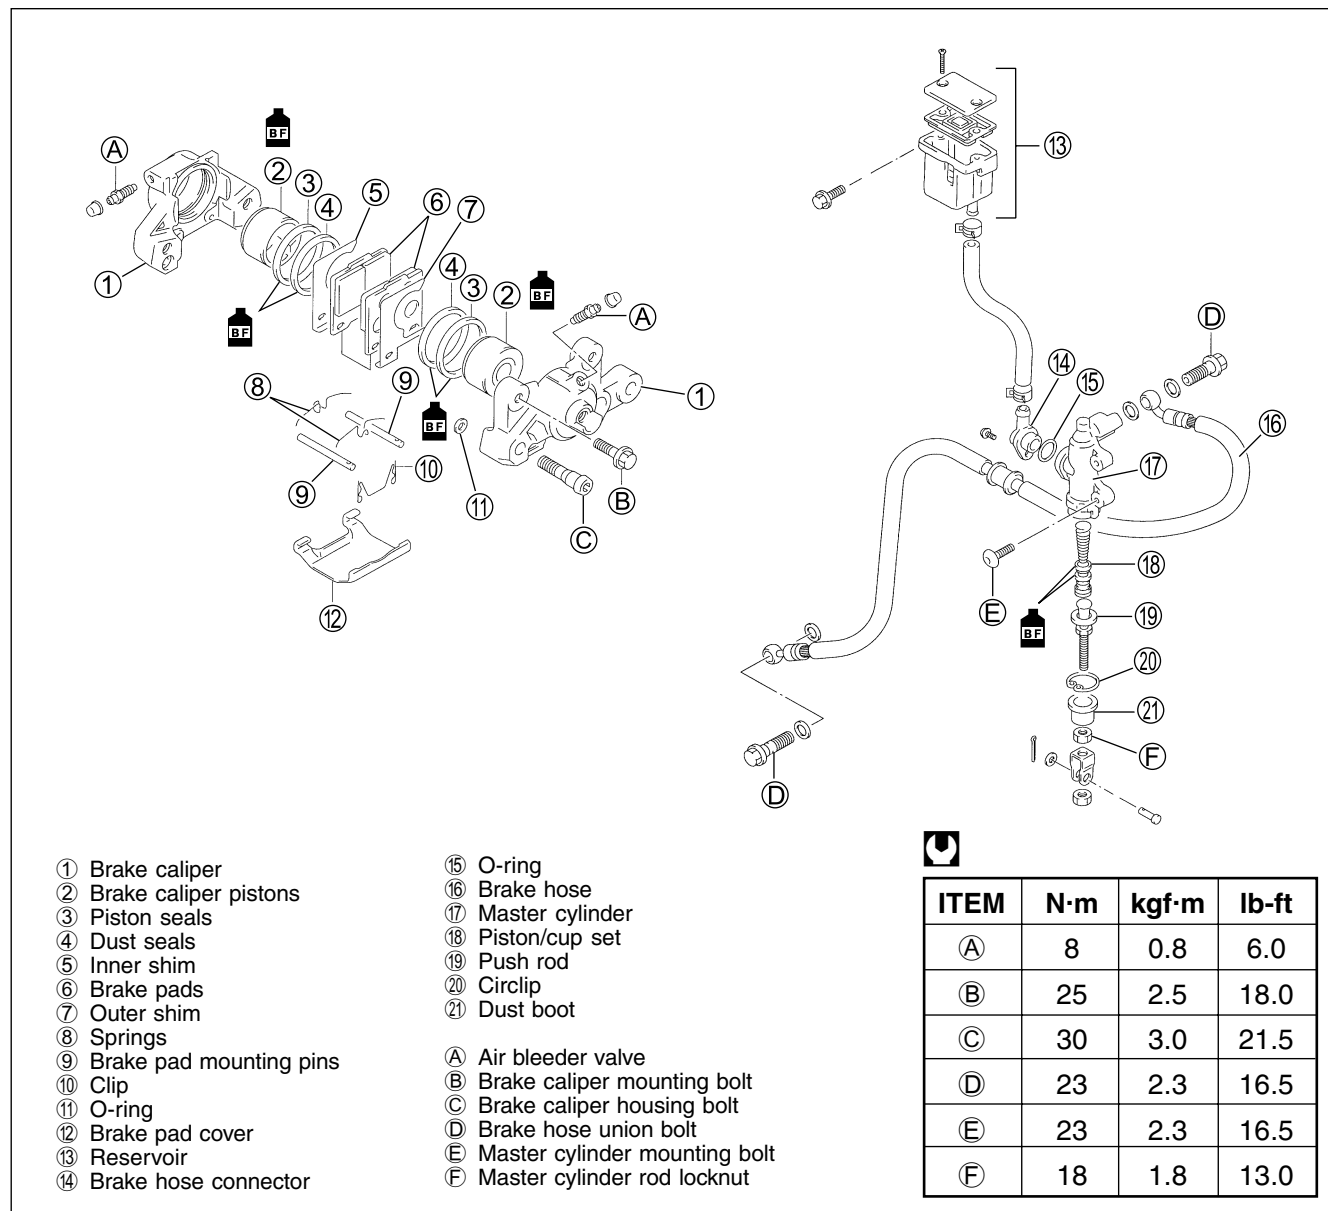

⚠ WARNING


- * This brake system is filled with an ethylene glycol-based DOT 4 brake fluid. Do not use or mix different types of fluid, such as silicone-based or petroleum-based brake fluids.
- * Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or which has been stored for long periods of time.
- * When storing brake fluid, seal the container completely and keep it away from children.
- * When replenishing brake fluid, take care not to get dust into the fluid.
- * When washing brake components, use new brake fluid. Never use cleaning solvent.
- * A contaminated brake disc or brake pad reduces braking performance. Discard contaminated pads and clean the disc with high quality brake cleaner or a neutral detergent.

⚠ CAUTION


Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials etc.

BRAKE PAD REPLACEMENT

- Remove the brake pad cover.

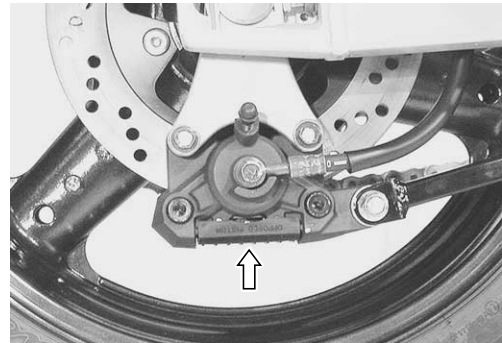

- Remove the clip ①.
- Remove the brake pads along with the shims by removing the brake pad mounting pins ② and springs ③.

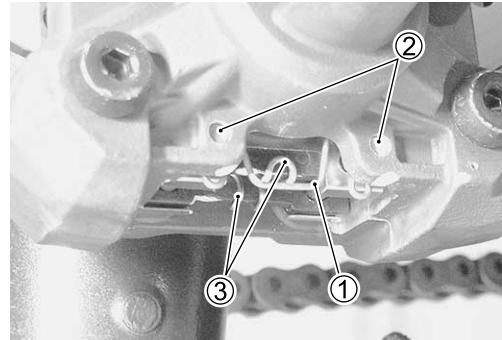


⚠ CAUTION

- * Do not operate the brake pedal during or after brake pad removal.
- * Replace the brake pads as a set, otherwise braking performance will be adversely affected.

- Install the new brake pads and shims.

⚠ CAUTION

Be sure to properly install the shims (④, ⑤) as shown in the illustration.

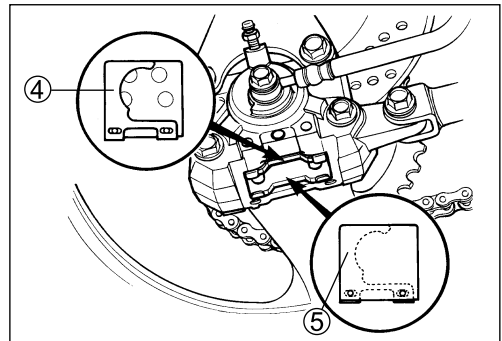


NOTE:

After replacing the brake pads, pump the brake pedal a few times to operate the brake correctly and then check the brake fluid level.

BRAKE FLUID REPLACEMENT


- Remove the seat. (☞ 5-5)
- Remove the frame side cover (right side). (☞ 5-6)
- Remove the reservoir cap.
- Replace the brake fluid. (☞ 5-44)

 **Specification and classification: DOT 4**

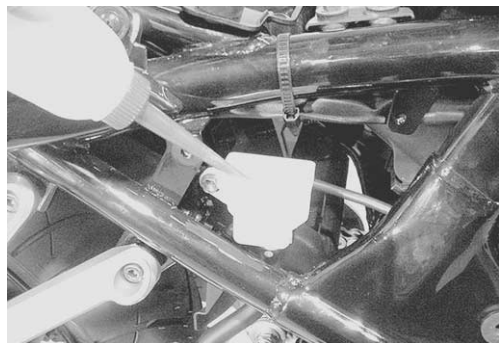

⚠ CAUTION

Bleed air from the brake system. (☞ 2-18)

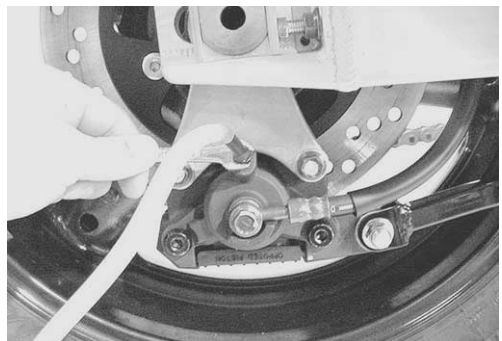


BRAKE CALIPER REMOVAL AND DISASSEMBLY

- Remove the brake hose union bolt ① and allow the brake fluid to drain into a suitable receptacle.
- Remove the brake caliper mounting bolts ② and rear torque link nut ③.

NOTE:

Slightly loosen the brake caliper housing bolts ④ to facilitate later disassembly before removing the brake caliper mounting bolts.

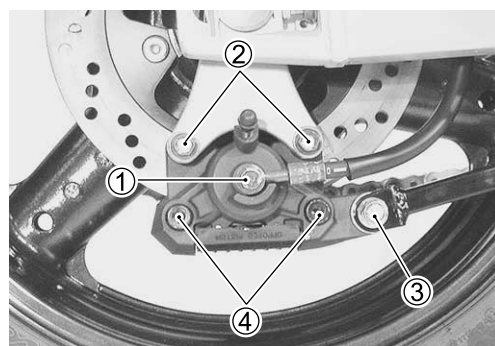

⚠ CAUTION

Never reuse the brake fluid left over from previous servicing and which has been stored for long periods of time.

⚠ WARNING

Brake fluid, if it leaks, will interfere with safe running and discolor painted surfaces. Check the brake hose and hose joints for cracks and oil leakage.


- Remove the brake pads. (↗ 5-54)
- Remove the brake caliper housing bolts ⑤.



- Separate the brake caliper halves.
- Remove the O-ring ⑥.

⚠ CAUTION


Replace the O-ring with a new one.

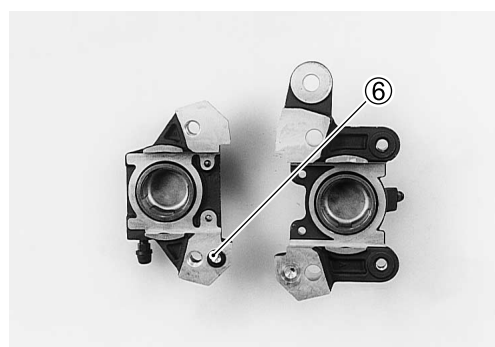

- Place a rag over the brake caliper piston to prevent it from popping out and then force out the piston using compressed air.

▲ CAUTION


Do not use high pressure air to prevent brake caliper piston damage.

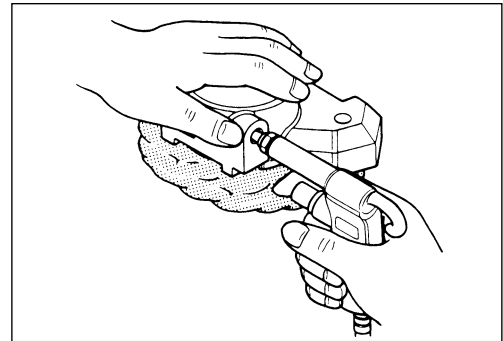

- Remove the dust seals and piston seals.

▲ CAUTION

Do not reuse the dust seals and piston seals to prevent fluid leakage.

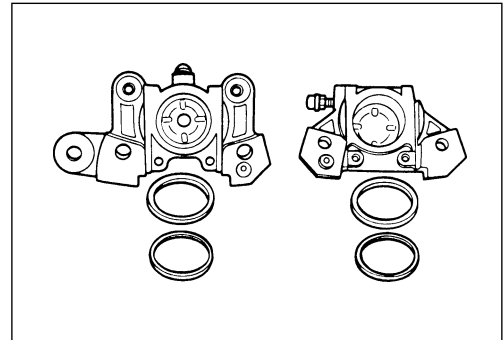

BRAKE CALIPER INSPECTION

BRAKE CALIPER (👉 5-46)

BRAKE CALIPER PISTONS (👉 5-46)

BRAKE DISC (👉 5-48)

DATA Brake disc thickness (rear)
Service Limit: 4.5 mm (0.18 in)


DATA Brake disc runout (rear)
Service Limit: 0.30 mm (0.012 in)

BRAKE CALIPER REASSEMBLY AND REMOUNTING

Reassemble and remount the brake caliper in the reverse order of removal and disassembly. Pay attention to the following points:

▲ CAUTION

- * Wash the brake caliper components with new brake fluid before reassembly.
- * Do not wipe the brake fluid off after washing the components.
- * When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvents such as gasoline, kerosine, etc.
- * Replace the piston seals and dust seals with new ones.
- * Apply brake fluid to all of the seals, brake caliper bores and pistons before reassembly.

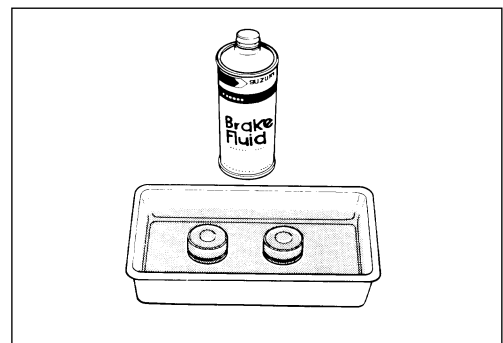

BF Specification and classification: DOT 4


- Tighten each bolt to the specified torque.

🔩 Brake caliper housing bolt ①:
30 N·m (3.0 kgf·m, 21.5 lb-ft)

Brake caliper mounting bolt ②:
25 N·m (2.5 kgf·m, 18.0 lb-ft)

Brake hose union bolt ③: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

Rear torque link nut ④: 35 N·m (3.5 kgf·m, 25.5 lb-ft)

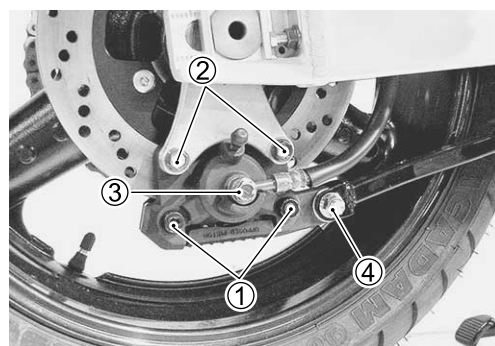

NOTE:


Before remounting the brake caliper, push the brake caliper pistons all the way into the caliper.

⚠ CAUTION


Bleed air from the system after reassembling the brake caliper. (👉 2-18)

MASTER CYLINDER REMOVAL AND DISASSEMBLY

- Remove the frame side cover ① at right side. (👉 5-6)

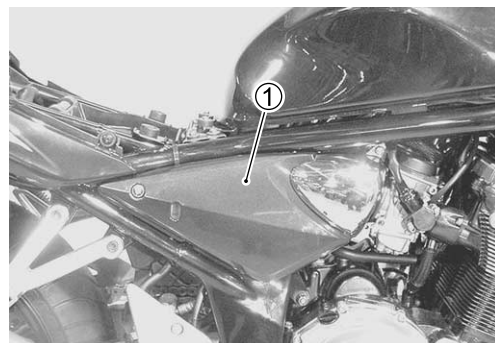


- Remove the reservoir mounting bolt ②.
- Place a rag underneath the brake hose union bolt on the master cylinder to catch any spilt brake fluid. Remove the brake hose union bolt ③ and disconnect the brake hose.
- Loosen the locknut ④.
- Remove the master cylinder along with the reservoir by removing the mounting bolts ⑤ and push rod ⑥.

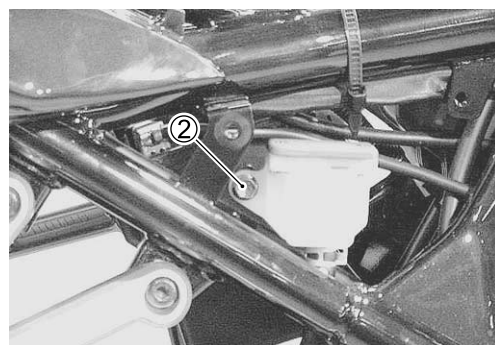

⚠ CAUTION


Immediately wipe off any brake fluid contacting any part of the motorcycle. The brake fluid reacts chemically with paint, plastics and rubber materials, etc., and will damage them severely.

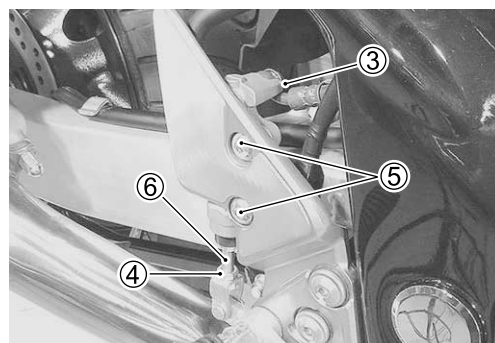

- Remove the brake hose connector by removing the screw.
- Remove the O-ring ①.


⚠ CAUTION

Replace the O-ring with a new one.

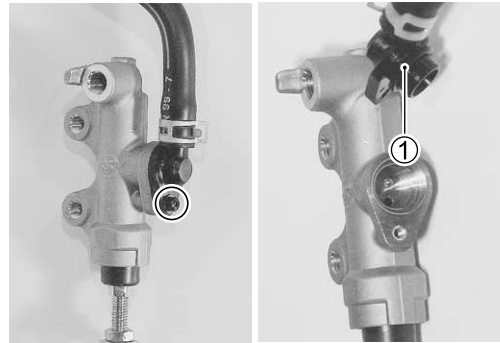


- Pull out the dust boot ② and remove the circlip ③.

TOOL 09900-06108: Snap ring pliers

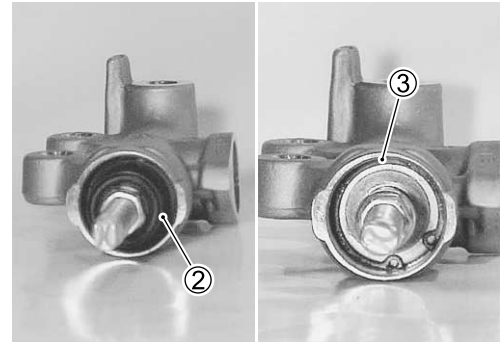

- Remove the push rod ④, piston/primary cup ⑤ and spring ⑥.

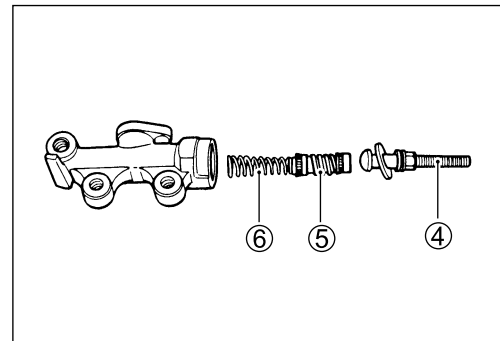

MASTER CYLINDER INSPECTION

MASTER CYLINDER


Inspect the master cylinder bore for any scratches or other damage.

PISTON

Inspect the piston surface for any scratches or other damage.

RUBBER PARTS

Inspect the primary/secondary cup and all of the rubber parts for damage.

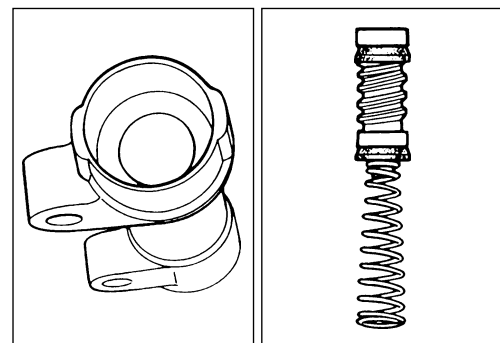

MASTER CYLINDER REASSEMBLY AND REMOUNTING

Reassemble and remount the master cylinder in the reverse order of removal and disassembly. Pay attention to the following points:

▲ CAUTION

- * Wash the master cylinder components with new brake fluid before reassembly.
- * Do not wipe the brake fluid off after washing the components.
- * When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvents such as gasoline, kerosine, etc.
- * Apply brake fluid to the master cylinder bore and all of the master cylinder components before reassembly.



Specification and Classification: DOT 4



- Tighten each bolt to the specified torque.




Master cylinder mounting bolt ①:
23 N·m (2.3 kgf·m, 16.5 lb-ft)

Master cylinder rod locknut ②:
18 N·m (1.8 kgf·m, 13.0 lb-ft)

Brake hose union bolt ③: 23 N·m (2.3 kgf·m, 16.5 lb-ft)

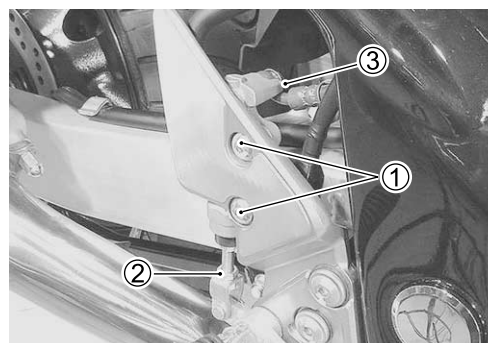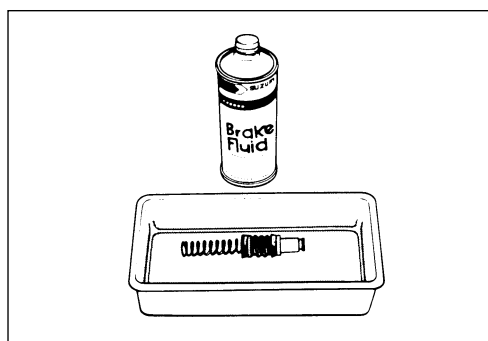

CLUTCH MASTER CYLINDER CONSTRUCTION

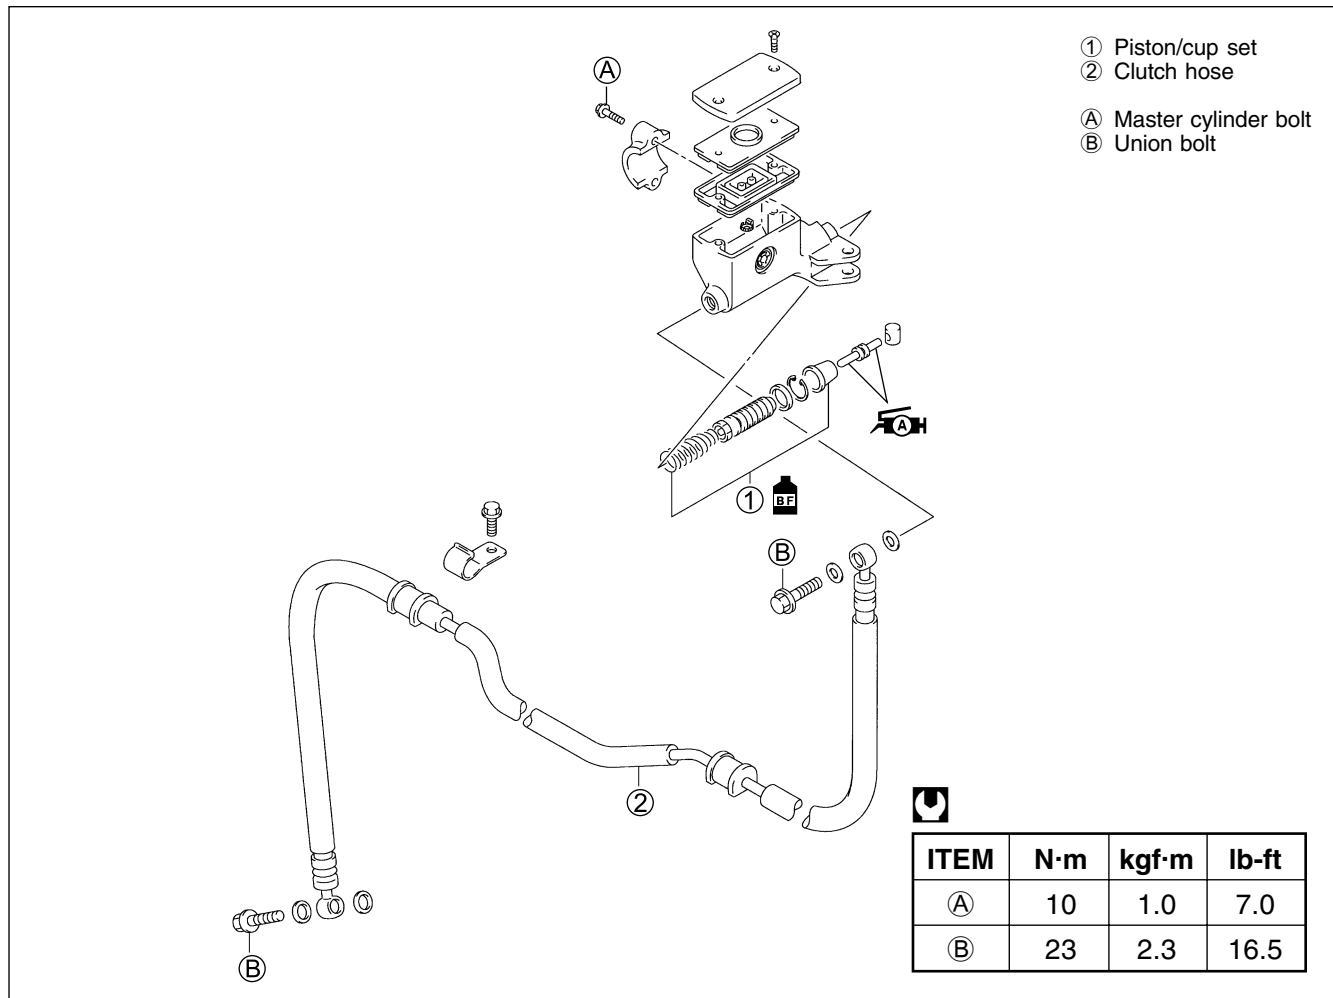


REMOVAL

- Disconnect the clutch lever position switch lead wires.
- Place a rag underneath the union bolt on the master cylinder to catch spilled drops of brake fluid. Unscrew the union bolt and disconnect the clutch hose from the master cylinder.

⚠ CAUTION

Completely wipe off any brake fluid adhering to any parts of motorcycle. The fluid reacts chemically with paint, plastics, rubber materials, etc. and will damage them severely.

- Remove the clutch master cylinder by removing its clamp bolts.

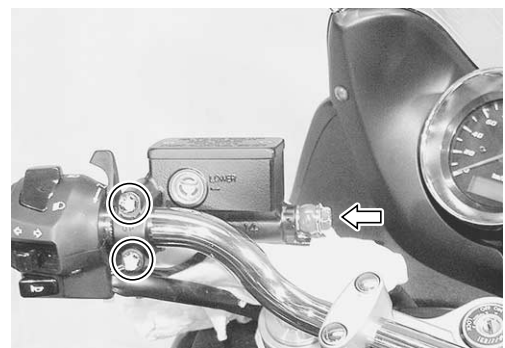

DISASSEMBLY AND REASSEMBLY

Disassemble and reassemble the clutch master cylinder in the same manner of the front brake master cylinder.

(↖ 5-49, 5-51)

TIRE AND WHEEL

TIRE REMOVAL


The most critical factor of a tubeless tire is the seal between the wheel rim and the tire bead. For this reason, it is recommended to use a tire changer that can satisfy this sealing requirement and can make the operation efficient as well as functional.

For operating procedures, refer to the instructions supplied by the tire changer manufacturer.

NOTE:

When removing the tire in the case of repair or inspection, mark the tire with a chalk to indicate the tire position relative to the valve position.

Even though the tire is refitted to the original position after repairing puncture, the tire may have to be balanced again since such a repair can cause imbalance.

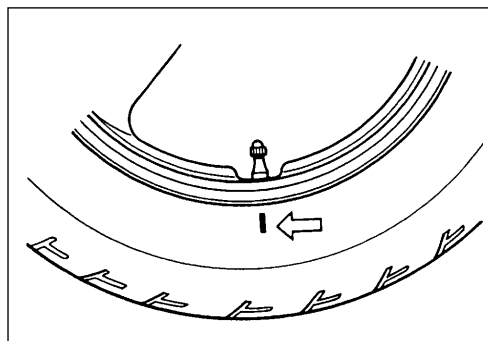

INSPECTION

WHEELS

Wipe off any rubber substance or rust from the wheel, and inspect the wheel rim. If any one of the following items are observed, replace the wheel with a new one.

- * A distortion or crack.
- * Any scratches or flaws in the bead seating area.
- * Wheel runout (axial & radial) of more than 2.0 mm (0.08 in).

DATA Wheel rim runout

Service Limit (axial and radial): 2.0 mm (0.08 in)

TIRES

Thoroughly inspect the removed tire, and if any one of the following items are observed, replace the tire with a new one; do not repair it.



- * A puncture or split whose total length or diameter exceeds 6.0 mm (0.24 in).
- * A scratch or split on the side wall.
- * Tread depth less than 1.6 mm (0.06 in) on the front tire and less than 2.0 mm (0.08 in) on the rear tire.

TOOL 09900-20805: Tire depth gauge

DATA Tire tread depth

Service Limit (Front): 1.6 mm (0.06 in)
(Rear): 2.0 mm (0.08 in)

- | | |
|--|--------------------------------------|
| * Ply separation | * Scratches at the bead. |
| * Tread separation. | * Cord is cut. |
| * Tread wear is extraordinarily deformed or distributed around the tire. | * Damage from skidding (flat spots). |
| | * Abnormality in the inner liner. |

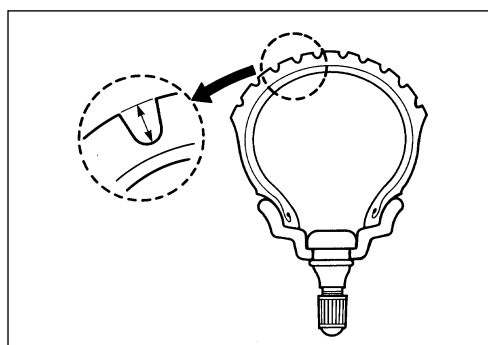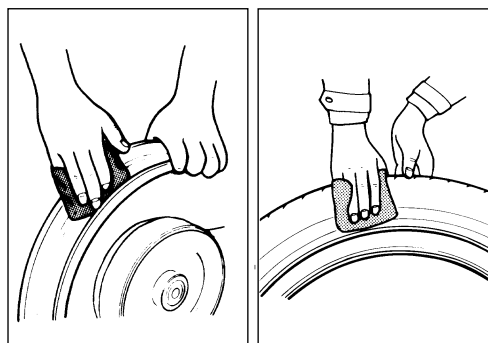


NOTE:


When repairing a flat tire, follow the repair instructions and use only recommended repairing materials.

VALVE INSPECTION

Inspect the valve ① after the tire is removed from the rim, and replace the valve with a new one if the seal rubber has any splits or scratches.

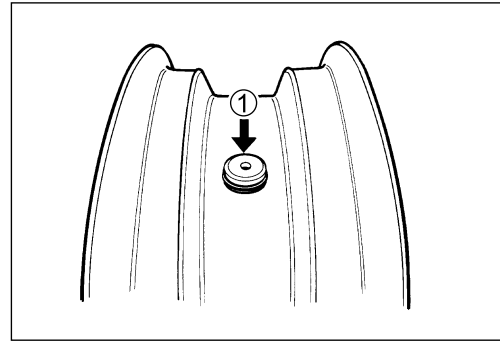


Inspect the removed valve core and replace it with a new one if the seal ② is abnormally deformed or worn.

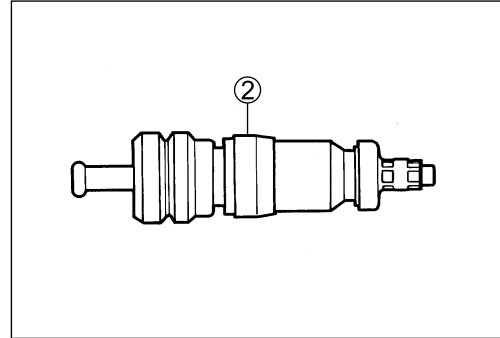**VALVE INSTALLATION**

Clean any dust or rust which is around the valve hole ① and then install the valve in the rim.


NOTE:

To properly install the valve ② into the valve hole, apply a special tire lubricant or neutral soapy liquid to the valve.

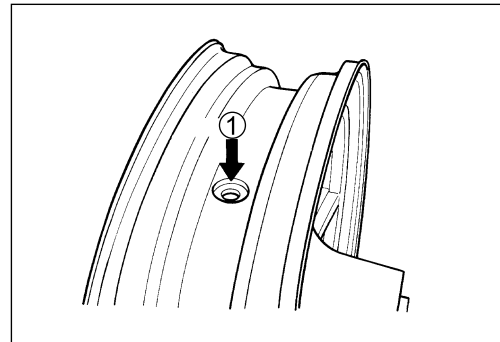**▲ CAUTION**

Be careful not to damage the valve lip ①.


① Wheel

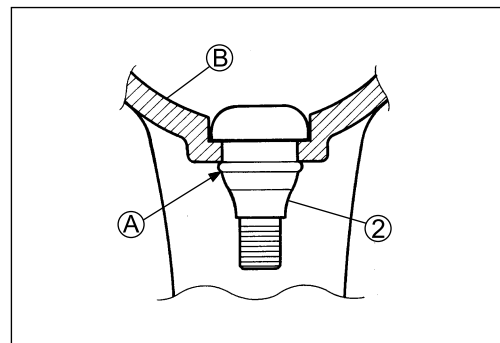**TIRE INSTALLATION**

- Apply tire lubricant to the tire bead.
- When installing the tire onto the wheel, observe the following points.

▲ CAUTION

Do not reuse the valve which has been once removed.

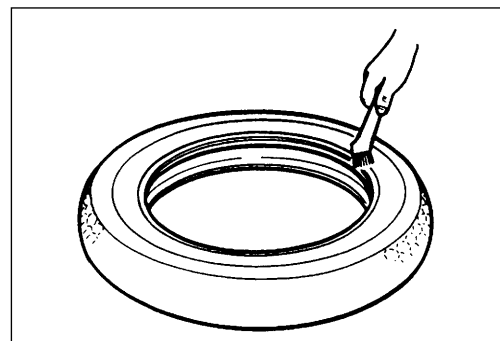


- The tire is designed to have specified rotational direction.

▲ CAUTION

Never use oil, grease or gasoline on the tire bead in place of tire lubricant.

- When installing the tire, the arrow ① on the side wall should point the direction of wheel rotation.
- Align the chalk mark put on the tire at the time of removal with the valve position.

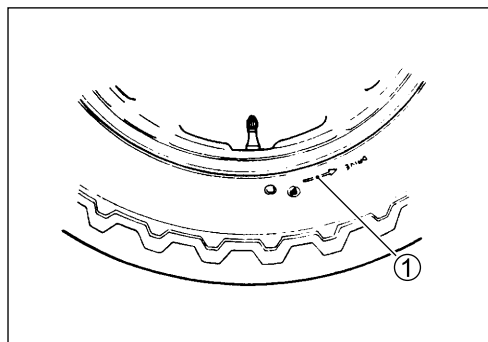


- For installation procedure of tire onto the wheel, follow the instructions given by the tire changer manufacturer.
- Bounce the tire several times while rotating. This makes the tire bead expand outward to contact the wheel, thereby facilitating air inflation.
- Pump up the tire with air.

▲ WARNING

* Do not inflate the tire to more than 400 kPa (4.0 kgf/cm²). If inflated beyond this limit, the tire can burst and possibly cause injury. Do not stand directly over the tire while inflating.

* In the case of preset pressure air inflator, pay special care for the set pressure adjustment.

- In this condition, check the “rim line” cast on the tire side walls. The line must be equidistant from the wheel rim all around. If the distance between the rim line and wheel rim varies, this indicates that the bead is not properly seated. If this is the case, deflate the tire completely and unseat the bead for both sides. Coat the bead with lubricant and fit the tire again.
- When the bead has been fitted properly, inflate air and adjust the pressure to specification.
- As necessary, adjust the tire balance.

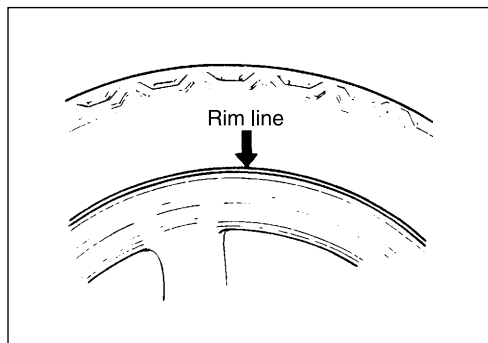

▲ CAUTION

Do not run with a repaired tire at a high speed.

TIRE PRESSURE

COLD INFLATION TIRE PRESSURE	SOLO RIDING			DUAL RIDING		
	kPa	kgf/cm ²	psi	kPa	kgf/cm ²	psi
FRONT	250	2.50	36	250	2.50	36
REAR	250	2.50	36	250	2.50	36

ELECTRICAL SYSTEM


CONTENTS

CAUTIONS IN SERVICING	6- 2
LOCATION OF ELECTRICAL COMPONENTS	6- 5
CHARGING SYSTEM	6- 7
DESCRIPTION (GENERATOR WITH IC REGULATOR)	6- 7
TROUBLE SHOOTING	6- 8
INSPECTION	6- 9
GENERATOR	6-10
REMOVAL AND DISASSEMBLY	6-11
INSPECTION	6-13
REASSEMBLY AND REMOUNTING	6-16
STARTER SYSTEM AND SIDE-STAND IGNITION	
INTERLOCK SYSTEM	6-18
STARTER SYSTEM DESCRIPTION	6-18
SIDE-STAND/IGNITION INTERLOCK SYSTEM DESCRIPTION ...	6-18
TROUBLESHOOTING	6-20
STARTER MOTOR REMOVAL AND DISASSEMBLY	6-21
STARTER MOTOR INSPECTION	6-21
STARTER MOTOR REASSEMBLY AND REMOUNTING	6-22
STARTER RELAY INSPECTION	6-23
SIDE-STAND/IGNITION INTERLOCK SYSTEM PART	
INSPECTION	6-24
IGNITION SYSTEM (DIGITAL IGNITOR)	6-27
DESCRIPTION	6-27
TROUBLESHOOTING	6-28
INSPECTION	6-29
COMBINATION METER	6-33
REMOVAL	6-33
DISASSEMBLY	6-33
INSPECTION	6-33
LAMPS	6-37
HEADLIGHT	6-37
BRAKE LIGHT/TAILLIGHT AND LICENSE PLATE LIGHT	6-38
TURN SIGNAL LIGHTS	6-38
RELAYS	6-39
STARTER RELAY	6-39
TURN SIGNAL/SIDE-STAND RELAY	6-39
SWITCHES	6-40
BATTERY	6-41
SPECIFICATIONS	6-41
REMOVAL	6-41
REMOUNTING	6-41
INITIAL CHARGING	6-42
SERVICING	6-43
RECHARGING OPERATION	6-44

CAUTIONS IN SERVICING


CONNECTORS

- When disconnecting a connector, be sure to hold the terminals; do not pull the lead wires.
- When connecting a connector, push it in so it is firmly attached.
- Inspect the connector for corrosion, contamination and any breakage in the cover.

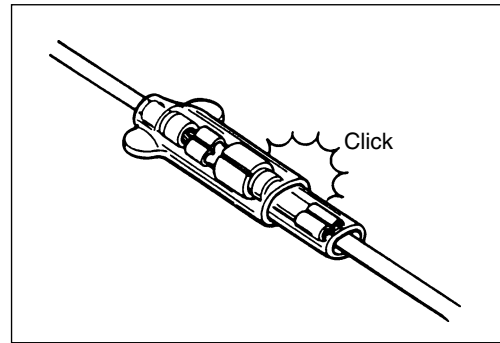


COUPLERS

- With a lock-type coupler, be sure to release the lock before disconnecting it. When connecting a coupler, push it in until the lock clicks shut.
- When disconnecting a coupler, be sure to hold the coupler; do not pull the lead wires.
- Inspect each terminal on the coupler for looseness or bends.
- Inspect each terminal for corrosion and contamination.

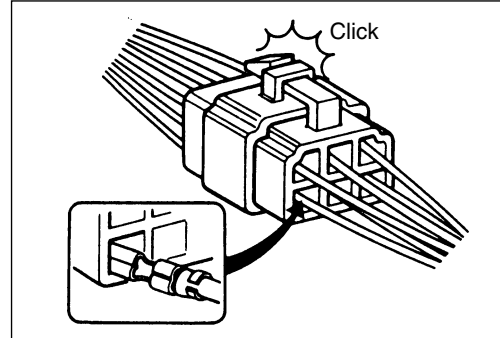


CLAMPS

- Refer to "WIRE HARNESS, CABLE AND HOSE ROUTING" (7-12) for proper clamping procedures.
- Bend the clamp properly, as shown in the illustration.
- When clamping the wire harness, do not allow it to hang down.
- Do not use wire or any other substitute for the band-type clamp.

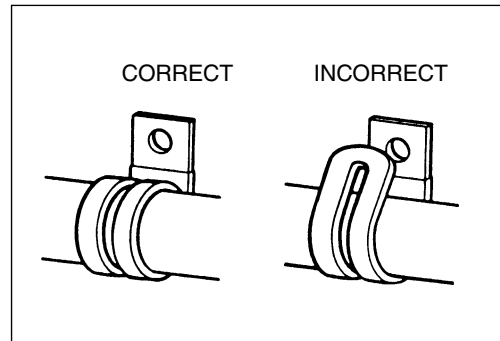


FUSES

- When a fuse blows, always investigate the cause, correct the problem and then replace the fuse.
- Do not use a fuse of a different capacity.
- Do not use any substitutes for the fuse (e.g., wire).

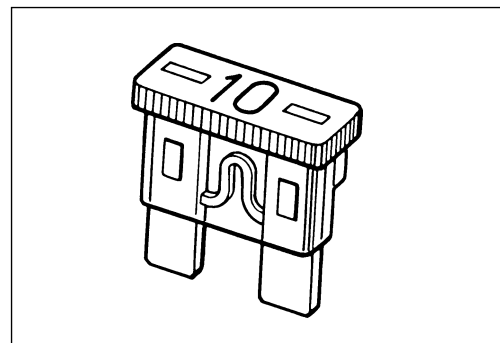


SEMI-CONDUCTOR EQUIPPED PARTS

- Do not drop any part that contains a semi-conductor (e.g., ignition unit, IC regulator).
- When inspecting the part, follow the inspection instructions carefully. Neglecting proper procedures may cause this part to be damaged.

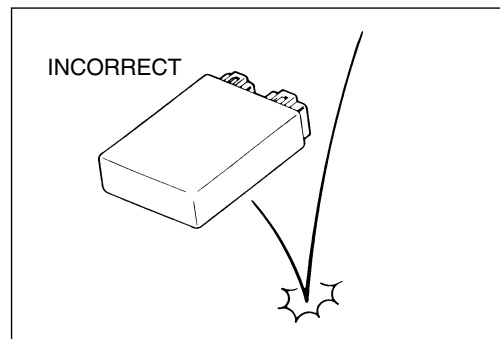



BATTERY

- The MF battery used in this motorcycle does not require maintenance (e.g., electrolyte level inspection, distilled water replenishing).
- During normal charging, no hydrogen gas is produced. However, if the battery is overcharged, hydrogen gas may be produced. Therefore, be sure that there are no fire or spark sources nearby (e.g., short-circuit) when charging the battery.
- Be sure to recharge the battery in a well-ventilated and open area.
- Note that the charging system for the MF battery is different from that of a conventional battery. Do not replace the MF battery with a conventional battery.

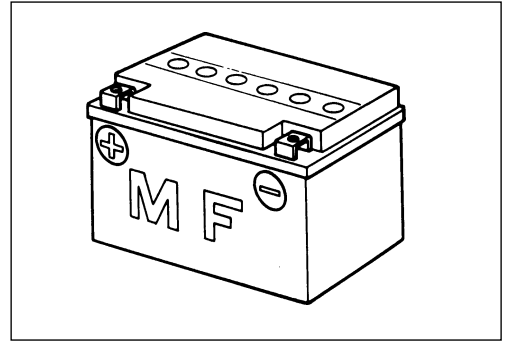

CONNECTING THE BATTERY

- When disconnecting terminals from the battery for disassembly or servicing, be sure to disconnect the battery (⊖) lead wire, first.
- When connecting the battery lead wires, be sure to connect the battery (⊕) lead wire, first.
- If the terminal is corroded, remove the battery, pour warm water over it and clean it using a wire brush.
- After connecting the battery, apply a light coat of grease to the battery terminals.
- Reinstall the cover over the battery (⊕) terminal.

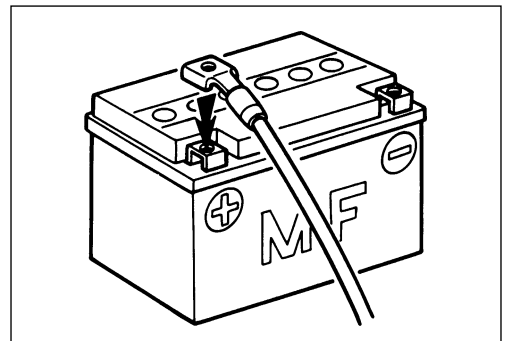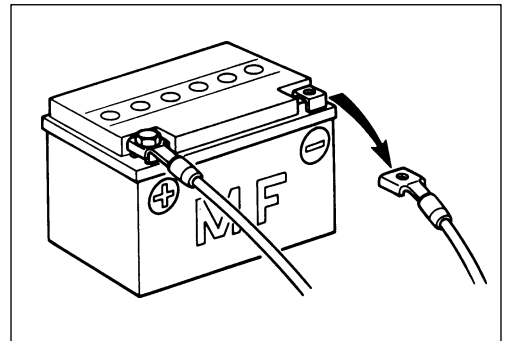

WIRING PROCEDURE


- Properly route the wire harness according to "WIRE HARNESS, CABLE AND HOSE ROUTING". (👉7-12)

USING THE MULTI CIRCUIT TESTER








- Properly use the multi circuit tester (\oplus) and (\ominus) probes. Improper use can cause damage to the motorcycle and tester.
- If the voltage and current values are not known, begin measuring in the highest range.
- When measuring the resistance, make sure that no voltage is applied. If voltage is applied, the tester will be damaged.
- After using the tester, turn the switch to the OFF position.

▲ CAUTION









Before using the multi circuit tester, read its instruction manual.

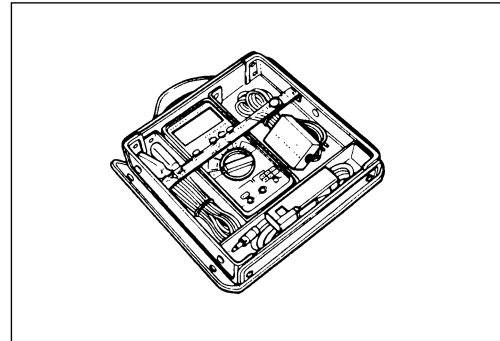

LOCATION OF ELECTRICAL COMPONENTS

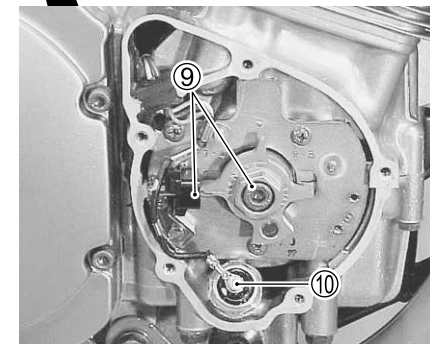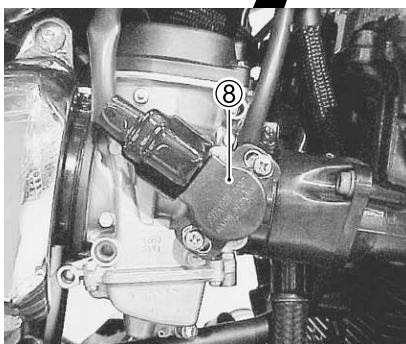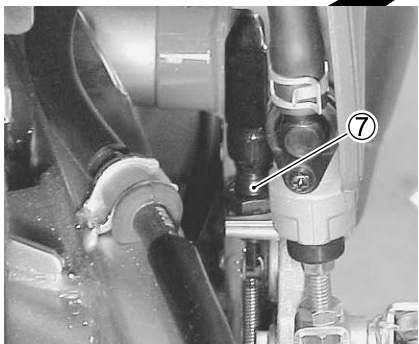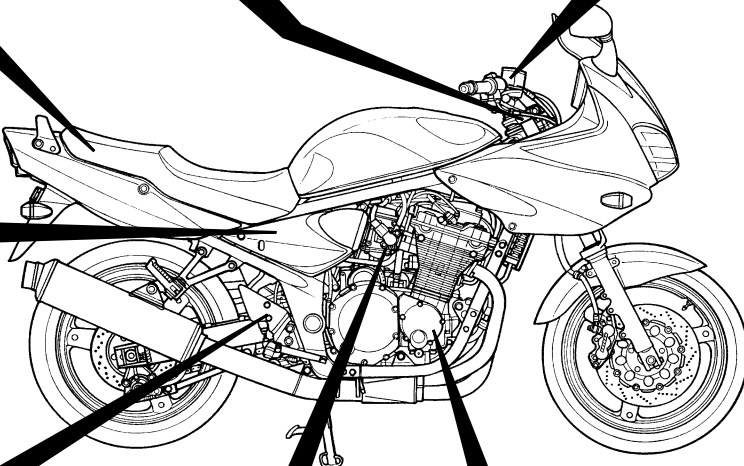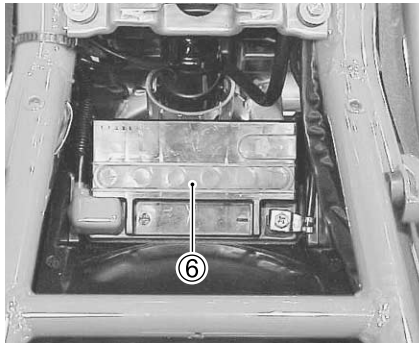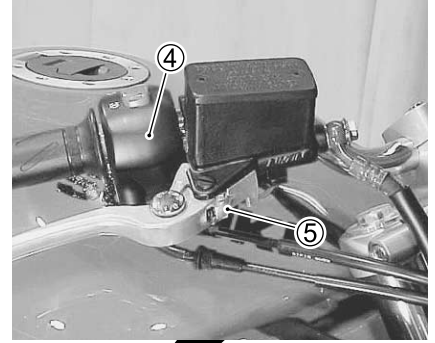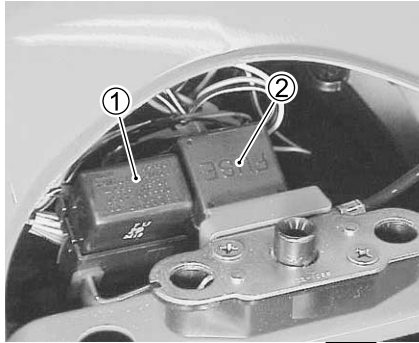

- ① Turn signal/side-stand relay
- ② Fuse box
- ③ Ignition switch
- ④ Handlebar switch (R)
- ⑤ Front brake light switch
- ⑥ Battery
- ⑦ Rear brake light switch
- ⑧ Throttle position sensor
- ⑨ Signal generator
- ⑩ Oil pressure switch

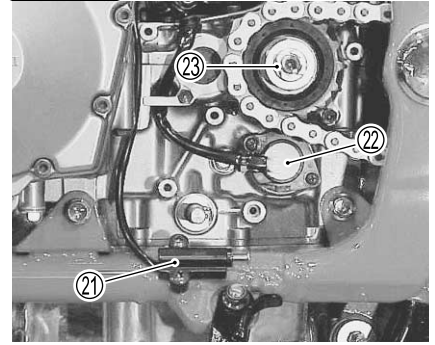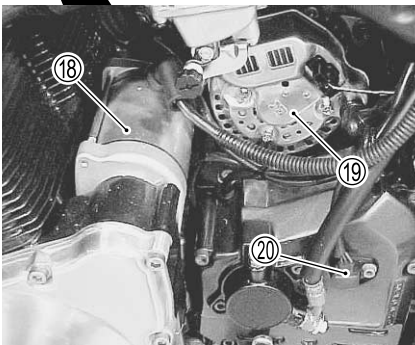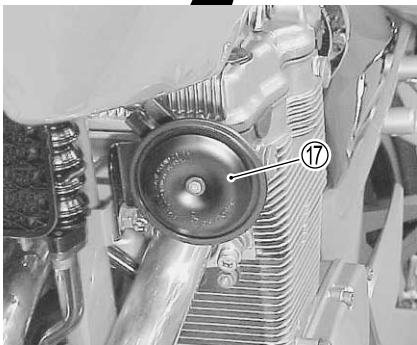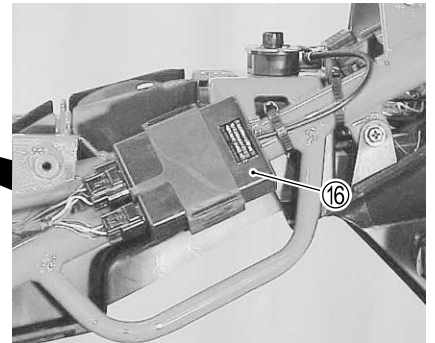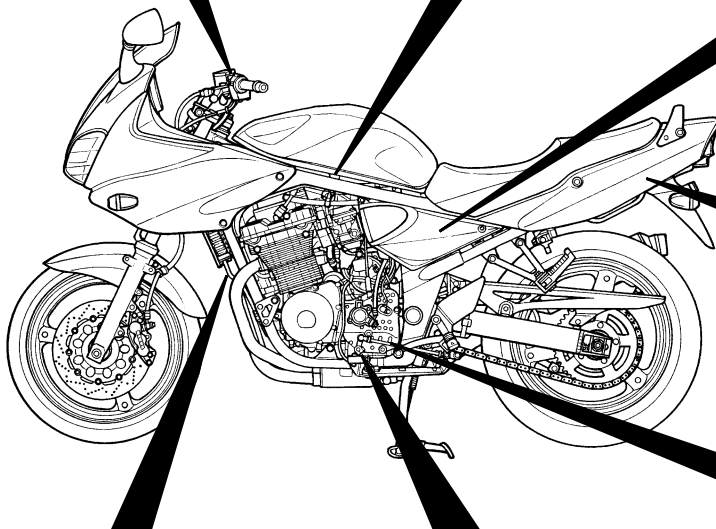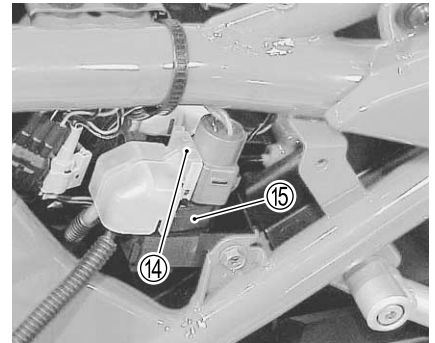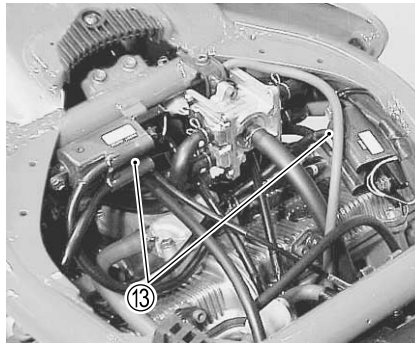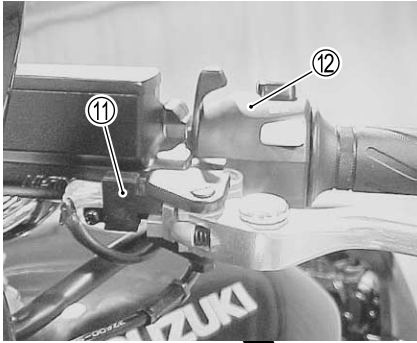

- ① Clutch lever position switch
- ② Handlebar switch (L)
- ③ Ignition coil
- ④ Main fuse
- ⑤ Starter relay
- ⑥ Ignitor
- ⑦ Horn
- ⑧ Starter motor
- ⑨ Generator
- ⑩ Speed sensor
- ⑪ Side-stand switch
- ⑫ Gear position switch
- ⑬ Speed sensor rotor


CHARGING SYSTEM

DESCRIPTION (GENERATOR WITH IC REGULATOR)


The generator features a solid-state regulator that is mounted inside the generator. All regulator components are enclosed into a solid mold, and this unit is attached to the brush holder frame. The regulator voltage setting cannot be adjusted.

Two brushes carry current through the two slip rings to the rotor coil which is mounted on the rotor.

The stator windings are assembled on the inside of a laminated core that forms part of the generator housing. A rectifier bridge, which is connected to the stator windings, contains eight diodes, and electrically changes the stator A.C. voltage to D.C. voltage which appears at the generator output terminal.

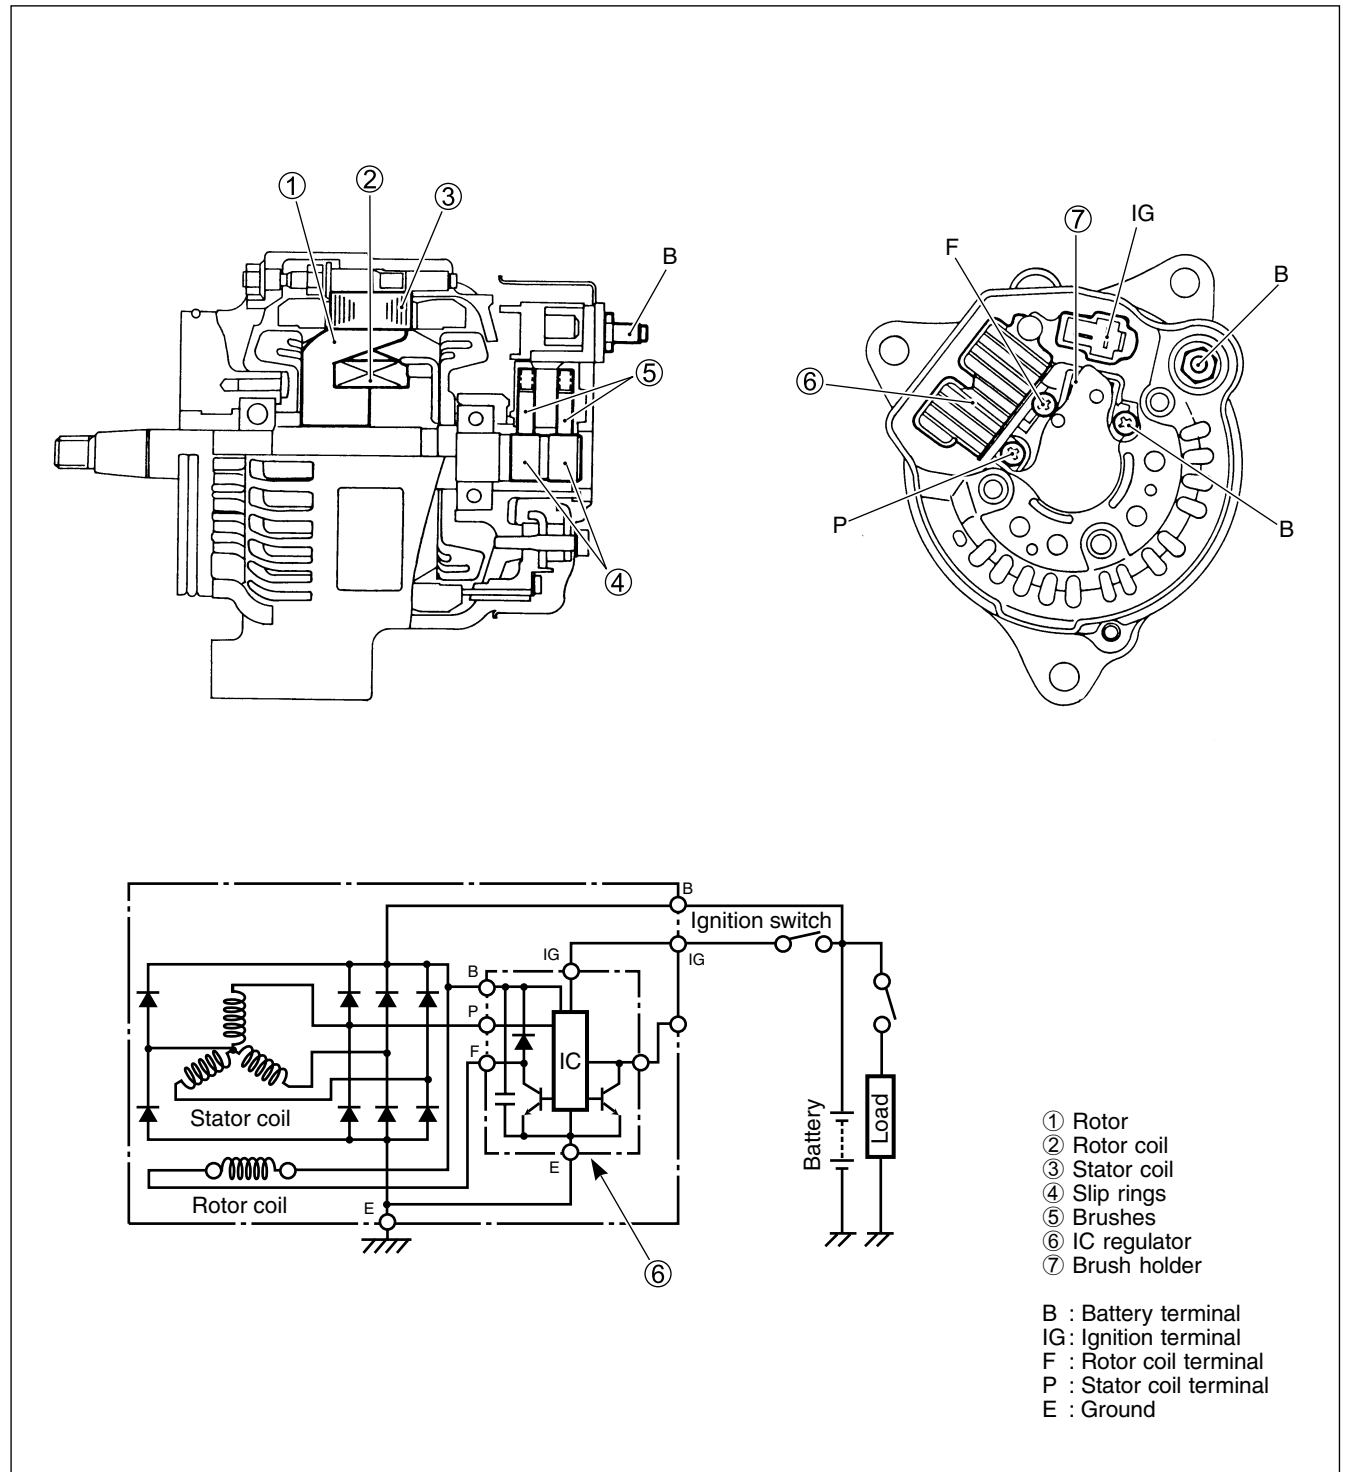

TROUBLESHOOTING

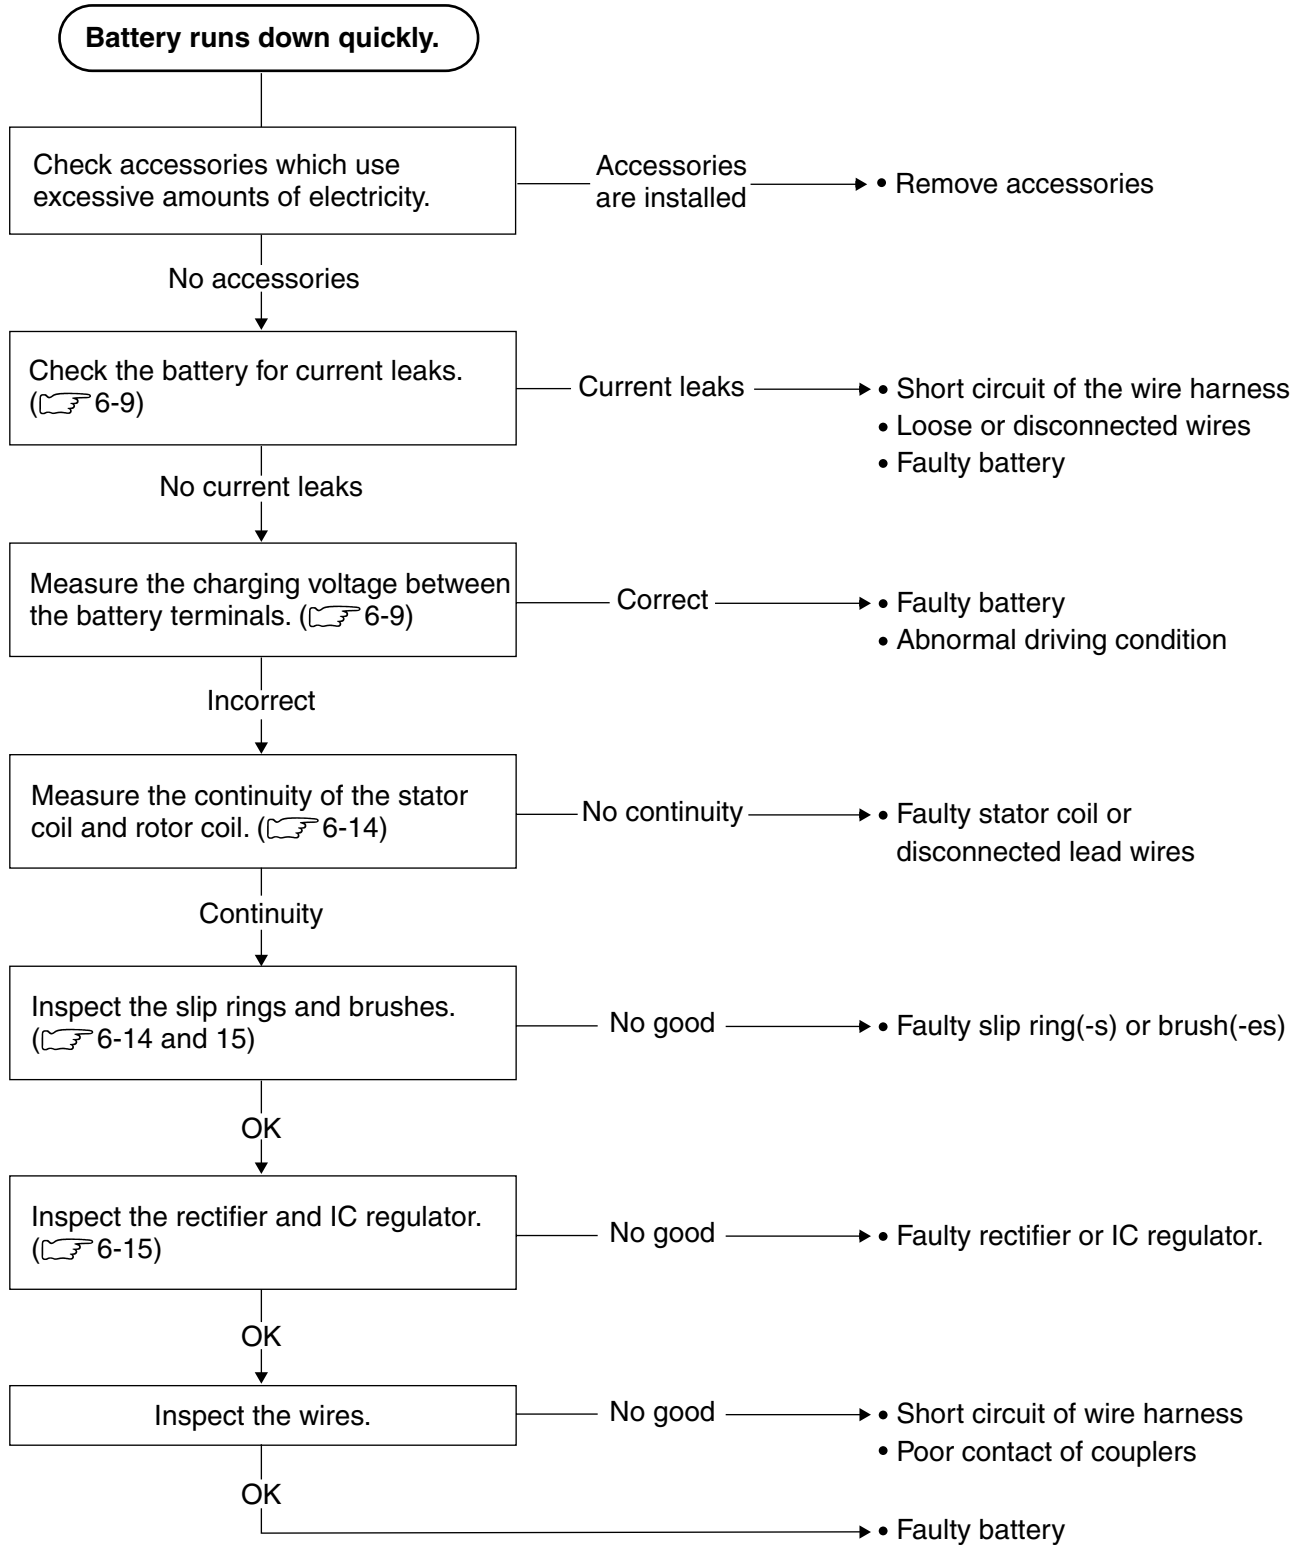

Others

<p>Battery overcharges</p>	<ul style="list-style-type: none"> • Faulty IC regulator • Faulty battery • Poor contact of generator lead wire coupler
----------------------------	--

INSPECTION

BATTERY CURRENT LEAK INSPECTION

- Turn the ignition switch to the “OFF” position.
- Remove the seat. (🔧5-5)
- Remove the document tray. (🔧5-5)
- Disconnect the battery \ominus lead wire.
- Connect the multi circuit tester between the battery \ominus terminal and the battery \ominus lead wire.

NOTE:

Leakage is evident if the reading is over 3 mA.

TOOL 09900-25008: Multi circuit tester set


DATA Battery current leak: Under 3 mA

A Tester knob indication: Current (---, 20 mA)

⚠ CAUTION

- * Because the current leak might be large, turn the tester to the high range first to avoid tester damage.
- * Do not turn the ignition switch to the “ON” position when measuring the current.

When checking to find the excessive current leak, remove the couplers and connectors, one by one, checking each part.

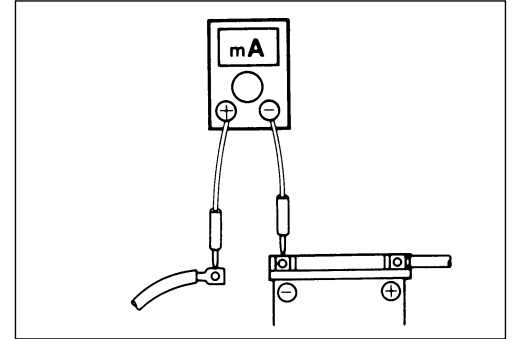

CHARGING OUTPUT INSPECTION

- Remove the seat. (🔧5-5)
- Remove the document tray. (🔧5-5)
- Start the engine, turn the lighting switch to ON and the dimmer switch to HI and run the engine at 5 000 r/min.

Measure the DC voltage between the battery \oplus and \ominus terminals using the multi circuit tester. If the tester reads under 13.5 V or over 15.0 V, inspect the stator coil, rectifier and IC regulator which are mounted in the generator.


NOTE:

When performing this test, make sure that the battery is fully-charged.


TOOL 09900-25008: Multi circuit tester set

V Tester knob indication: Voltage (---)

DATA Charging output (regulated voltage)
Standard: 13.5 – 15.0 V at 5 000 r/min.

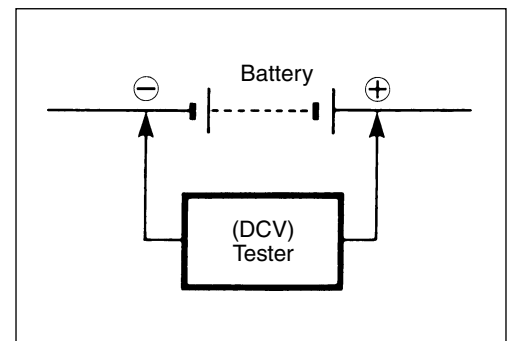

GENERATOR

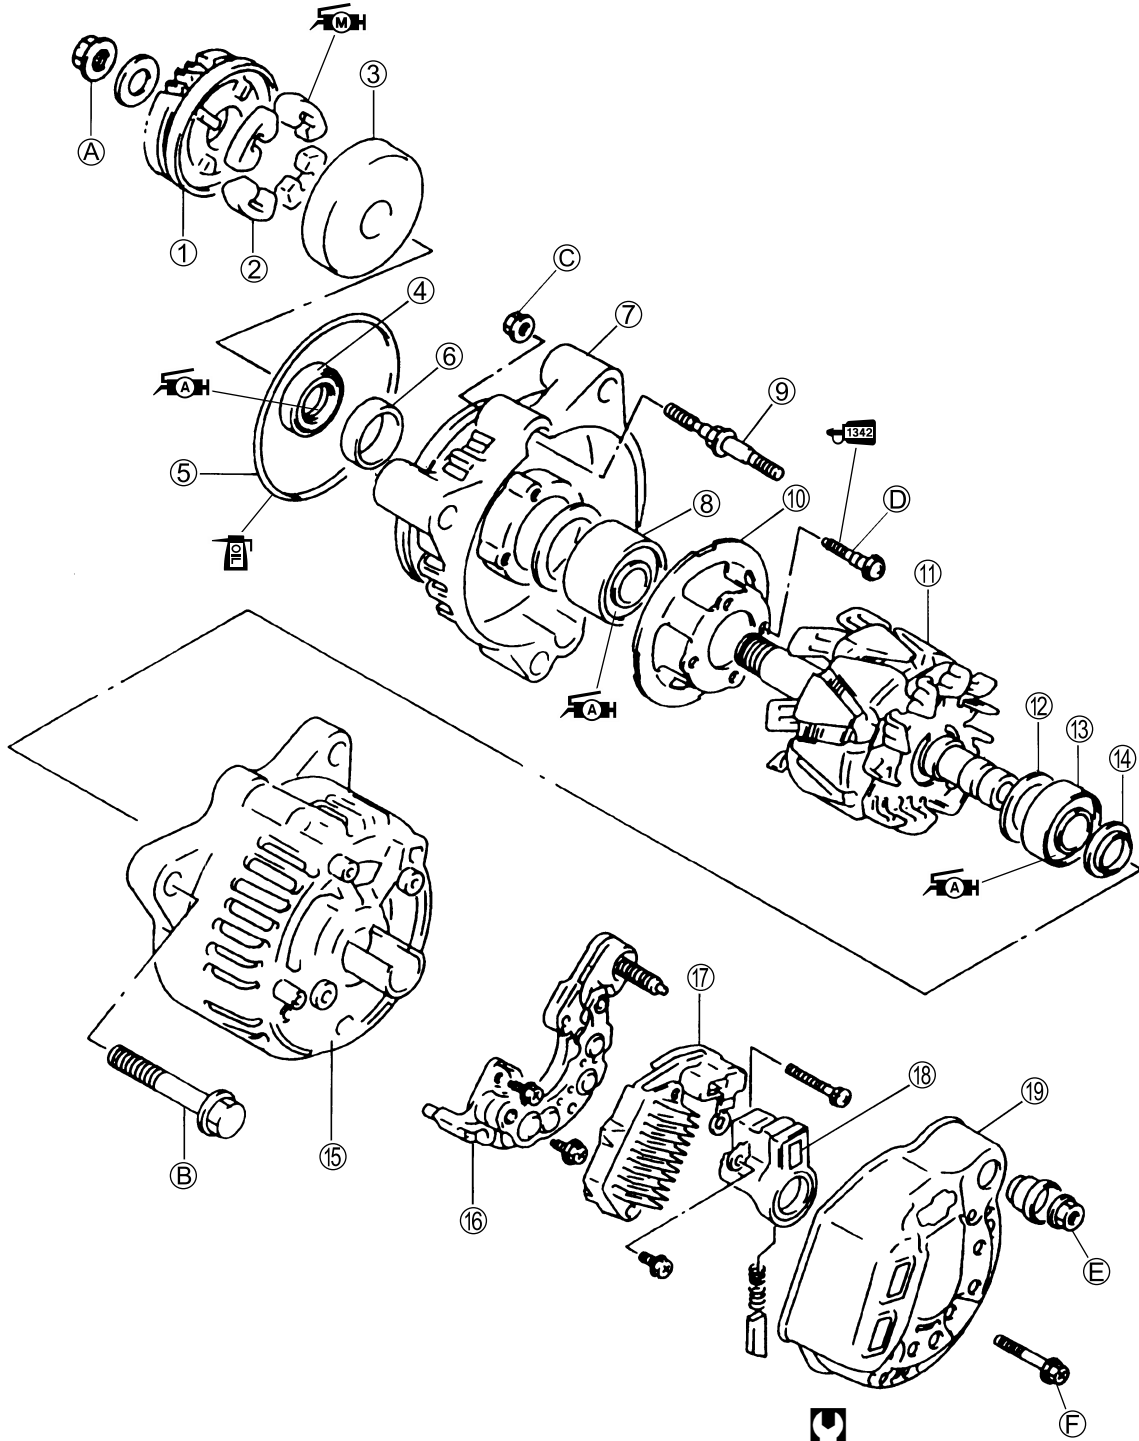

- ① Generator driven gear
- ② Damper (4 pcs)
- ③ Damper housing
- ④ Oil seal
- ⑤ O-ring
- ⑥ Spacer
- ⑦ Generator end housing
- ⑧ Bearing
- ⑨ Stud bolt
- ⑩ Retainer
- ⑪ Rotor
- ⑫ Bearing cover #2
- ⑬ Slip ring side bearing
- ⑭ Bearing cover #1
- ⑮ Generator housing
- ⑯ Rectifier
- ⑰ IC regulator
- ⑱ Brush holder
- Generator end cover
- A Generator driven gear nut
- B Generator mounting bolt
- C Generator housing nut
- D Bearing retainer screw




ITEM	N-m	kgf-m	lb-ft
A	55	5.5	40.0
B	25	2.5	18.0
C	4.5	0.45	3.5
D	2.5	0.25	1.8
E	4.0	0.40	3.0
F	3.7	0.37	2.7

REMOVAL AND DISASSEMBLY


- Remove the engine sprocket cover. (☞ 3-5)
- Disconnect the generator lead wire ① and coupler ②.

NOTE:

Before disconnecting the generator lead wire, disconnect the battery ⊖ lead wire.

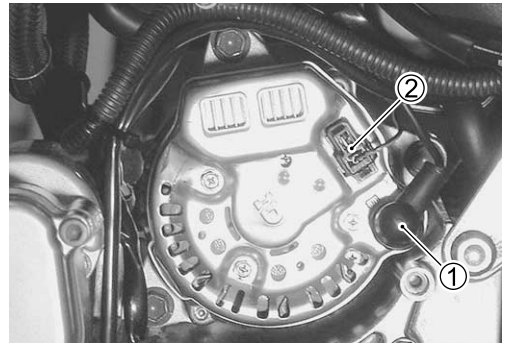


- Remove the generator ③.

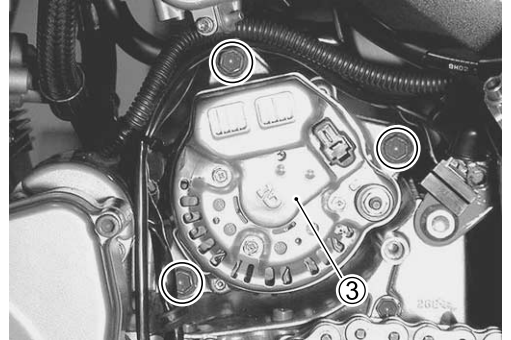

- Hold the generator driven gear using a vise ④ and two pieces of wood ⑤ as shown. Then, remove the generator driven gear nut.


▲ CAUTION

Do not hold the damper housing ⑥ using the vise or the damper housing will be damaged.

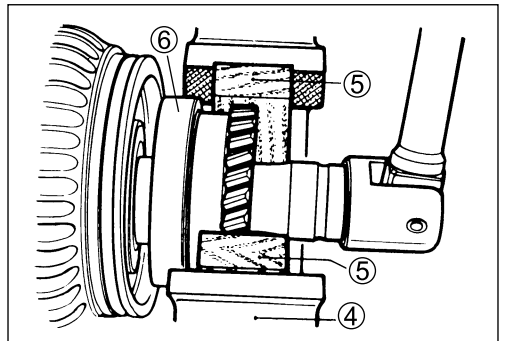


- Remove the damper housing ⑥ using the special tool.


TOOL 09913-61510: Bearing remover

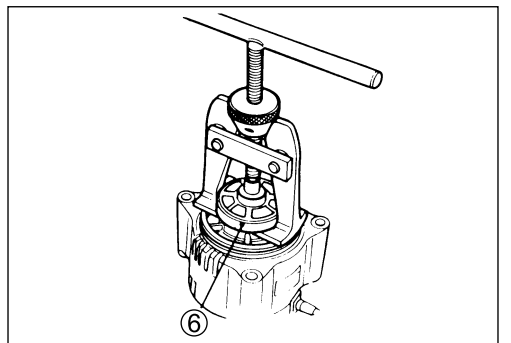

- Remove the generator end cover ⑦.

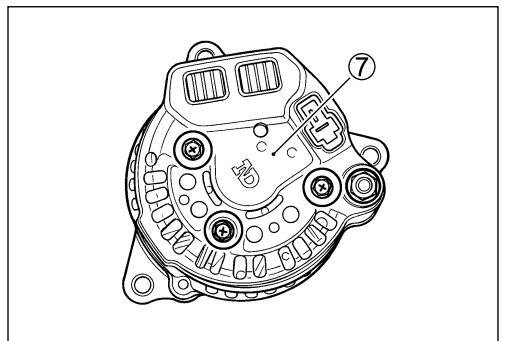


- Remove the brush holder ① and IC regulator ②.

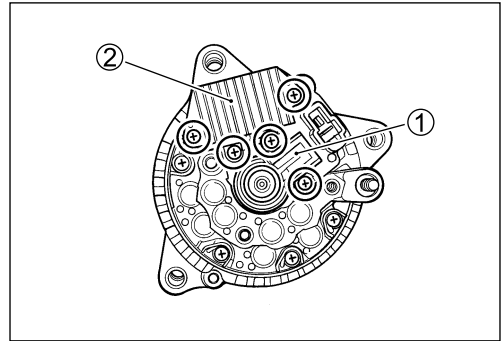


- Remove the stator coil lead wires mounting screws ③.
- Remove the rectifier ④.

NOTE:


Straighten the stator coil lead wires using long-nose pliers, then remove the rectifier.

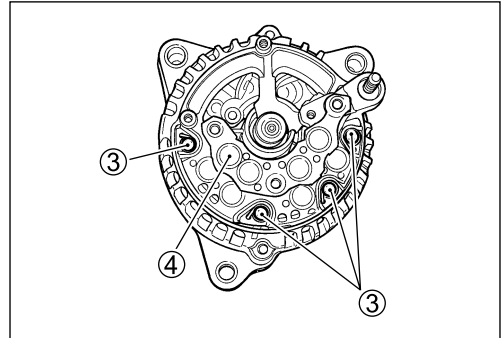


- Remove the generator housing nuts.

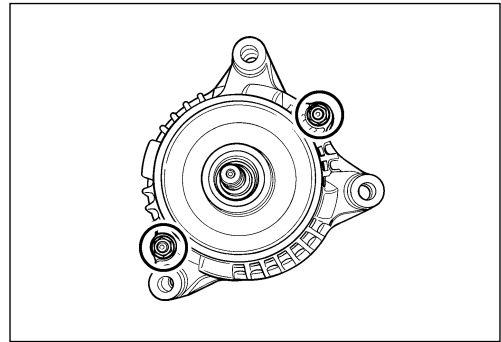


- Separate the generator housing ⑤ from the generator end housing ⑥.

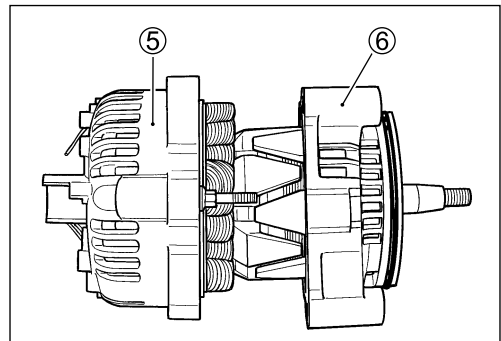


- Remove the rotor ⑦ from the generator end housing ⑧ using a hand press ⑨ as shown.

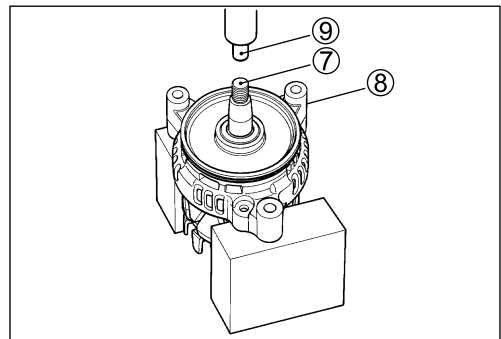


- Remove the bearing retainer ①.

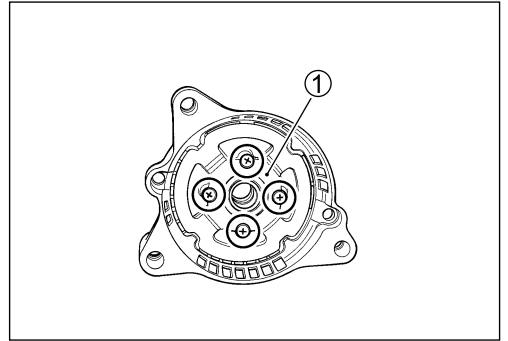

- Remove the bearing ②, washer ③ and spacer ④.

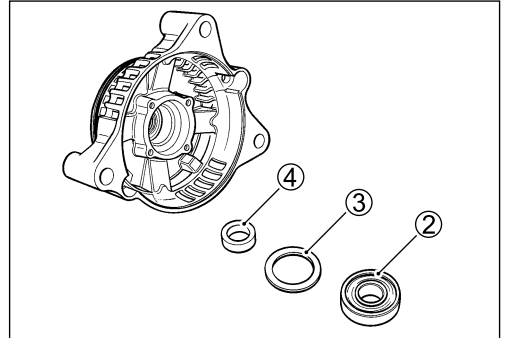


- Remove the oil seal ⑤.

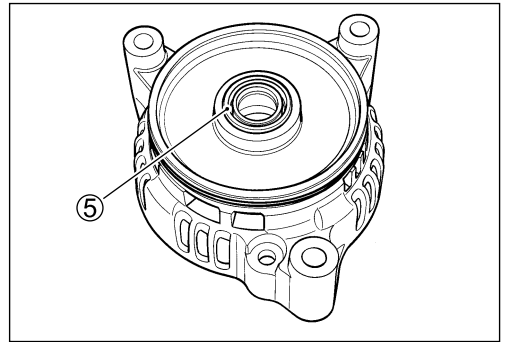

INSPECTION

ROTOR BEARINGS

Inspect the rotor bearings for abnormal noise. Also, rotate the rotor bearings by hand and make sure that they rotate smoothly.

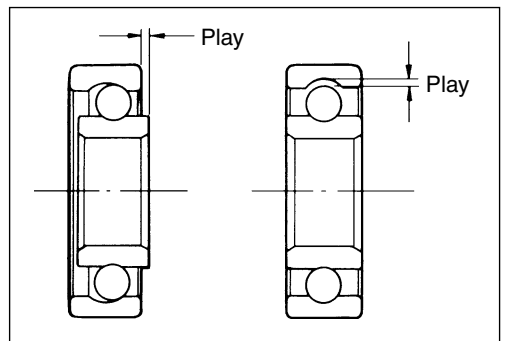


If there is anything unusual, remove the bearing(-s) using the special tool.

TOOL 09913-60910: Bearing remover

▲ CAUTION

The removed bearing(-s) should be replaced with a new one.

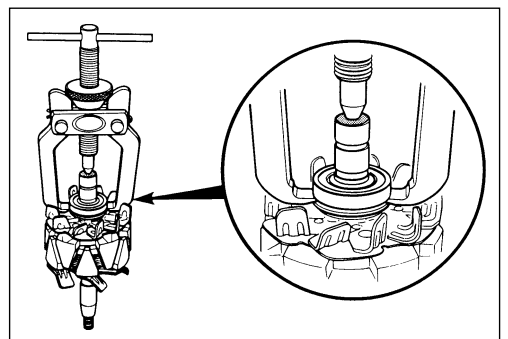


GENERATOR DRIVEN GEAR DAMPERS

Inspect the generator driven gear dampers for wear and damage. If any defects are found, replace the generator driven gear dampers as a set.

NOTE:

When installing the generator driven gear dampers, apply **SUZUKI MOLY PASTE** to the damper surface.

 **99000-25140: SUZUKI MOLY PASTE**

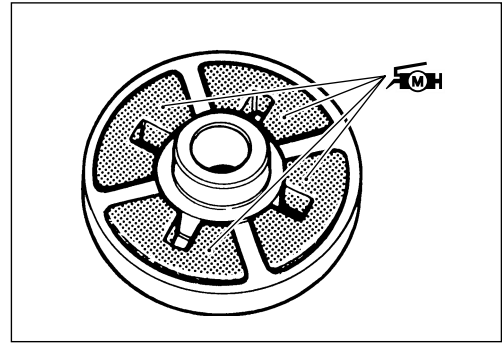**STATOR COIL CONTINUITY CHECK**



Measure the continuity between the lead wires of the stator coil using a tester.

If there is no continuity, replace the stator.

Also, check that the stator is properly insulated.

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Continuity test (•••••)**

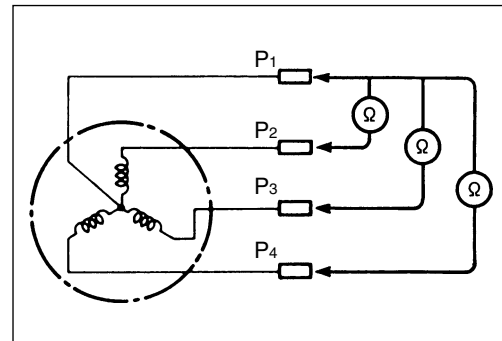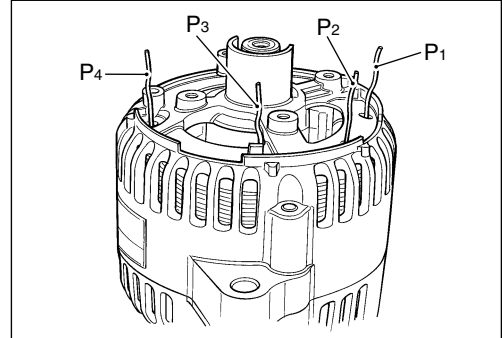**ROTOR COIL CONTINUITY CHECK**


Measure the continuity between the two slip rings ① on the rotor coil using a tester.

If there is no continuity, replace the rotor.

Also check that the rotor is properly insulated.

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Continuity test (•••••)**

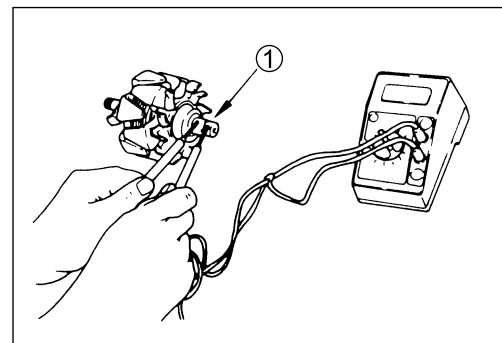**SLIP RINGS**


If the slip rings are dirty, polish them with #400 sandpaper and wipe them using a clean, dry cloth.

Then, measure the slip ring O.D. using vernier calipers. If it is less than the service limit, replace the rotor with a new one.

 **09900-20102: Vernier calipers (200 mm)**

 **Slip ring O.D.**

Service Limit: 14.0 mm (0.55 in)

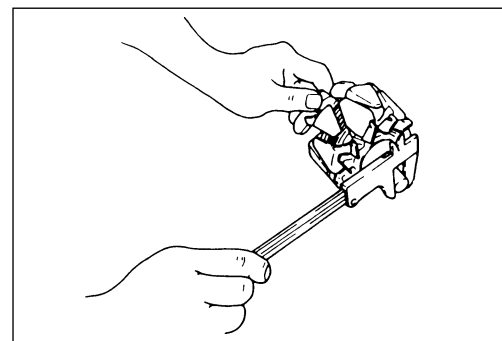


CARBON BRUSHES

Measure the length of the carbon brushes as shown. If the measurement is less than the service limit, replace the carbon brushes with new ones.

TOOL 09900-20102: Vernier calipers (200 mm)

DATA Brush length
Service Limit: 4.5 mm (0.18 in)

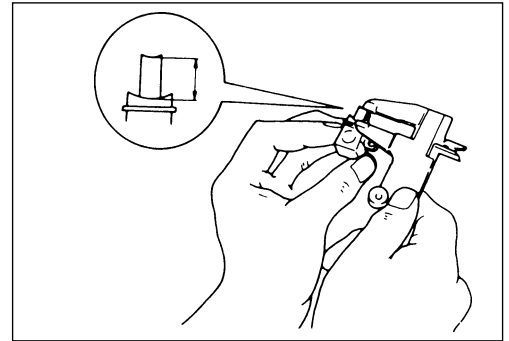

RECTIFIER

Measure the voltage among the terminal ① and the other terminals (P₁, P₂, P₃ and P₄). Put the tester lead on the terminal ① and the other lead to P₁, P₂, P₃ and P₄ terminals. Observe the reading and then switch the leads. Perform other side tests among the terminal ② and the other terminals (P₁, P₂, P₃ and P₄), as described below. If the voltage measured is excessively out of specification, replace the rectifier.



TOOL 09900-25008: Multi circuit tester set

Tester knob indication: Diode test (↔)

Terminal – Terminal	Voltage
① ⊖ — ⊕ P ₁ , P ₂ , P ₃ , P ₄	0.4 – 0.5 V
P ₁ , P ₂ , P ₃ , P ₄ ⊖ — ⊕ ①	1.4 – 1.5 V
② ⊖ — ⊕ P ₁ , P ₂ , P ₃ , P ₄	1.4 – 1.5 V
P ₁ , P ₂ , P ₃ , P ₄ ⊖ — ⊕ ②	0.4 – 0.5 V

NOTE:

If the tester reads under 1.4 V, replace its battery when the tester probes are not connected.

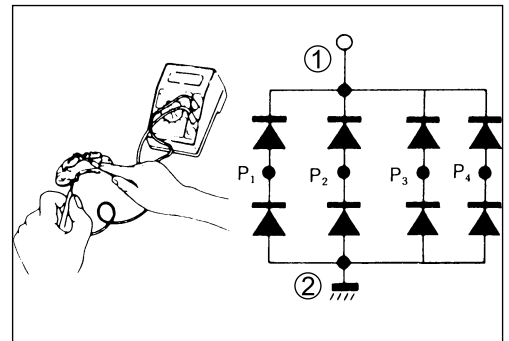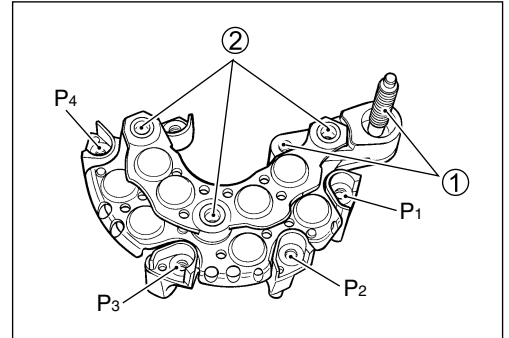

IC REGULATOR

Measure the voltage between terminal “F” and terminal “B”. Refer to the following table.

If the voltage measured is excessively out of specification, replace the IC regulator.

F : Rotor coil terminal

B : Battery terminal


TOOL 09900-25008: Multi circuit tester set

Tester knob indication: Diode test (↔)

Terminal – Terminal	Voltage
B ⊕ — ⊖ F	Approx. 1.4 V
B ⊖ — ⊕ F	Approx. 0.5 V

NOTE:

If the tester reads under 1.4 V, replace its battery when the tester probes are not connected.

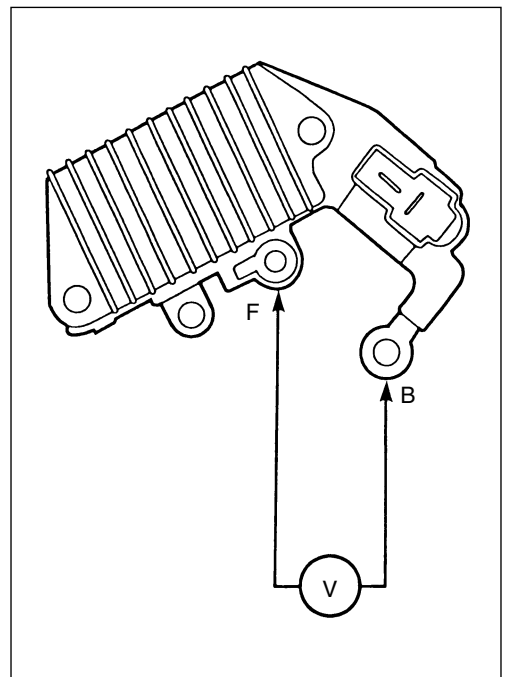

GENERATOR REASSEMBLY AND REMOUNTING

Reassemble and remount the generator in the reverse order of removal and disassembly. Pay attention to the following points:

⚠ CAUTION

The removed oil seal should be replaced with a new one.

- Apply SUZUKI SUPER GREASE “A” to the lip of the oil seal.

For USA


 99000-25030: SUZUKI SUPER GREASE “A”

For the other countries

 99000-25010: SUZUKI SUPER GREASE “A”






- Apply a small quantity of THREAD LOCK “1342” to the bearing retainer screws and tighten them to the specified torque.

 99000-32050: THREAD LOCK “1342”

 Bearing retainer screw: 2.5 N·m (0.25 kgf·m, 1.8 lb·ft)


- Install the bearing and rotor using a hand-press.

- ① Hand-press
- ② Jig
- ③ Rotor
- ④ Bearing
- ⑤ Bearing cover #1
- ⑥ Bearing cover #2
- ⑦ Expander ring

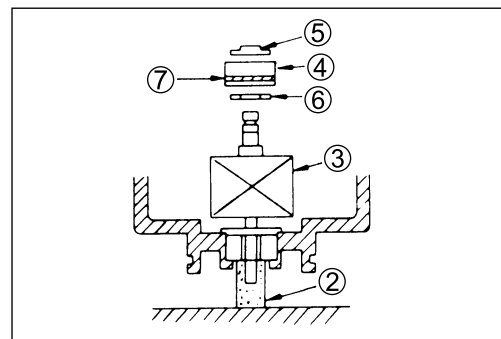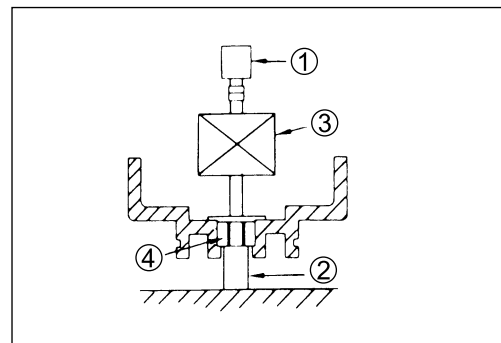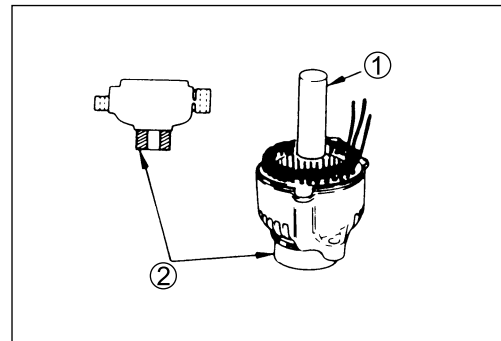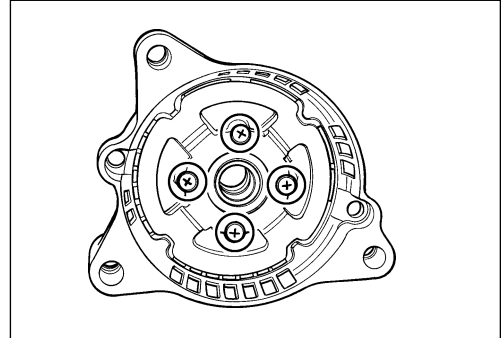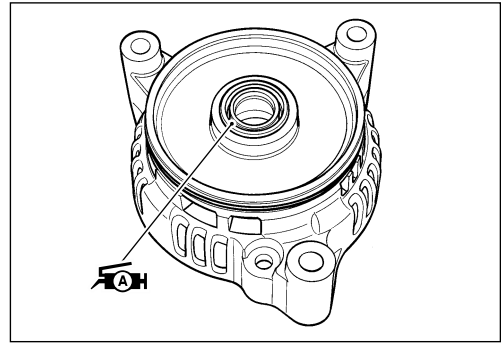


NOTE:

Before reinstalling the slip ring side bearing onto the generator end housing, turn the expander ring and align the expander ring lug with the center of the chamfered edge of the bearing outer race.

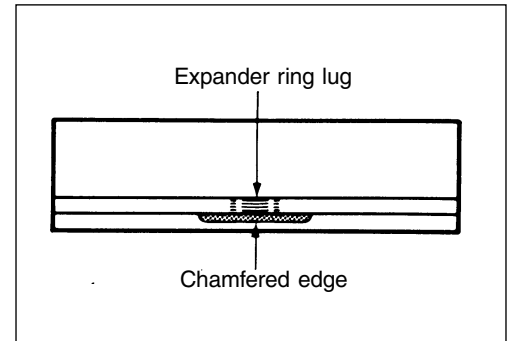

- Tighten the generator housing nuts ① to the specified torque.


 **Generator housing nut: 4.5 N·m (0.45 kgf·m, 3.5 lb-ft)**

- Tighten the generator driven gear nut to the specified torque.

 **Generator driven gear nut: 55 N·m (5.5 kgf·m, 40.0 lb-ft)**

NOTE:

After tightening the generator driven gear nut to the specified torque, stake the nut using a punch.

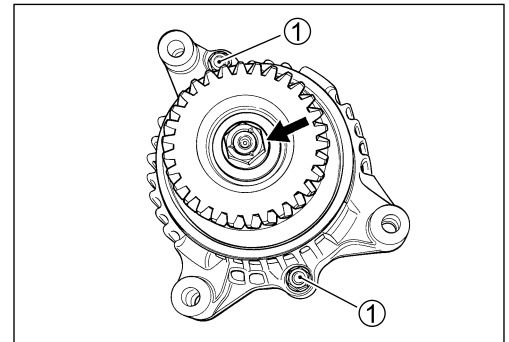

- Tighten the generator mounting bolts to the specified torque.

 **Generator mounting bolt: 25 N·m (2.5 kgf·m, 18.0 lb-ft)**




- After mounting the generator, route the wire harness properly. (👉7-14)
- Remount the engine sprocket cover. (👉3-10)

STARTER SYSTEM AND SIDE-STAND IGNITION INTERLOCK SYSTEM


STARTER SYSTEM DESCRIPTION

The starter system consists of the following components: the starter motor, starter relay, clutch lever position switch, turn signal/side-stand relay, side-stand switch, gear position switch, starter button, engine stop switch, ignition switch and battery. Pressing the starter button (on the right handlebar switch) energizes the starter relay, causing the contact points to close, thus completing the circuit from the starter motor to the battery. The starter motor draws about 80 amperes to start the engine.

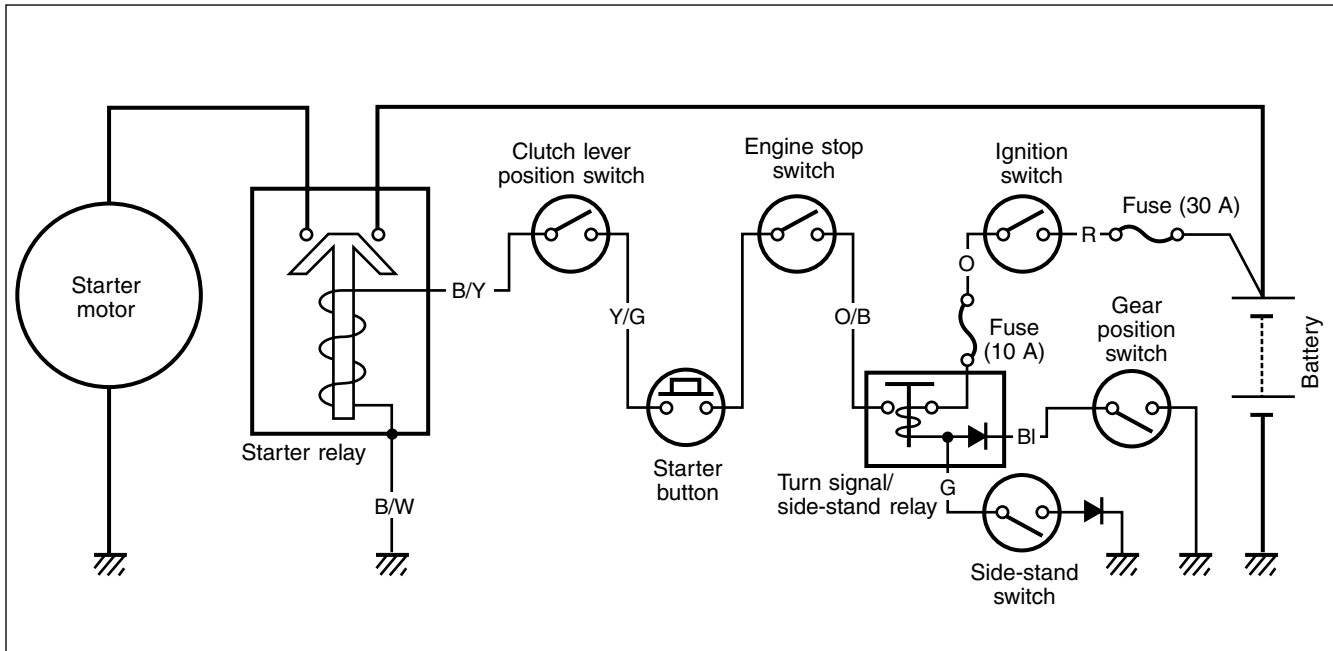

SIDE-STAND/IGNITION INTERLOCK SYSTEM DESCRIPTION


This side-stand/ignition interlock system prevents the motorcycle from being started with the side-stand down. The system is operated by an electric circuit provided between the battery and ignition coil.

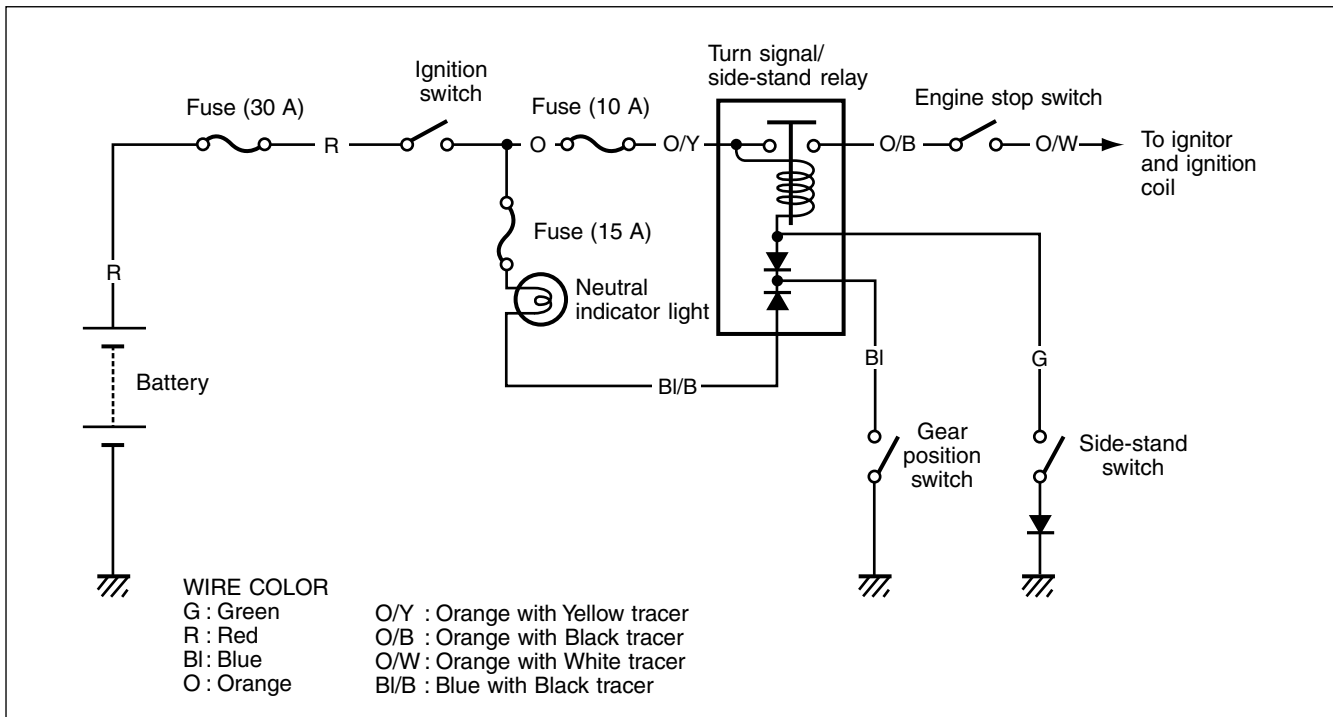

The circuit consists of the turn signal/side-stand relay, neutral indicator light and switches. The ignition coils will send voltage to the spark plugs dependant on what gear the transmission is in and whether the side-stand is either up or down. The gear position and side-stand switches work together in this system. The ignition coils work only in two situations as follows.


1. Transmission: Neutral (ON) Side-stand: Down (OFF)

The current flow \textcircled{A} switches "on" the side-stand relay and the ignition coils send voltage to the spark plugs even when the side-stand is kept down.

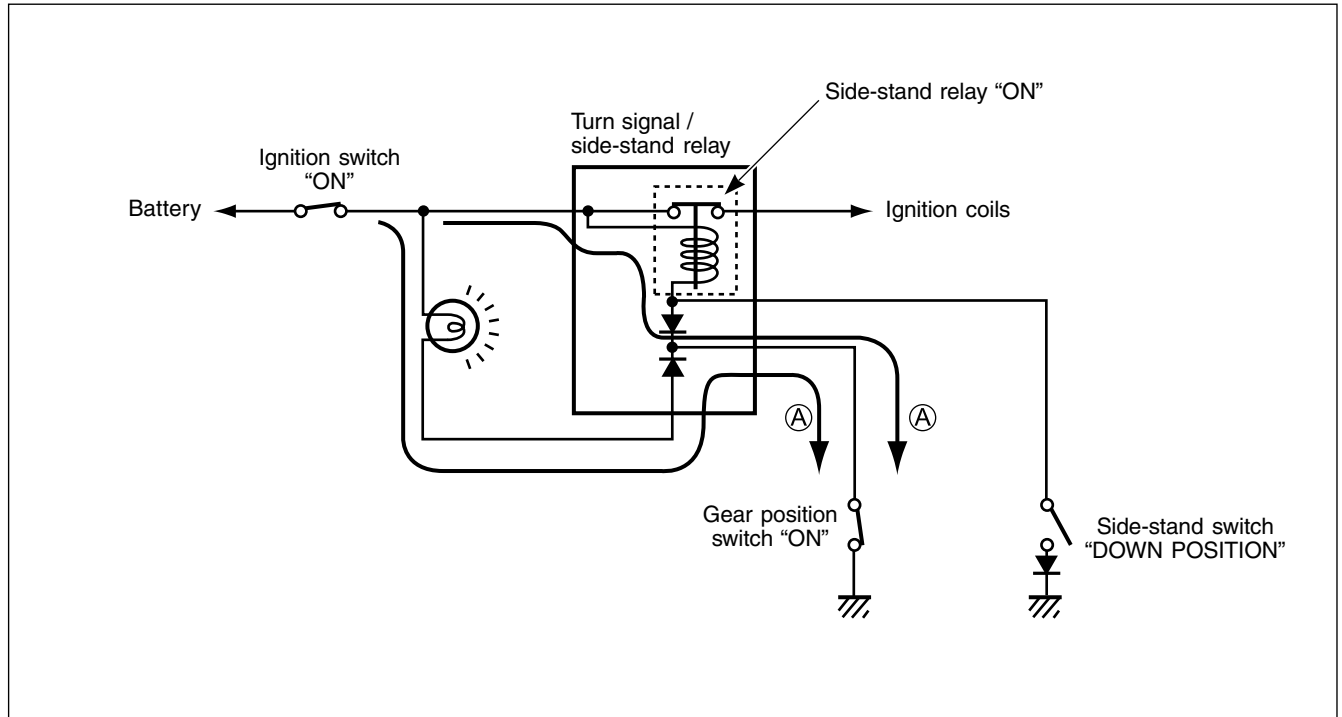


2. Side-stand: Up (ON)


The current flow \textcircled{B} switches "on" the side-stand relay and the ignition coils send voltage to the spark plugs. The engine can be started in any gear.

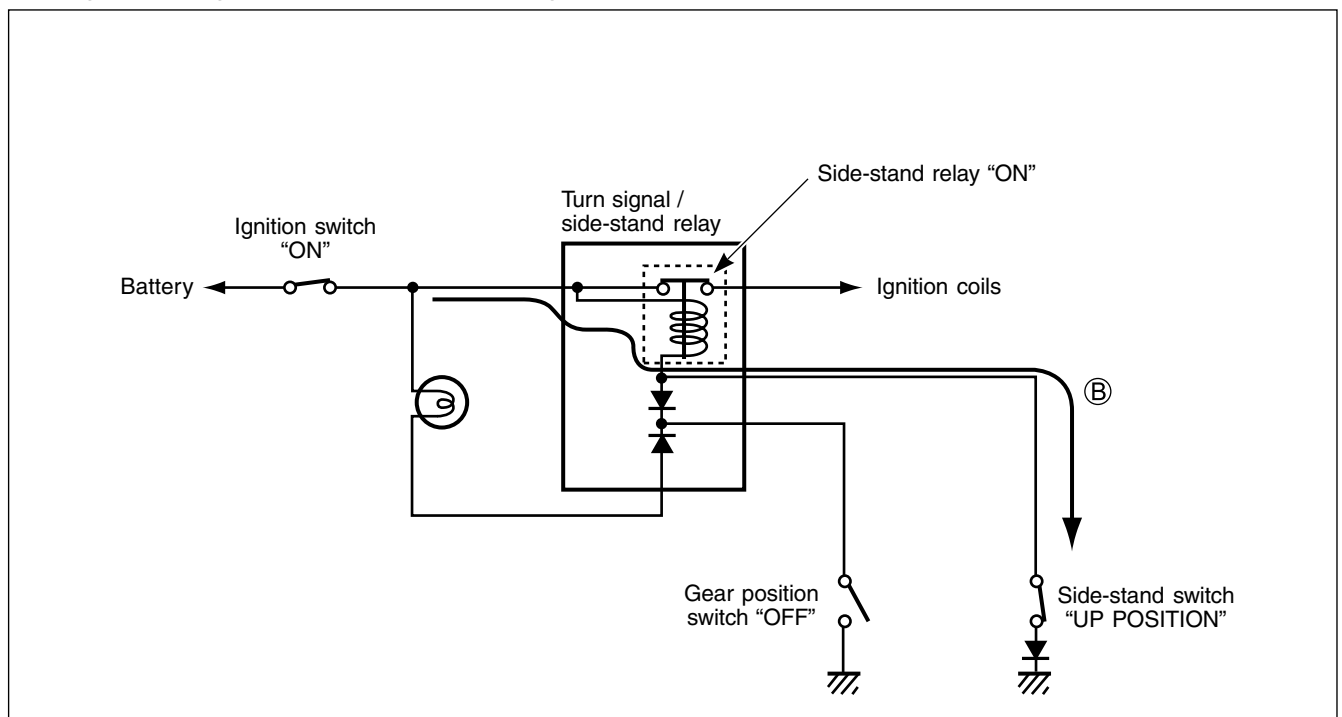

TROUBLE SHOOTING

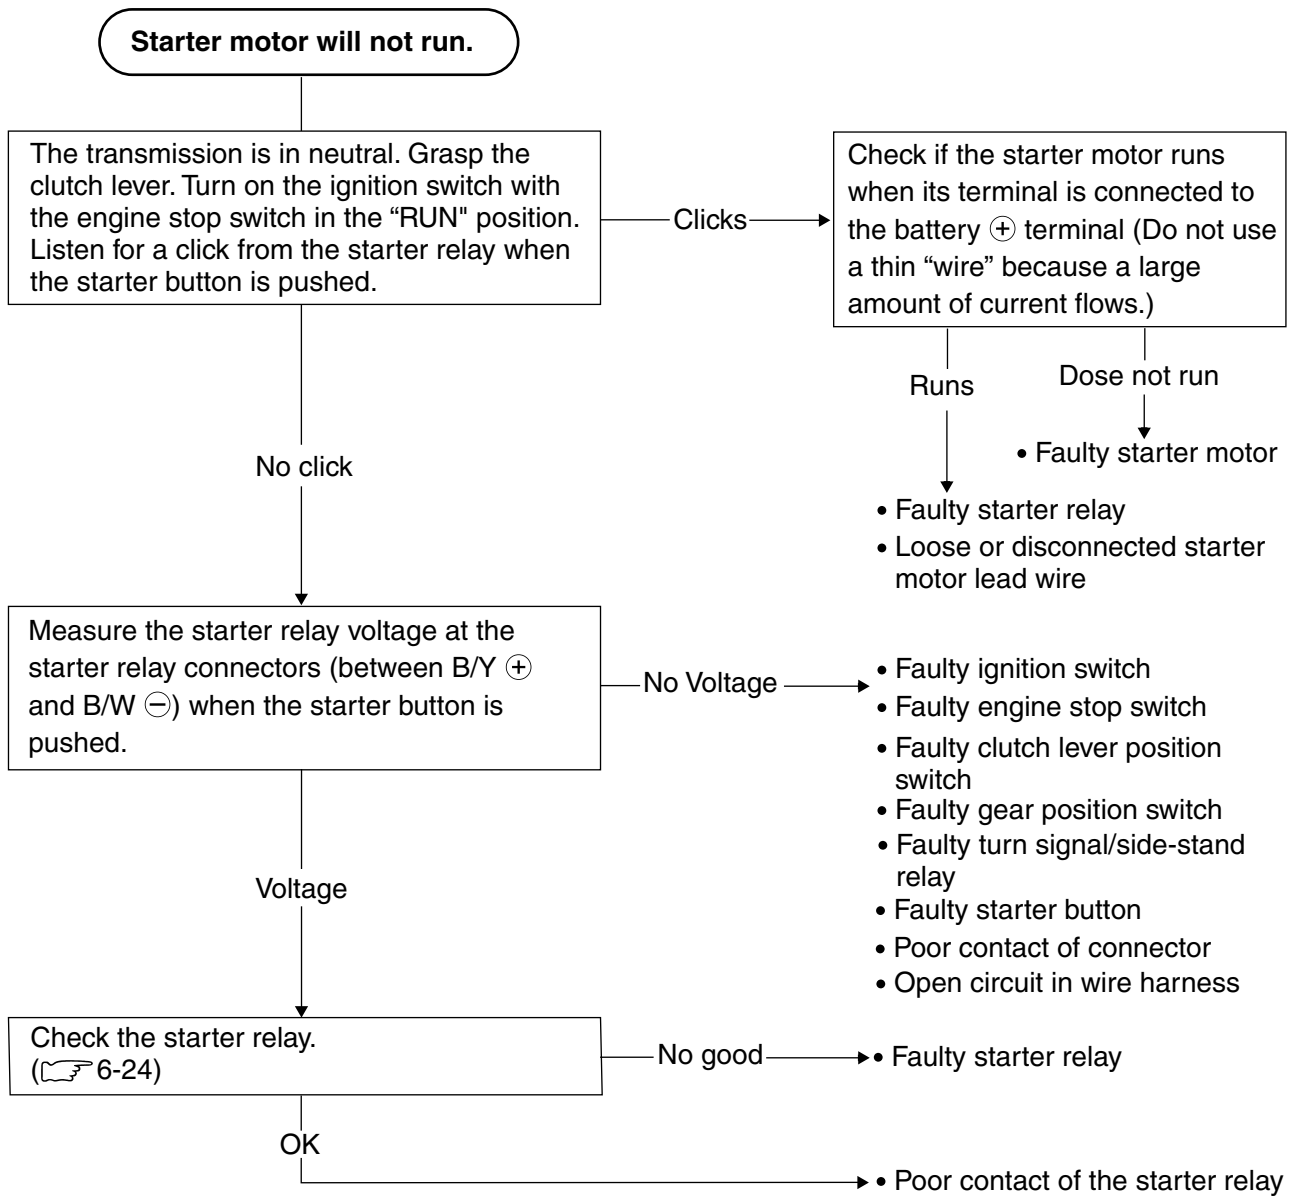

The starter motor runs when the transmission is in neutral, but does not run when the transmission is in any position other than neutral, with the side-stand up.

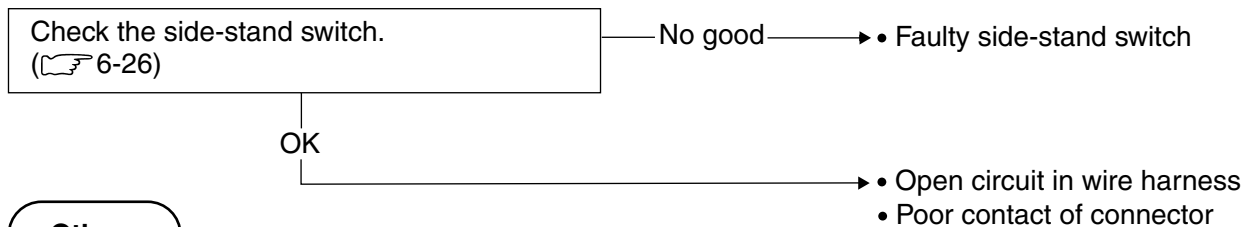


Others


Engine does not turn though the starter motor runs.	• Faulty starter clutch
---	-------------------------

STARTER MOTOR REMOVAL AND DISASSEMBLY

- Remove the starter motor. (➡3-16)

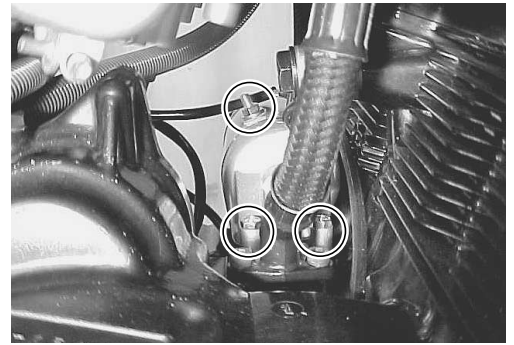

- Disassemble the starter motor, as shown.

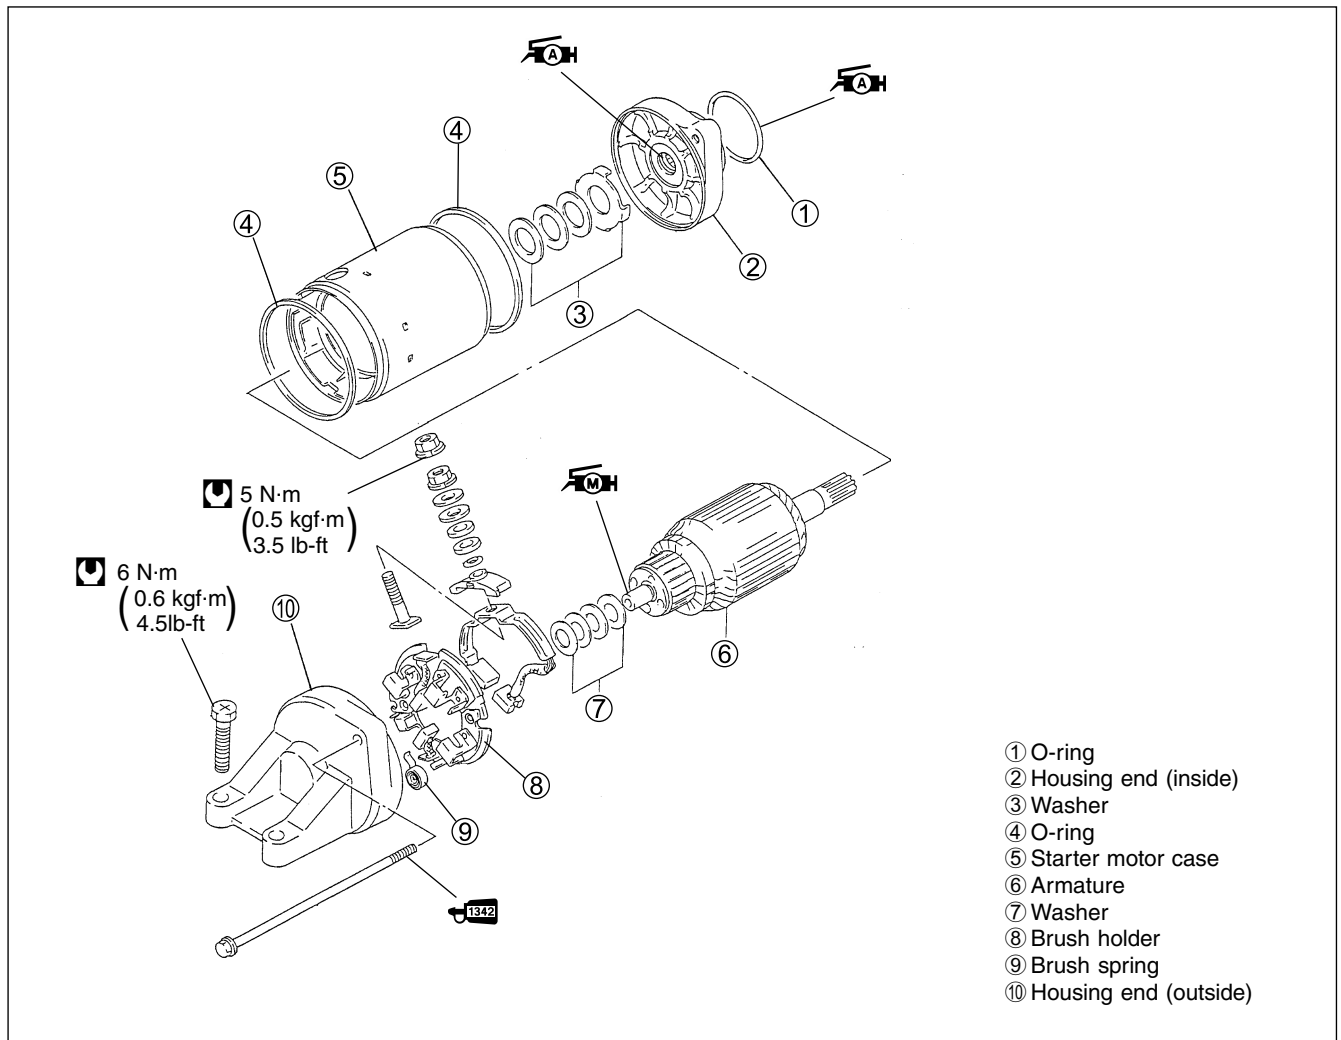


STARTER MOTOR INSPECTION

CARBON BRUSHES

Inspect the carbon brushes for abnormal wear, cracks or smoothness in the brush holder.

If either carbon brush is defective, replace the brush assembly.

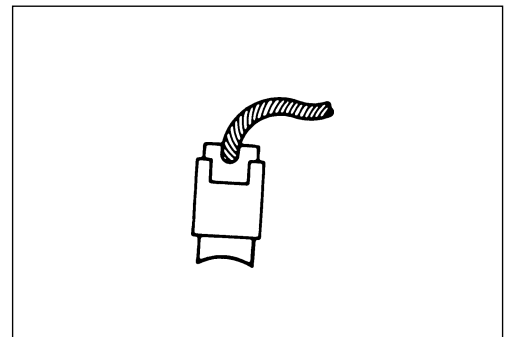


COMMUTATOR

Inspect the commutator for discoloration, abnormal wear or undercut (A).

If the commutator is abnormally worn, replace the armature.

If the commutator surface is discolored, polish it with #400 sandpaper and wipe it using a clean, dry cloth.

If there is no undercut, scrape out the insulator (1) with a saw blade.

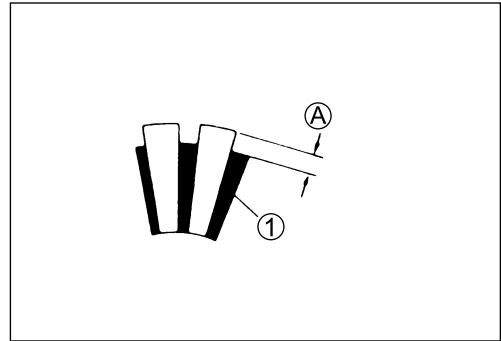**ARMATURE COIL**


Measure for continuity between each segment.

Measure for continuity between each segment and the armature shaft.

If there is no continuity between the segments or there is continuity between the segments and shaft, replace the armature with a new one.

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Continuity test (••••)**

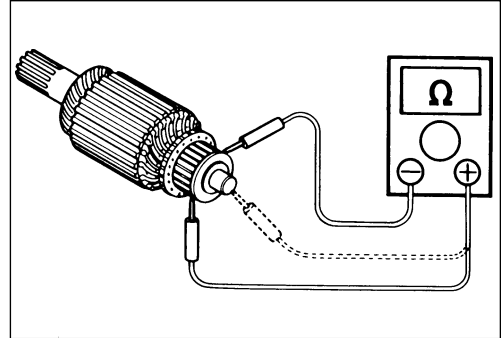**OIL SEAL**

Check the seal lip for damage or leakage.

If any damage is found, replace the housing end (inside).

**STARTER MOTOR REASSEMBLY AND REMOUNTING**

Reassemble and remount the starter motor in the reverse order of removal and disassembly. Pay attention to the following points:

⚠ CAUTION

Replace the O-rings with new ones to prevent oil leakage and moisture.

- Apply SUZUKI SUPER GREASE "A" to the lip of the oil seal.

For USA

 **99000-25030: SUZUKI SUPER GREASE "A"**

For the other countries


 **99000-25010: SUZUKI SUPER GREASE "A"**

- Fit the washer to the housing end correctly as shown.




- Apply a small quantity of SUZUKI MOLY PASTE to the armature shaft.

 99000-25140: SUZUKI MOLY PASTE

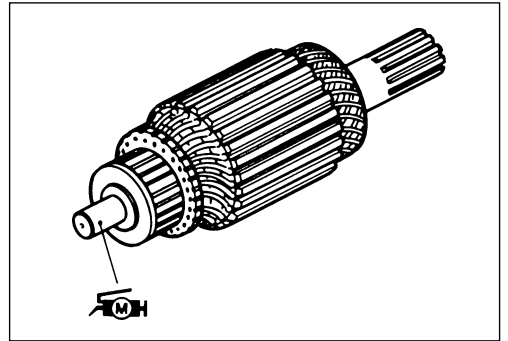


- Align the match mark on the starter motor case with the match mark on the housing end.
- Apply a small quantity of THREAD LOCK “1342” to the starter motor housing bolts.

 99000-32050: THREAD LOCK “1342”

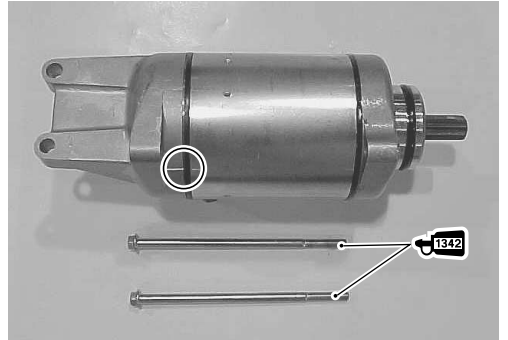


- Install the starter motor. (📄 3-40)

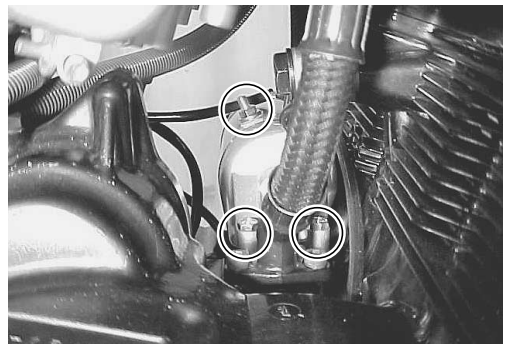


STARTER RELAY INSPECTION

- Remove the frame side cover (left side). (📄 5-6)
- Disconnect the battery \ominus lead wire and starter relay cover ①.

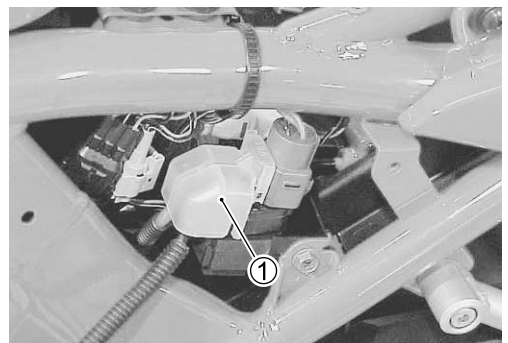

- Disconnect the starter motor lead wire ②, battery lead wire ③ and starter relay coupler ④ at the starter relay.
- Remove the starter relay.

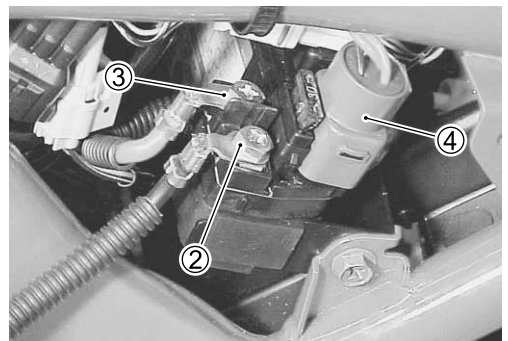


Apply 12 volts to terminals **A** and **B** and measure for continuity between the positive and negative terminals.

If the starter relay clicks and continuity is found, the relay is ok.

 **09900-25008: Multi circuit tester set**


 **Tester knob indication: Continuity test (••••)**

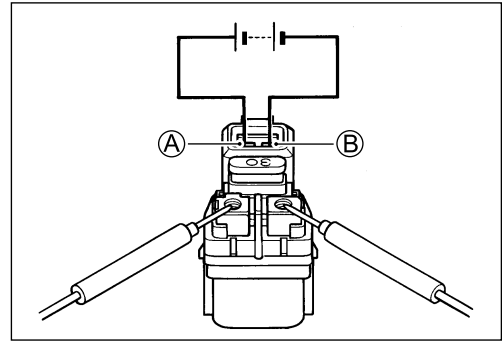

⚠ CAUTION

Do not apply battery voltage to the starter relay for more than five seconds.


This may overheat and damage the relay coil.

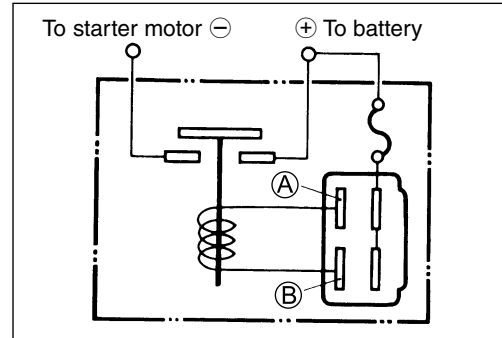

Check the relay coil for opens, grounds and the specified resistance.

 **Tester knob indication: Resistance (Ω)**

DATA Starter relay resistance
Standard: 3 – 5 Ω

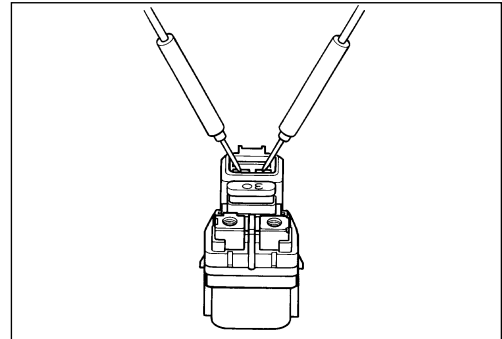

SIDE-STAND/IGNITION INTERLOCK SYSTEM PART INSPECTION

If the interlock system does not operate properly, check each component. If any abnormality is found, replace the component with a new one.

GEAR POSITION SWITCH



The gear position switch coupler is located behind the frame side cover (left side).

- Remove the frame side cover (left side). (☞ 5-6)
- Disconnect the gear position switch coupler and measure the continuity between Blue and Ground with the transmission in neutral.

	Blue	Ground
ON (in neutral)	○	○
OFF (not in neutral)		

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Continuity test (•••)**

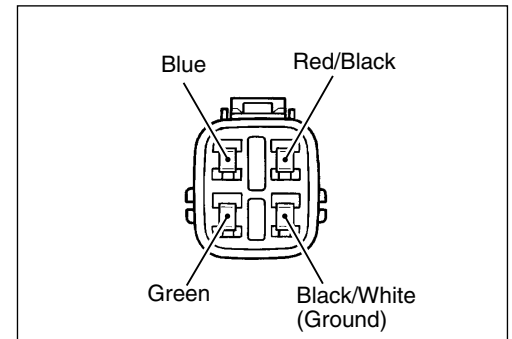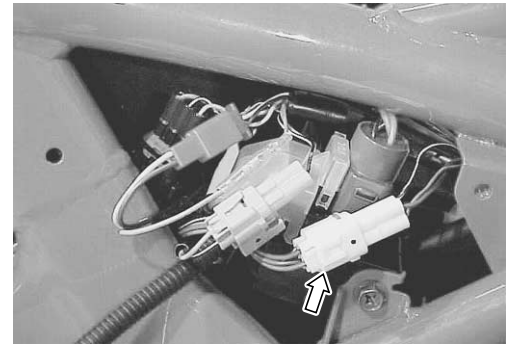

SIDE-STAND SWITCH


The side-stand switch coupler is located behind the frame side cover (left side).

- Remove the frame side cover (left side). (☞ 5-6)
- Disconnect the side-stand switch coupler and measure the voltage between Green and Black/White lead wires.

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Diode test (←→)**

	Green (+ probe)	Black/White (- probe)
ON (side-stand up)	0.4 – 0.6 V	
OFF (side-stand down)	1.4 – 1.5 V	

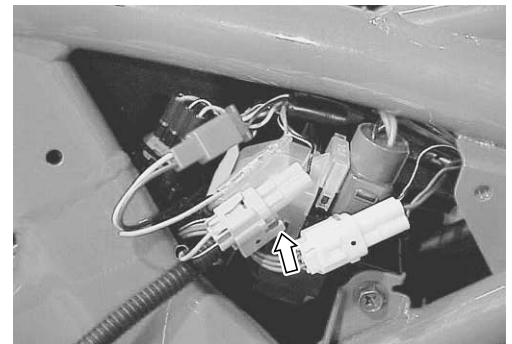


NOTE:

If the tester reads under 1.4 V, replace its battery when the tester probes are not connected.

TURN SIGNAL/SIDE-STAND RELAY

The turn signal/side-stand relay, which is located under the seat, is composed of the turn signal relay, and the side-stand relay and diode.

- Remove the seat. (☞ 5-5)

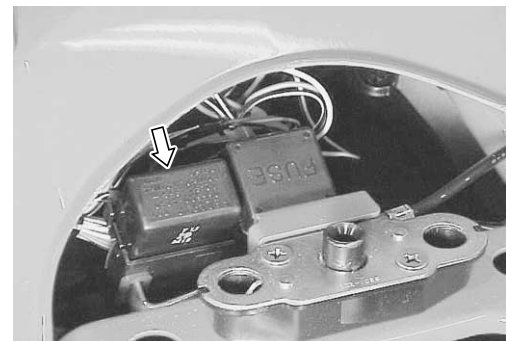


SIDE-STAND RELAY

First check the insulation between ④ and ⑤ terminals with the tester. Then apply 12 V to terminals ④ and ③ (+ to ④ and - to ③) and check the continuity between ④ and ⑤. If there is no continuity, replace the turn signal/side-stand relay with a new one.

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Continuity test (•••)**

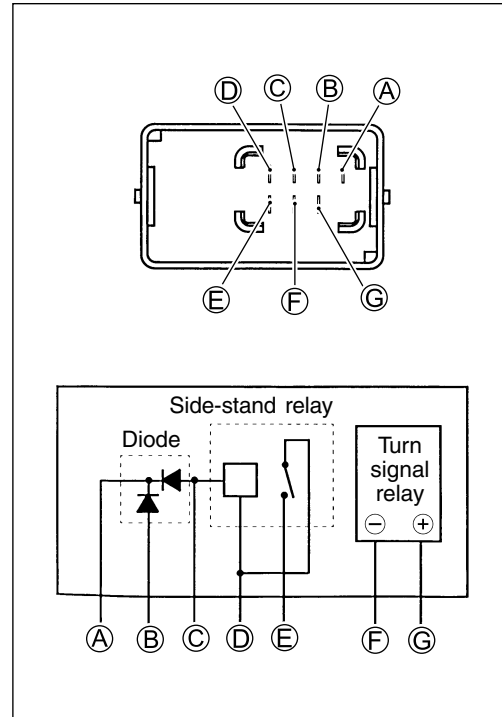

DIODE

Measure the voltage between the terminals using the multi circuit tester. Refer to the following table.

Unit: V


① Probe of tester to:	⊕ Probe of tester to:	
	③, ②	④
③, ②		1.4 – 1.5
④	0.4 – 0.6	

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Diode test (→←)**

NOTE:

If the multi circuit tester reads under 1.4 V, replace its battery when the tester probes are not connected.

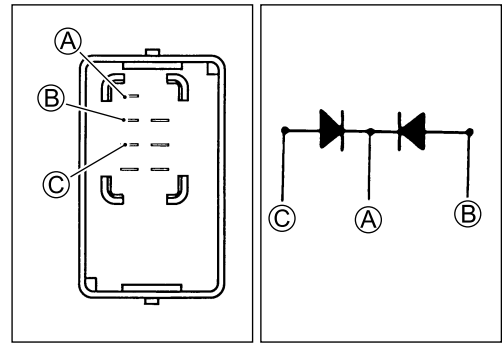

CLUTCH LEVER POSITION SWITCH

- Disconnect the clutch lever position switch coupler.

Measure the continuity between the switch terminals with the clutch lever grasped. If there is no continuity, replace the clutch lever position switch.

 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Continuity test (•••)**



IGNITION SYSTEM (DIGITAL IGNITOR)

DESCRIPTION


The fully transistorized ignition system consists of the following components: a signal generator (which is made up of the signal generator rotor and pickup coil), ignitor (including a 8-bit microcomputer and a 10 MHz ceramic vibrator), throttle position sensor, two ignition coils and four spark plugs. The ignition timing is programmed and stored in the ignitor's ROM (Read Only Memory).

The signal generator is mounted on the right end of the crankshaft. The induced signal in the signal generator is sent to the wave-form arrangement circuit and the CPU receives this signal and calculates the best ignition timing from the signal of the ceramic vibrator, throttle position sensed by throttle position sensor and data stored in the ROM. The CPU outputs the signal to the transistor of the ignition coil output circuit which is connected to the primary windings of the ignition coils which is turned "off" and "on" accordingly. Thus, it induces the secondary current in the ignition coil's secondary windings and produces the spark between the spark plug gaps.


The ignition cutoff circuit is incorporated in the ignitor to prevent the engine from overrevving. If the engine speed reaches 10 900 r/min, this circuit will cutoff the ignition primary current for the #1 and #4 spark plugs.

▲ CAUTION

The engine is capable of running at over 10 900 r/min without a load, even if the ignition cutoff circuit is in effect; however, this may cause engine damage. Therefore, never run the engine over 10 900 r/min without a load.

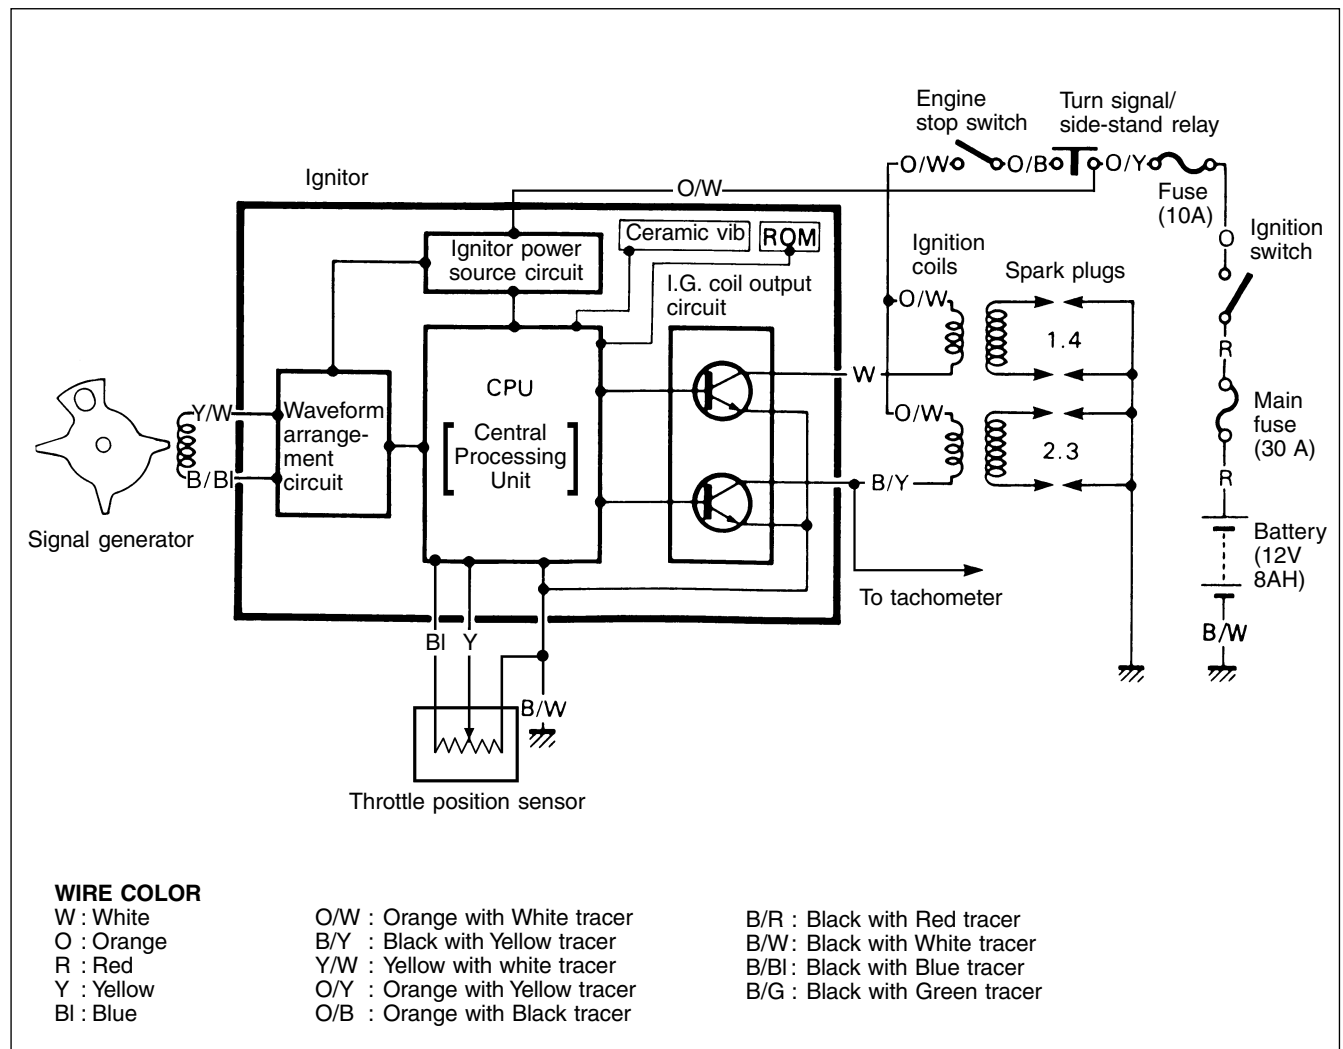

TROUBLE SHOOTING

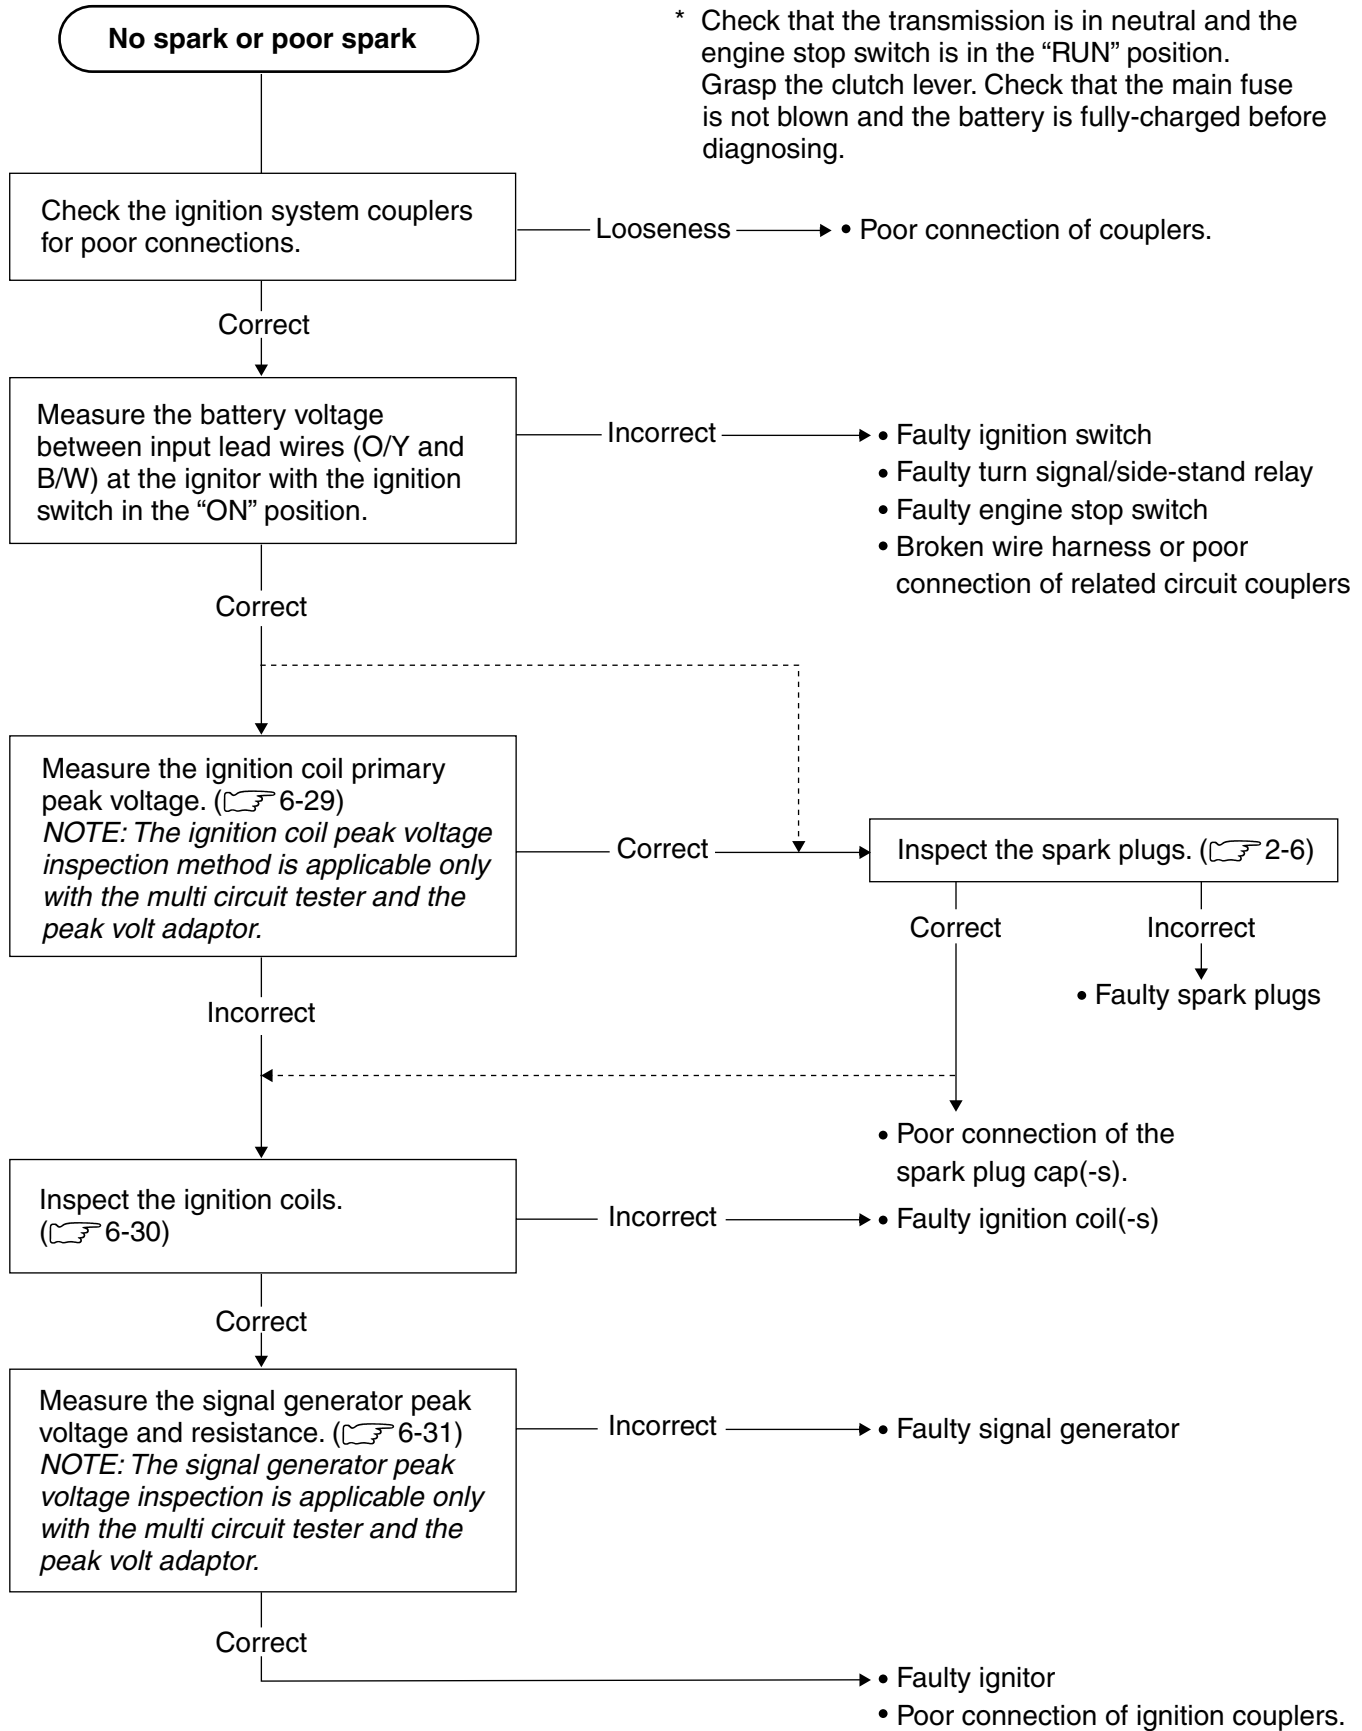

INSPECTION

IGNITION COIL PRIMARY PEAK VOLTAGE

- Remove the fuel tank. (☞ 4-3)
- Remove all of the spark plug caps and spark plugs.
- Connect four new spark plugs to each spark plug cap and ground them to the crankcase.

NOTE:

Make sure that all of the spark plug caps and spark plugs are connected properly and the battery is fully-charged.

Measure ignition coil primary peak voltage (for #1 and #4 cylinders) in the following procedure.

- Connect the multi circuit tester with the peak voltage adaptor as follows.

Ignition coil (for #1 and #4 cylinders):

White terminal (+ Probe) – Ground (– Probe)

NOTE:

Do not disconnect the ignition coil primary wire.

 **09900-25008: Multi circuit tester set**

CAUTION

When using the multi circuit tester and peak volt adaptor, refer to the appropriate instruction manual.




- Shift the transmission into neutral, turn the ignition switch to the “ON” position and grasp the clutch lever.
- Press the starter button and allow the engine to crank for a few seconds, and then measure the ignition coil primary peak voltage.
- Repeat the above procedure a few times and measure the highest ignition coil primary peak voltage.

 **Tester knob indication: Voltage (---)**

 **Ignition coil primary peak voltage: More than 140 V**

WARNING

While testing, do not touch the tester probes and spark plugs to prevent receiving an electric shock.

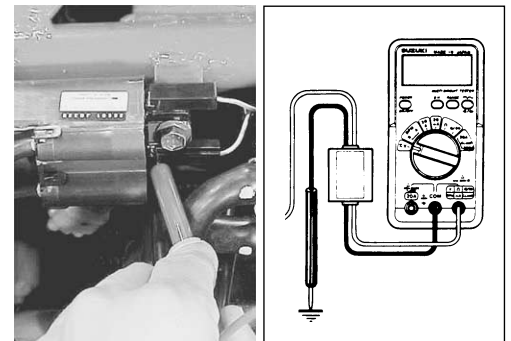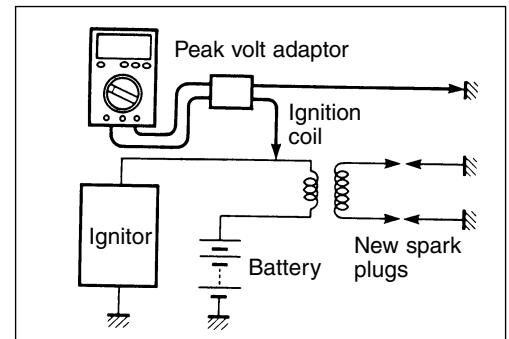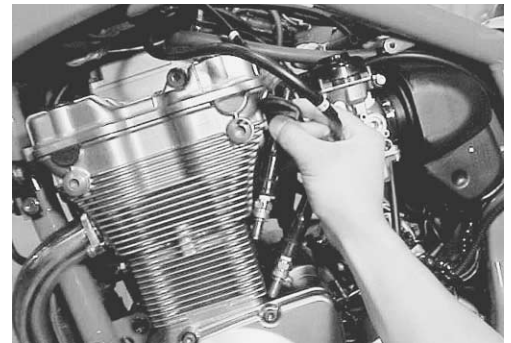

Measure ignition coil primary peak voltage (for #2 and #3 cylinders) in the same manner as for cylinders #1 and #4.

Ignition coil (for #2 and #3 cylinders):

B/Y terminal (+ Probe) – Ground (– Probe)

B/Y: Black with Yellow tracer

NOTE:

Do not disconnect the ignition coil primary wire.

 **Tester knob indication: Voltage (V)**

DATA **Ignition coil primary peak voltage: More than 140 V**

If the voltages are lower than the standard values, inspect the ignition coil and the signal generator.

IGNITION COIL RESISTANCE



- Measure the ignition coil resistance in both the primary and secondary windings. If the windings are in sound condition, their resistance should be close to the specified values.

 **Tester knob indication: Resistance (Ω)/(kΩ)**

DATA **Ignition coil resistance**

Primary: Approx. 2 – 4 Ω (+ tap – – tap)

**Secondary: Approx. 30 – 40 kΩ
(spark plug cap – spark plug cap)**

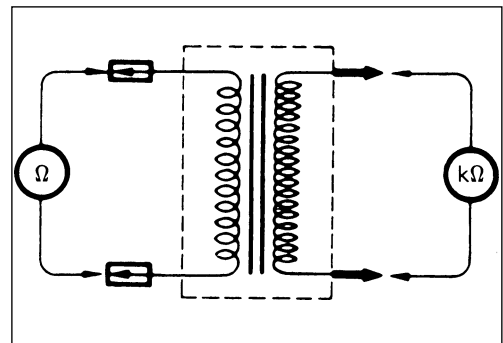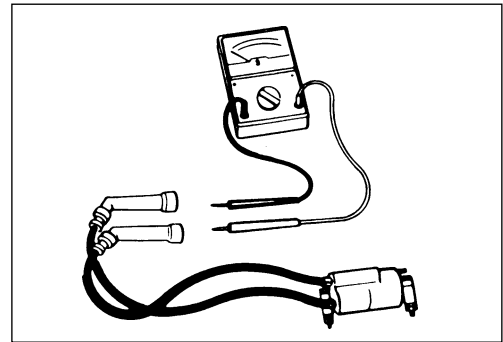

SIGNAL GENERATOR PEAK VOLTAGE

- Remove the frame cover. (☞ 5-5)
- Remove the frame side cover (left side). (☞ 5-6)

NOTE:

Make sure that all of the couplers are connected properly and the battery is fully-charged.

- Disconnect the ignitor coupler ① at the ignitor.
Measure the signal generator peak voltage between the Yellow/White and Black/Blue lead wires on the ignitor coupler.
- Connect the multi circuit tester with the peak volt adaptor as follows.

Black/Blue (+ Probe) – Yellow/White (– Probe)

 **09900-25008: Multi circuit tester set**

CAUTION

When using the multi circuit tester and peak volt adaptor, refer to the appropriate instruction manual.




- Shift the transmission into neutral, turn the ignition switch to the “ON” position and grasp the clutch lever.
- Press the starter button and allow the engine to crank for a few seconds, and then measure the signal generator peak voltage.
- Repeat the above procedure a few times and measure the highest signal generator peak voltage.

 **Tester knob indication: Voltage (V)**

DATA **Signal generator peak voltage:**

More than 1.0 V (Black/Blue – Yellow/White)

If the peak voltage measured on the ignitor coupler is lower than the standard value, measure the peak voltage on the signal generator coupler as follows.

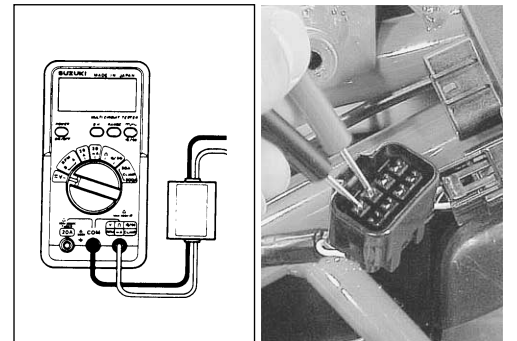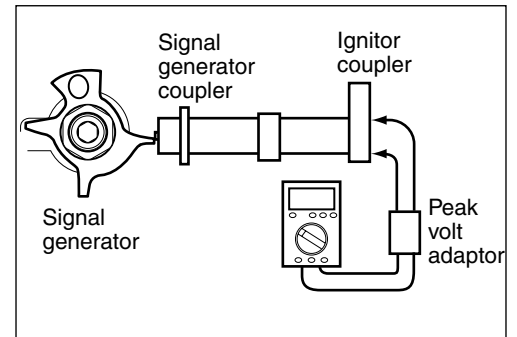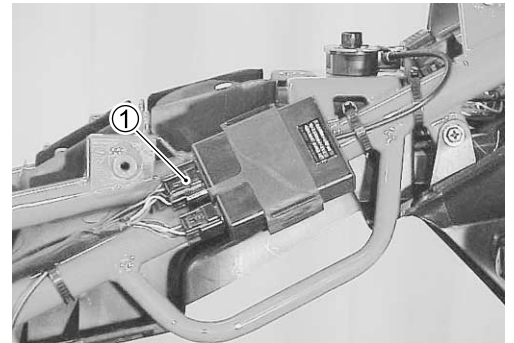

- Remove the frame side cover (left side). (5-6)
- Disconnect the signal generator coupler and connect the multi circuit tester with the peak volt adaptor.




Blue terminal (+ Probe) – Yellow terminal (– Probe)

- Measure the signal generator peak voltage in the same manner as on the ignitor coupler.

 **Tester knob indication: Voltage (V)**

DATA **Signal generator peak voltage:**
More than 1.0 V (Blue – Yellow)

If the peak voltage on the signal generator lead wire coupler is within specification, but on the ignitor coupler is out of specification, the wire harness must be replaced. If both peak voltages are out of specification, the signal generator must be replaced and re-checked.

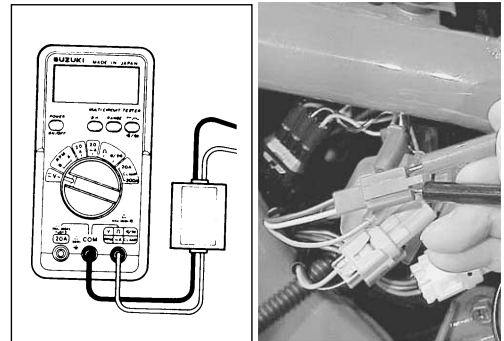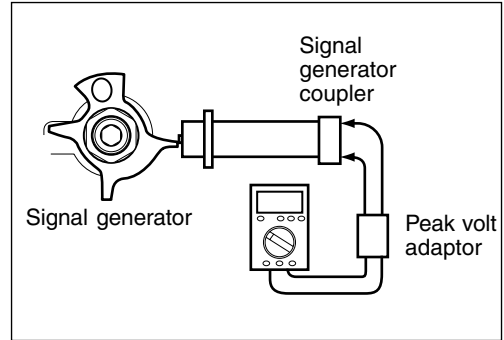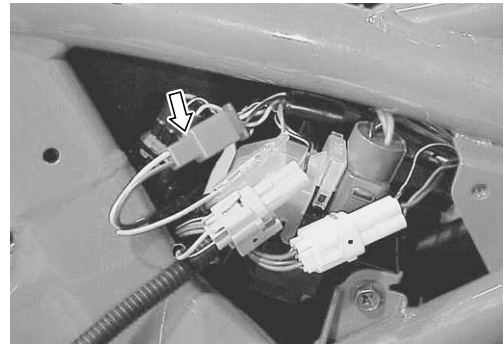


SIGNAL GENERATOR

- Remove the frame side cover and disconnect the signal generator coupler.
- Measure the resistance between the lead wires and ground. If the resistance is not within the specified value, the signal generator stator must be replaced.

 **Tester knob indication: Resistance (Ω)**

DATA **Pickup coil resistance:**
Approx. 130 – 200 Ω (Yellow – Blue)
∞ Ω (Blue – Ground)

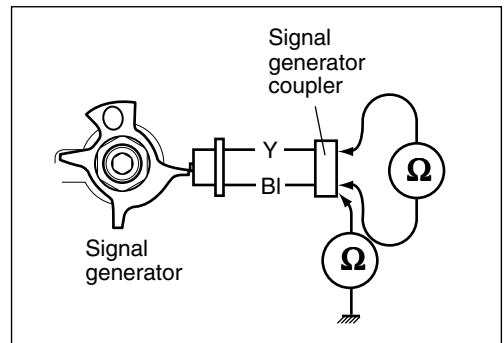


NOTE:

Refer to page 3-16 and 37 for signal generator replacement.

COMBINATION METER

REMOVAL

- Remove the cowling. (5-3)
- Remove the headlight assy. (5-4)
- Disconnect the combination meter couplers ① and clamps.
- Remove the combination meter mounting nuts ②.

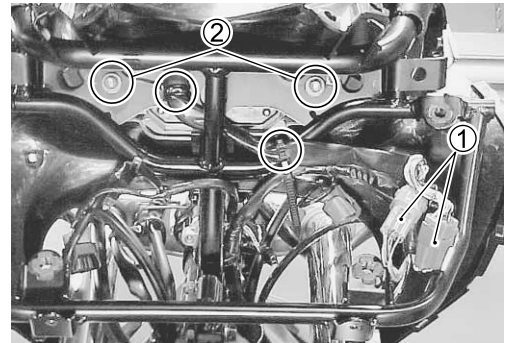


- Remove the combination meter ③.



DISASSEMBLY

- Disassemble the combination meter as follows.

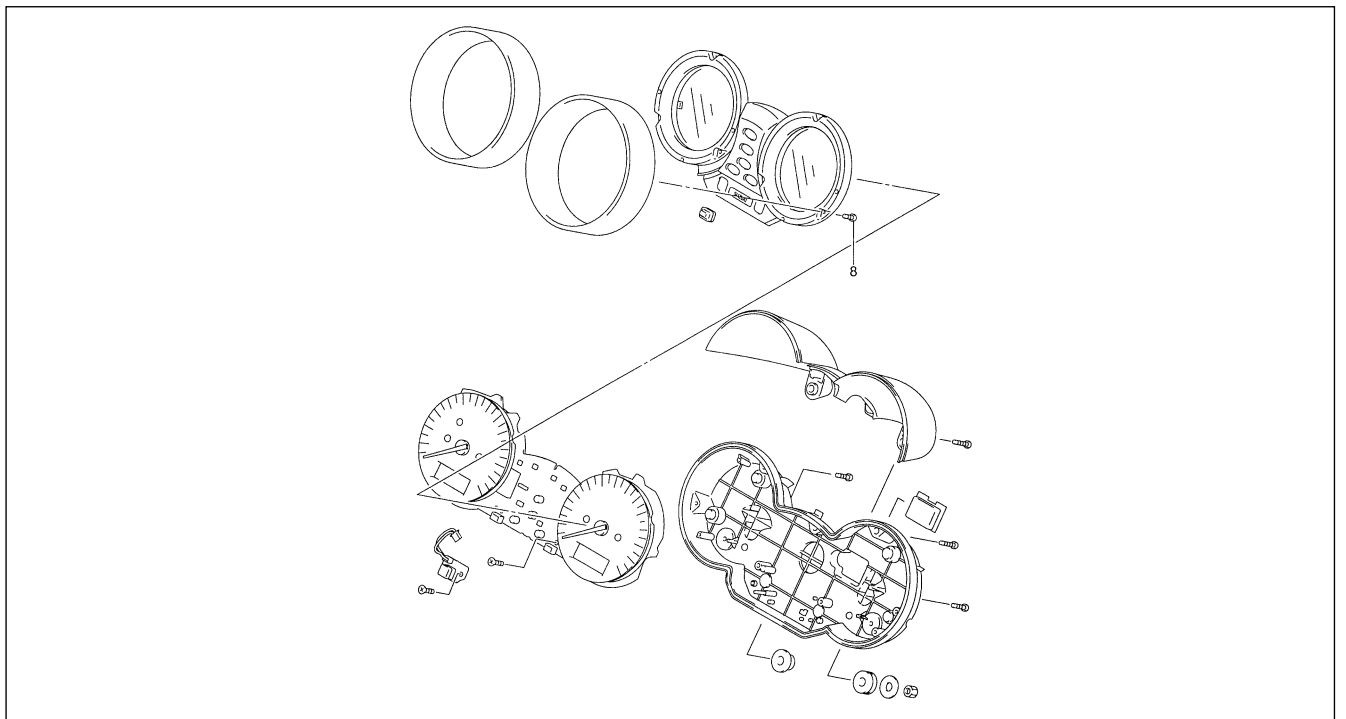




INSPECTION

Measure the continuity between the lead wires in the diagram on the next page using a tester.

If there is no continuity, replace the combination meter assy.

NOTE:

When performing this test, it is not necessary to remove the combination meter.

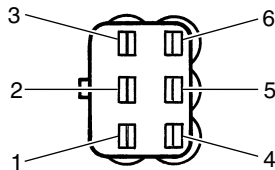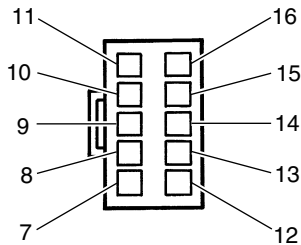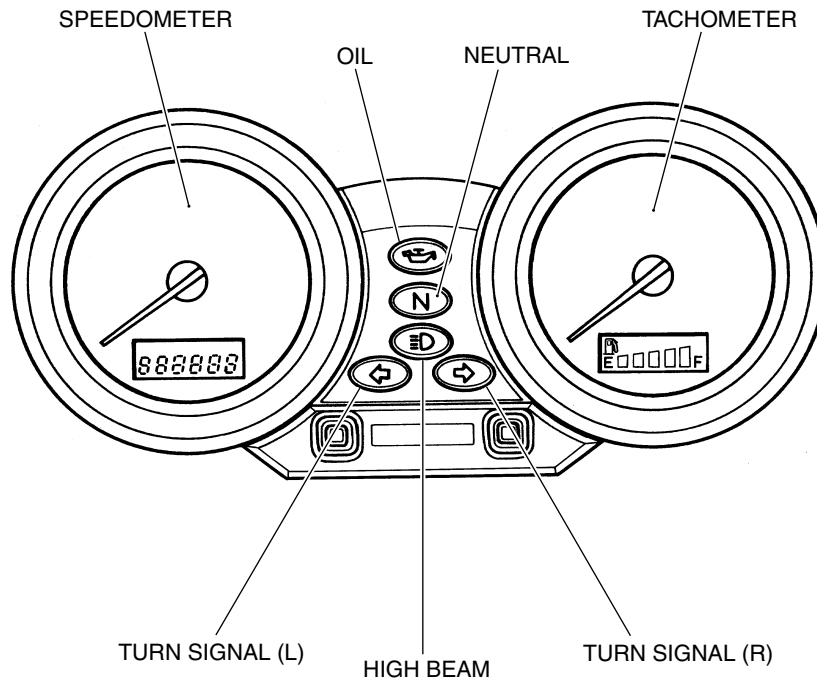

ITEM	⊕ Probe of tester to:	⊖ Probe of tester to:
ILLUMINATION	7	10
TURN (R)	8	10
TURN (L)	13	10
NEUTRAL	14	11
HIGH BEAM	12	10
OIL	14	3


- 1: SPEEDOMETER
- 2: TACHOMETER
- 3: OIL ⊖
- 4: SPEEDOMETER
- 5: BATTERY ⊕
- 6: Blank
- 7: ILLUMINATION ⊕
- 8: TURN (R) ⊕
- 9: Blank
- 10: GROUND (PILOT LAMP)
- 11: NEUTRAL ⊖
- 12: HIGH BEAM ⊕
- 13: TURN (L) ⊕
- 14: IGNITION
- 15: FUEL
- 16: GROUND (TACHOMETER)

SPEEDOMETER INSPECTION

If the speedometer, odometer or tripmeter does not function properly, inspect the speed sensor and the coupler connections. If the speed sensor and coupler connections are OK, replace the combination meter with a new one.

SPEED SENSOR INSPECTION

- Remove the frame side cover (left side). (☞ 5-6)
- Disconnect the speed sensor coupler.
- Remove the speed sensor ①.

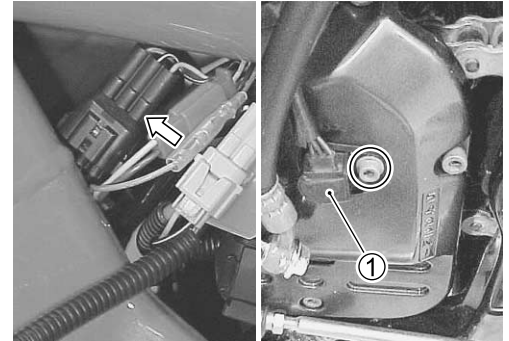

- Connect a 12 V battery (between B and B/W), 10 k Ω resistor (Between B/R and B) and pocket tester (tester \oplus probe to B and tester \ominus probe to B/R) as shown.

B/R : Black with Red tracer

B/W: Black with White tracer

B : Black



 **09900-25008: Multi circuit tester set**

 **Tester knob indication: Voltage (---)**

- Move a screwdriver back and forth across the pick-up surface of the speed sensor. The voltage readings should cycle as follows (0 V \rightarrow 12 V or 12 V \rightarrow 0 V). If the voltage reading does not change, replace the speed sensor with a new one.

NOTE:

While testing, the highest voltage reading should be the same as the battery voltage (12 V).

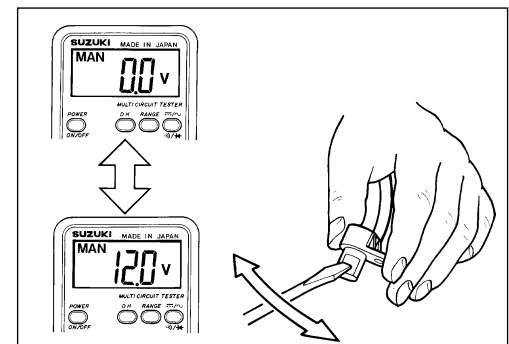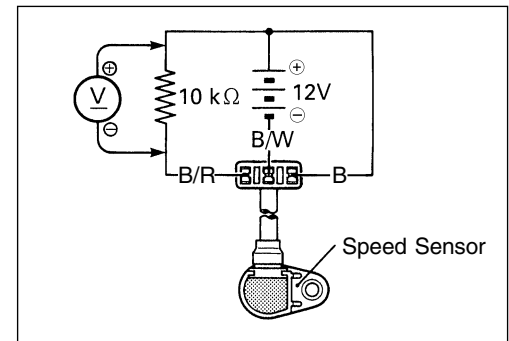


OIL PRESSURE INDICATOR INSPECTION

- Remove the signal generator cover. (☞ 3-13)
- Disconnect the oil pressure Green/Yellow lead wire from the oil pressure switch.
- Turn the ignition switch to the "ON" position.
- Check if the oil pressure indicator lights up when grounding the Green/Yellow lead wire.

If the oil pressure indicator does not light up, check the couplers. If all of the connections are OK, replace the oil pressure indicator with a new one.


- After checking the oil pressure indicator light, install the signal generator cover. (☞ 3-48)

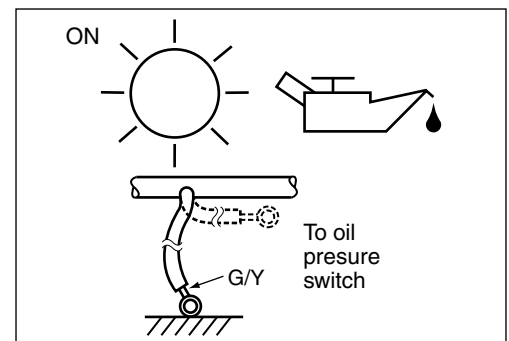


FUEL LEVEL METER INSPECTION

- Remove the fuel tank. (☞ 4-3)
- Disconnect the fuel level gauge coupler. (☞ 4-3)

Check that the fuel level meter indicates properly when the jumper wire (A) is connected between the fuel level gauge coupler terminals coming from the main wiring harness. With the ignition switch turned ON, the fuel level meter should indicate "F".

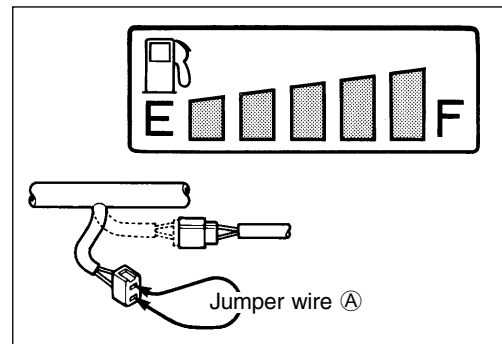


Connect a new fuel level gauge or correct fuel level gauge as shown in the following illustration. Fuel meter is normal if its pointer indicates the E (empty) position when the float is at the "E" position and if its pointer indicates the F (full) position when the float position is changed to the "F" position. If either one or both indications are abnormal, replace the fuel meter with a new one.

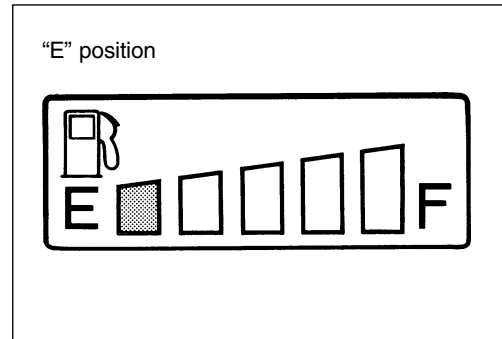


NOTE:


- * Prior to this inspection, check that the fuel gauge is functioning properly. (☞ 4-6)
- * When reading the meter indication, wait at least for 20 seconds after the float position has been changed.

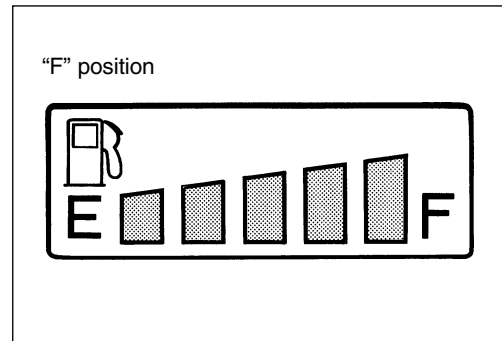

Resistance	Float position
90 – 93 Ω	Empty (E)
8 – 10 Ω	Full (F)

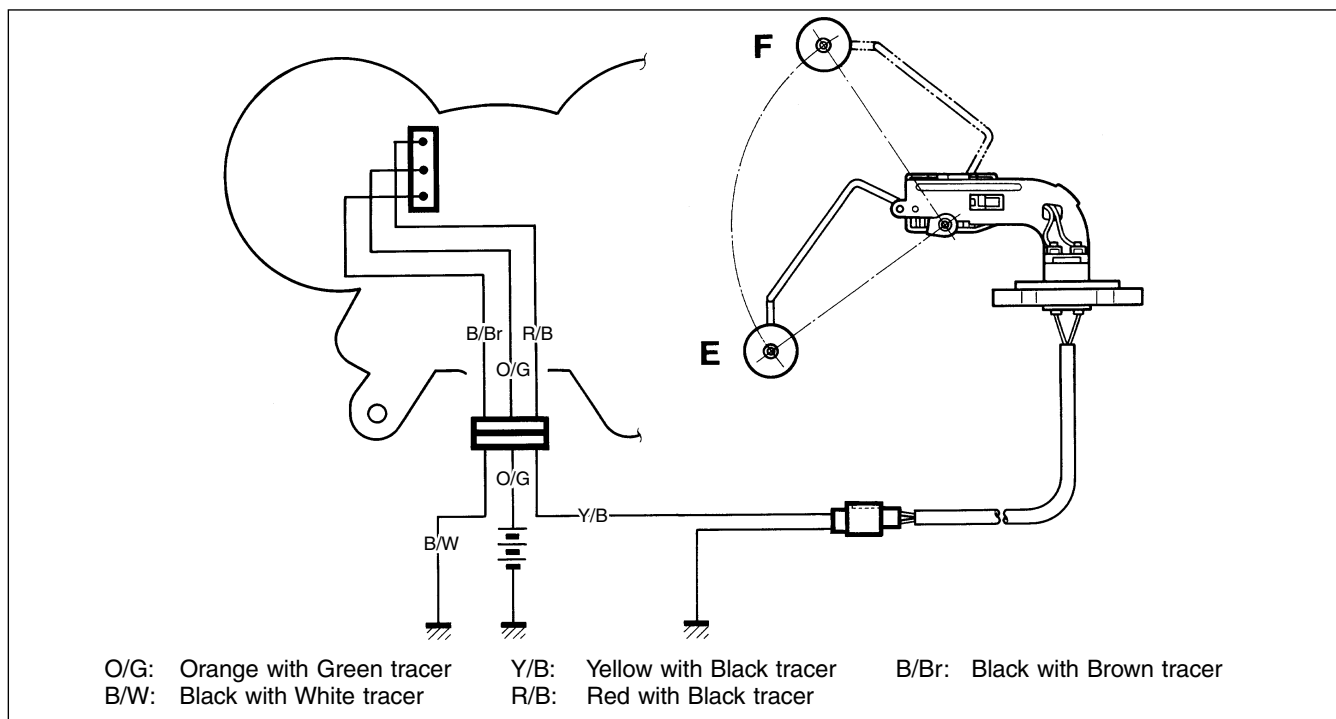

LAMPS HEADLIGHT

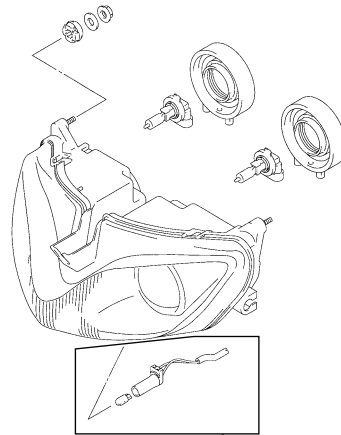

Headlight bulb: 12 V 51 + 60/51 W

Position light bulb: 12 V 5 W (Except for E-03, 24, 28, 33) (Except for E-03, 24, 28, 33)

NOTE:



Adjust the headlight (vertically and horizontally) after reassembling

BULB REPLACEMENT

- Disconnect the socket ①.
- Turn the bulb ② counterclockwise and remove it.
- Reassemble the bulb in the reverse order of removal.

▲ CAUTION

If you touch the bulb with your bare hands, clean the bulb with a cloth moistened with alcohol or soapy water to prevent premature bulb failure.

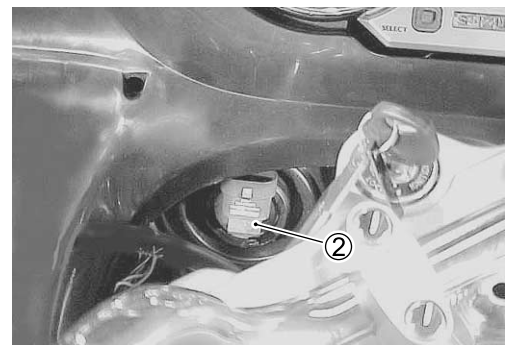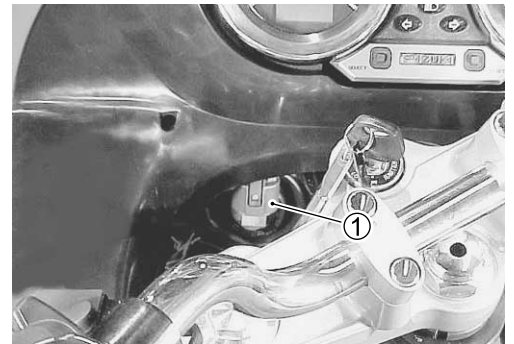


HEADLIGHT BEAM ADJUSTMENT

To adjust the beam horizontally:


Turn the adjuster ① clockwise or counterclockwise.

To adjust the beam vertically:

Turn the adjuster ② clockwise or counterclockwise.

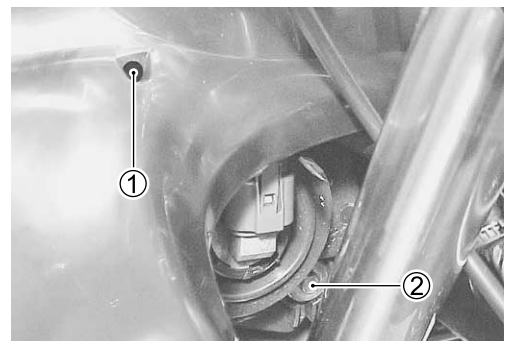

BRAKE LIGHT/TAILLIGHT AND LICENSE PLATE LIGHT

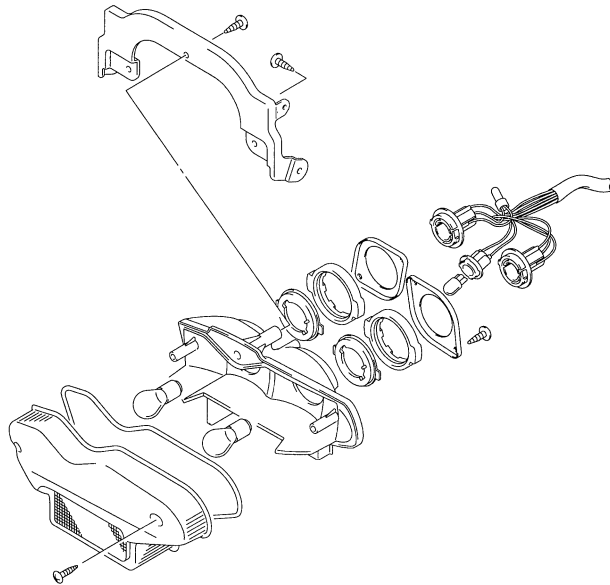


Brake light/taillight bulb: 12 V 21/5 W

License plate bulb: 12 V 5 W

▲ CAUTION

If you touch the bulb with your bare hands, clean the bulb with a cloth moistened with alcohol or soapy water to prevent premature bulb failure.

TURN SIGNAL LIGHTS

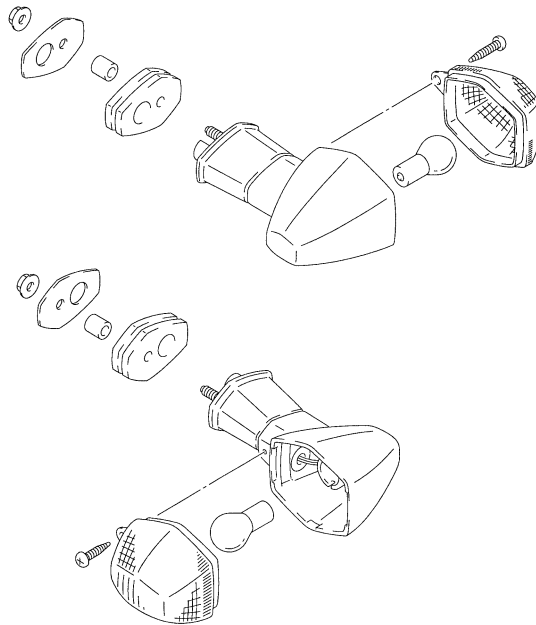

Turn signal light bulb: 12 V 21 W


▲ CAUTION


Do not overtighten the lens fitting screws.
If you touch the bulb with your bare hands, clean the bulb with a cloth moistened with alcohol or soapy water to prevent premature bulb failure.

RELAYS

STARTER RELAY


The starter relay is located behind the frame side cover (left side).

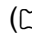
( 6-23)

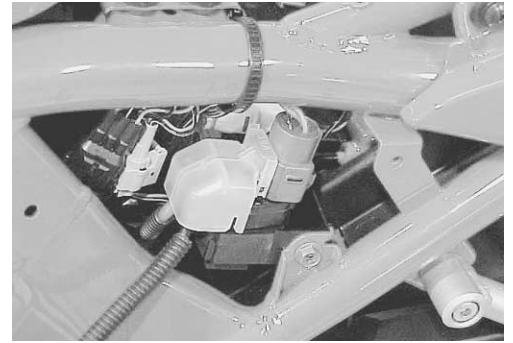

TURN SIGNAL/SIDE-STAND RELAY

The turn signal/side-stand relay, which is located under the seat, is composed of the turn signal relay, and the side-stand relay and diode.

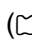- Remove the seat. ( 5-5)

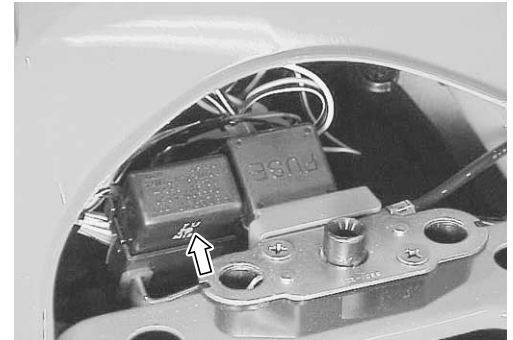

INSPECTION


Before removing the turn signal/side-stand relay, check the operation of the turn signal light.

If the turn signal light does not illuminate, inspect the bulb, turn signal switch and circuit connection.

If the bulb, turn signal switch and circuit connection are OK, the turn signal relay may be faulty; therefore, replace the turn signal/side-stand relay with a new one.

NOTE:

Make sure that the battery is fully charged.

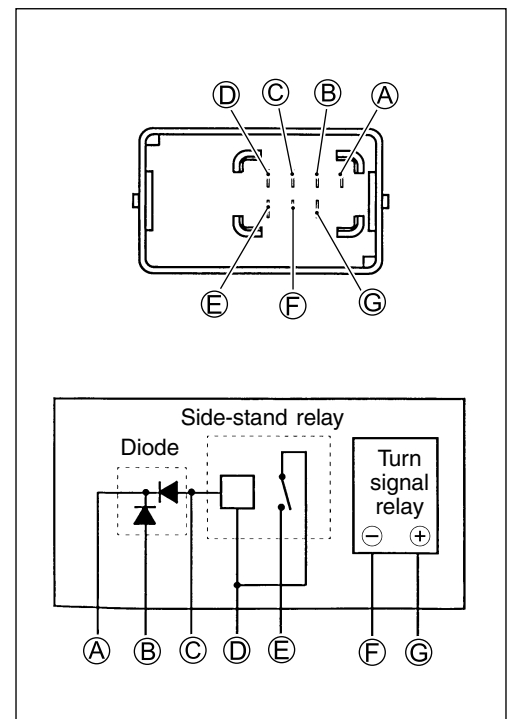

SWITCHES

Measure each switch for continuity using a tester. If any abnormality is found, replace the respective switch assemblies with new ones.

IGNITION SWITCH

Color Position	R	O	O/Y	B/W	Gr	Br
ON						
OFF						
LOCK						
P						

LIGHTING SWITCH (except for E-03, 24, 28, 33)

Color Position	O/Bl	Gr	O/R	Y/W
OFF (●)				
(≡)				
ON (⊙)				

DIMMER SWITCH

Color Position	W	Y	Y/W
HI (≡)			
LO (≡)			

TURN SIGNAL SWITCH

Color Position	Lg	Lbl	B
L (⇐)			
PUSH			
R (⇒)			

PASSING LIGHT SWITCH (except for E-03, 24, 28, 33)

Color Position	O/R	Y
•		
PUSH		

ENGINE STOP SWITCH

Color Position	O/B	O/W
OFF (⊗)		
RUN (⊙)		

STARTER BUTTON

Color Position	O/W	Y/G
•		
PUSH		

HORN BUTTON

Color Position	B/Bl	B/W
•		
PUSH		

FRONT BRAKE LIGHT SWITCH

Color Position	B/R	B/Bl
OFF		
ON		

REAR BRAKE LIGHT SWITCH

Color Position	O/G	W/B
ON		
OFF		

CLUTCH LEVER POSITION SWITCH

Color Position	B/Y	B/Y
FREE		
•		

OIL PRESSURE SWITCH

Color Position	G/Y	Ground
ON (engine is stopped)		
OFF (engine is running)		

NOTE:


Before inspecting the oil pressure switch, check if the engine oil is at the proper level. (2-9)

WIRE COLOR

- B : Black
- Br : Brown
- Gr : Gray
- B/Bl : Black with Blue tracer
- B/R : Black with Red tracer
- B/Y : Black with Yellow tracer
- B/W : Black with White tracer
- G/Y : Green with Yellow tracer
- O/B : Orange with Black tracer
- O/Bl : Orange with Blue tracer
- Lbl: Light blue
- Lg : Light green
- O : Orange
- O/G : Orange with Green tracer
- O/R : Orange with Red tracer
- O/W : Orange with White tracer
- O/Y : Orange with Yellow tracer
- W/B : White with Black tracer
- Y/G : Yellow with Green tracer
- Y/W : Yellow with White tracer
- R : Red
- Y : Yellow
- W : White


BATTERY SPECIFICATIONS

Type designation	YTX12-BS
Capacity	12 V, 36 kC (10 Ah)/10HR
Standard electrolyte S.G.	1.320 at 20°C (68°F)

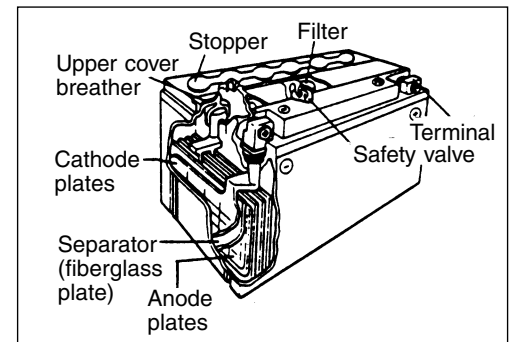

REMOVAL


- Remove the seat. (☞ 5-5)
- Remove the document tray ①.

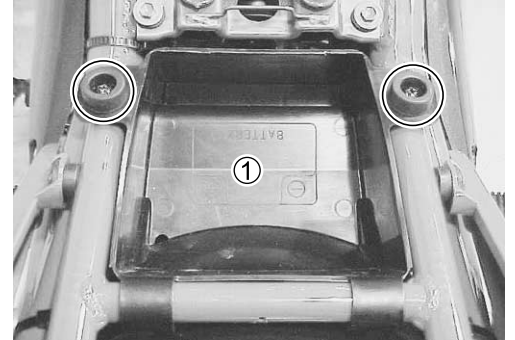

- Remove the battery ②.

NOTE:

First, disconnect the battery \ominus lead wire ④.

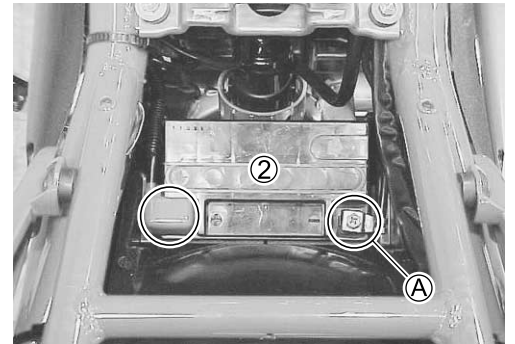


REMOUNTING

Remount the battery in the reverse order of removal.

INITIAL CHARGING

FILLING ELECTROLYTE


- Remove the aluminum tape ① which seals the battery filler holes ②.

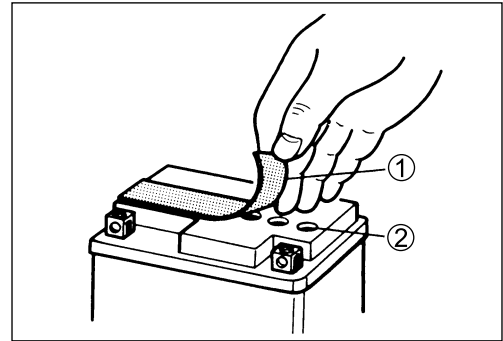


- Remove the caps ③ from the electrolyte container.

NOTE:


- Do not remove or pierce the sealed areas ④ of the electrolyte container.*
- After completely filling the battery with electrolyte, use the caps ③ from the electrolyte container to seal the battery filler holes.*

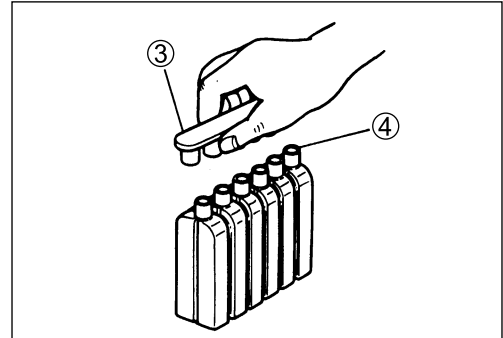

- Insert the nozzles of the electrolyte container ⑤ into the battery's electrolyte filler holes. Hold the electrolyte container firmly so that it does not fall. Do not allow any of the electrolyte to spill.

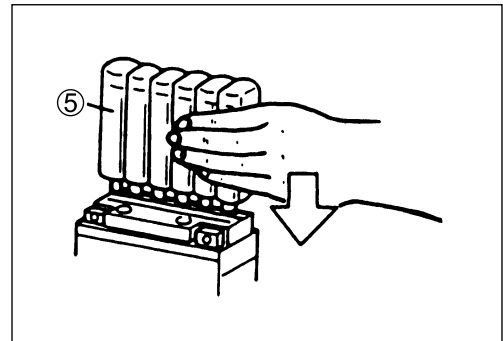


- Make sure that the air bubbles ⑥ rise to the top of each electrolyte container and leave the electrolyte container in this position for more than 20 minutes.

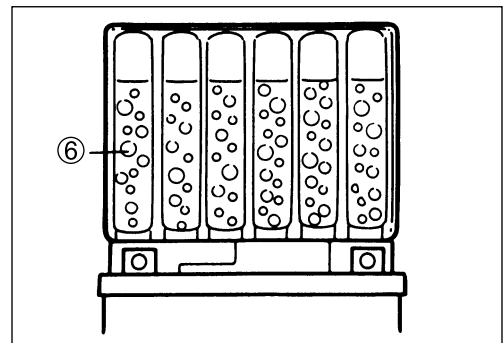

NOTE:




- If air bubbles do not rise from any one of the filler ports, tap the bottom of the electrolyte container two or three times.*
- Never remove the electrolyte container from the battery while there is still electrolyte in the container.*

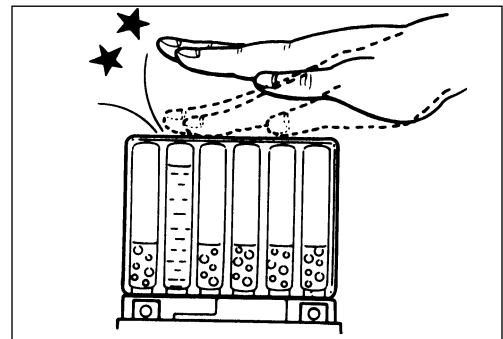

- After the electrolyte container is completely empty, remove it from the battery and wait about 20 minutes.
- Insert the caps ① firmly into the filler holes so that the top of the caps do not protrude above the upper surface of the battery's top cover.

▲ CAUTION


- * The charging system for an MF battery is different from that of a conventional battery. Only use the specified MF battery.
- * Do not tap the caps with a hammer when inserting them.
- * Do not remove the caps once they are installed in the battery.

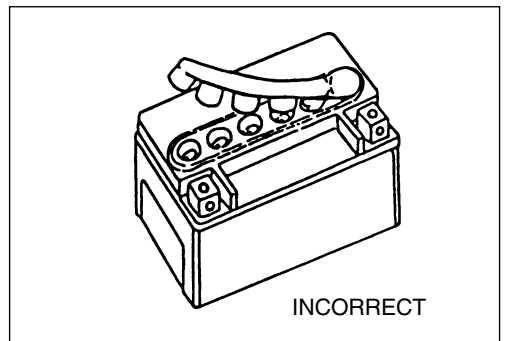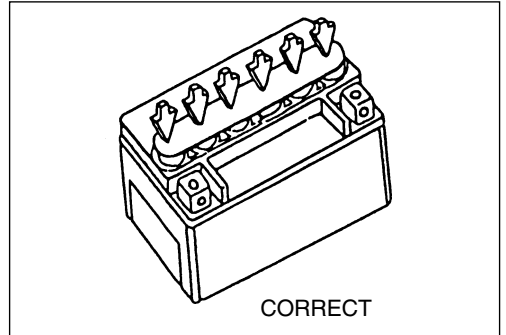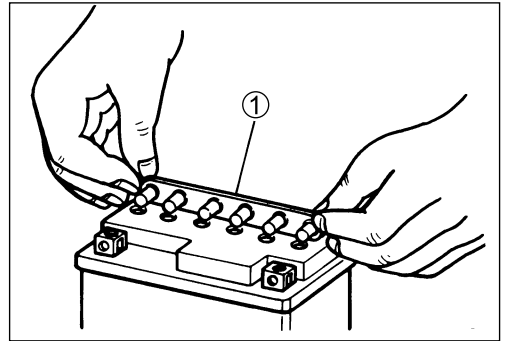

- Measure the battery voltage with a tester. The tester should indicate more than 12.6 V (DC), as shown. If the battery voltage is lower than specification, charge the battery with a battery charger.

NOTE:

Initial charging for a new battery is recommended if two years have elapsed since the date of manufacture.

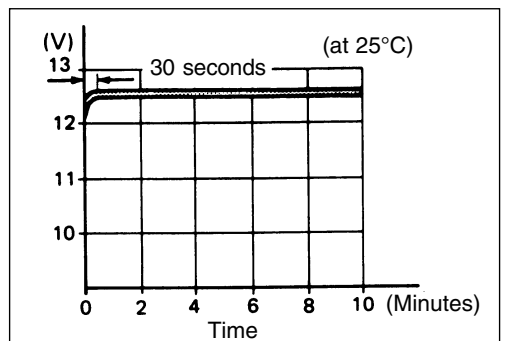

SERVICING

Visually inspect the surface of the battery container. If any signs of cracking or electrolyte leakage from the sides of the battery have occurred, replace the battery with a new one. If the battery terminals are found to be coated with rust or an acidic white powdery substance, clean the battery terminals with sandpaper.

RECHARGING OPERATION

- Measure the battery voltage using a tester. If the voltage reading is less than 12.5 V (DC), recharge the battery with a battery charger.

⚠ CAUTION

When recharging the battery, remove the battery from the motorcycle. (➡ 6-41)

NOTE:



While recharging, do not remove the caps on the top of the battery.

Recharging time: 1.2 A for 5 – 10 hours or 5 A for one hour

⚠ CAUTION

Be careful not to permit the charging current to exceed 4 A at any time.

- After recharging, wait at least 30 minutes and then measure the battery voltage using a tester.
- If the battery voltage is less than 12.5 V, recharge the battery again.
- If the battery voltage is still less than 12.5 V after recharging, replace the battery with a new one.
- When a battery is left unused for a long time, its voltage needs to be regularly measured. When the motorcycle is not used for more than one month (especially during the winter season), measure the battery voltage at least once a month.

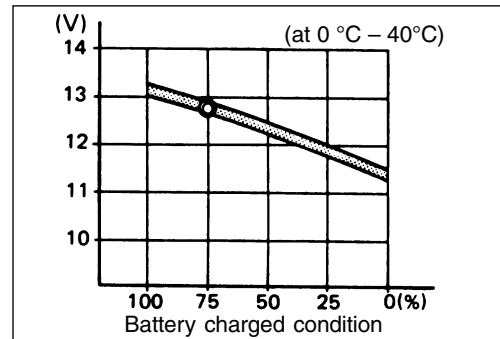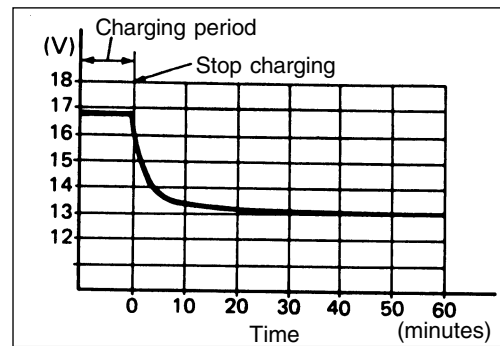

SERVICING INFORMATION

CONTENTS

TROUBLESHOOTING	7- 2
ENGINE	7- 2
CARBURETOR	7- 6
CHASSIS	7- 6
BRAKES	7- 7
ELECTRICAL	7- 8
BATTERY	7- 9
WIRING DIAGRAM	7-10
WIRE HARNESS, CABLE AND HOSE ROUTING	7-12
WIRE HARNESS ROUTING	7-12
CABLE ROUTING	7-15
PAIR (AIR SUPPLY) SYSTEM HOSE ROUTING	7-16
FUEL HOSE ROUTING	7-17
CLUTCH HOSE ROUTING	7-18
OIL HOSE ROUTING	7-19
FRONT BRAKE HOSE ROUTING	7-20
REAR BRAKE HOSE ROUTING	7-21
FRONT FOOTREST BRACKET SET-UP	7-22
FUEL TANK SET-UP	7-23
HIGH-TENSION CORD ROUTING	7-24
MUFFLER MOUNTING	7-24
SIDE-STAND AND CENTER STAND SPRINGS	7-25
COWLING AND COWLING BRACE SET-UP	7-26
FRAME COVER AND SIDE FRAME COVER SET-UP	7-27
COWLING CUSHION AND TAPE	7-28
FRONT FENDER CUSHION	7-29
SEAT LOCK CABLE ROUTING	7-29
FUEL TANK AIR BREATHER HOSE/FUEL TANK DRAIN HOSE ...	7-30
SPECIAL TOOLS	7-32
TIGHTENING TORQUE	7-35
ENGINE	7-35
CHASSIS	7-36
TIGHTENING TORQUE CHART	7-37
SERVICE DATA	7-38

TROUBLESHOOTING

ENGINE

Complaint	Symptom and possible causes	Remedy
<p>Engine will not start or is hard to start.</p>	<p>Compression too low</p> <ol style="list-style-type: none"> 1. Worn cylinder. 2. Worn piston ring. 3. Worn valve guide or improper valve seating. 4. Loose spark plug. 5. Broken, cracked or damaged piston. 6. Slow cranking starter motor. 7. Mistimed valves. 8. Valve clearance out of adjustment. <p>Spark plug not sparking</p> <ol style="list-style-type: none"> 1. Damaged spark plug. 2. Damaged spark plug cap. 3. Fouled spark plug. 4. Wet spark plug. 5. Defective ignition coil. 6. Open or short in high-tension cord. 7. Defective signal generator. 8. Defective ignitor. <p>No fuel reaching a carburetor</p> <ol style="list-style-type: none"> 1. Clogged fuel tank vent hose. 2. Clogged or defective fuel valve. 3. Defective needle valve. 4. Clogged fuel hose. 5. Clogged fuel filter. 	<p>Rebore or replace. Replace. Repair or replace. Tighten. Replace. See electrical section. Adjust. Adjust.</p> <p>Replace. Replace. Clean or replace. Clean and dry or replace. Replace. Replace. Replace. Replace.</p> <p>Clean or replace. Clean or replace. Replace with needle valve seat. Clean or replace. Clean or replace.</p>
<p>Engine stalls easily.</p>	<ol style="list-style-type: none"> 1. Fouled spark plug. 2. Defective signal generator. 3. Defective ignitor. 4. Clogged fuel hose. 5. Clogged carburetor jet. 6. Valve clearance out of adjustment. 	<p>Clean or replace. Replace. Replace. Clean. Clean. Adjust.</p>

Complaint	Symptom and possible causes	Remedy
Engine is noisy.	<p>Excessive valve chatter</p> <ol style="list-style-type: none"> 1. Excessive valve clearance. 2. Weak or broken valve spring. 3. Worn rocker arm or rocker arm shaft. 4. Worn or burnt camshaft journal. <p>Noise seems to come from the piston</p> <ol style="list-style-type: none"> 1. Worn piston. 2. Worn cylinder. 3. Carbon build-up in combustion chamber. 4. Worn piston pin or piston pin bore. 5. Worn piston ring or ring groove. <p>Noise seems to come from the cam chain</p> <ol style="list-style-type: none"> 1. Stretched cam chain. 2. Worn cam chain sprocket. 3. Improperly working cam chain tensioner. <p>Noise seems to come from the clutch</p> <ol style="list-style-type: none"> 1. Worn countershaft spline. 2. Worn clutch hub spline. 3. Worn clutch plate teeth. 4. Distorted clutch plate. 5. Worn clutch release bearing. 6. Weak clutch damper. <p>Noise seems to come from the crankshaft</p> <ol style="list-style-type: none"> 1. Worn or burnt crank pin bearing. 2. Worn or burnt journal bearing. 3. Excessive thrust clearance. <p>Noise seems to come from the transmission</p> <ol style="list-style-type: none"> 1. Worn or rubbing gear. 2. Worn countershaft spline. 3. Worn driveshaft spline. 4. Worn or rubbing primary gear. 5. Worn bearing. 	<p>Adjust. Replace. Replace. Replace.</p> <p>Replace. Rebore or replace. Clean. Replace. Replace.</p> <p>Replace cam chain and sprockets. Replace cam chain and sprockets. Repair or replace.</p> <p>Replace countershaft. Replace clutch hub. Replace clutch plate. Replace. Replace. Replace primary driven gear.</p> <p>Replace. Replace. Replace thrust bearing.</p> <p>Replace. Replace countershaft. Replace driveshaft. Replace. Replace.</p>
Clutch slips.	<ol style="list-style-type: none"> 1. Weak or broken clutch spring. 2. Worn or distorted clutch pressure plate. 3. Distorted clutch plate. 	<p>Replace. Replace. Replace.</p>
Clutch drags.	<ol style="list-style-type: none"> 1. Leakage of clutch fluid. 2. Worn or damaged clutch cylinder/release cylinder. 3. Some clutch springs are weak, while others are not. 4. Worn or distorted clutch pressure plate. 5. Distorted clutch plate. 	<p>Repair or replace. Replace. Replace. Replace. Replace.</p>
Transmission will not shift.	<ol style="list-style-type: none"> 1. Broken gearshift cam. 2. Distorted gearshift fork. 3. Worn gearshift pawl. 	<p>Replace. Replace. Replace.</p>

Complaint	Symptom and possible causes	Remedy
Transmission will not shift back.	<ol style="list-style-type: none"> 1. Broken gearshift shaft return spring. 2. Rubbing or stuck gearshift shaft. 3. Worn or distorted gearshift fork. 	Replace. Repair or replace. Replace.
Transmission jumps out of gear.	<ol style="list-style-type: none"> 1. Worn gear. 2. Worn or distorted gearshift fork. 3. Weakened gearshift stopper spring. 4. Worn gearshift pawl. 	Replace. Replace. Replace. Replace.
Engine idles poorly.	<ol style="list-style-type: none"> 1. Valve clearance out of adjustment. 2. Improper valve seating. 3. Worn valve guide. 4. Worn rocker arm or rocker arm shaft. 5. Excessive spark plug gap. 6. Defective ignition coil. 7. Defective signal generator. 8. Defective ignitor. 9. Incorrect float chamber fuel level. 10. Clogged carburetor jet. 11. Carburetors not synchronized. 	Adjust. Repair or replace. Replace. Replace. Adjust or replace. Replace. Replace. Replace. Adjust float height. Clean. Synchronize.
Engine runs poorly in high-speed range.	<ol style="list-style-type: none"> 1. Weak valve spring. 2. Worn camshaft. 3. Insufficient spark plug gap. 4. Mistimed valves. 5. Ignition not advanced sufficiently due to poorly working timing advance circuit. 6. Defective ignition coil. 7. Defective signal generator. 8. Defective ignitor. 9. Low float chamber fuel level. 10. Dirty air cleaner element. 11. Clogged fuel hose, resulting in inadequate fuel supply to carburetor. 	Replace. Replace. Regap or replace. Adjust. Replace ignitor. Replace. Replace. Replace. Adjust float height. Clean or replace. Clean and prime.
Exhaust smoke is dirty or thick.	<ol style="list-style-type: none"> 1. Excessive amount of engine oil. 2. Worn cylinder. 3. Worn piston ring. 4. Worn valve guide. 5. Scored or scuffed cylinder wall. 6. Worn valve stem. 7. Defective valve stem oil seal. 8. Worn oil ring side rail. 	Check level and drain. Rebore or replace. Replace. Replace. Rebore or replace. Replace valve. Replace. Replace oil ring.

Complaint	Symptom and possible causes	Remedy
Engine lacks power.	<ol style="list-style-type: none"> 1. Insufficient valve clearance. 2. Weak valve spring. 3. Mistimed valves. 4. Worn cylinder. 5. Worn piston ring. 6. Improper valve seating 7. Fouled spark plug. 8. Incorrect spark plug. 9. Clogged carburetor jet. 10. Incorrect float chamber fuel level. 11. Dirty air cleaner element. 12. Loose throttle valve synchronizing screw. 13. Air leakage from intake pipe. 14. Excessive amount of engine oil. 	<p>Adjust. Replace. Adjust. Rebore or replace. Replace. Repair or replace. Clean or replace. Replace. Clean. Adjust float height. Clean or replace. Tighten. Tighten or replace. Check level and drain.</p>
Engine overheats.	<ol style="list-style-type: none"> 1. Carbon build-up on piston crown. 2. Insufficient amount of engine oil. 3. Defective oil pump. 4. Clogged oil circuit. 5. Float chamber fuel level too low. 6. Air leakage from intake pipe. 7. Incorrect engine oil. 	<p>Clean. Check level and add. Replace. Clean. Adjust float height. Tighten or replace. Change.</p>

CARBURETOR

Complaint	Symptom and possible causes	Remedy
Starting difficulty.	<ol style="list-style-type: none"> 1. Clogged starter jet. 2. Clogged starter jet passage. 3. Air leaking from joint between starter body and carburetor. 4. Air leaking from carburetor joint or vacuum hose joint. 5. Improperly working starter (enricher) plunger. 	Clean. Clean. Tighten, adjust or replace gasket. Tighten or replace defective part. Adjust.
Idling or low-speed trouble.	<ol style="list-style-type: none"> 1. Clogged or loose pilot jet. 2. Clogged or loose pilot air jet. 3. Air leaking from carburetor joint, vacuum pipe joint, or starter. 4. Clogged pilot outlet port. 5. Clogged bypass port. 6. Starter (enricher) plunger not fully closed. 	Clean or tighten. Clean or tighten. Tighten or replace defective part. Clean. Clean. Adjust.
Medium-or high speed trouble.	<ol style="list-style-type: none"> 1. Clogged main jet. 2. Clogged main air jet. 3. Clogged needle jet. 4. Improperly working throttle valve. 5. Clogged fuel filter. 	Clean. Clean. Clean. Adjust. Clean or replace.
Overflow and fuel level fluctuations.	<ol style="list-style-type: none"> 1. Worn or damaged needle valve. 2. Broken needle valve spring. 3. Improperly working float. 4. Foreign matter on the needle valve. 5. Incorrect float chamber fuel level. 	Replace. Replace. Adjust or replace. Clean or replace with needle valve seat. Adjust float height.

CHASSIS

Complaint	Symptom and possible causes	Remedy
Steering is heavy.	<ol style="list-style-type: none"> 1. Overtightened steering stem nut. 2. Broken bearing/race in steering stem. 3. Distorted steering stem. 4. Low tire pressure. 	Adjust. Replace. Replace. Regulate.
Handlebar wobbles.	<ol style="list-style-type: none"> 1. Loss of balance between right and left front forks. 2. Distorted front fork. 3. Distorted front axle. 4. Twisted tire. 	Adjust or replace. Repair or replace. Replace. Replace.
Front wheel wobbles.	<ol style="list-style-type: none"> 1. Distorted wheel rim. 2. Worn front wheel bearing. 3. Defective or incorrect tire. 4. Loose front axle nut. 5. Loose front axle pinch bolt. 6. Incorrect fork oil level. 	Replace. Replace. Replace. Tighten. Tighten. Adjust.

Complaint	Symptom and possible causes	Remedy
Front suspension too soft.	<ol style="list-style-type: none"> 1. Weak spring. 2. Insufficient fork oil. 	Replace. Check level and add.
Front suspension too stiff.	<ol style="list-style-type: none"> 1. Excessively viscous fork oil. 2. Excessive fork oil. 	Replace. Check level and drain.
Front suspension too noisy.	<ol style="list-style-type: none"> 1. Insufficient fork oil. 2. Loose front suspension fastener. 	Check level and add. Tighten.
Rear wheel wobbles.	<ol style="list-style-type: none"> 1. Distorted wheel rim. 2. Worn rear wheel bearing. 3. Defective or incorrect tire. 4. Worn swingarm bearing. 5. Worn rear suspension bush. 6. Loose rear suspension fastener. 	Replace. Replace. Replace. Replace. Replace. Tighten.
Rear suspension too soft.	<ol style="list-style-type: none"> 1. Weak rear shock absorber spring. 2. Rear shock absorber leaks oil. 3. Improper suspension setting. 	Replace. Replace. Adjust.
Rear suspension too stiff.	<ol style="list-style-type: none"> 1. Improper suspension setting. 2. Bent rear shock absorber shaft. 3. Bent swingarm. 4. Worn swingarm and rear suspension related bearings. 	Adjust. Replace. Replace. Replace.
Rear suspension too noisy.	<ol style="list-style-type: none"> 1. Loose rear suspension fastener. 2. Worn rear suspension bush. 3. Worn swingarm bearing. 	Tighten. Replace. Replace.

BRAKES

Complaint	Symptom and possible causes	Remedy
Brake power insufficient.	<ol style="list-style-type: none"> 1. Leakage of brake fluid. 2. Worn brake pad. 3. Oil on brake pad surface. 4. Worn brake disc. 5. Air in hydraulic system. 	Repair or replace. Replace. Clean brake disc and brake pads. Replace. Bleed.
Brake squeaks.	<ol style="list-style-type: none"> 1. Carbon adhesion on brake pad surface. 2. Tilted brake pad. 3. Damaged wheel bearing. 4. Worn brake pad. 5. Foreign material in brake fluid. 6. Clogged return port of master cylinder. 7. Loose front or rear axle. 	Clean surface with sandpaper. Readjust brake pad position or replace. Replace. Replace. Change brake fluid. Disassemble and clean master cylinder. Tighten.
Brake lever or pedal stroke excessive.	<ol style="list-style-type: none"> 1. Air in hydraulic system. 2. Insufficient brake fluid. 3. Incorrect brake fluid. 	Bleed. Check level and add. Bleed any air. Change.
Brake fluid leaks.	<ol style="list-style-type: none"> 1. Loose connection joint. 2. Cracked hose. 3. Worn piston seal. 4. Worn secondary cup. 	Tighten. Replace. Replace. Replace.

Complaint	Symptom and possible causes	Remedy
Brake drags.	<ol style="list-style-type: none"> 1. Rusty part. 2. Insufficient brake lever or brake pedal pivot lubrication. 	Clean and lubricate. Lubricate.

ELECTRICAL


Complaint	Symptom and possible causes	Remedy
No sparking or poor sparking.	<ol style="list-style-type: none"> 1. Defective ignition coil. 2. Defective spark plug. 3. Defective signal generator. 4. Defective ignitor. 	Replace. Replace. Replace. Replace.
Spark plug is wet or quickly becomes fouled with carbon.	<ol style="list-style-type: none"> 1. Excessively rich air/fuel mixture. 2. Excessively high idling speed. 3. Incorrect gasoline. 4. Dirty air cleaner element. 5. Incorrect spark plug (cold type). 	Adjust carburetor. Adjust carburetor. Change. Clean or replace. Change to hot type spark plug.
Spark plug quickly becomes fouled with oil or carbon.	<ol style="list-style-type: none"> 1. Worn piston ring. 2. Worn piston. 3. Worn cylinder. 4. Excessive valve-stem to valve-guide clearance. 5. Worn valve stem oil seal. 	Replace. Replace. Rebore or replace. Replace. Replace.
Spark plug electrodes overheat or burn.	<ol style="list-style-type: none"> 1. Incorrect spark plug (hot type). 2. Overheated engine. 3. Loose spark plug. 4. Excessively lean air/fuel mixture. 	Change to cold type spark plug. Tune-up. Tighten. Adjust carburetor.
Generator does not charge.	<ol style="list-style-type: none"> 1. Open or short in lead wires, or loose lead connections. 2. Shorted, grounded or open generator coil. 3. Shorted or punctured IC regulator or rectifier. 	Repair, replace or connect properly. Replace. Replace.
Generator charges but charging rate is below the specifications.	<ol style="list-style-type: none"> 1. Lead wires tend to get shorted or open-circuited or loosely connected at terminal. 2. Grounded or open-circuited stator coils or generator. 3. Defective IC regulator or rectifier. 4. Defective battery cell plates. 	Repair or tighten. Replace. Replace. Replace battery.
Generator overcharges.	<ol style="list-style-type: none"> 1. Internal short-circuit in the battery. 2. Damaged or defective IC regulator or rectifier. 3. Poorly grounded IC regulator. 	Replace battery. Replace. Clean and tighten ground connection.
Unstable charging.	<ol style="list-style-type: none"> 1. Lead wire insulation frayed due to vibration, resulting in intermittent shorting. 2. Internally shorted generator. 3. Defective IC regulator or rectifier. 	Repair or replace. Replace. Replace.
Starter button does not work.	<ol style="list-style-type: none"> 1. Run down battery. 2. Defective switch contact. 3. Brushes do not seat properly on the commutator in the starter motor. 4. Defective starter relay/starter interlock switch. 	Recharge or replace. Replace. Repair or replace. Replace.

BATTERY (MF BATTERY)


Complaint	Symptom and possible causes	Remedy
Sulfation or spots on surfaces of cell plates.	<ol style="list-style-type: none"> 1. Cracked battery case. 2. Battery has been left in a run-down condition for a long time. 	<p>Replace the battery. Replace.</p>
Battery runs down quickly.	<ol style="list-style-type: none"> 1. Incorrect charging method. 2. Battery cell plates have lost much of their active material as a result of overcharging. 3. Internally shorted battery. 4. Excessively low battery voltage. 5. Battery is too old. 6. Dirty container top and sides. 	<p>Check generator, IC regulator, or rectifier circuit connections, and make necessary adjustment to obtain specified charging operation. Replace battery and correct charging system. Replace. Recharge. Replace. Clean.</p>
Battery sulfation.	<ol style="list-style-type: none"> 1. Incorrect charging rate. (When not in use, the battery should be checked at least once a month and properly charged if necessary, to avoid sulfation.) 2. The battery was left unused in a cold climate for too long. 	<p>Replace battery. Replace the battery if badly sulfated.</p>
Battery discharges too rapidly.	<ol style="list-style-type: none"> 1. Dirty container top and sides. 2. Current leaks. 	<p>Clean. Measure leakage current and replace defective parts.</p>




WIRING DIAGRAM


GSF1200S (FOR E-03, 24, 28, 33)

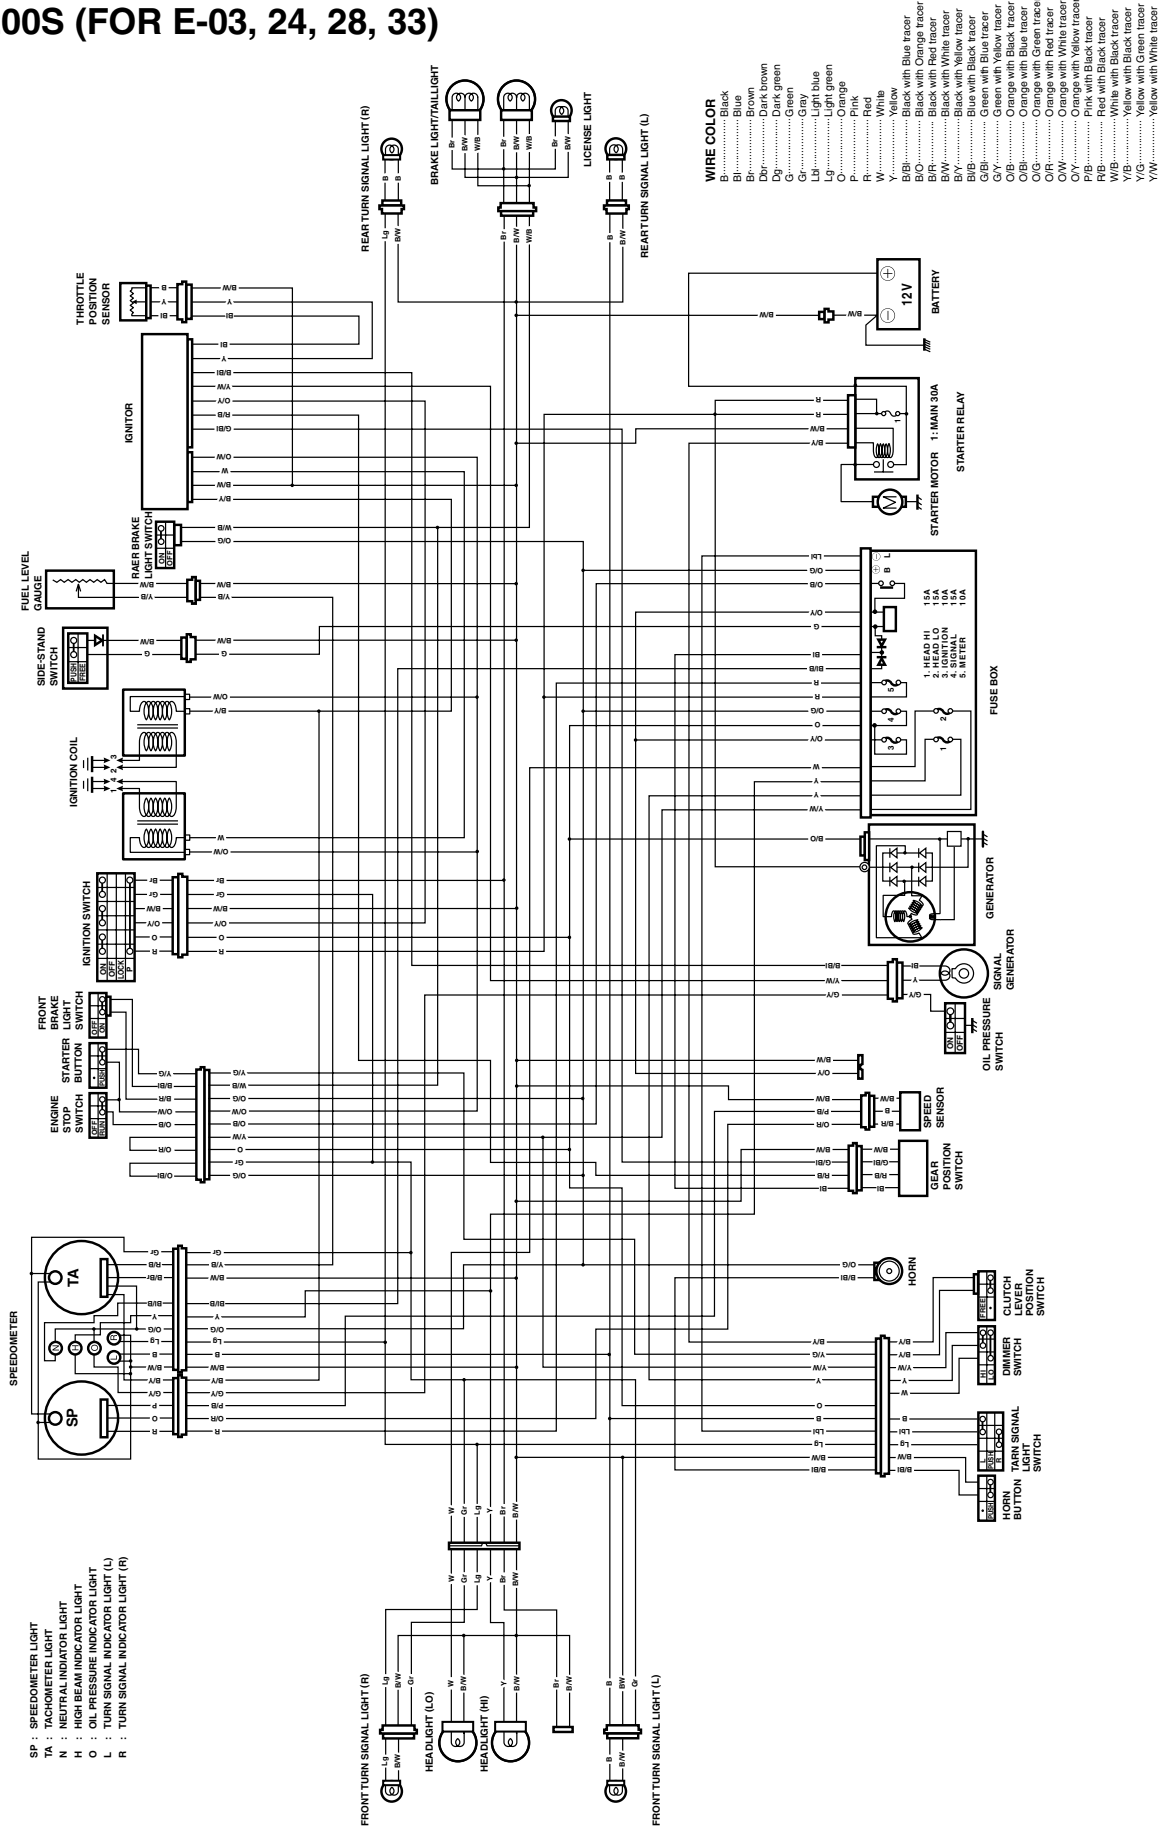


FOR THE OTHERS

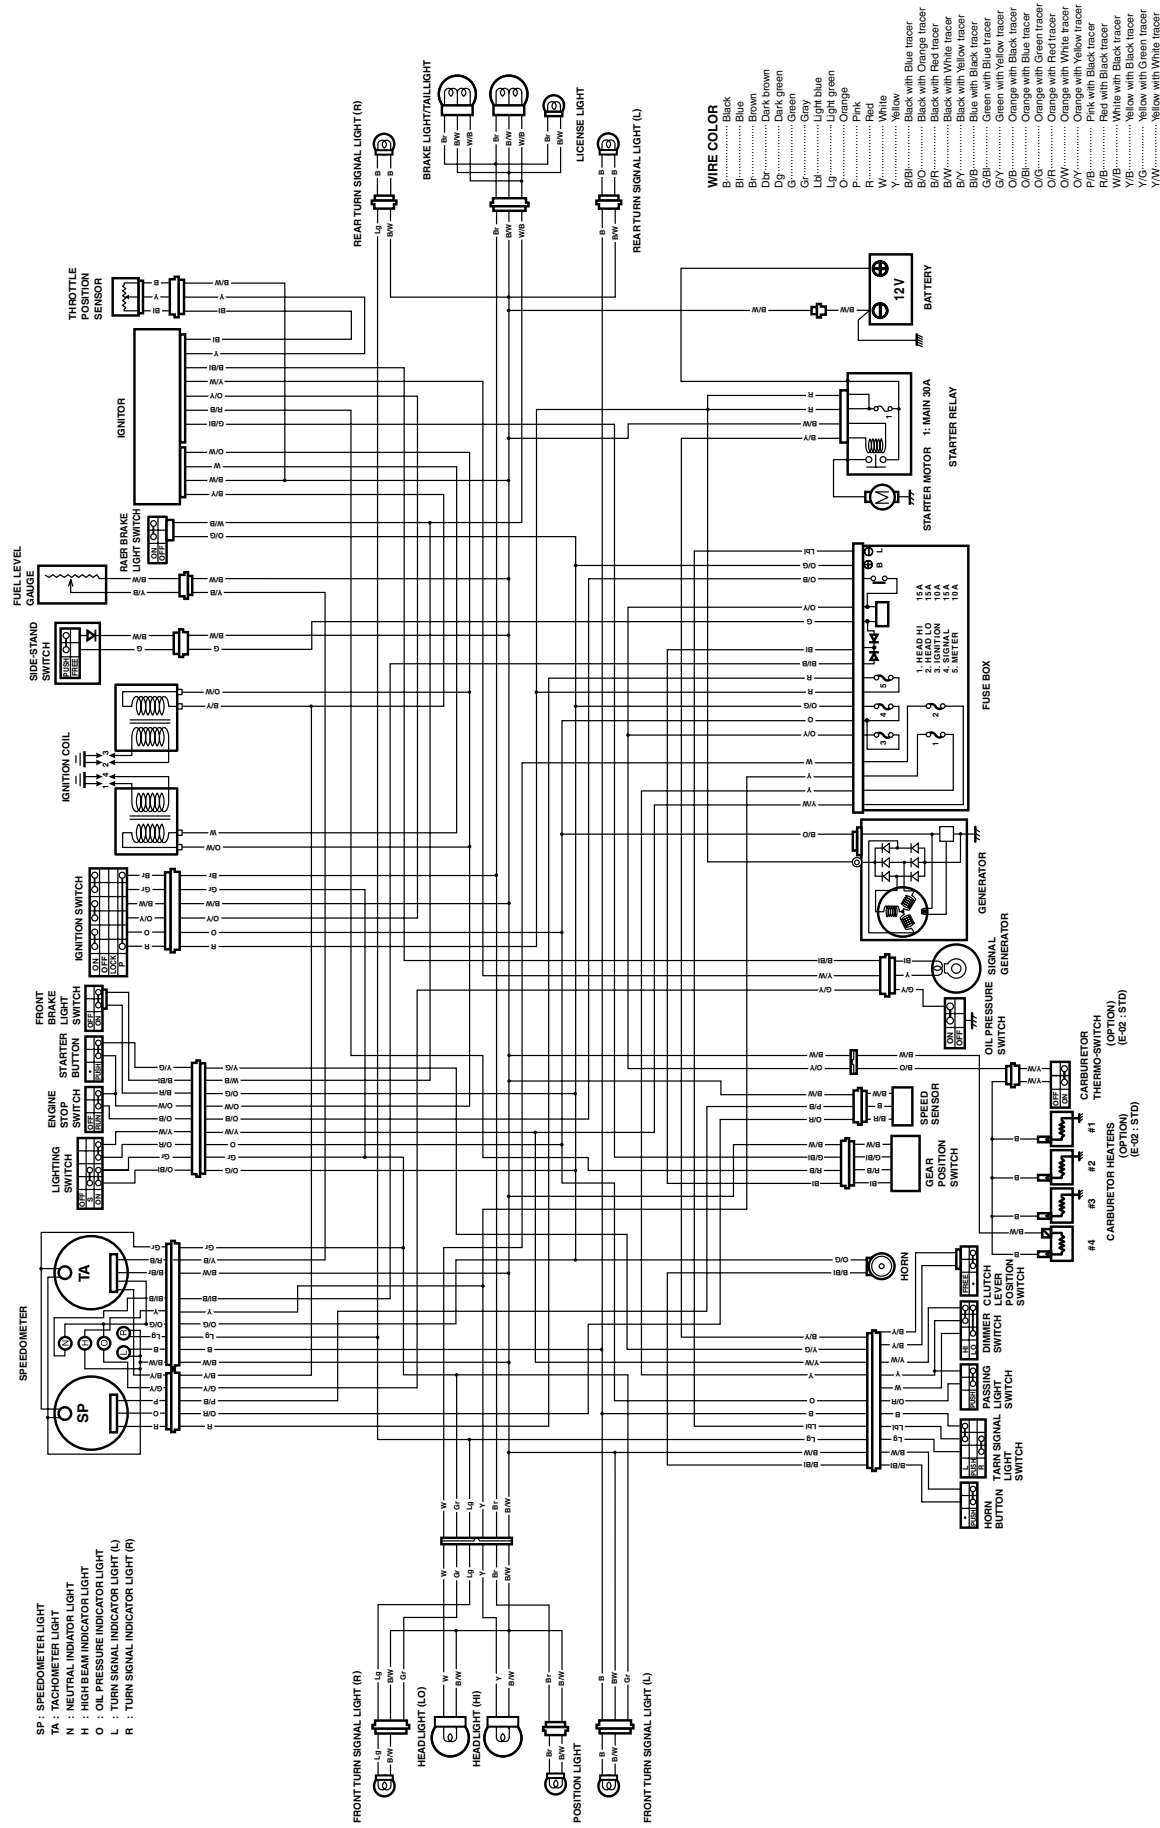

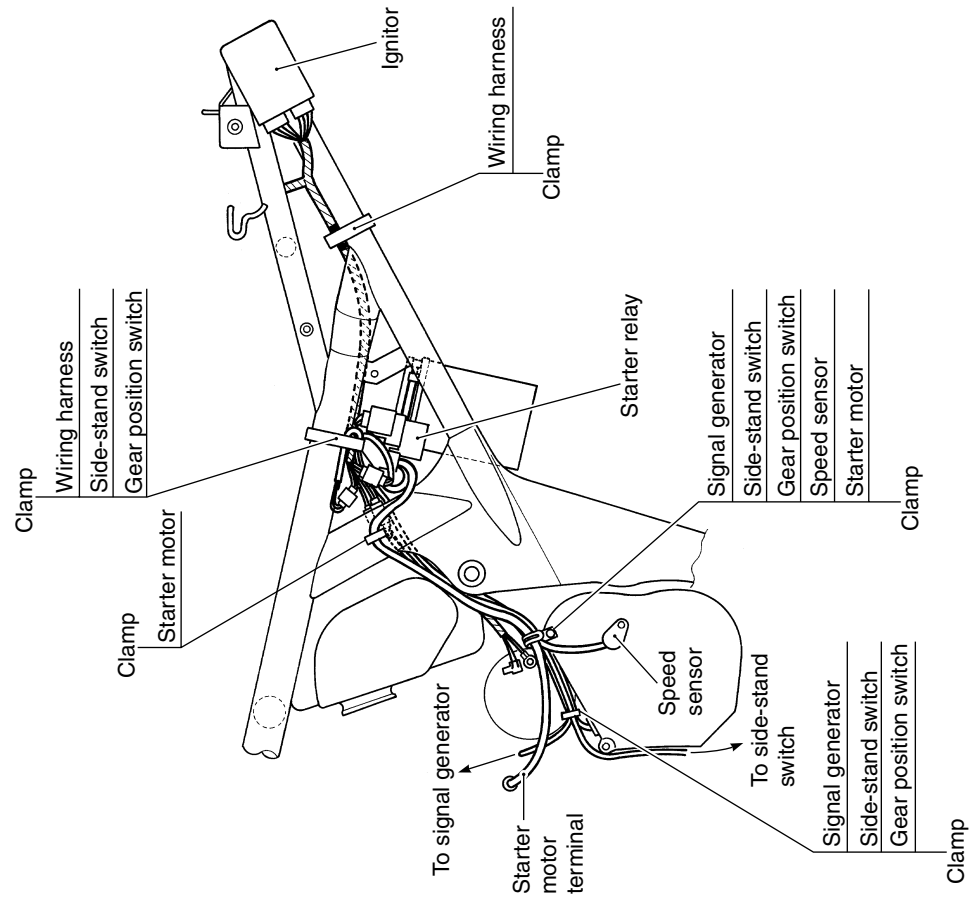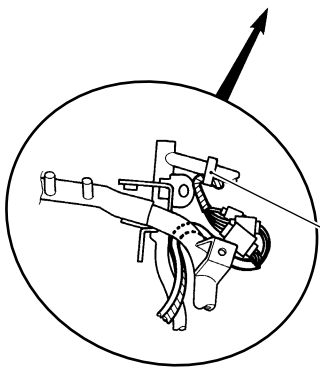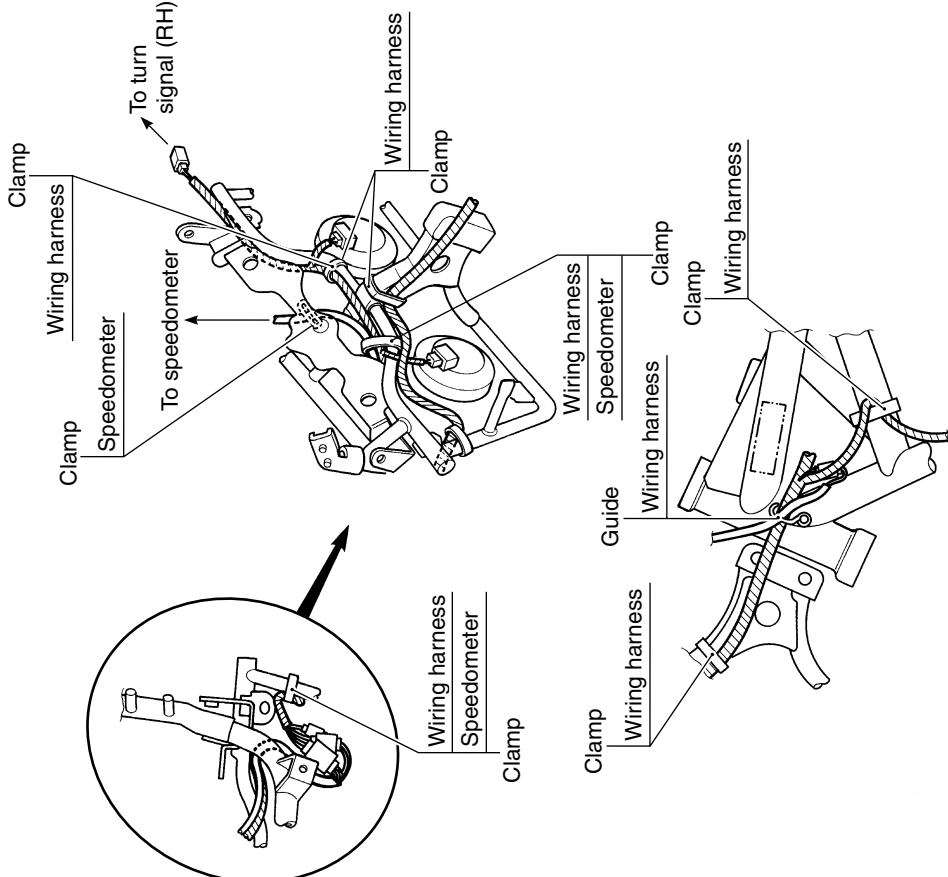


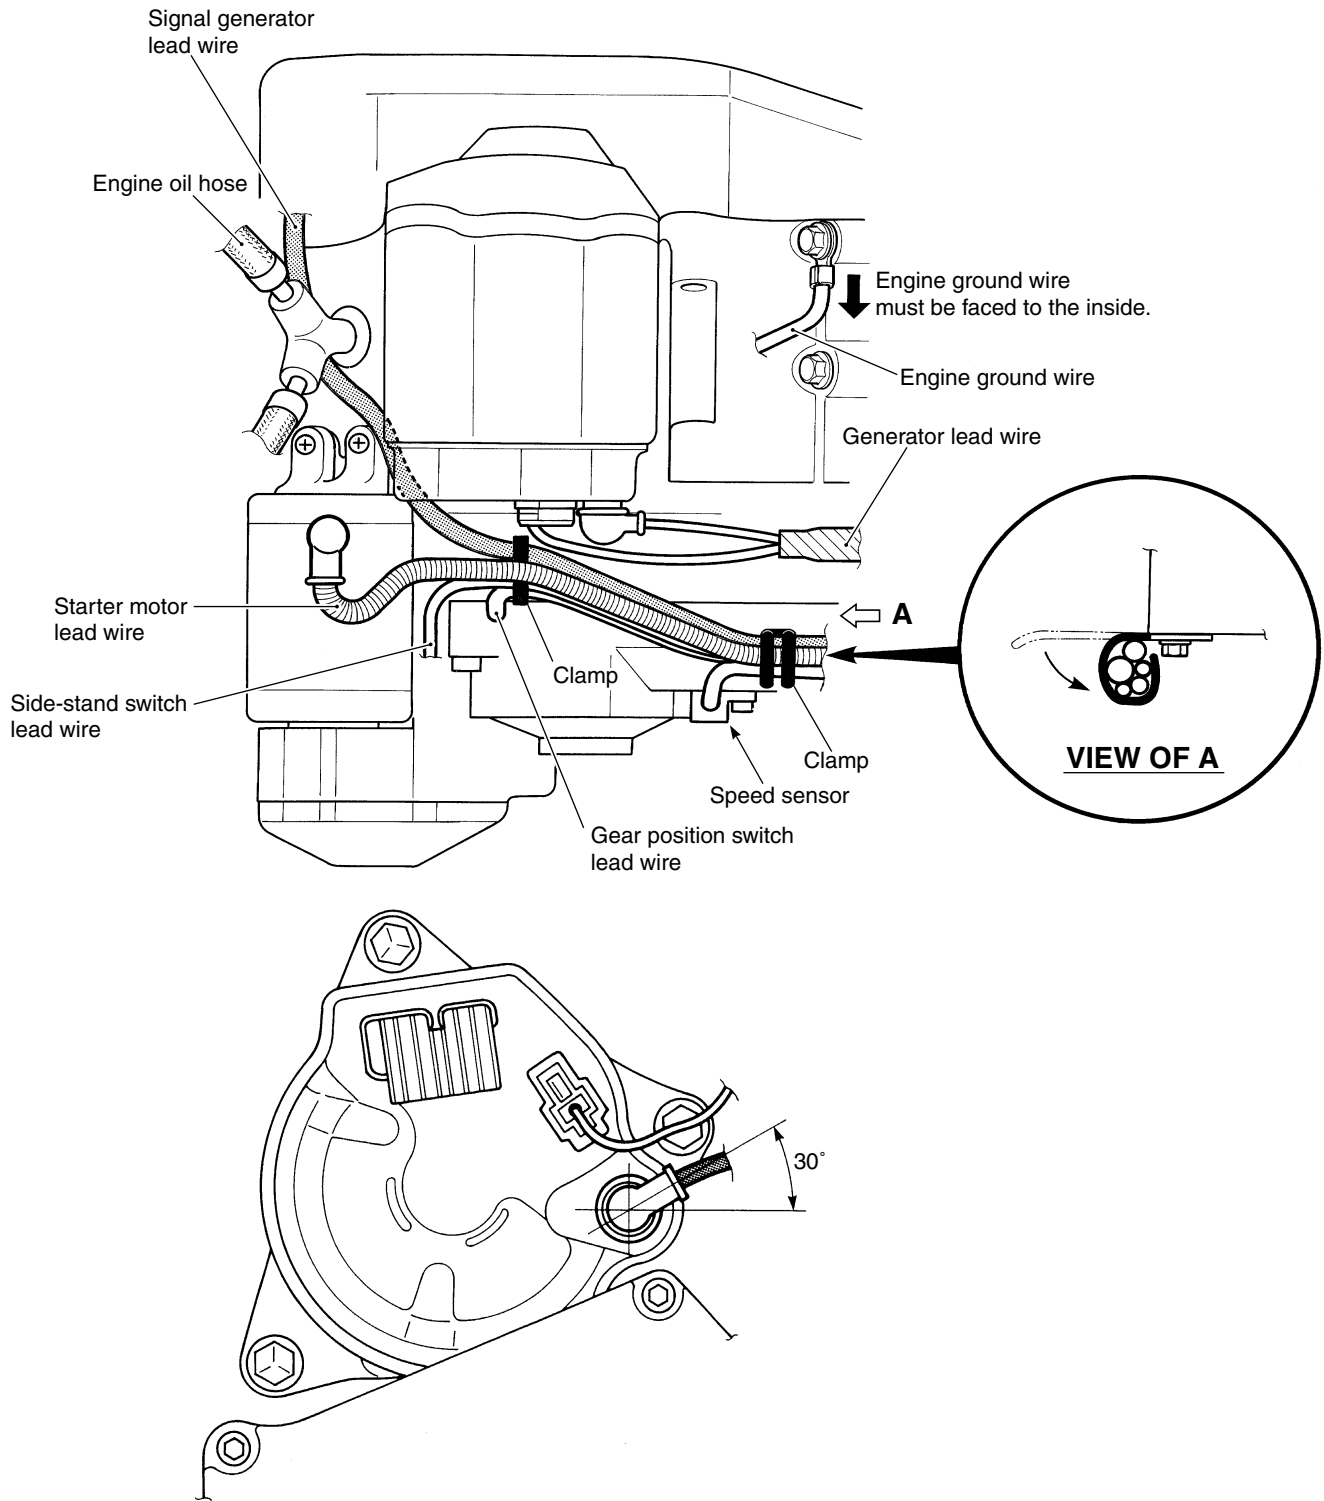


CABLE ROUTING

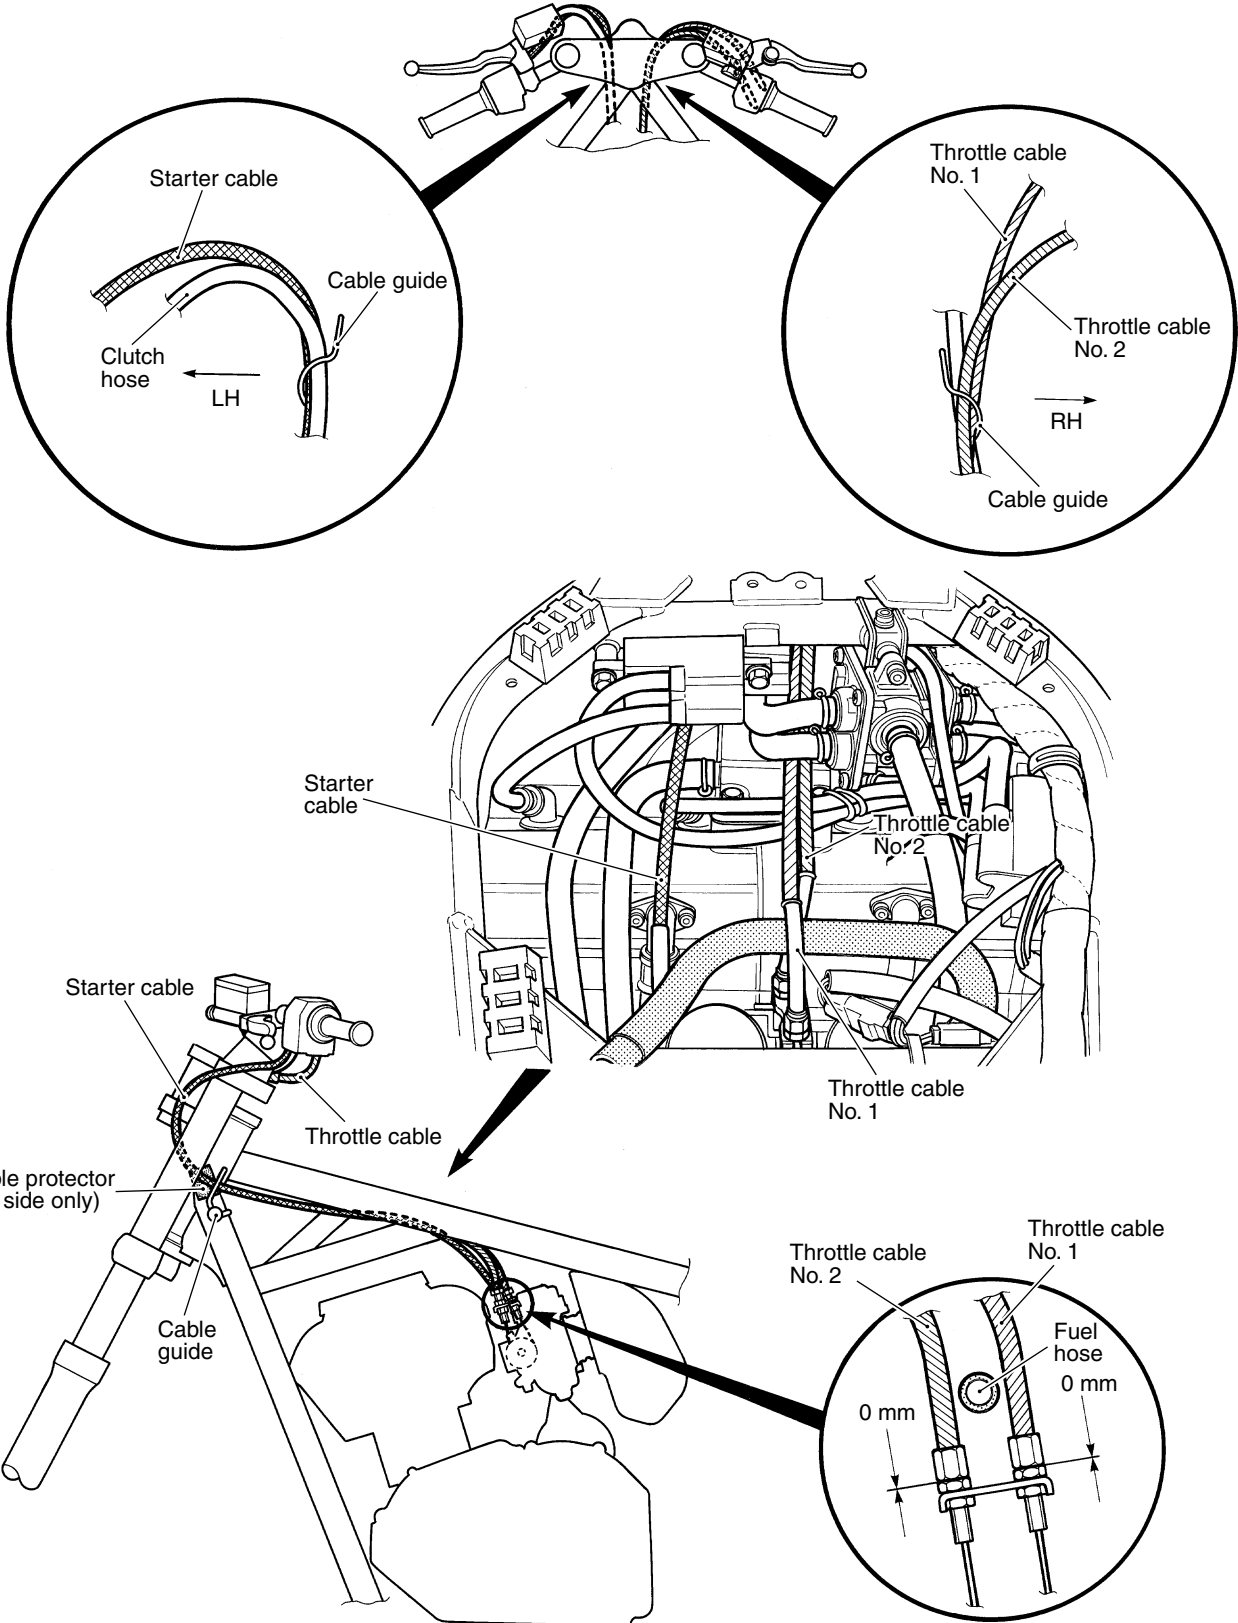


PAIR (AIR SUPPLY) SYSTEM HOSE ROUTING

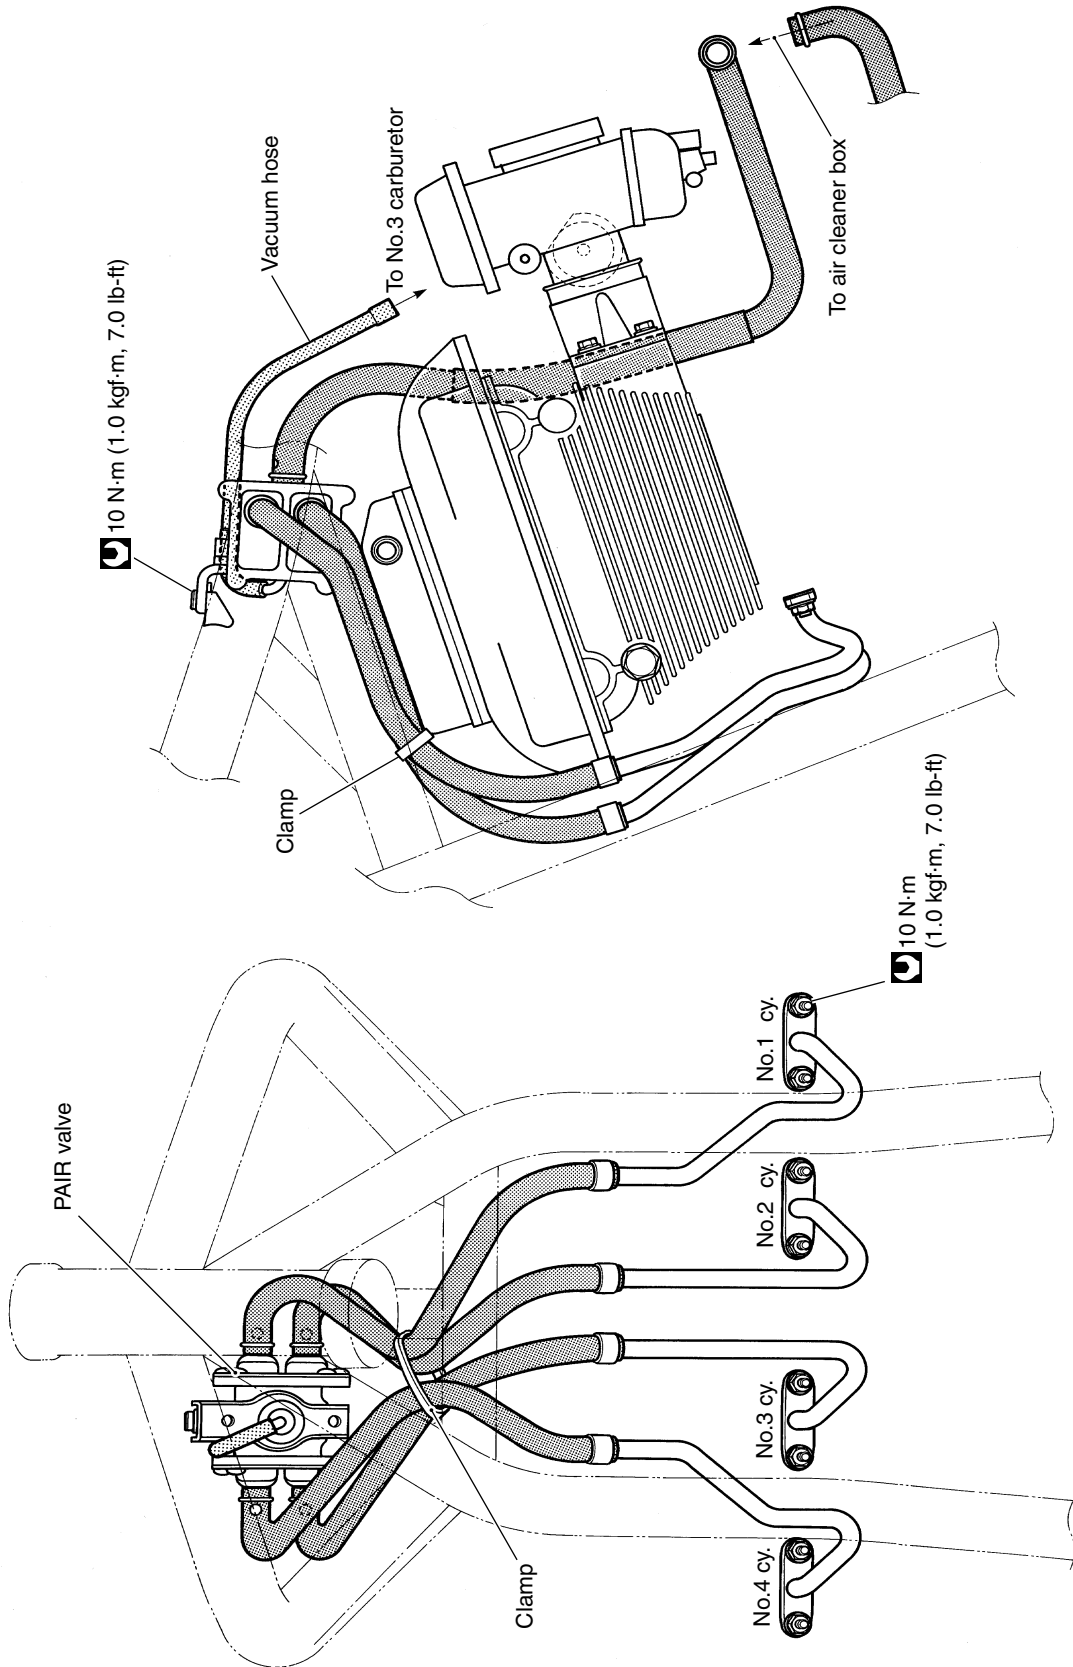

FUEL HOSE ROUTING



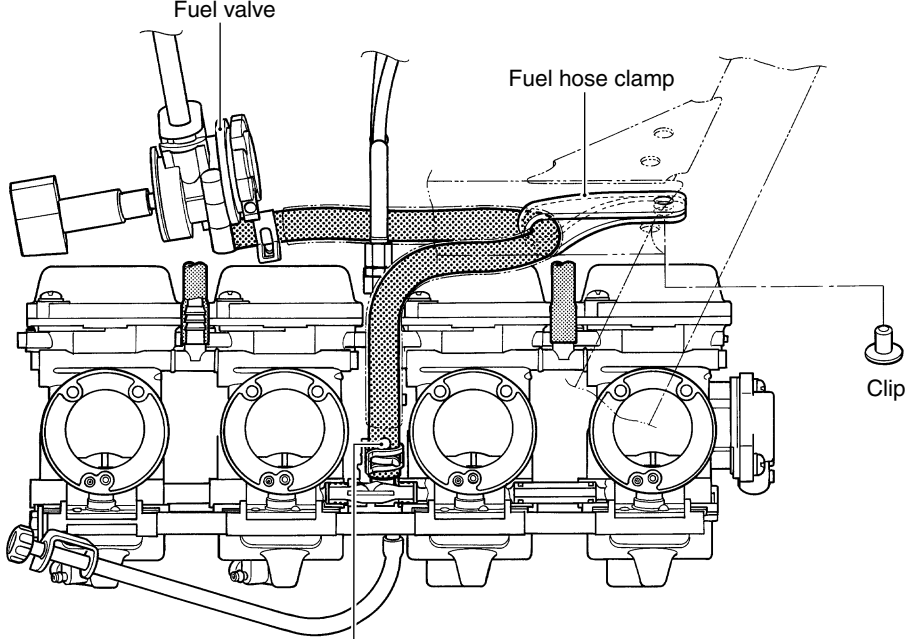


Face the WHITE PAINT mark to the backward.

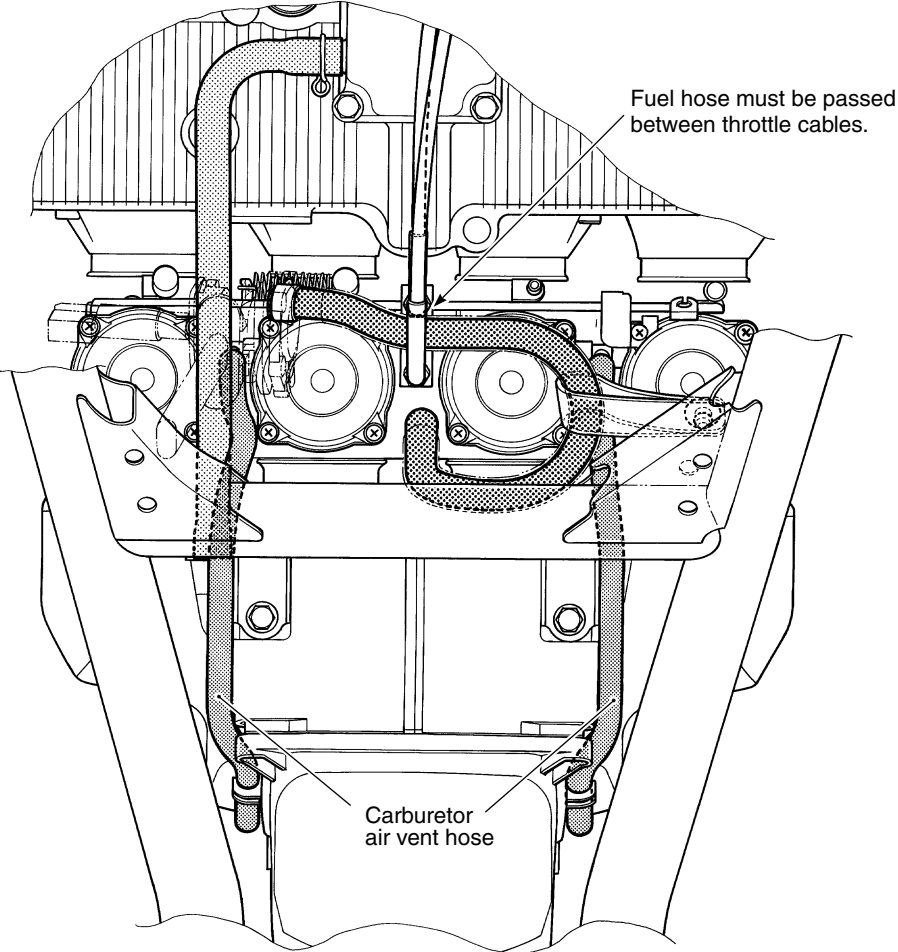


CLUTCH HOSE ROUTING


After touching the clutch hose union to the stopper, tighten the union bolt to the specified torque.

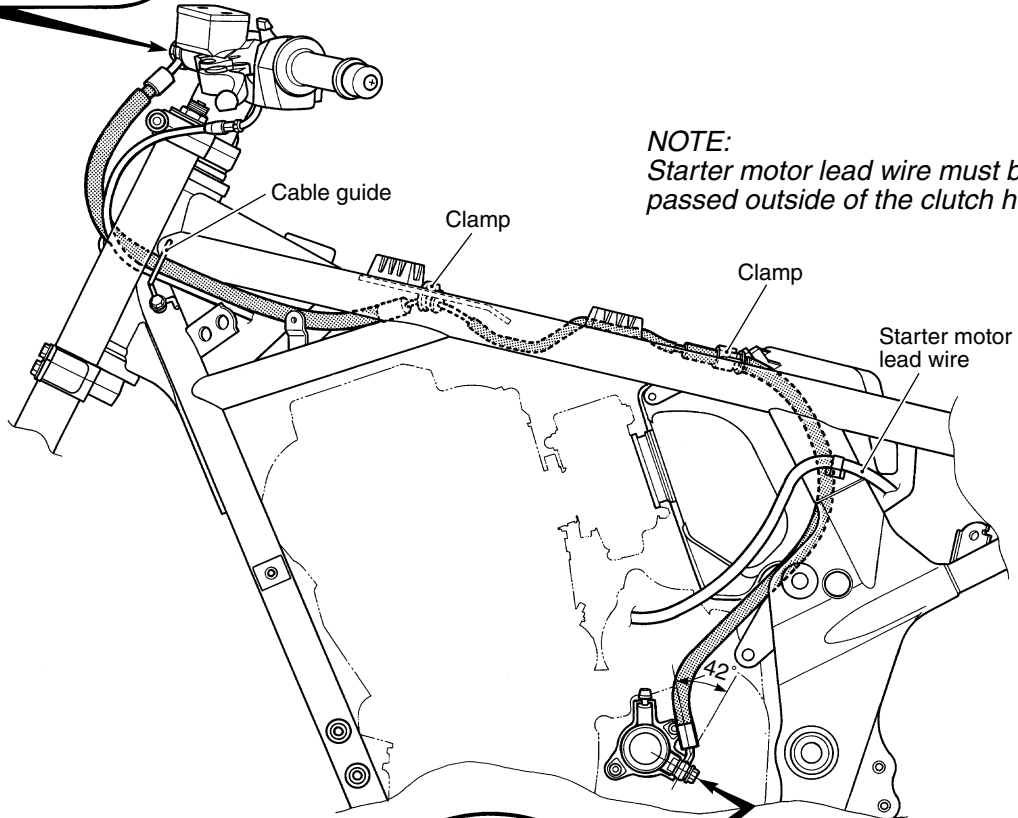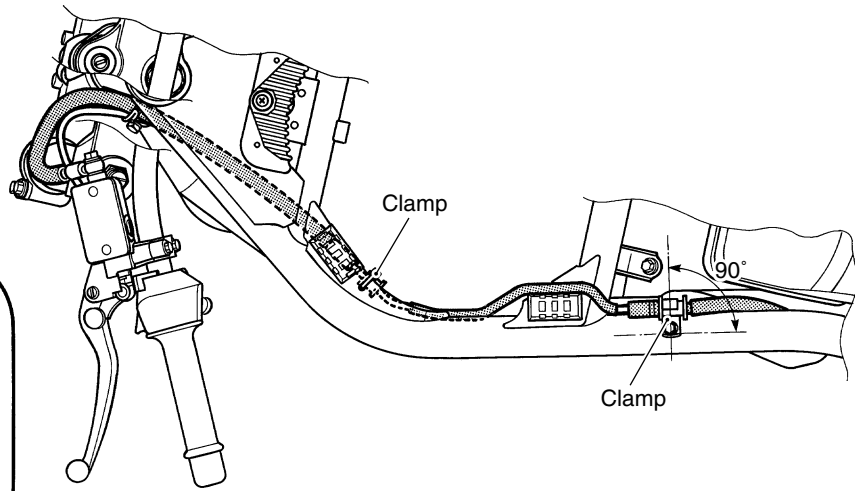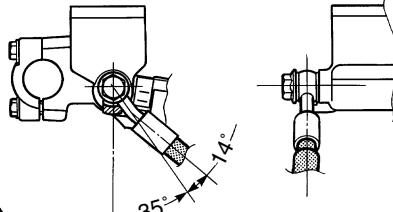


NOTE:
Starter motor lead wire must be passed outside of the clutch hose.

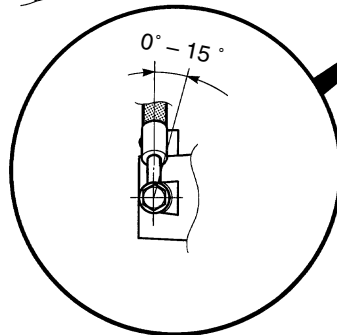

OIL HOSE ROUTING


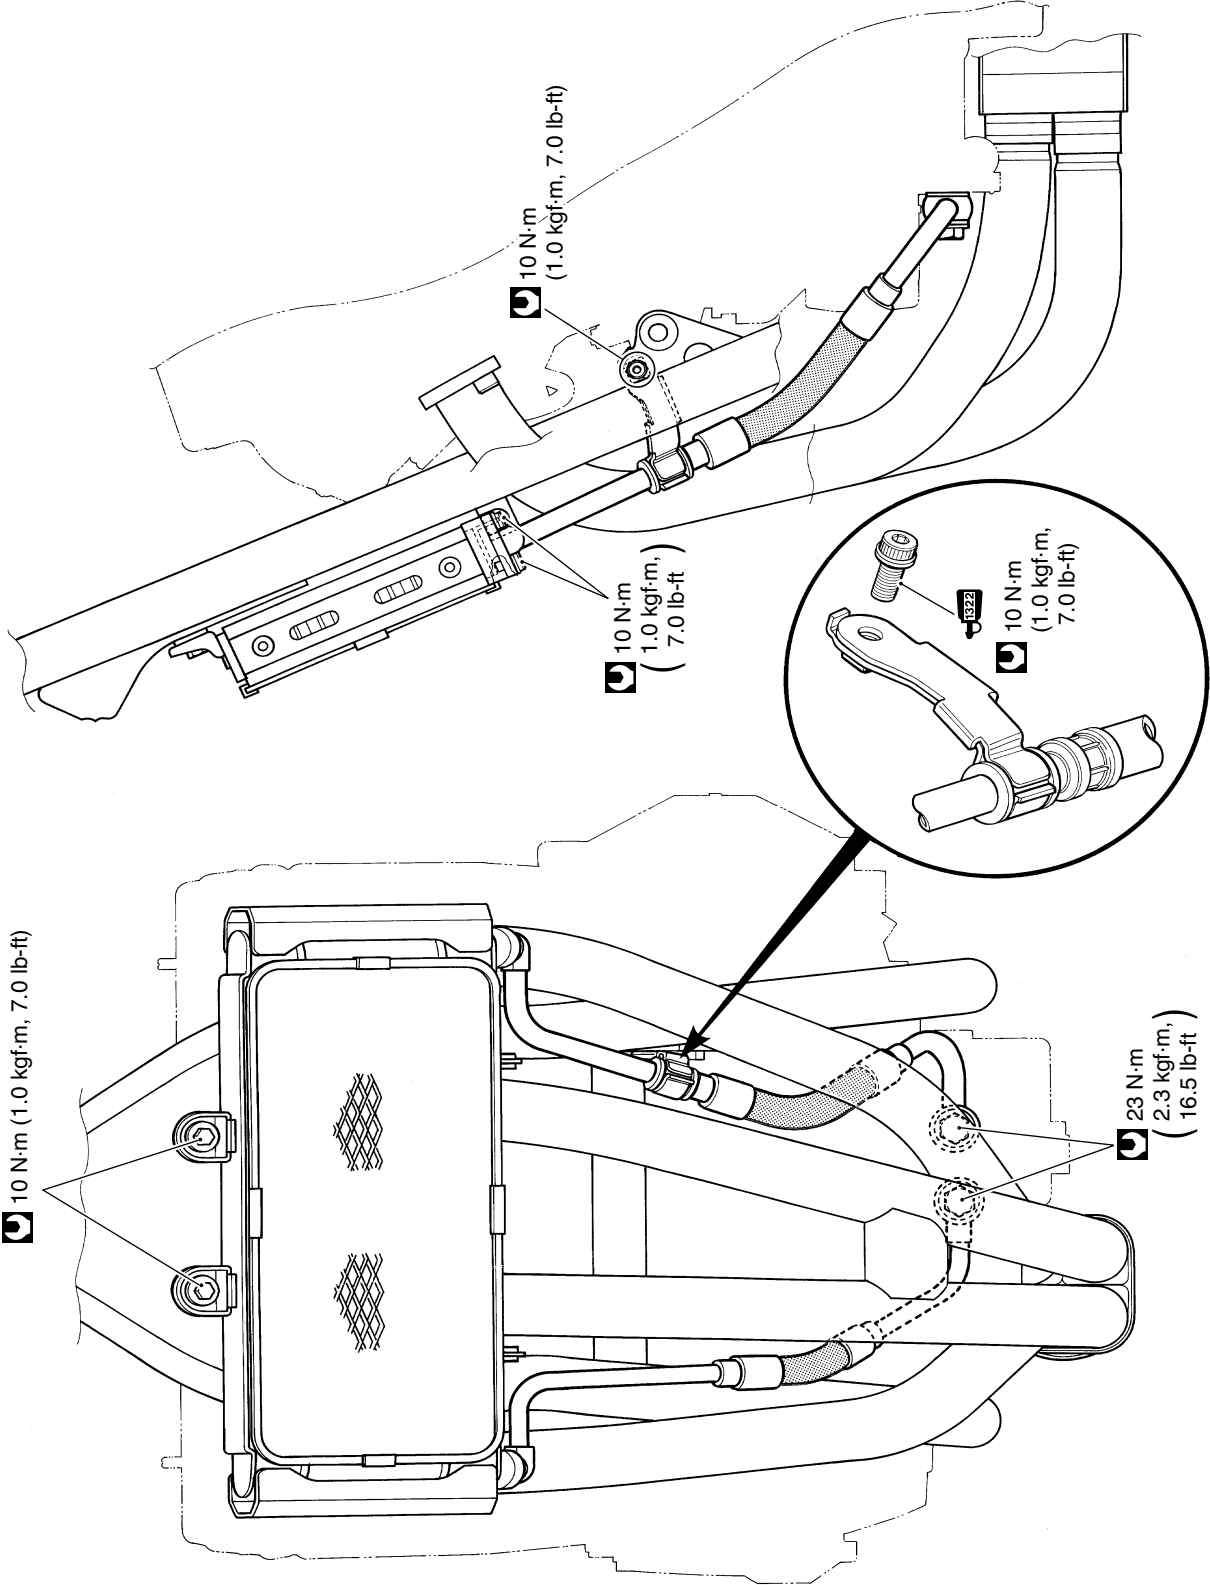


FRONT BRAKE HOSE ROUTING




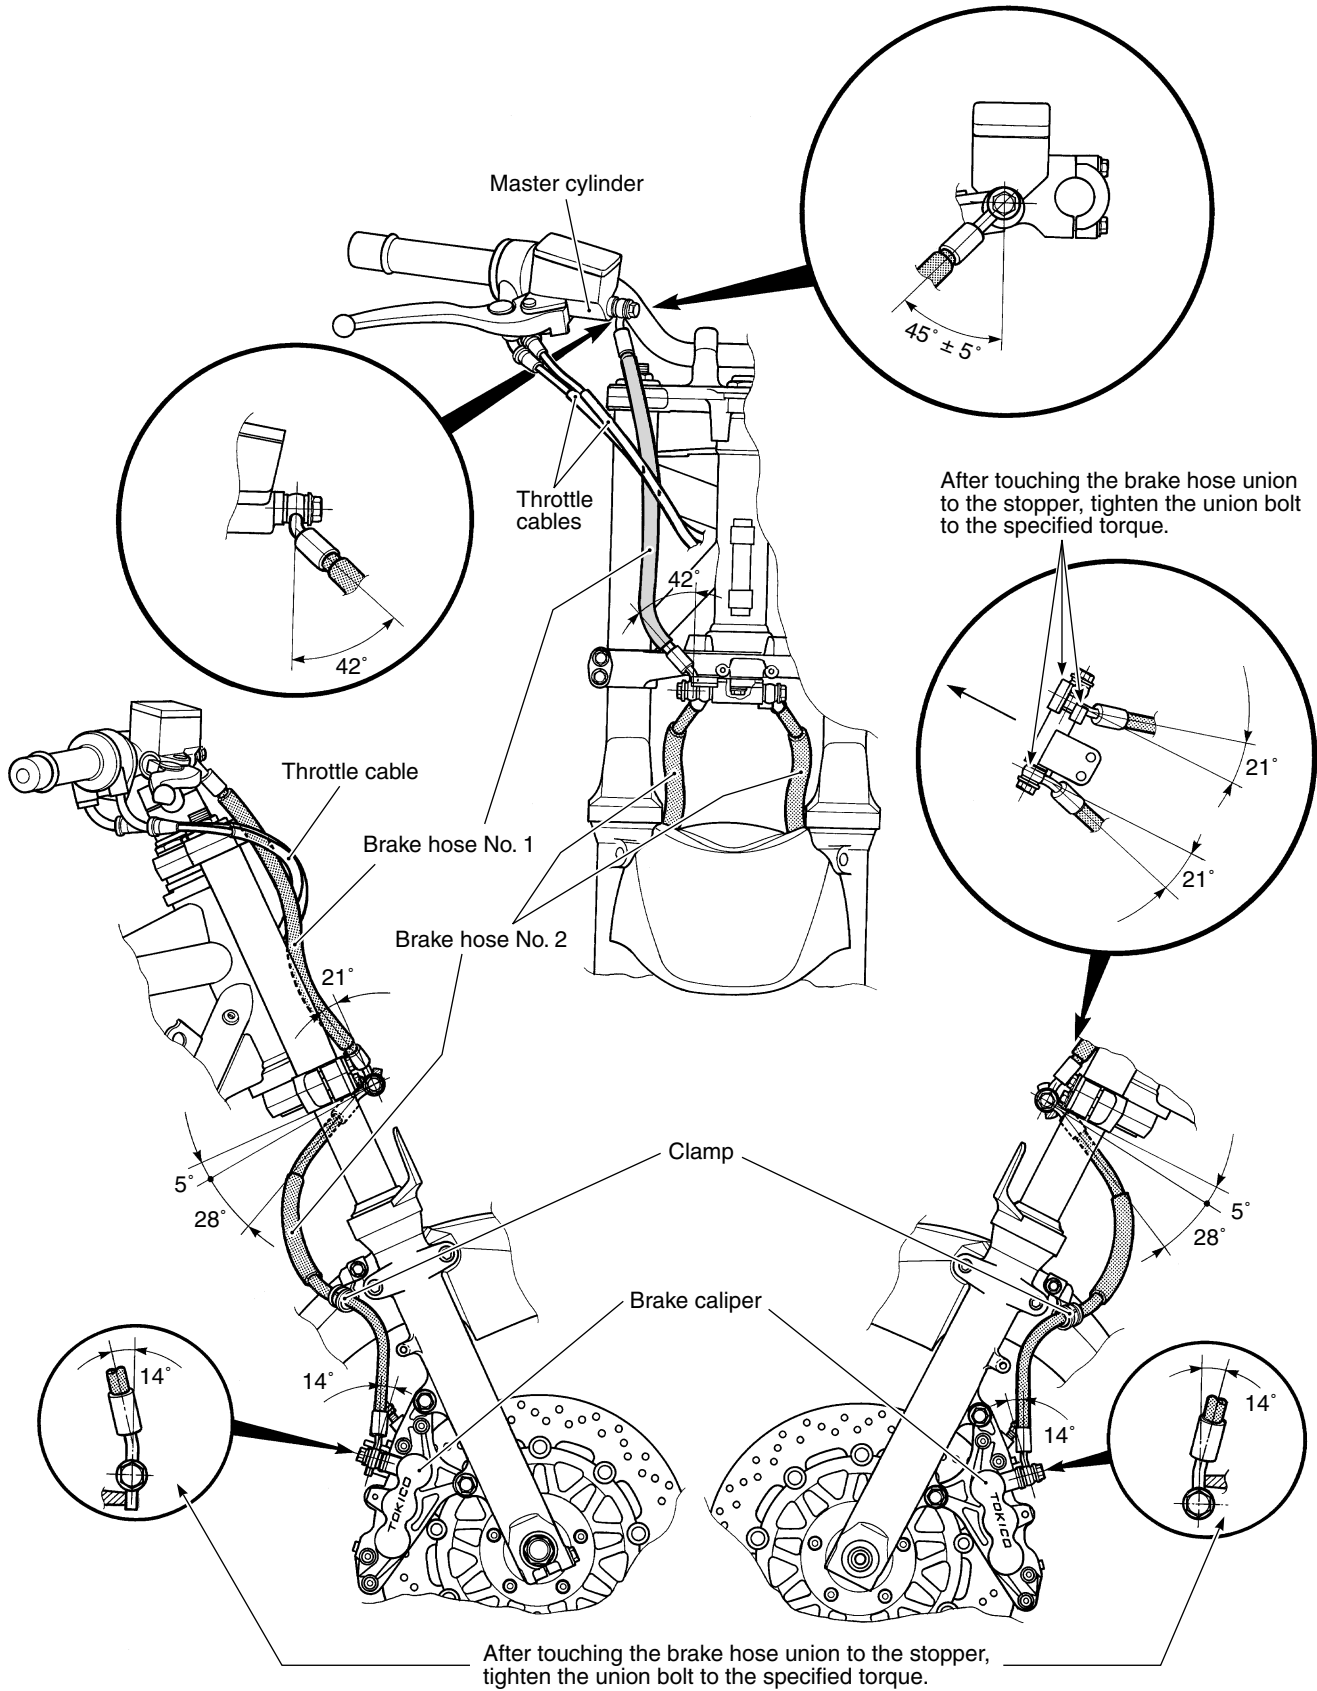


REAR BRAKE HOSE ROUTING


After touching the brake hose union to the stopper, tighten the union bolt to the specified torque.

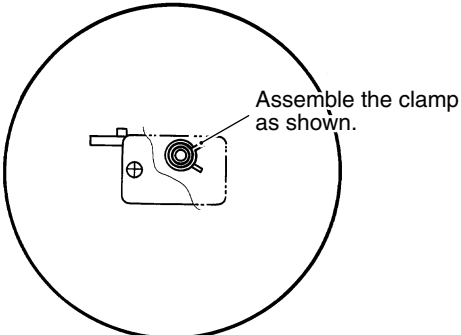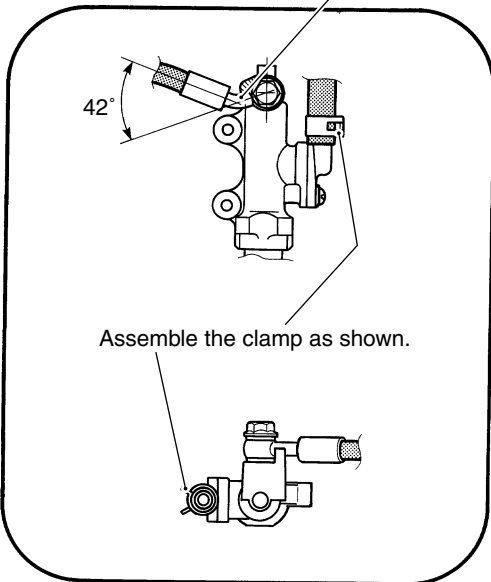


After touching the brake hose union to the stopper, tighten the union bolt to the specified torque.

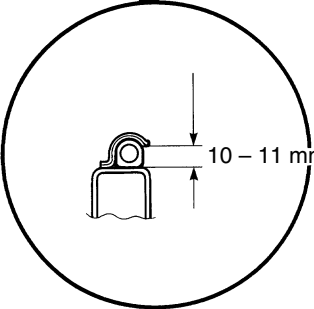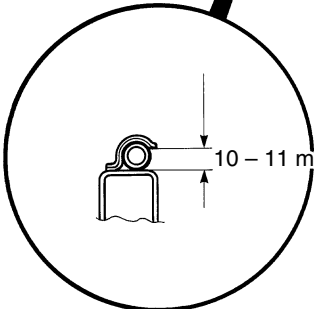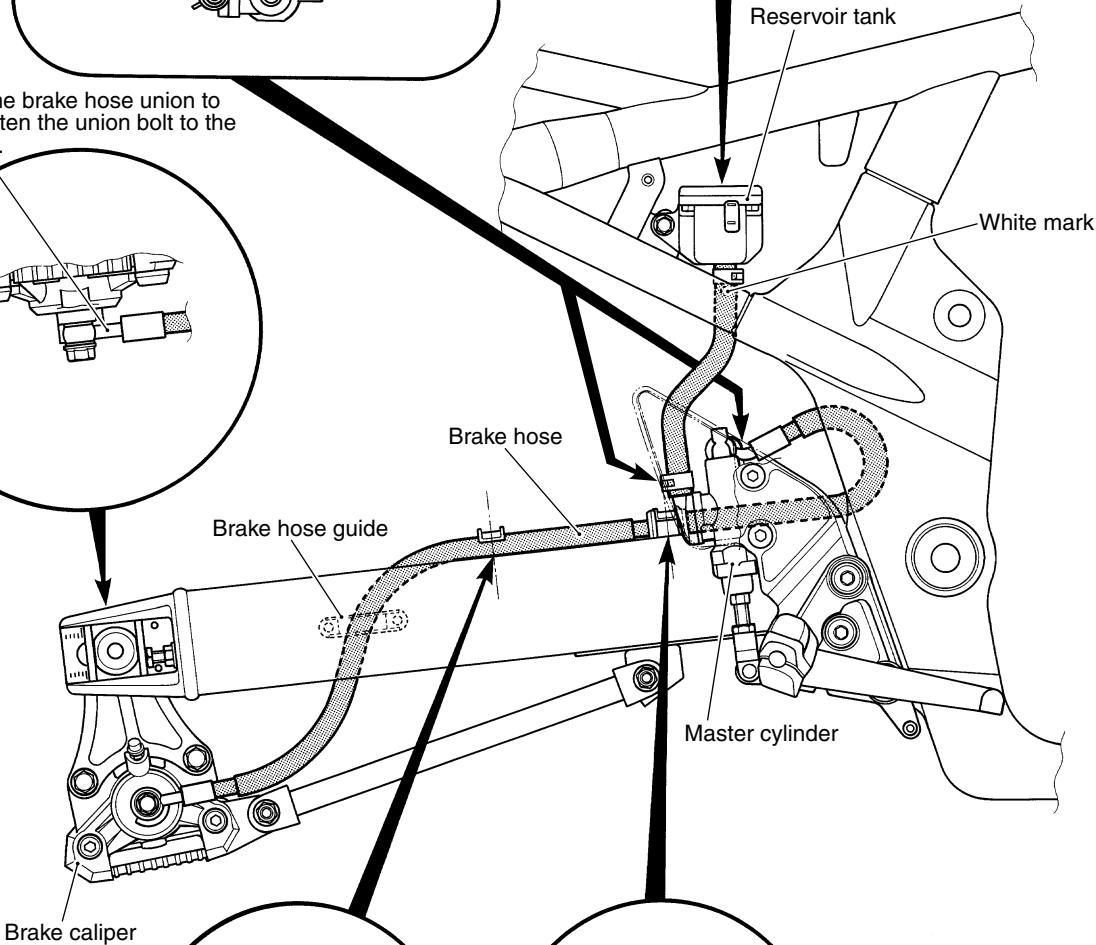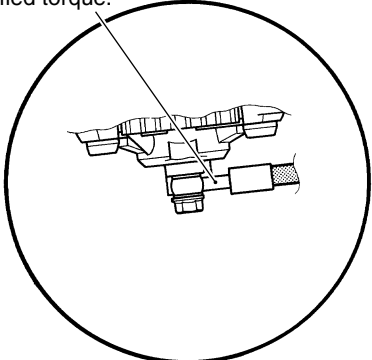


FRONT FOOTREST BRACKET SET-UP

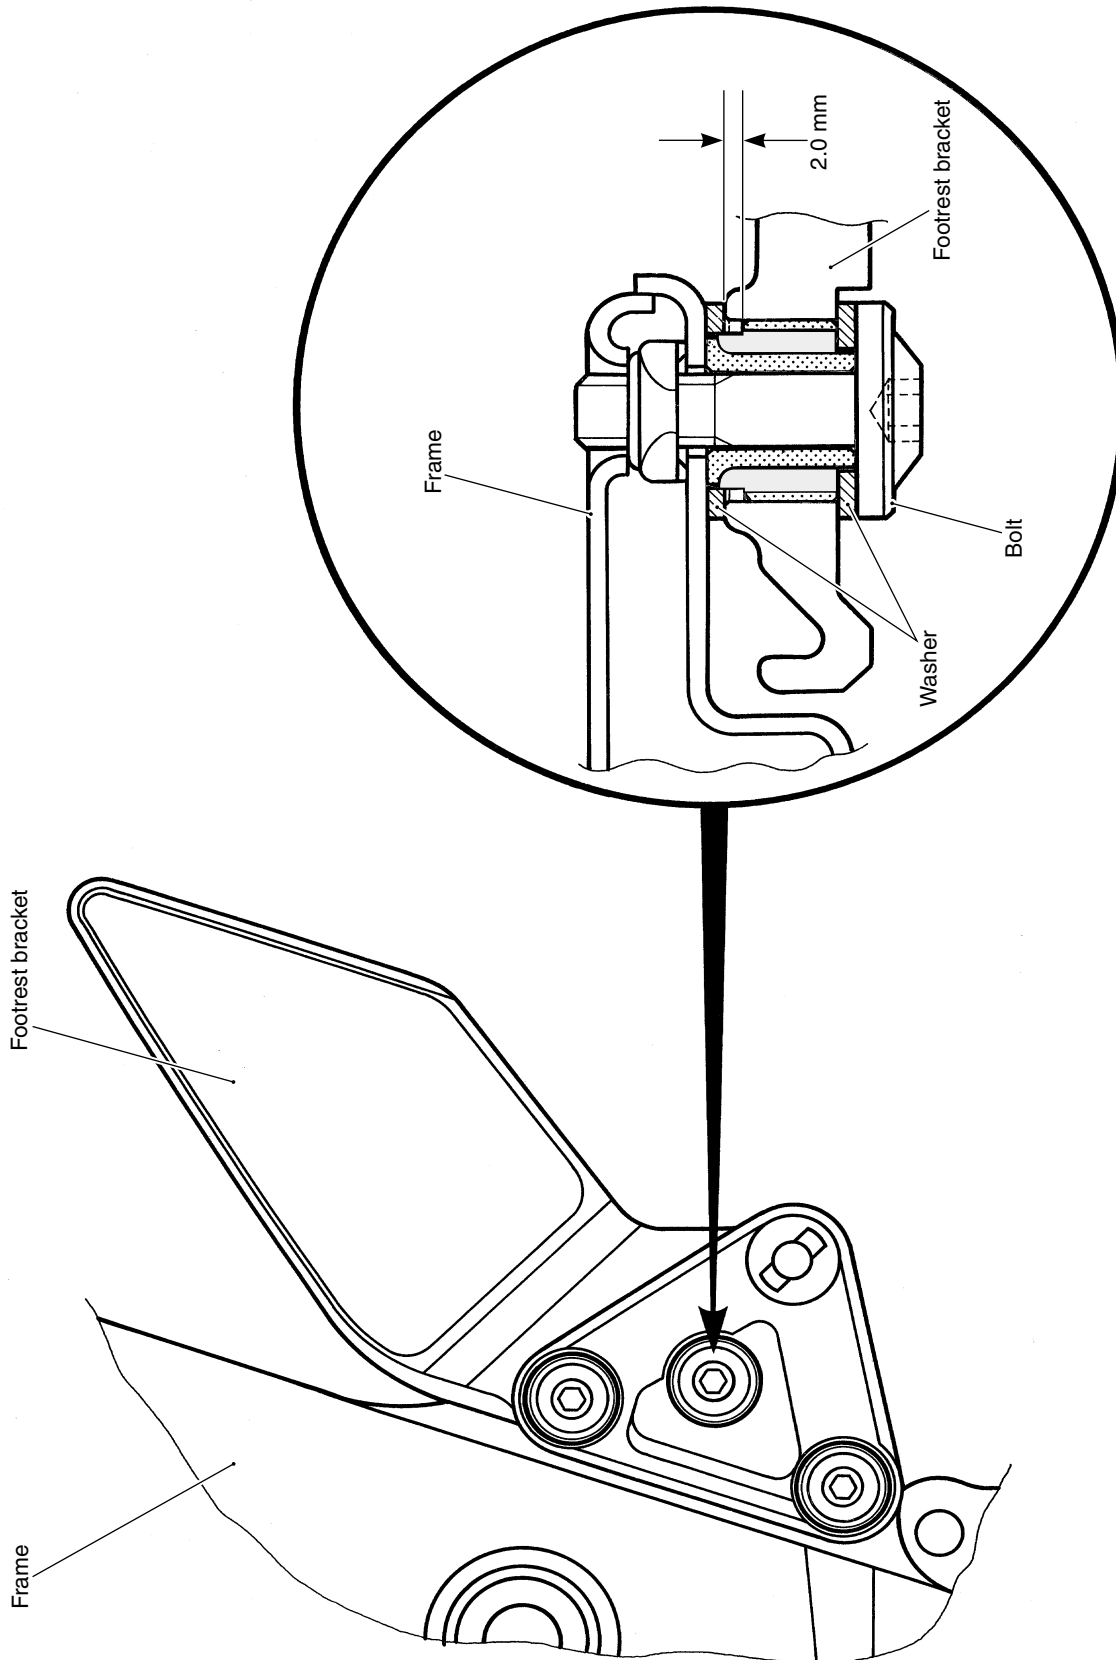


HIGH-TENSION CORD ROUTING

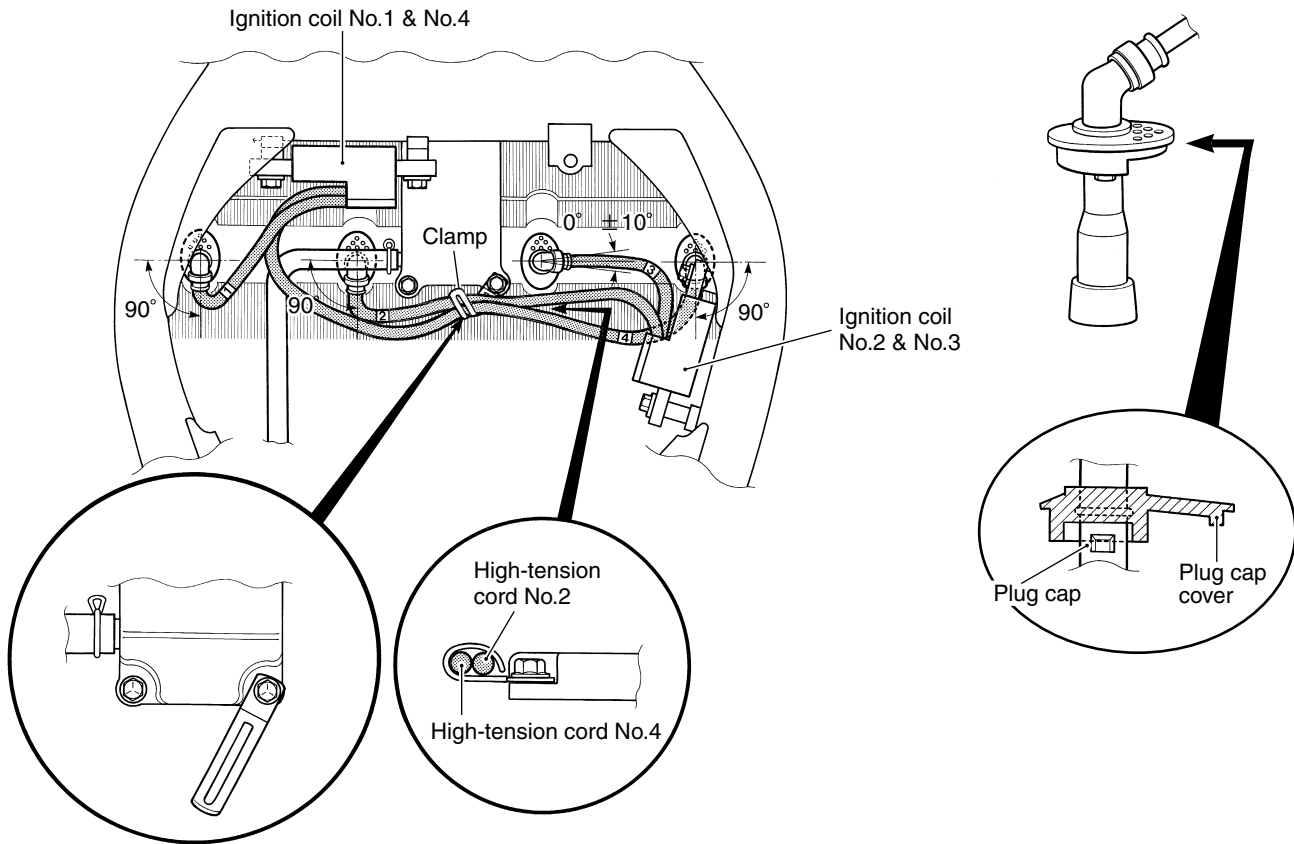


MUFFLER MOUNTING

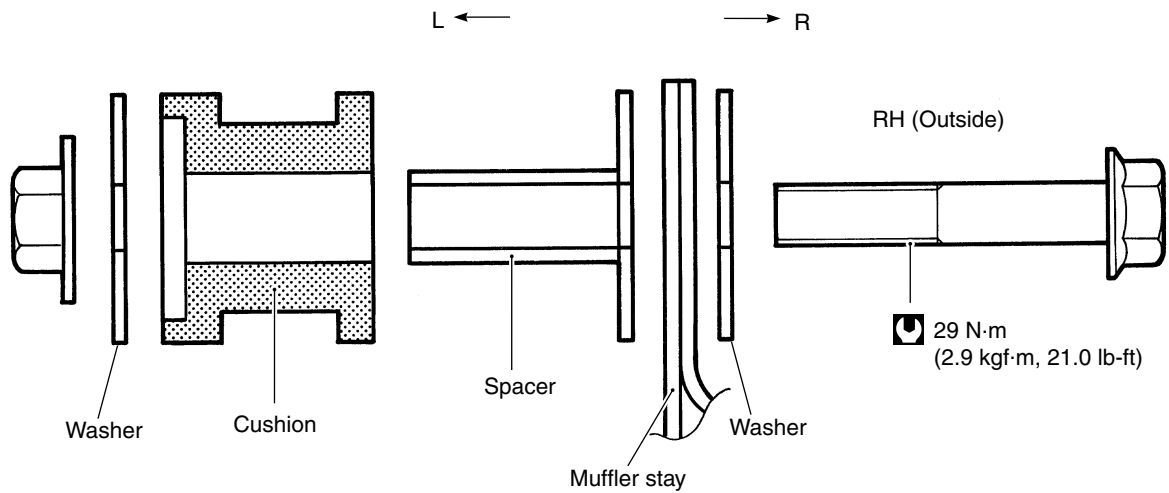


SIDE-STAND SPRINGS

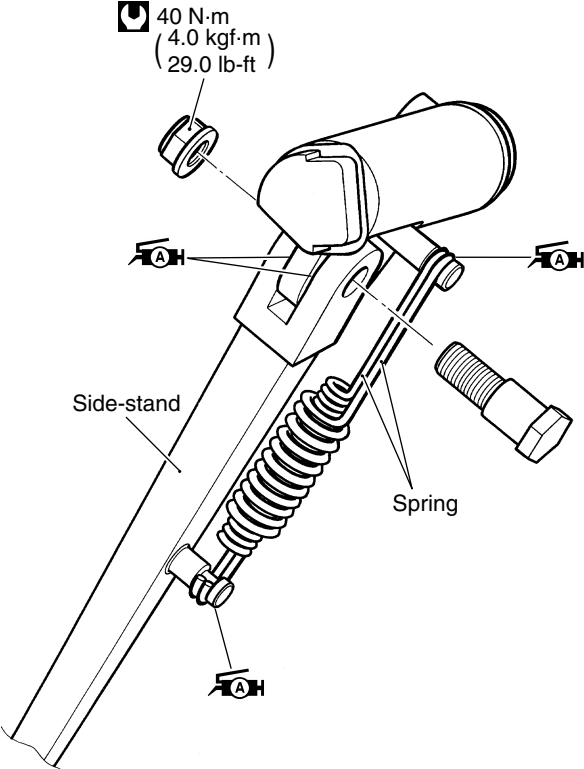

CENTER STAND SPRINGS

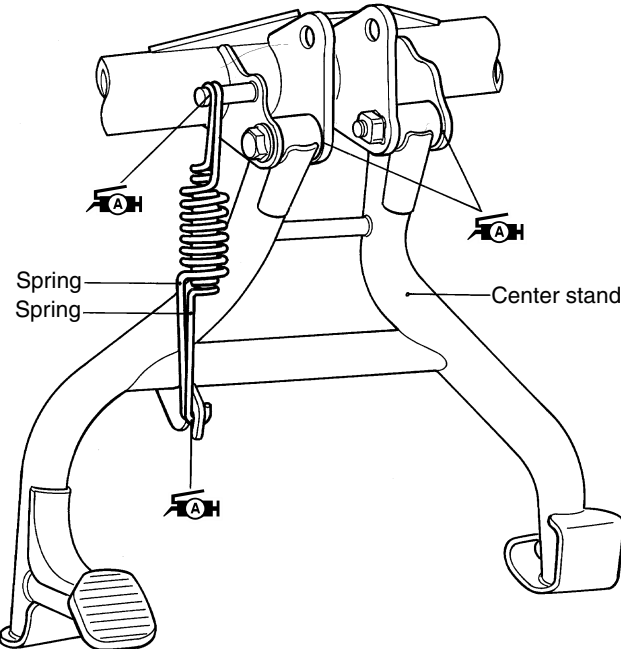


COWLING AND COWLING BRACE SET-UP

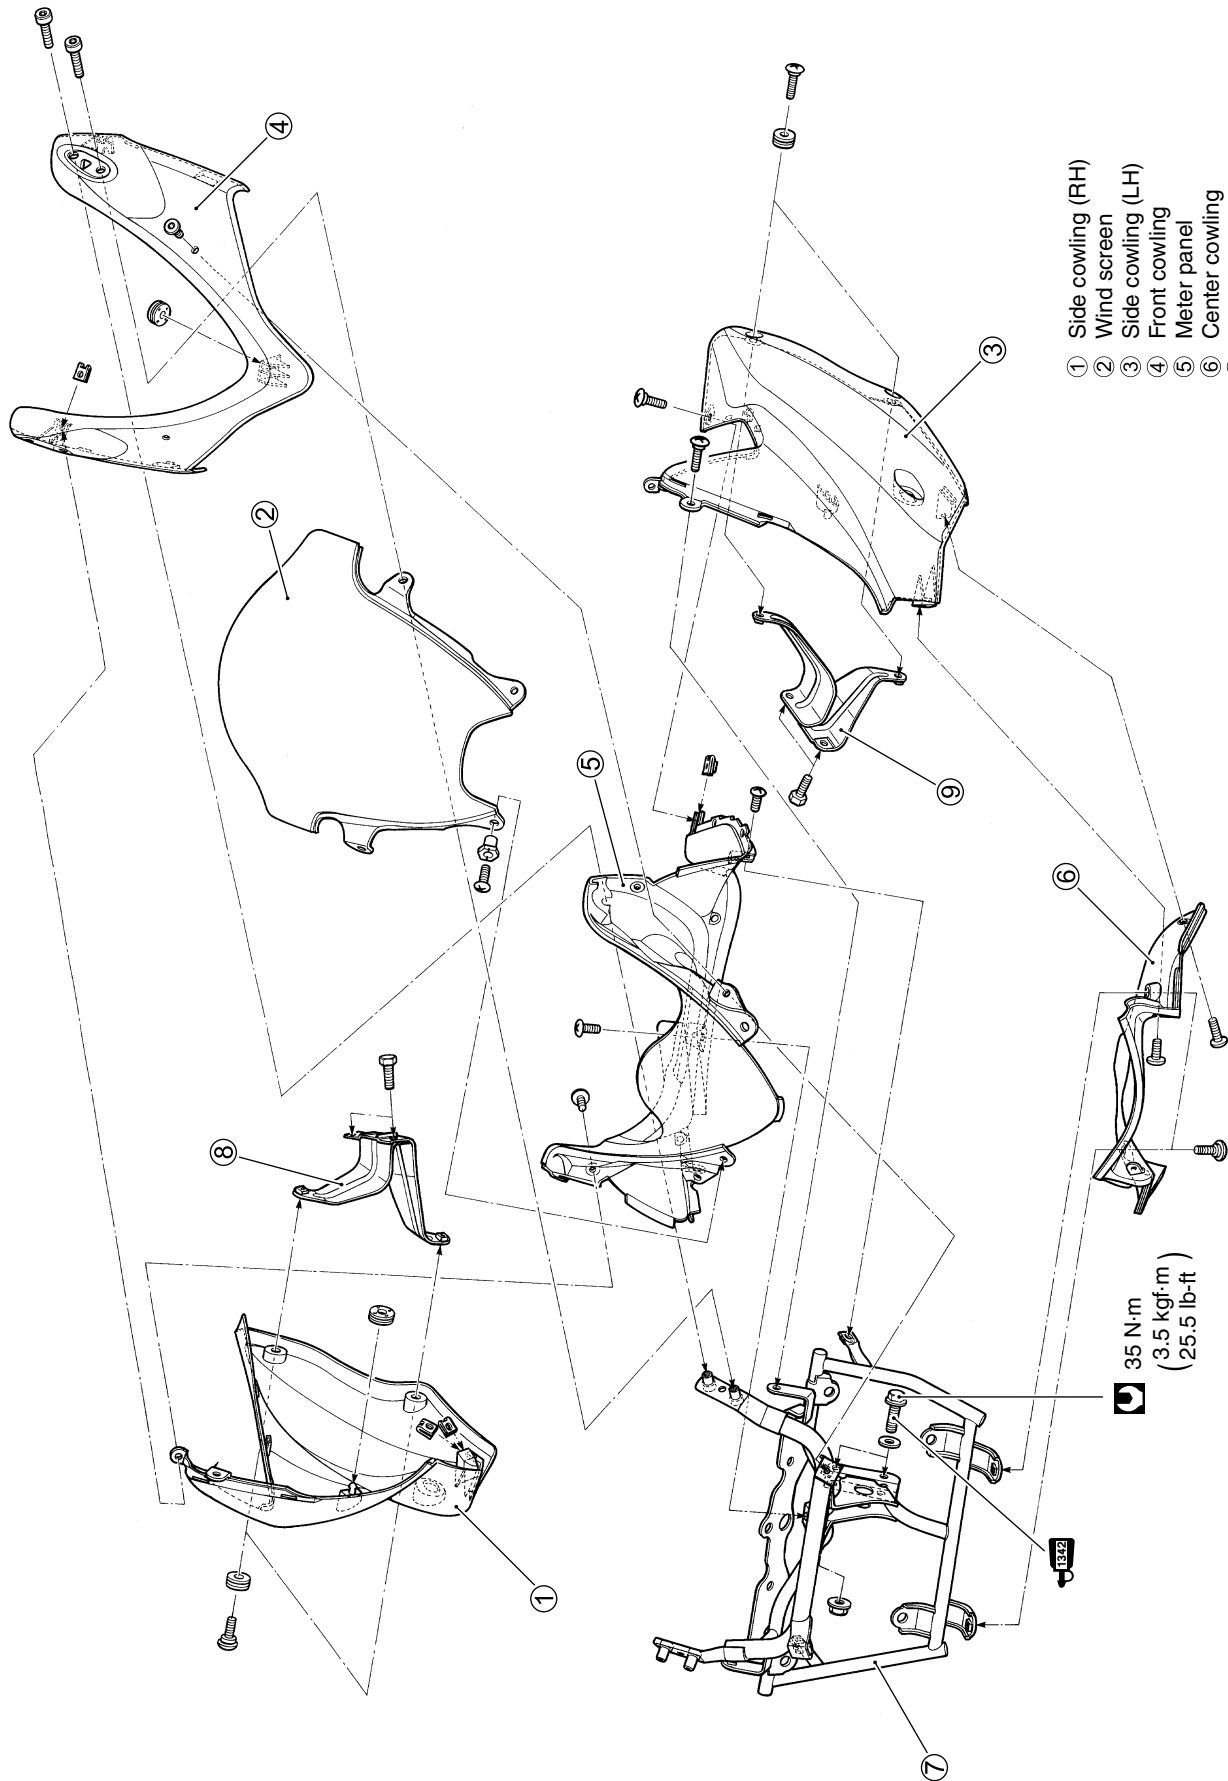

- ① Side cowl (RH)
- ② Wind screen
- ③ Side cowl (LH)
- ④ Front cowl
- ⑤ Meter panel
- ⑥ Center cowl
- ⑦ Cowl brace
- ⑧ Side cowl bracket (RH)
- ⑨ Side cowl bracket (LH)






35 N·m
(3.5 kgf·m
25.5 lb-ft)

FRAME COVER AND FRAME SIDE COVER SET UP

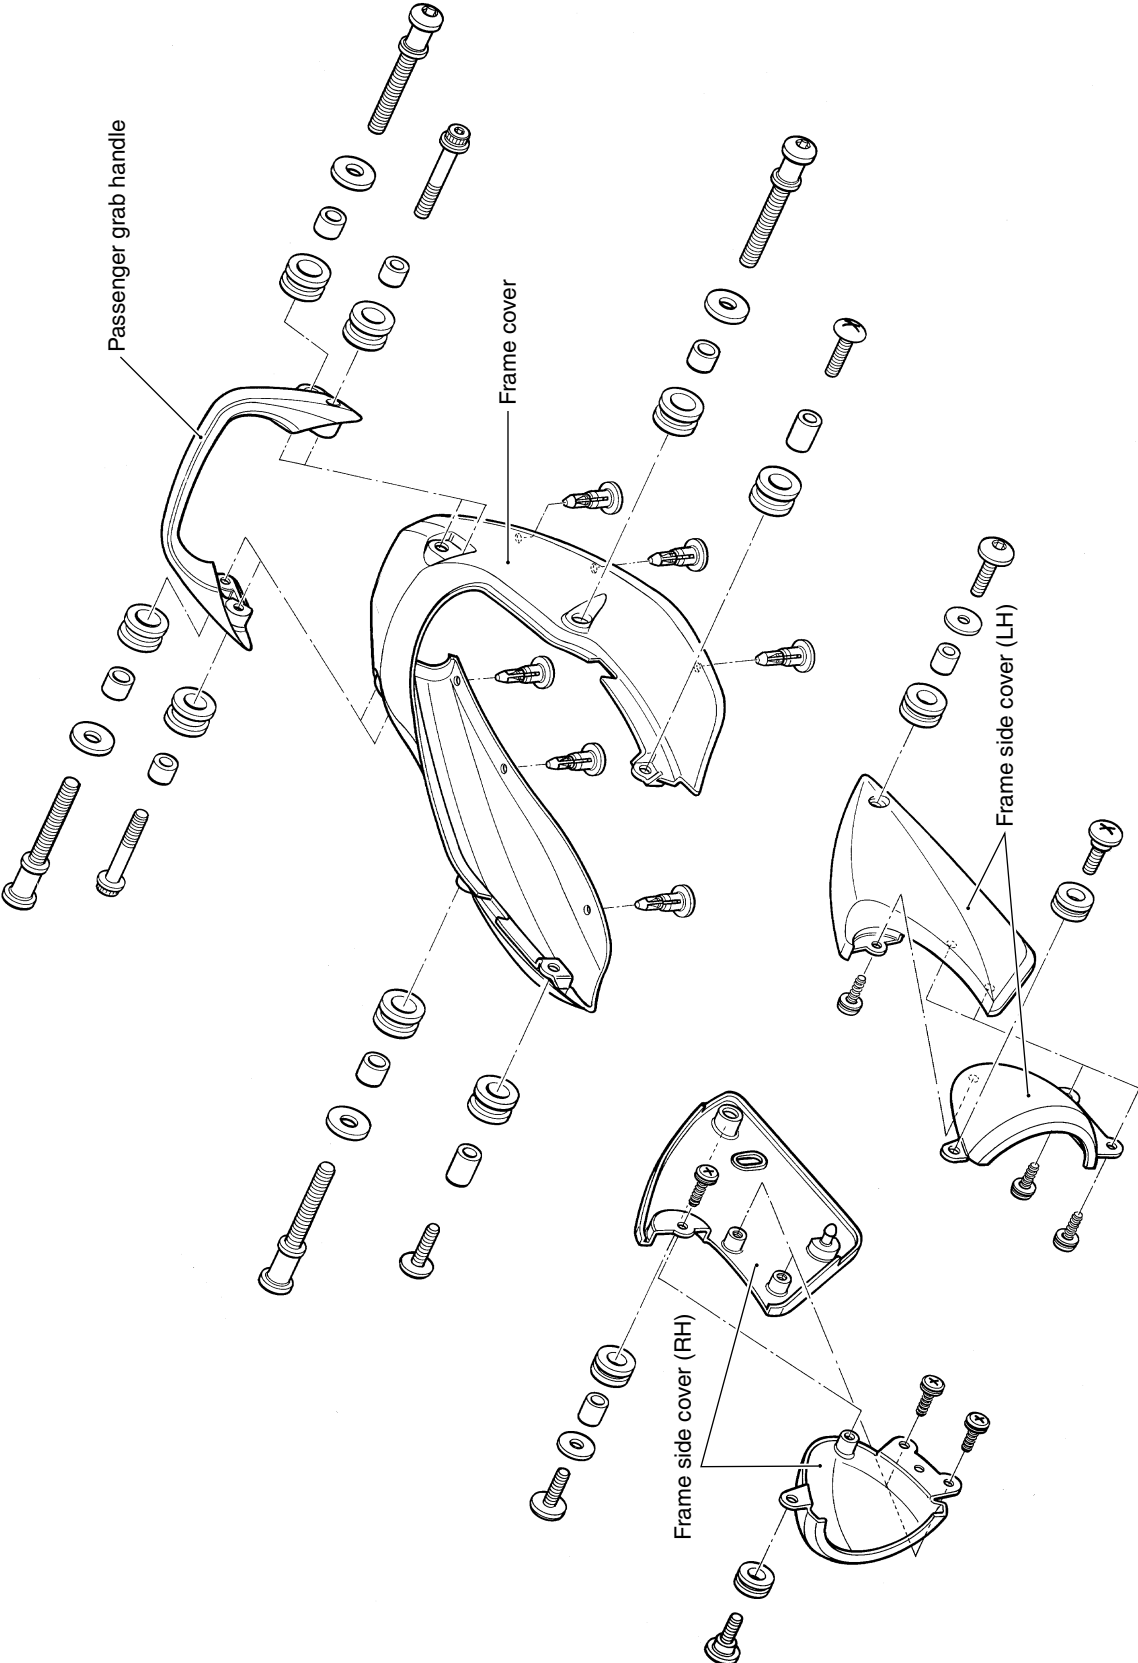


COWLING CUSHION AND TAPE


VIEW A

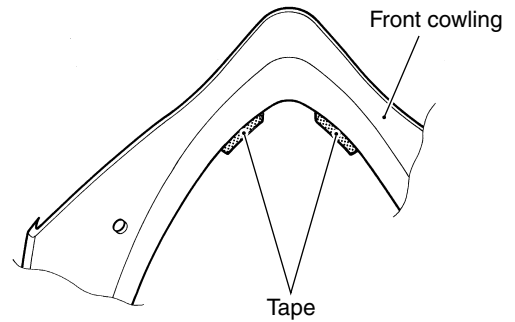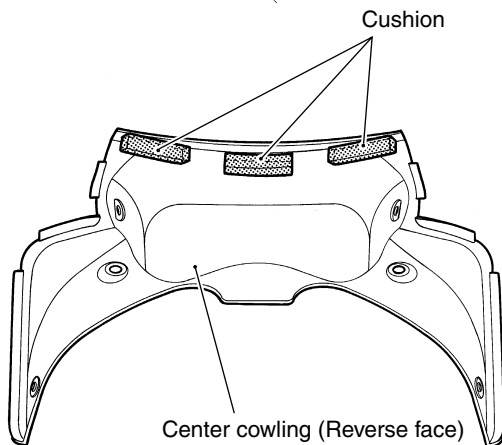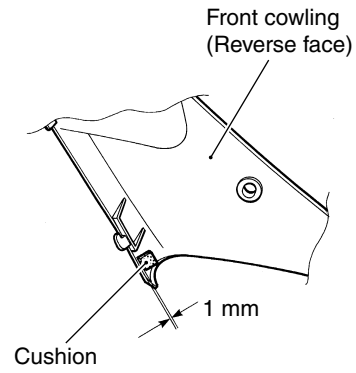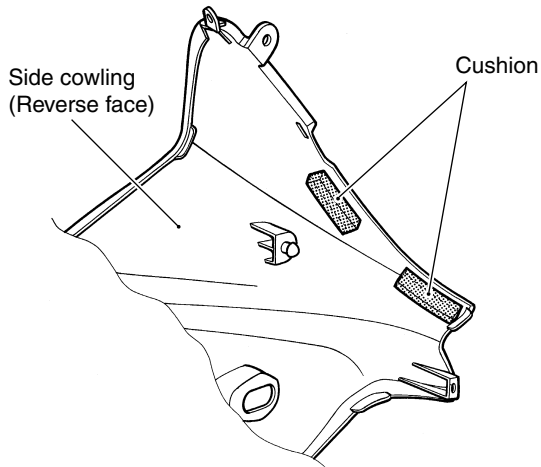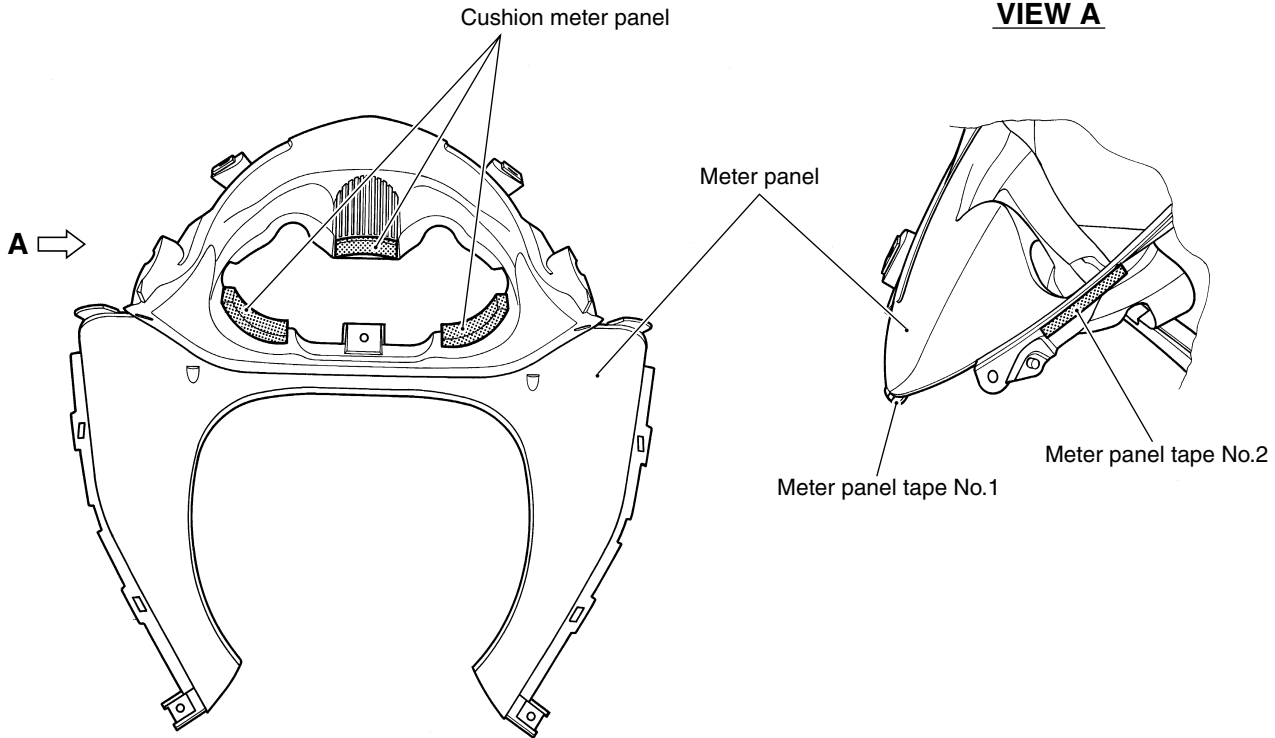

FRONT FENDER CUSHION

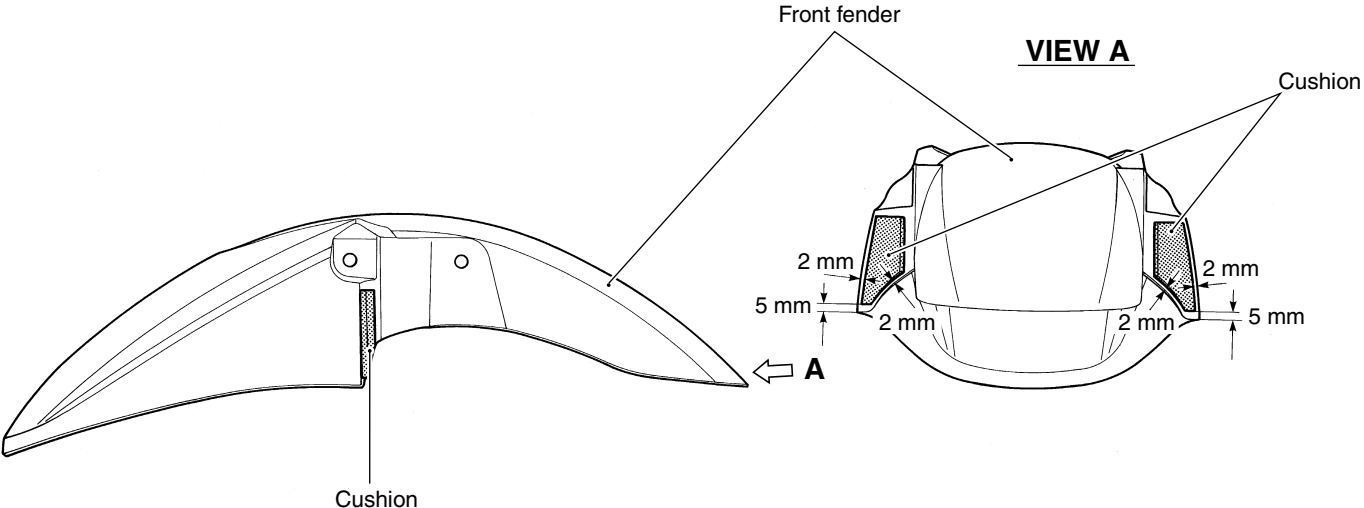


SEAT LOCK CABLE ROUTING

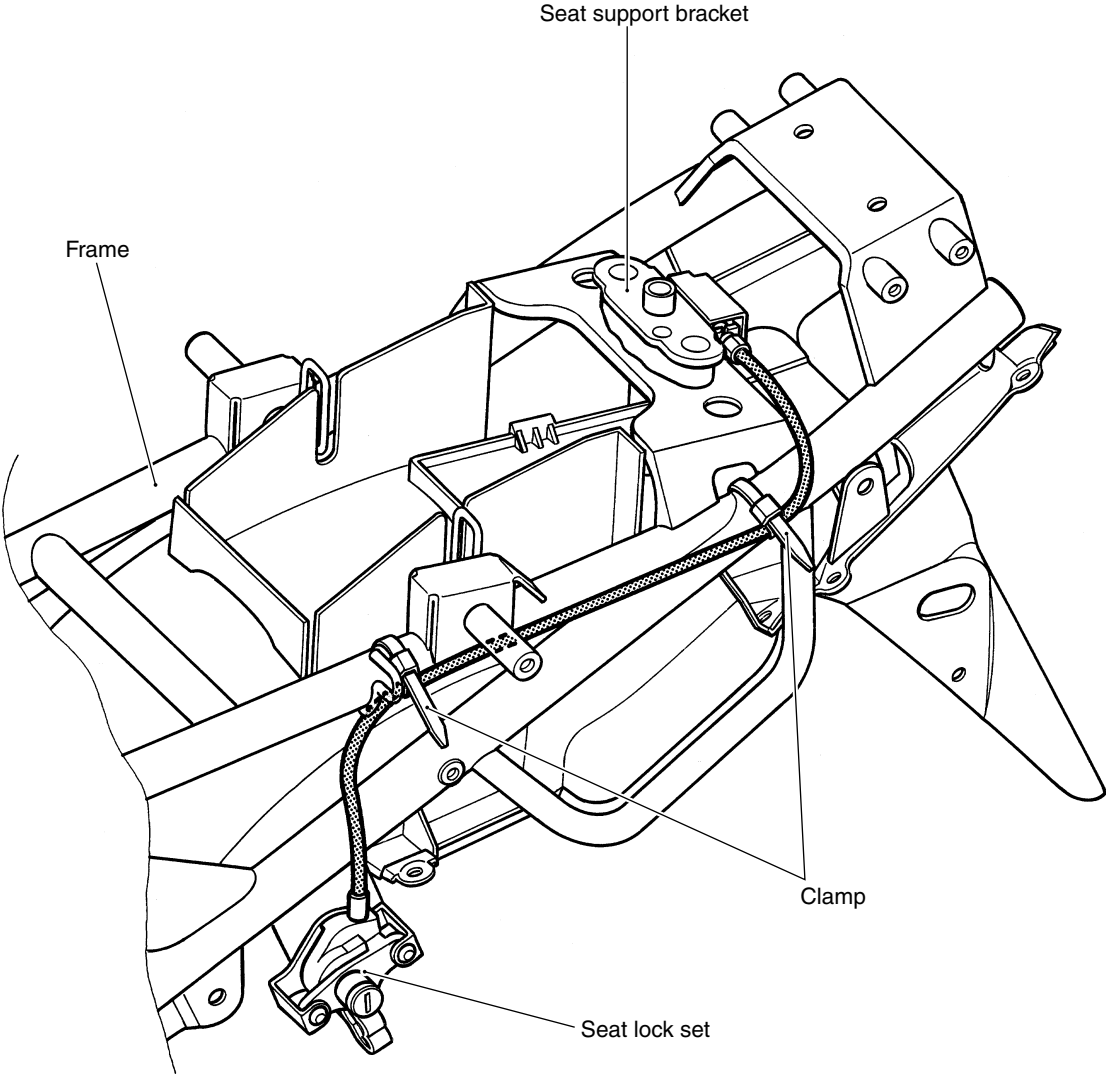


FUEL TANK AIR BREATHER HOSE/FUEL TANK DRAIN HOSE

▲ CAUTION

Avoid bending the fuel tank air breather hose to prevent the stoppage of fuel flow.








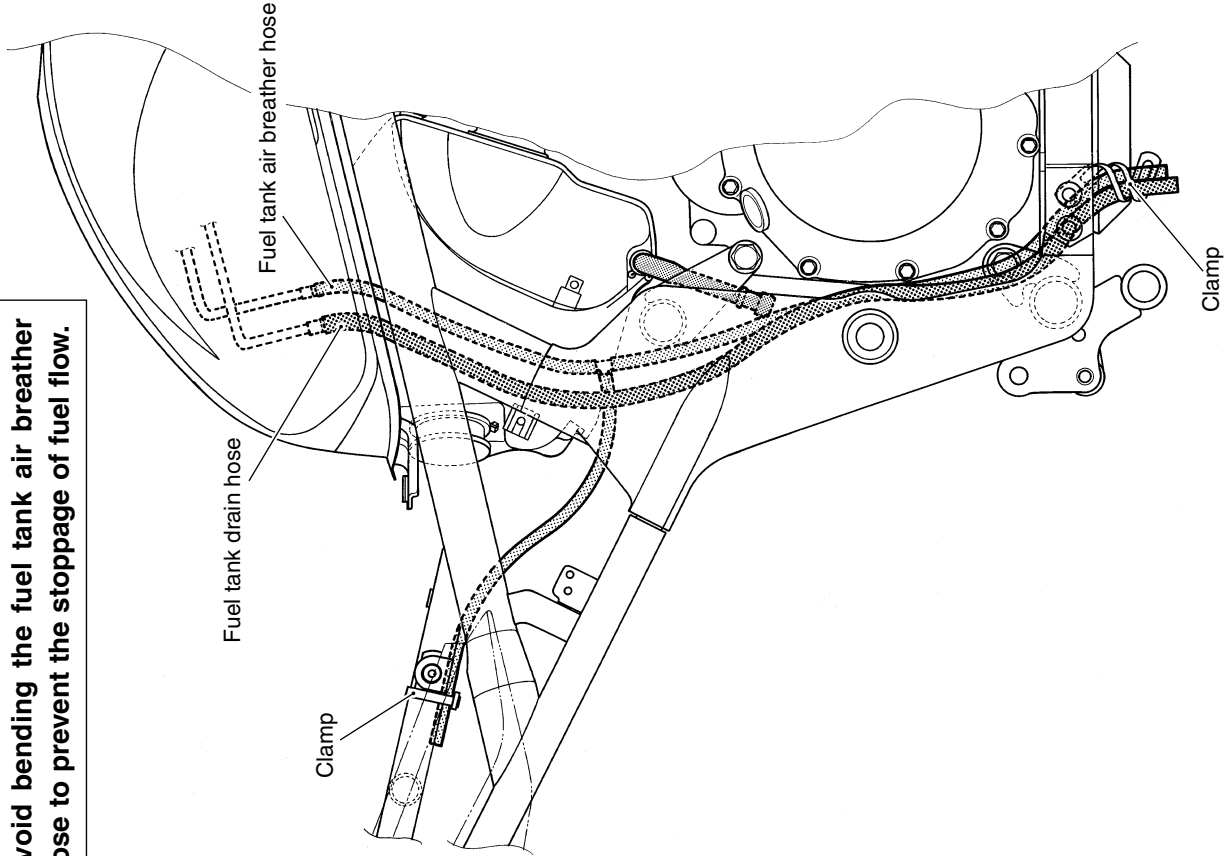



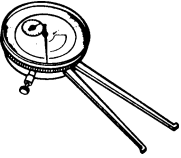

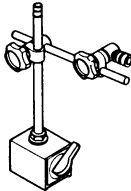
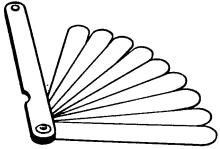
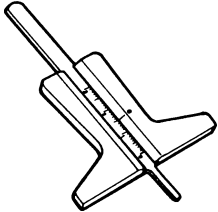
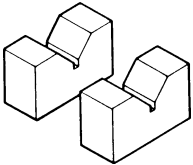

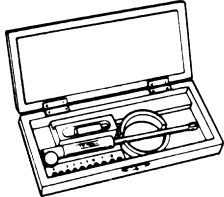
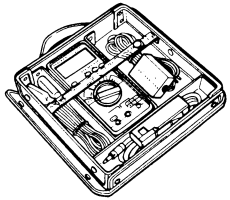
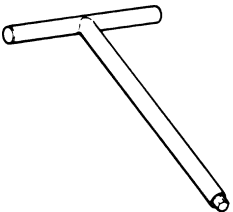
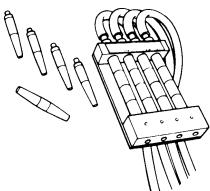
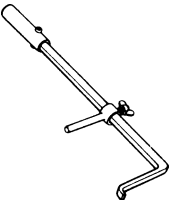
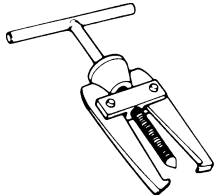
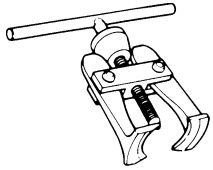
















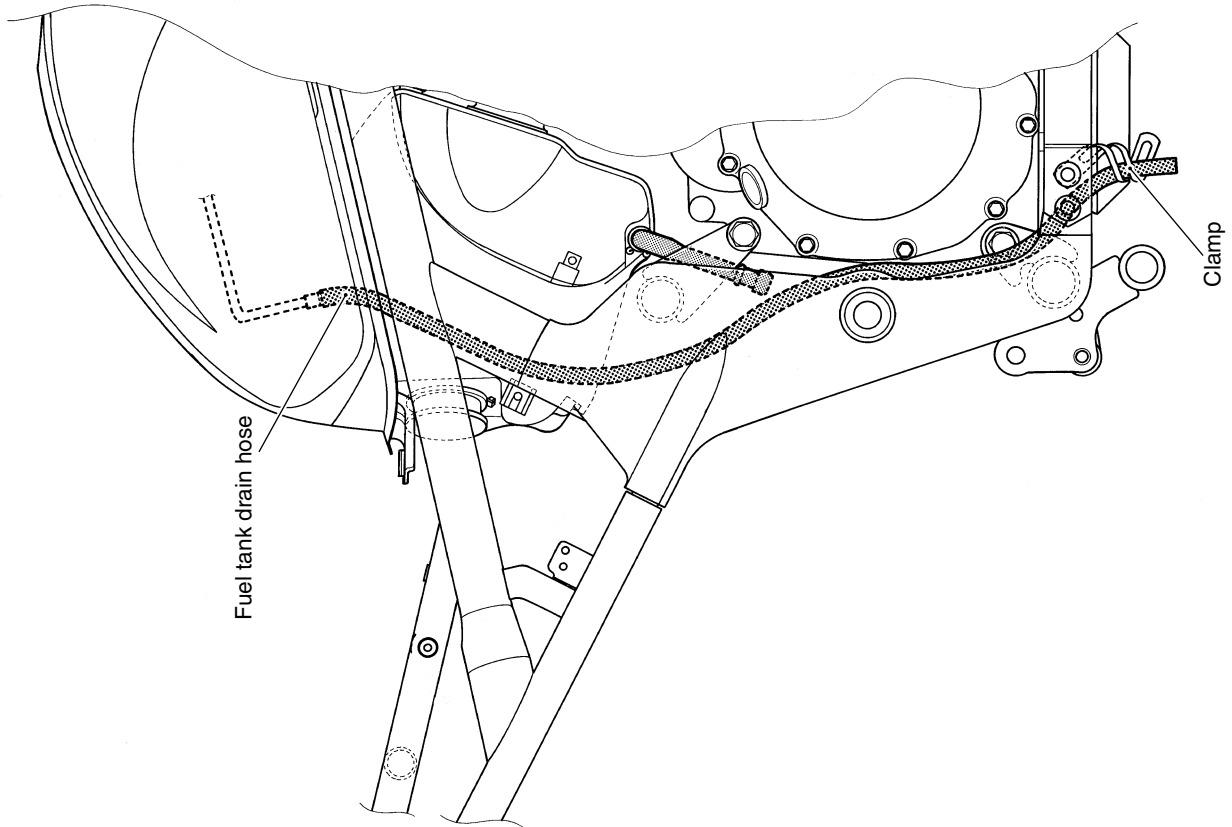



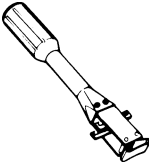

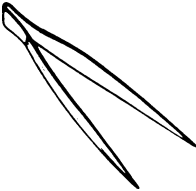
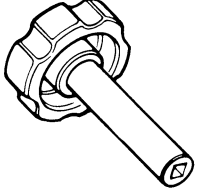
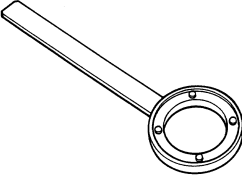
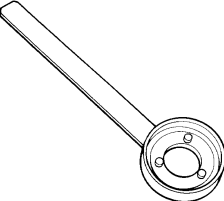

California model only


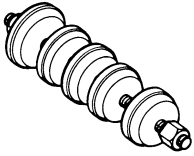
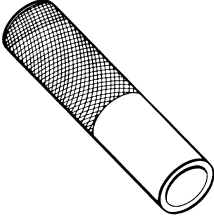
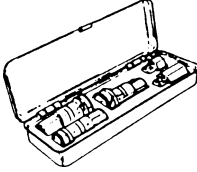
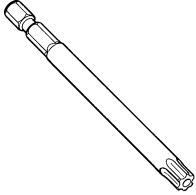
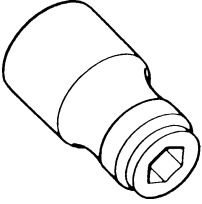
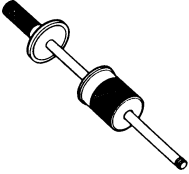
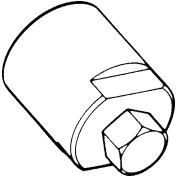
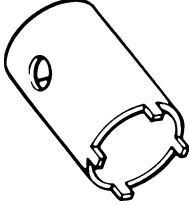
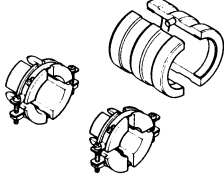
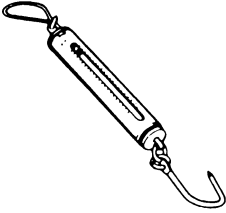
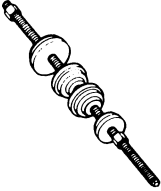
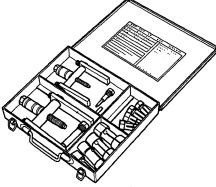
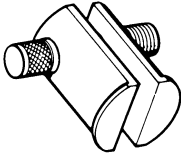

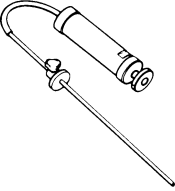
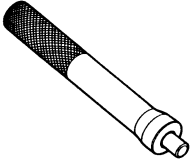


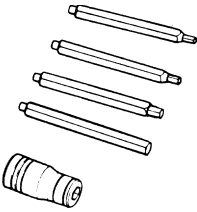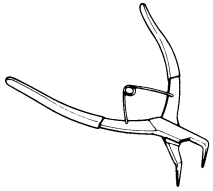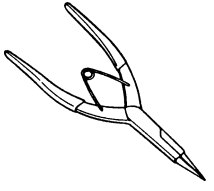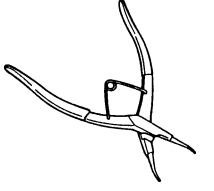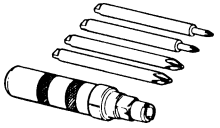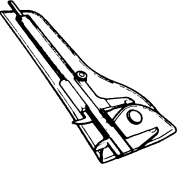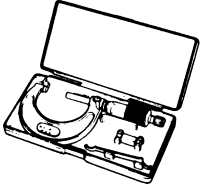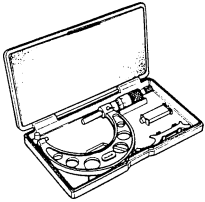NOTE

SPECIAL TOOLS

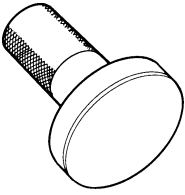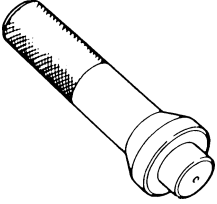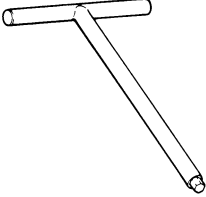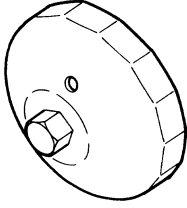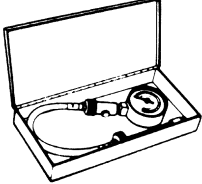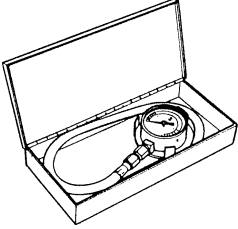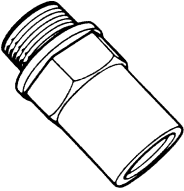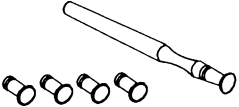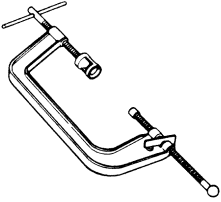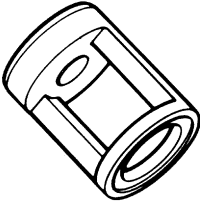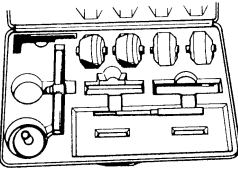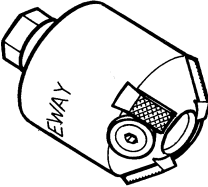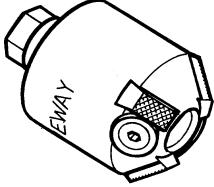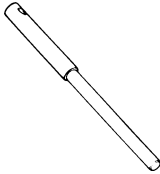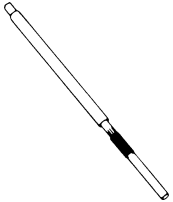 <p>09900-00410 Hexagon wrench set</p>	 <p>09900-06106 Snap ring pliers</p>	 <p>09900-06107 Snap ring pliers</p>	 <p>09900-06108 Snap ring pliers</p>	 <p>09900-09004 Impact driver set</p>
 <p>09900-20102 Vernier calipers (1/20 mm, 200 mm)</p>	 <p>09900-20202 Micrometer (1/100 mm, 25 – 50 mm)</p>	 <p>09900-20204 Micrometer (1/100 mm, 75 – 100 mm)</p>	 <p>09900-20205 Micrometer (1/1000 mm, 0 – 25 mm)</p>	 <p>09900-20508 Cylinder gauge set (1/100 mm, 40 – 80 mm)</p>
 <p>09900-20602 Dial gauge (1/1000 mm)</p>	 <p>09900-20605 Dial calipers (1/100 mm, 10 – 34 mm)</p>	 <p>09900-20606 Dial gauge (1/100 mm)</p>	 <p>09900-20701 Magnetic stand</p>	 <p>09900-20803 Thickness gauge</p>
 <p>09900-20805 Tire depth gauge</p>	 <p>09900-21304 V-block set (100 mm)</p>	 <p>09900-22301 09900-22302 Plastigauge</p>	 <p>09900-22403 Small bore gauge (18 – 35 mm)</p>	 <p>09900-25008 Multi circuit tester set</p>
 <p>09911-73730 “T” type hexagon wrench (5 mm)</p>	 <p>09913-13121 Carburetor balancer</p>	 <p>09913-50121 Oil seal remover</p>	 <p>09913-60910 Bearing remover</p>	 <p>09913-61510 Bearing remover</p>

 <p>09913-75520 Bearing installer</p>	 <p>09913-75830 Bearing remover</p>	 <p>09914-25811 "T" type hexagon wrench (6 mm)</p>	 <p>09915-40610 Oil filter wrench</p>	 <p>09915-64510 Compression gauge set 09913-10750 (Adaptor)</p>
 <p>09915-74510 Oil pressure gauge 09915-77330 Meter (for high pressure)</p>	 <p>09915-74540 Oil pressure gauge attachment</p>	 <p>09916-10911 Valve lapper set</p>	 <p>09916-14510 Valve lifter</p>	 <p>09916-14910 Valve lifter attachment</p>
 <p>09916-21111 Valve seat cutter set</p>	 <p>09916-20610 Valve seat cutter head (N-121)</p>	 <p>09916-20620 Valve seat cutter head (N-122)</p>	 <p>09916-24311 Solid pilot (N-100-5.0)</p>	 <p>09916-34570 Valve guide reamer (4.95 mm)</p>
 <p>09916-34542 Valve guide reamer handle</p>	 <p>09916-34580 Valve guide reamer (10.8 mm)</p>	 <p>09916-44310 Valve guide remover/installer</p>	 <p>09916-74521 Holder body</p>	 <p>09916-74550 Band (73 - 85 mm)</p>
 <p>09916-84511 Tweezers</p>	 <p>09917-14920 Valve adjuster driver</p>	 <p>09920-34820 Clutch pressure plate holder</p>	 <p>09920-34840 Starter clutch holder</p>	 <p>09923-73210 Bearing remover</p>

 <p>09923-74510 Bearing remover (20 - 35 mm)</p>	 <p>09924-84511 Bearing installer set</p>	 <p>09925-98221 Bearing remover</p>	 <p>09930-10121 Spark plug wrench set</p>	 <p>09930-11920 Torx bit</p>
 <p>09930-11940 Bit holder</p>	 <p>09930-30102 Sliding shaft</p>	 <p>09930-30720 Rotor remover</p>	 <p>09940-14911 Steering stem nut wrench</p>	 <p>09940-52861 Front fork oil seal installer</p>
 <p>09940-92720 Spring scale</p>	 <p>09941-34513 Steering outer race installer</p>	 <p>09921-20220 Bearing remover set</p>	 <p>09941-54911 Bearing outer race remover</p>	 <p>09941-74911 Steering bearing installer</p>
 <p>09943-74111 Fork oil level gauge</p>	 <p>09943-88211 Pinion bearing installer</p>			

NOTE: When ordering a special tool, please confirm whether it is available or not.

TIGHTENING TORQUE

ENGINE

ITEM	N·m	kgf·m	lb·ft
Cylinder head cover bolt (10 pcs)	14	1.4	10.0
Cylinder head cover plug	15	1.5	11.0
Cylinder head cover union bolt	16	1.6	11.5
Cylinder head nut [M: 10]	38	3.8	27.5
Cylinder head bolt [M: 6]	10	1.0	7.0
Cylinder head plug	28	2.8	20.0
Cylinder base nut	9	0.9	6.5
Cylinder stud bolt	15	1.5	11.0
Valve clearance adjuster locknut	10	1.0	7.0
Rocker arm shaft set bolt	9	0.9	6.5
Camshaft journal holder bolt	10	1.0	7.0
Cam sprocket bolt	25	2.5	18.0
Oil cooler hose union bolt	23	2.3	16.5
Oil hose mounting bolt	10	1.0	7.0
Cam chain tensioner mounting bolt	7	0.7	5.0
Cam chain tensioner spring holder bolt	35	3.5	25.5
Conrod cap nut	50	5.0	36.0
Starter clutch mounting bolt	150	15.0	108.5
Signal generator rotor bolt	25	2.5	18.0
Crankcase bolt/nut [M: 6]	11	1.1	8.0
[M: 8]	23	2.3	16.5
Main oil gallery plug	40	4.0	29.0
Oil pump mounting bolt	10	1.0	7.0
Oil drain plug	23	2.3	16.5
Oil pan bolt	14	1.4	10.0
Speed sensor rotor bolt	20	2.0	14.5
Clutch sleeve hub nut	150	15.0	108.5
Exhaust pipe bolt	23	2.3	16.5
Muffler mounting bolt	29	2.9	21.0
Engine sprocket nut	115	11.5	83.0
Engine mounting bolt [L: 55]	55	5.5	40.0
Engine mounting bolt [L: 132 and 180]	88	8.8	63.5
Generator driven gear nut	55	5.5	40.0
Generator mounting bolt	25	2.5	18.0
Oil cooler mounting bolt	10	1.0	7.0
Oil pressure regulator	28	2.8	20.0
Oil pressure switch	14	1.4	10.0
Starter motor mounting bolt	6	0.6	4.5
Starter motor terminal nut	5	0.5	3.5
Signal generator stator mounting screw	3	0.3	2.0
Starter relay terminal nut	5	0.5	3.5
Spark plug	11	1.1	8.0
Cam chain guide mounting bolt	10	1.0	7.0


CHASSIS

ITEM	N-m	kgf-m	lb-ft
Steering stem head nut	65	6.5	47.0
Front fork upper clamp bolt	23	2.3	16.5
Front fork lower clamp bolt	23	2.3	16.5
Front fork cap bolt	23	2.3	16.5
Front fork damper rod bolt	20	2.0	14.5
Front axle	100	10.0	72.5
Front axle pinch bolt	23	2.3	16.5
Handlebar holder bolt	23	2.3	16.5
Front brake/clutch master cylinder holder bolt	10	1.0	7.0
Front brake caliper housing bolt	21	2.1	15.2
Front brake caliper mounting bolt	39	3.9	28.0
Brake/clutch hose union bolt (front & rear)	23	2.3	16.5
Air bleeder valve (brake & clutch)	8	0.8	6.0
Brake disc bolt (front & rear)	23	2.3	16.5
Front footrest bolt	39	3.9	28.0
Front footrest bracket mounting bolt	23	2.3	16.5
Swingarm pivot nut	100	10.0	72.5
Rear shock absorber mounting nut (upper & lower)	50	5.0	36.0
Cushion lever mounting nut	78	7.8	56.5
Cushion lever rod mounting nut	78	7.8	56.5
Rear brake caliper mounting bolt	25	2.5	18.0
Rear brake caliper housing bolt	30	3.0	21.5
Rear brake master cylinder mounting bolt	23	2.3	16.5
Rear brake master cylinder rod locknut	18	1.8	13.0
Rear axle nut	100	10.0	72.5
Rear sprocket nut	60	6.0	43.5
Rear torque link nut (front & rear)	35	3.5	25.5


TIGHTENING TORQUE CHART

For other bolts and nuts not listed in the preceding page, refer to this chart:


Bolt Diameter Ⓐ (mm)	Conventional or "4" marked bolt			"7" marked bolt		
	N·m	kgf·m	lb-ft	N·m	kgf·m	lb-ft
4	1.5	0.15	1.0	2	0.2	1.5
5	3	0.3	2.0	5	0.5	3.5
6	6	0.6	4.5	10	1.0	7.0
8	13	1.3	9.5	23	2.3	16.5
10	29	2.9	21.0	50	5.0	36.0
12	45	4.5	32.5	85	8.5	61.5
14	65	6.5	47.0	135	13.5	97.5
16	105	10.5	76.0	210	21.0	152.0
18	160	16.0	115.5	240	24.0	173.5



Conventional bolt



"4" marked bolt



"7" marked bolt

SERVICE DATA**VALVE + GUIDE**

Unit: mm (in)

ITEM	STANDARD		LIMIT
Valve diameter	IN.	28.5 (1.12)	——
	EX.	25 (1.0)	——
Valve clearance (when cold)	IN.	0.10 – 0.15 (0.004 – 0.006)	——
	EX.	0.18 – 0.23 (0.007 – 0.009)	——
Valve-guide to valve-stem clearance	IN.	0.020 – 0.047 (0.0008 – 0.0019)	——
	EX.	0.030 – 0.057 (0.0012 – 0.0022)	——
Valve stem deflection	IN. & EX.	——	0.35 (0.014)
Valve guide I.D.	IN. & EX.	5.000 – 5.012 (0.1969 – 0.1973)	——
Valve stem O.D.	IN.	4.965 – 4.980 (0.1955 – 0.1961)	——
	EX.	4.945 – 4.960 (0.1947 – 0.1953)	——
Valve stem runout	IN. & EX.	——	0.05 (0.002)
Valve face thickness	IN. & EX.	——	0.5 (0.02)
Valve stem end length	IN. & EX.	——	2.5 (0.10)
Valve seat width	IN. & EX.	0.9 – 1.1 (0.035 – 0.043)	——
Valve head radial runout	IN. & EX.	——	0.03 (0.001)
Valve spring free length (IN. & EX.)	INNER	——	35.0 (1.38)
	OUTER	——	37.8 (1.49)
Valve spring tension (IN. & EX.)	INNER	53 – 65 N, 5.3 – 6.5 kgf (11.7 – 14.3 lbs) at length 28 mm (1.10 in)	——
	OUTER	131 – 151 N, 13.1 – 15.1 kgf (28.9 – 33.3 lbs) at length 31.5 mm (1.24 in)	——

CAMSHAFT + CYLINDER HEAD

Unit: mm (in)

ITEM	STANDARD		LIMIT
Cam height	IN.	33.58 – 33.62 (1.3220 – 1.3236)	33.28 (1.3102)
	EX.	32.65 – 32.69 (1.2854 – 1.2870)	32.35 (1.2736)
Camshaft journal oil clearance	IN. & EX.	0.032 – 0.066 (0.0013 – 0.0026)	0.150 (0.0059)
Camshaft journal holder I.D.	IN. & EX.	22.012 – 22.025 (0.8666 – 0.8671)	—
Camshaft journal O.D.	IN. & EX.	21.959 – 21.980 (0.8645 – 0.8654)	—
Camshaft runout	IN. & EX.	—	0.10 (0.004)
Cam chain pin (at arrow “3”)	24th pin		—
Rocker arm I.D.	IN. & EX.	12.000 – 12.018 (0.4724 – 0.4731)	—
Rocker arm shaft O.D.	IN. & EX.	11.973 – 11.984 (0.4714 – 0.4718)	—
Cylinder head distortion	—		0.20 (0.008)

CYLINDER + PISTON + PISTON RING

Unit: mm (in)

ITEM	STANDARD		LIMIT	
Compression pressure	1 250 kPa (12.5 kgf/cm ²) 178 psi		875 kPa (8.75 kgf/cm ²) 124 psi	
Compression pressure difference	—		200 kPa (2 kgf/cm ²) 28 psi	
Piston-to-cylinder clearance	0.040 – 0.070 (0.0016 – 0.0028)		0.120 (0.0047)	
Cylinder bore	79.000 – 79.015 (3.1102 – 3.1108)		79.080 (3.1134)	
Piston diameter	78.945 – 78.960 (3.1081 – 3.1087) Measure 15 (0.6) from the skirt end.		78.880 (3.1055)	
Cylinder distortion	—		0.20 (0.008)	
Piston ring free end gap	1st	R	Approx. 10 (0.39)	8.0 (0.31)
	2nd	RN	Approx. 12 (0.47)	9.6 (0.38)
Piston ring end gap	1st		0.20 – 0.35 (0.008 – 0.014)	0.5 (0.02)
	2nd		0.35 – 0.50 (0.014 – 0.020)	1.0 (0.04)

ITEM	STANDARD		LIMIT
Piston-ring to piston-ring-groove clearance	1st	————	0.180 (0.007)
	2nd	————	0.150 (0.006)
Piston ring groove width	1st	1.01 – 1.03 (0.040 – 0.041)	————
	2nd	1.01 – 1.03 (0.040 – 0.041)	————
	Oil	2.01 – 2.03 (0.079 – 0.080)	————
Piston ring thickness	1st	0.975 – 0.990 (0.0384 – 0.0390)	————
	2nd	0.970 – 0.990 (0.038 – 0.039)	————
Piston pin bore	20.002 – 20.008 (0.7875 – 0.7877)		20.030 (0.7886)
Piston pin O.D.	19.996 – 20.000 (0.7872 – 0.7874)		19.980 (0.7866)

CONROD + CRANKSHAFT

Unit: mm (in)

ITEM	STANDARD		LIMIT
Conrod small end I.D.	20.010 – 20.018 (0.7878 – 0.7881)		20.040 (0.7890)
Conrod big end side clearance	0.10 – 0.20 (0.004 – 0.008)		0.30 (0.01)
Conrod big end width	20.95 – 21.00 (0.825 – 0.827)		————
Crank pin width	21.10 – 21.15 (0.831 – 0.833)		————
Conrod big end oil clearance	0.032 – 0.056 (0.0013 – 0.0022)		0.080 (0.0031)
Crank pin O.D.	37.976 – 38.000 (1.4951 – 1.4961)		————
Crankshaft journal oil clearance	0.020 – 0.044 (0.0008 – 0.0017)		0.080 (0.0031)
Crankshaft journal O.D.	35.976 – 36.000 (1.4164 – 1.4173)		————
Crankshaft thrust clearance	0.04 – 0.08 (0.0016 – 0.0031)		————
Crankshaft thrust bearing thickness	Left side	2.360 – 2.520 (0.0929 – 0.0992)	————
	Right side	2.420 – 2.440 (0.0953 – 0.0961)	————
Crankshaft runout	————		0.05 (0.002)

OIL PUMP

ITEM	STANDARD	LIMIT
Oil pump reduction ratio	1.703 (72/46 × 37/34)	——
Oil pressure (at 60°C,140°F)	Above 300 kPa (3.0 kgf/cm ² , 43 psi) Below 600 kPa (6.0 kgf/cm ² , 85 psi) at 3 000 r/min.	——

CLUTCH

Unit: mm (in)

ITEM	STANDARD	LIMIT
Clutch drive plate thickness	2.92 – 3.08 (0.115 – 0.121)	2.62 (0.103)
Clutch drive plate claw width	——	13.0 (0.51)
Clutch driven plate distortion	——	0.10 (0.004)
Clutch spring free height	——	3.1 (0.12)
Clutch master cylinder bore	14.000 – 14.043 (0.5511 – 0.5529)	——
Clutch master cylinder piston diam.	13.957 – 13.984 (0.5495 – 0.5506)	——
Clutch release cylinder bore	35.700 – 35.762 (1.4055 – 1.4079)	——
Clutch release cylinder piston diam.	35.650 – 35.675 (1.4035 – 1.4045)	——

TRANSMISSION + DRIVE CHAIN

Unit: mm (in) Except ratio

ITEM	STANDARD	LIMIT
Primary reduction ratio	1.565 (72/46)	——
Final reduction ratio	3.000 (45/15)	——
Gear ratios	1st (low)	2.384 (31/13)
	2nd	1.631 (31/19)
	3rd	1.250 (25/20)
	4th	1.045 (23/22)
	5th (top)	0.913 (21/23)
Gearshift-fork to gearshift-fork-groove clearance	No.1, No.2 & No.3 0.1 – 0.3 (0.004 – 0.012)	0.50 (0.020)
Gearshift fork groove width	No.1, No.2 & No.3 5.0 – 5.1 (0.197 – 0.201)	——
Gearshift fork thickness	No.1, No.2 & No.3 4.8 – 4.9 (0.189 – 0.193)	——
Drive chain	Type	RKGB50MFOZ1
	Links	110 links
	20-pitch length	——
Drive chain slack	20 – 30 (0.8 – 1.2)	——
Gearshift lever height	55 (2.2)	——

CARBURETOR

ITEM	SPECIFICATION	
	E-02, 19, 24, 54	E-03, 28
Carburetor type	MIKUNI BSR36SS	←
Bore size	36 mm	←
I.D. No.	32F0	32F1
Idle r/min.	1 200 ± 100 r/min.	←
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)	←
Main jet (M.J.)	#100	# 100
Jet needle (J.N.)	5C70-3rd	5C71-1st
Needle jet (N.J.)	P-0M	P-0M
Throttle valve (Th. V.)	#100	←
Pilot jet (P.J.)	#15	# 15
Pilot screw (P.S.)	PRE-SET (3 turns back)	←
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)	←
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)	←

CARBURETOR

ITEM	SPECIFICATION	
	E-33	
Carburetor type	MIKUNI BSR36SS	
Bore size	36 mm	
I.D. No.	32F2	
Idle r/min.	1 200 ± 100 r/min.	
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)	
Main jet (M.J.)	# 100	
Jet needle (J.N.)	5C71-1st	
Needle jet (N.J.)	P-0M	
Throttle valve (Th. V.)	# 100	
Pilot jet (P.J.)	# 15	
Pilot screw (P.S.)	PRE-SET (3 turns back)	
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)	
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)	

ELECTRICAL

Unit: mm (in)

ITEM		SPECIFICATION		NOTE
Ignition timing		7° B.T.D.C. at 1 500 r/min.		
Firing order		1•2•4•3		
Spark plug		Type	NGK: JR9B	
		Gap	0.6 – 0.7 (0.024 – 0.028)	
Spark performance		Over 8 (0.3) at 1 atm.		
Pickup coil resistance		Approx. 130 – 200 Ω		Tester range: (× 100 Ω)
Signal generator peak voltage		More than 1.0 V		
Ignition coil resistance		Primary	⊕ tap – ⊖ tap Approx. 2 – 4 Ω	Tester range: (× 1 Ω)
		Secondary	Spark plug cap – Spark plug cap Approx. 30 – 40 kΩ	Tester range: (× 1 kΩ)
Ignition coil primary peak voltage		More than 140 V		
Generator		Slip ring O.D.	Limit: 14.0 (0.55)	DENSO
		Brush length	Limit: 4.5 (0.18)	
Generator maximum output		More than 550 W at 5 000 r/min.		
Regulated voltage		13.5 – 15 V at 5 000 r/min.		
Starter relay resistance		3 – 5 Ω		
Battery	Type designation	YTX12-BS		
	Capacity	12V 36.0 kC (10 Ah)/10HR		
	Standard electrolyte S.G.	1.320 at 20°C (68°F)		
Fuse size	Headlight	HI	15 A	
		LO	15 A	
	Turn signal	15 A		
	Ignition	10 A		
	Meter	10 A		
	Main	30 A		

WATTAGE

Unit: W

ITEM		SPECIFICATION	
		E-03, 24, 28, 33	The other countries
Headlight	HI	60 + 51	←
	LO	51	←
Parking or position light			5
Brake light/Taillight		21/5 × 2	←
Turn signal light		21 × 4	←
Speedometer light		LED	←
Tachometer light		LED	←
Turn signal indicator light		LED × 2	←
High beam indicator light		LED	←
Neutral position indicator light		LED	←
Oil pressure indicator light		LED	←
License plate light		5	←

BRAKE + WHEEL

Unit: mm (in)

ITEM	STANDARD		LIMIT
Rear brake pedal height	55 (2.2)		—
Brake disc thickness	Front	4.5 ± 0.2 (0.177 ± 0.008)	4.0 (0.16)
	Rear	5.0 ± 0.2 (0.197 ± 0.008)	4.5 (0.18)
Brake disc runout	—		0.30 (0.012)
Master cylinder bore	Front	15.870 – 15.913 (0.6248 – 0.6264)	—
	Rear	12.700 – 12.743 (0.5000 – 0.5017)	—
Master cylinder piston diameter	Front	15.827 – 15.854 (0.6231 – 0.6242)	—
	Rear	12.657 – 12.684 (0.4983 – 0.4994)	—
Brake caliper cylinder bore	Front	Leading	24.000 – 24.076 (0.9449 – 0.9479)
		Trailing	27.000 – 27.076 (1.0630 – 1.0660)
	Rear	38.180 – 38.256 (1.5031 – 1.5061)	
Brake caliper piston diameter	Front	Leading	23.925 – 23.975 (0.9419 – 0.9439)
		Trailing	26.920 – 26.970 (1.0598 – 1.0618)
	Rear	38.098 – 38.148 (1.4999 – 1.5019)	

ITEM	STANDARD		LIMIT
Wheel rim runout	Axial	_____	2.0 (0.08)
	Radial	_____	2.0 (0.08)
Wheel axle runout	Front	_____	0.25 (0.010)
	Rear	_____	0.25 (0.010)
Wheel rim size	Front	17 × MT3.50	_____
	Rear	17 × MT5.50	_____

SUSPENSION

Unit: mm (in)

ITEM	STANDARD	LIMIT	NOTE
Front fork stroke	130 (5.1)	_____	
Front fork spring free length	_____	366 (14.4)	E-03, 28, 33
	_____	370 (14.6)	The other countries
Front fork oil level	107 (4.2)	_____	E-03, 28, 33
	105 (4.1)	_____	The other countries
Rear wheel travel	125 (4.9)	_____	
Swingarm pivot shaft runout	_____	0.3 (0.01)	

TIRE

ITEM	STANDARD		LIMIT
Cold inflation tire pressure (Solo/Dual riding)	Front	250 kPa (2.50 kgf/cm ² , 36 psi)	_____
	Rear	250 kPa (2.50 kgf/cm ² , 36 psi)	_____
Tire size	Front	120/70 ZR17 (58W)	_____
	Rear	180/55 ZR17 (73W)	_____
Tire type	Front	MACADAM 90XM	_____
	Rear	MACADAM 90XM	_____
Tire tread depth (Recommended depth)	Front	_____	1.6 mm (0.06 in)
	Rear	_____	2.0 mm (0.08 in)

FUEL + OIL

ITEM	SPECIFICATION		NOTE
Fuel type	Use only unleaded gasoline of at least 87 pump octane or 91 octane ($\frac{R+M}{2}$) or higher rated by the Research Method. Gasoline containing MTBE (Methyl Tertiary Butyl Ether), less than 10% ethanol, or less than 5% methanol with appropriate cosolvents and corrosion inhibitor is permissible.		E-03, 28, 33
	Gasoline used should be graded 91 octane or higher. An unleaded gasoline is recommended.		The other countries
Fuel tank capacity	Including reserve	19 L (5.0/4.2 US/Imp gal)	E-33
		20 L (5.2/4.4 US/Imp gal)	The other countries
	Reserve only	4.4 L (1.2/1.0 US/Imp gal)	
Engine oil type	SAE 10W/40, API SF or SG		
Engine oil capacity	Change	3 300 ml (3.5/2.9 US/Imp qt)	
	Filter change	3 500 ml (3.7/3.1 US/Imp qt)	
	Overhaul	4 600 ml (4.9/4.0 US/Imp qt)	
Front fork oil type	Fork oil SS-08 or #10 or equivalent fork oil		
Front fork oil capacity (each leg)	507 ml (17.1/17.9 US/Imp oz)		E-03, 28, 33
	509 ml (17.2/17.9 US/Imp oz)		The other countries
Brake fluid type	DOT 4		

GSF1200K1 (2001-MODEL)

This chapter describes service data, service specifications and servicing procedures which differ from those of the GSF1200SK1 (2001-model).

NOTE:

- Any differences between the GSF1200SK1 (2001-model) and GSF1200K1 (2001-model) in specifications and service data are indicated with an asterisk mark (*).
- Please refer to the chapters 1 through 7 for details which are not given in this chapter.

CONTENTS

SPECIFICATIONS	8- 2
HEADLIGHT/HEADLIGHT HOUSING/COMBINATION METER	8- 4
WIRING DIAGRAM	8- 8
WIRE HARNESS ROUTING	8- 9
FRONT BRAKE HOSE ROUTING	8-11
SERVICE DATA	8-12

COUNTRY AND AREA CODES

The following codes stand for the applicable country(-ies) and area(-s).

CODE	COUNTRY or AREA
E-02	U.K.
E-19	European markets

SPECIFICATIONS

DIMENSIONS AND DRY MASS

Overall length	* 2 140 mm (84.3 in)
Overall width	765 mm (30.1 in)
Overall height	* 1 100 mm (43.3 in)
Wheelbase	1 430 mm (56.3 in)
Ground clearance	130 mm (5.1 in)
Seat height	790 mm (31.1 in)
Dry mass	* 214 kg (471 lbs)

ENGINE

Type	Four-stroke, air-cooled, with SACS, DOHC, TSCC
Number of cylinders	4
Bore	79.0 mm (3.110 in)
Stroke	59.0 mm (2.323 in)
Compression ratio	9.5 : 1
Piston displacement	1 157 cm ³ (70.6 cu.in)
Carburetor	MIKUNI BSR36SS, four
Air cleaner	Non-woven fabric element
Starter system	Electric starter
Lubrication system	Wet sump

TRANSMISSION

Clutch	Wet multi-plate type
Transmission	5-speed constant mesh
Gearshift pattern	1-down, 4-up
Primary reduction ratio	1.565 (72/46)
Final reduction ratio	3.000 (45/15)
Gear ratios, Low	2.384 (31/13)
2nd	1.631 (31/19)
3rd	1.250 (25/20)
4th	1.045 (23/22)
Top	0.913 (21/23)
Drive chain	RKGB50MFOZ1, 110 links

CHASSIS

Front suspension	Telescopic, coil spring, oil damped, spring pre-load fully adjustable
Rear suspension	Link type, oil damped, coil spring, spring pre-load 7-way adjustable, rebound damping force 4-way adjustable
Steering angle	35° (right & left)
Caster	25° 20'
Trail	104 mm (4.10 in)
Turning radius	2.8 m (9.2 ft)
Front brake	Disc brake, twin
Rear brake	Disc brake
Front tire size	120/70 ZR17 (58W), tubeless
Rear tire size	180/55 ZR17 (73W), tubeless
Front fork stroke	130 mm (5.1 in)
Rear wheel travel	125 mm (4.9 in)

ELECTRICAL

Ignition type	Electronic ignition (Fully Transistorized)
Ignition timing	7° B.T.D.C. at 1 500 r/min
Spark plug	NGK JR9B
Battery	12 V 36.0 kC (10 Ah)/10HR
Generator	Three-phase A.C. Generator
Main fuse	30 A
Fuse	15/15/15/10/10 A
Headlight	* 12 V 60/55 W (H4)
Position light	12 V 5 W
Turn signal light	12 V 21 W × 4
Brake light/Taillight	12 V 21/5 W × 2
License light	12 V 5 W
Speedometer light	LED
Tachometer light	LED
Neutral indicator light	LED
High beam indicator light	LED
Turn signal indicator light	LED
Oil pressure indicator light	LED

CAPACITIES





Fuel tank, including reserve	20.0 L (5.3/4.4 US/Imp gal)
reserve	4.4 L (1.2/1.0 US/Imp gal)
Engine oil, oil change	3 300 ml (3.5/2.9 US/Imp qt)
oil and filter change	3 500 ml (3.7/3.1 US/Imp qt)
engine overhaul	4 600 ml (4.9/4.0 US/Imp qt)
Front fork oil (each leg)	* 507 ml (17.1/17.9 US/Imp oz)

These specifications are subject to change without notice.


HEADLIGHT/HEADLIGHT HOUSING/ COMBINATION METER

REMOVAL

- Remove the headlight by removing the two screws.
- Disconnect the socket ① and coupler ②.
- Remove the two clamps from the lead wires and disconnect all the lead wire couplers.
- Remove the headlight housing ③ by removing the headlight housing bolts.

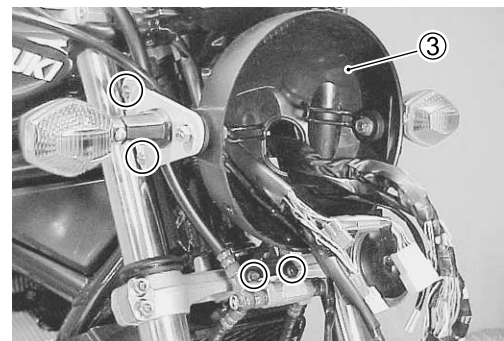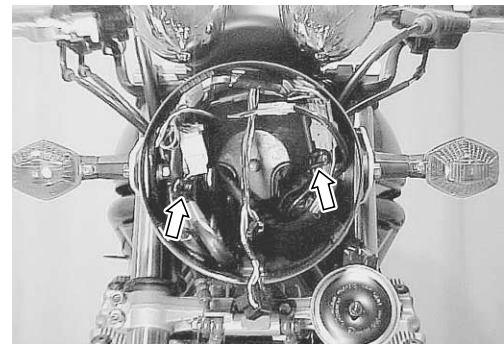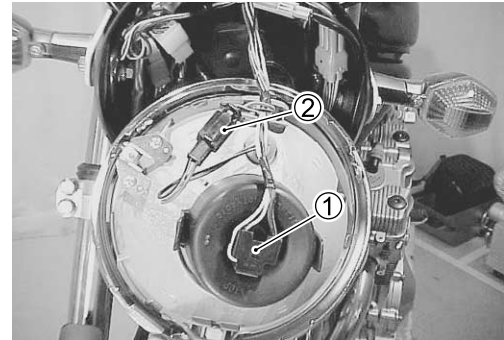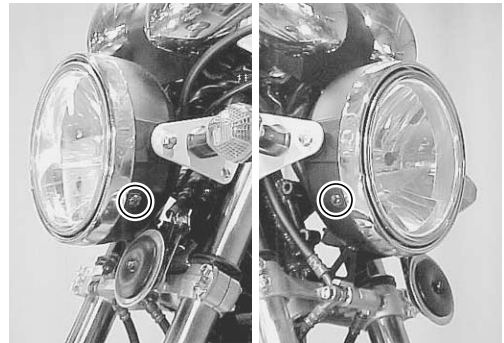

- Remove the combination meter ④ by removing the two bolts.

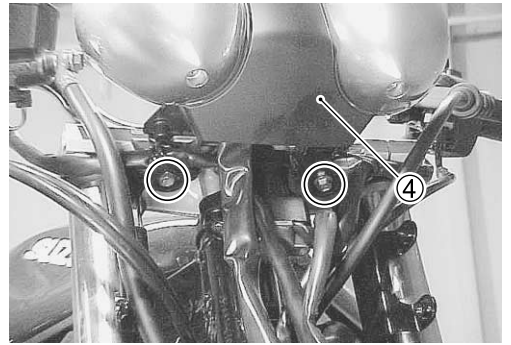


- Remove the headlight housing brackets ⑤ by removing the front forks. (➡ 5-13)
- Reassemble and remount the combination meter/headlight housing/headlight in the reverse order of removal and disassembly.



COMBINATION METER DISASSEMBLY

- Disassemble the combination meter as follows.

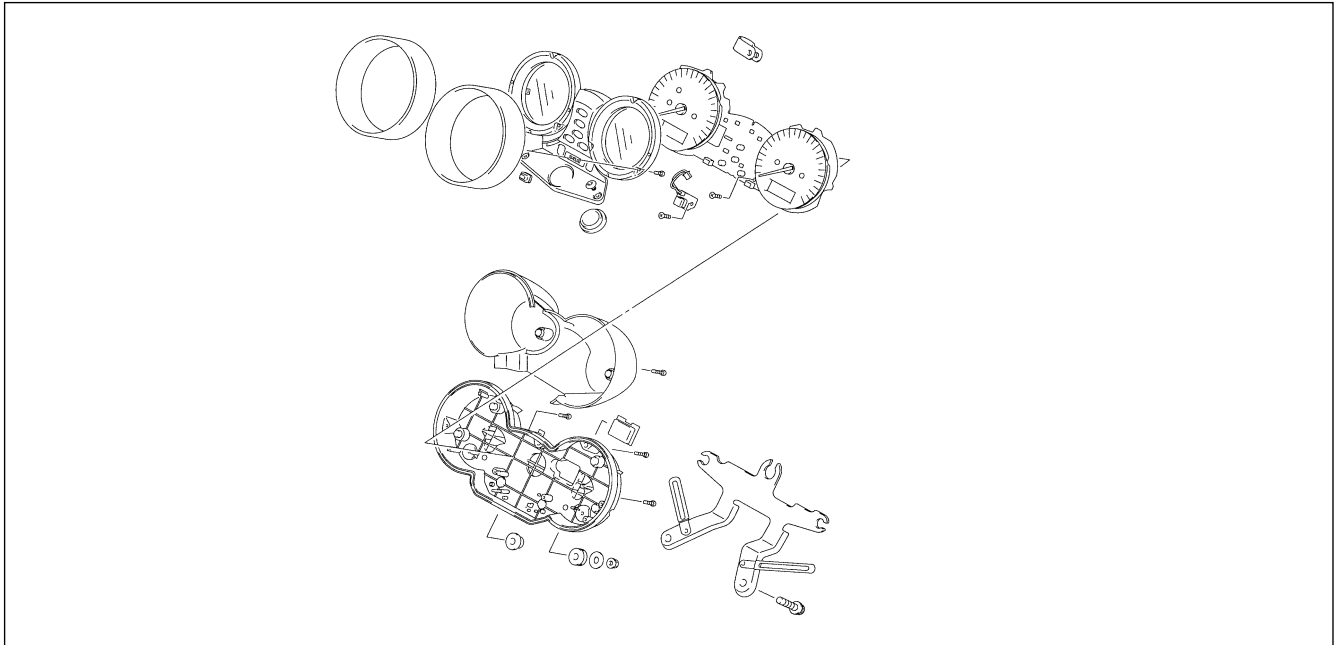

COMBINATION METER INSPECTION


Measure the continuity between the lead wires. (➡ 6-34)

If there is no continuity, replace the combination meter assy.

NOTE:

When performing this test, it is not necessary to remove the combination meter.

HEADLIGHT/HEADLIGHT HOUSING DISASSEMBLY

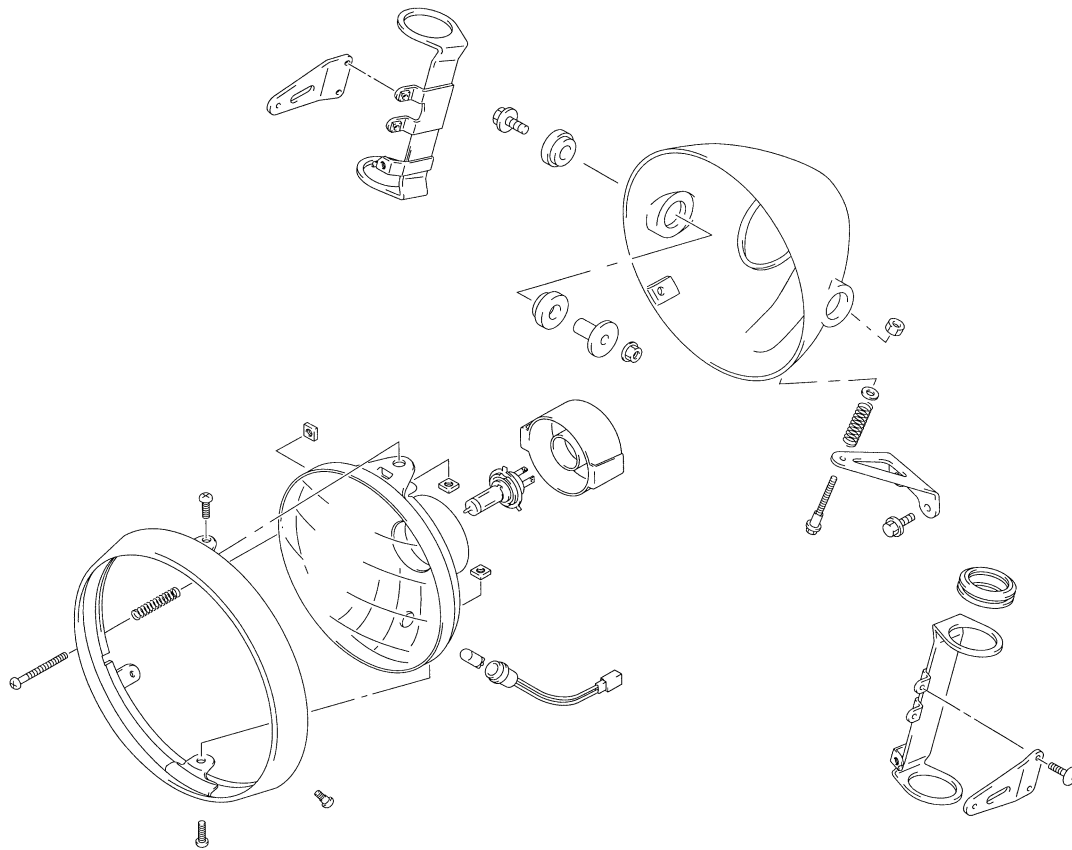

Headlight bulb: 12 V 60/55 W

Position light bulb: 12 V 5 W


NOTE:

Adjust the headlight (vertically and horizontally) after reassembling


BULB REPLACEMENT

- Remove the headlight by removing the two screws. (☞ 8-4)
- Disconnect the socket and coupler. (☞ 8-4)

- Remove the rubber cap ①.
- Pull out the position light ②.

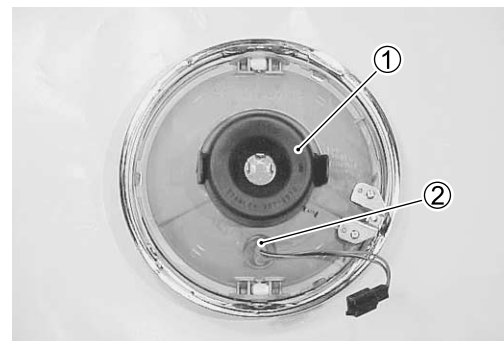

- Unlock the bulb holder spring ③ and pull out the bulb ④.
- Reassemble the headlight in the reverse order of disassembly.

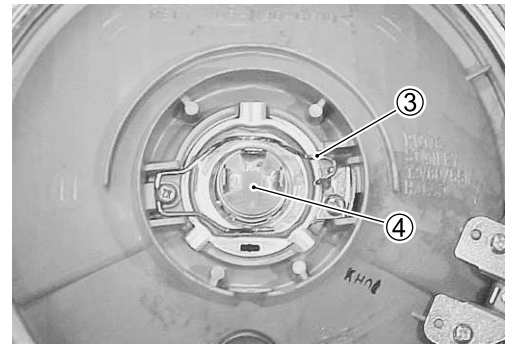

HEADLIGHT BEAM ADJUSTMENT


To adjust the beam horizontally:

Turn the adjuster ① clockwise or counterclockwise.





To adjust the beam vertically:

Turn the adjuster ② clockwise or counterclockwise.

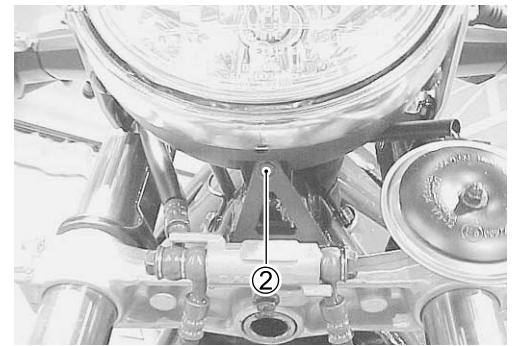


WIRING DIAGRAM

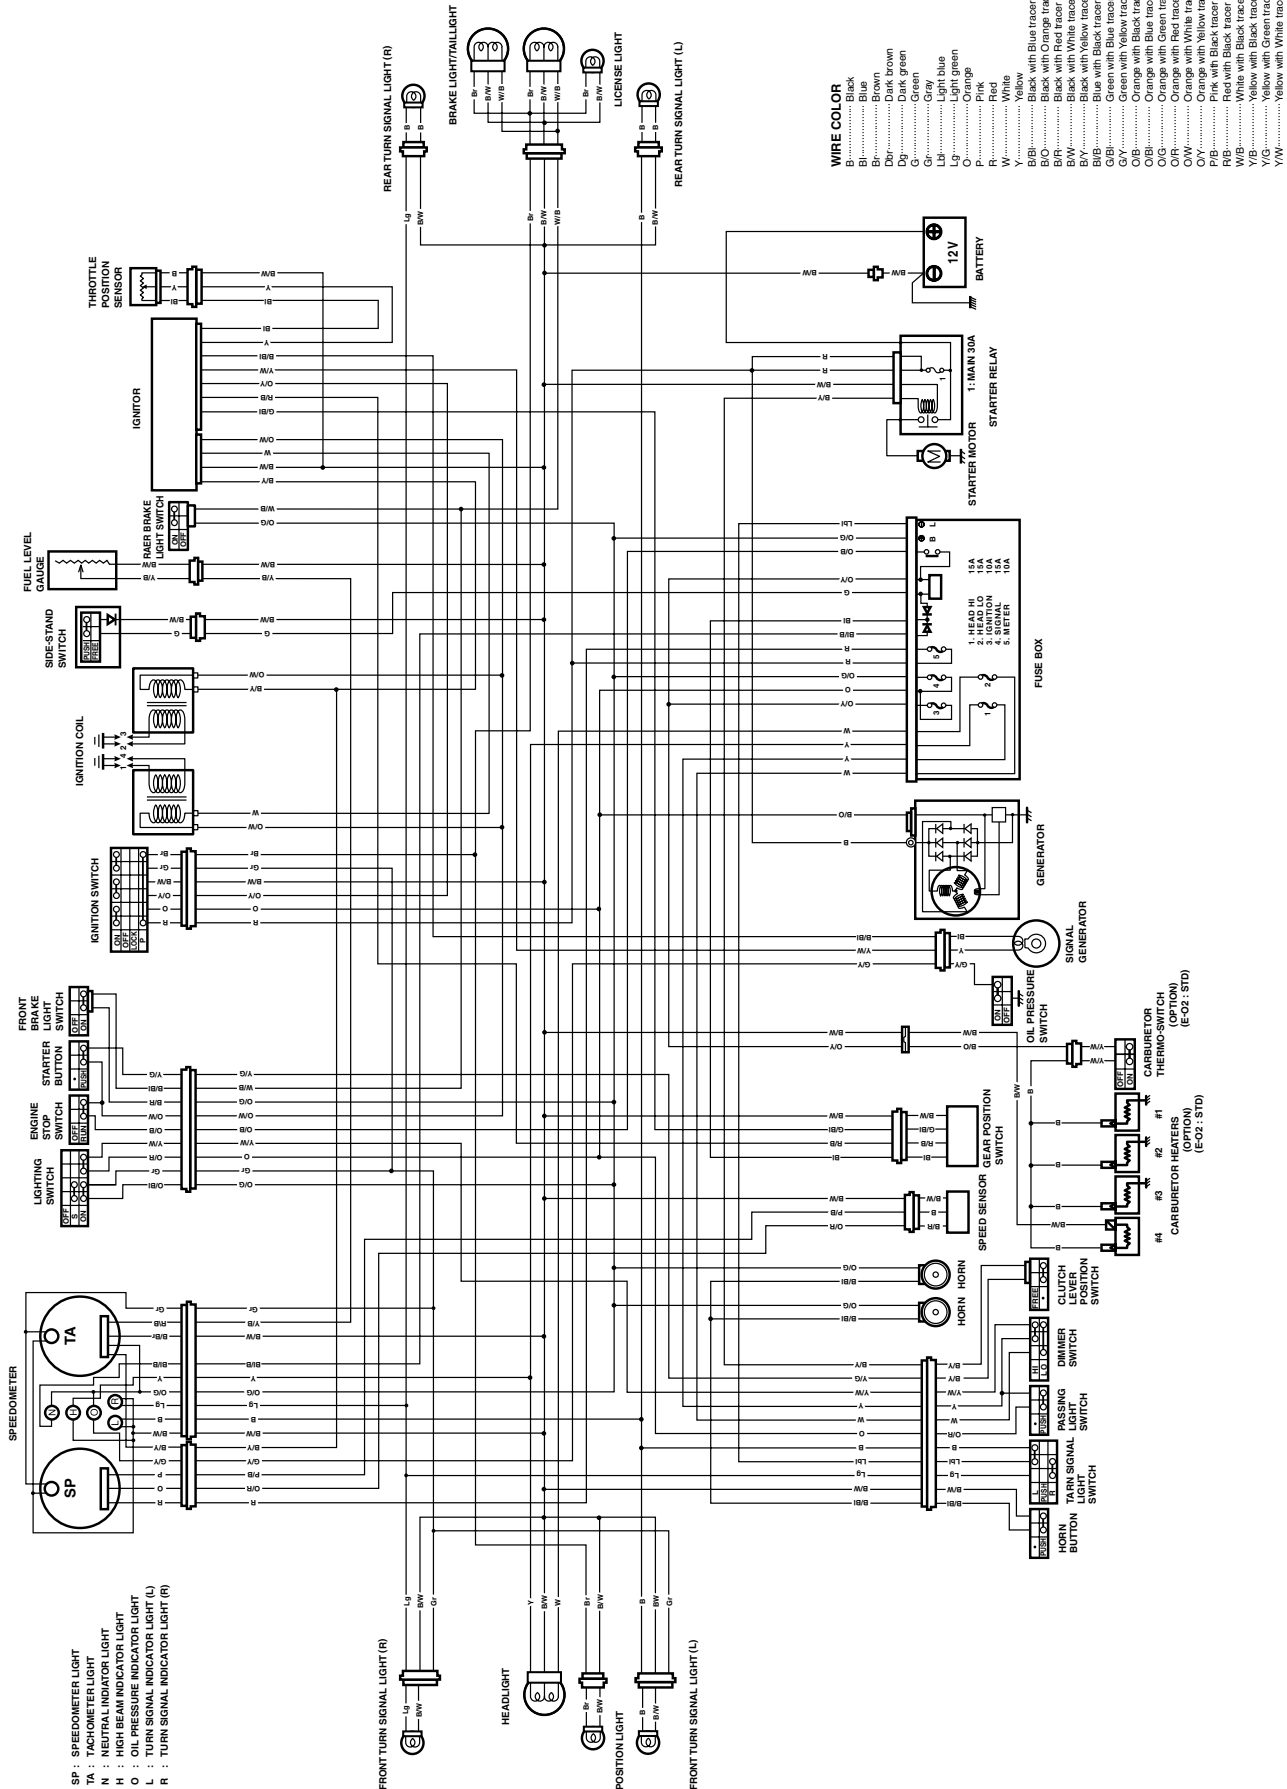

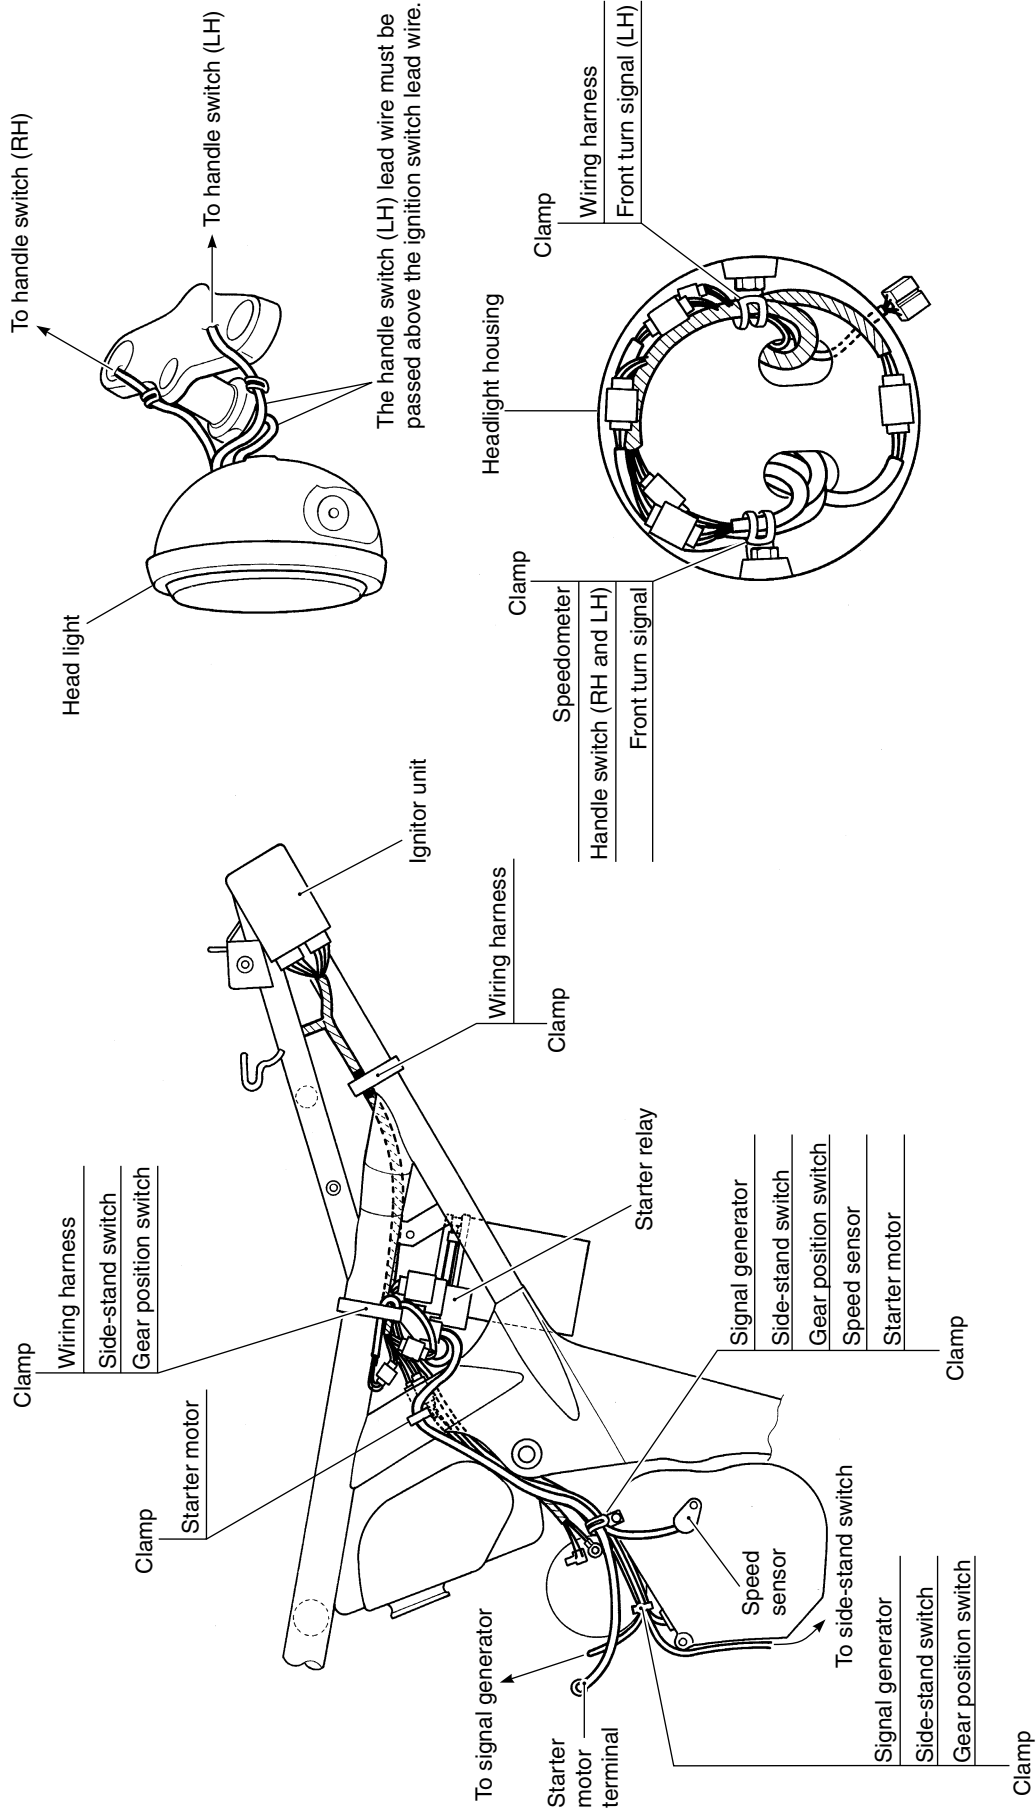

FRONT BRAKE HOSE ROUTING

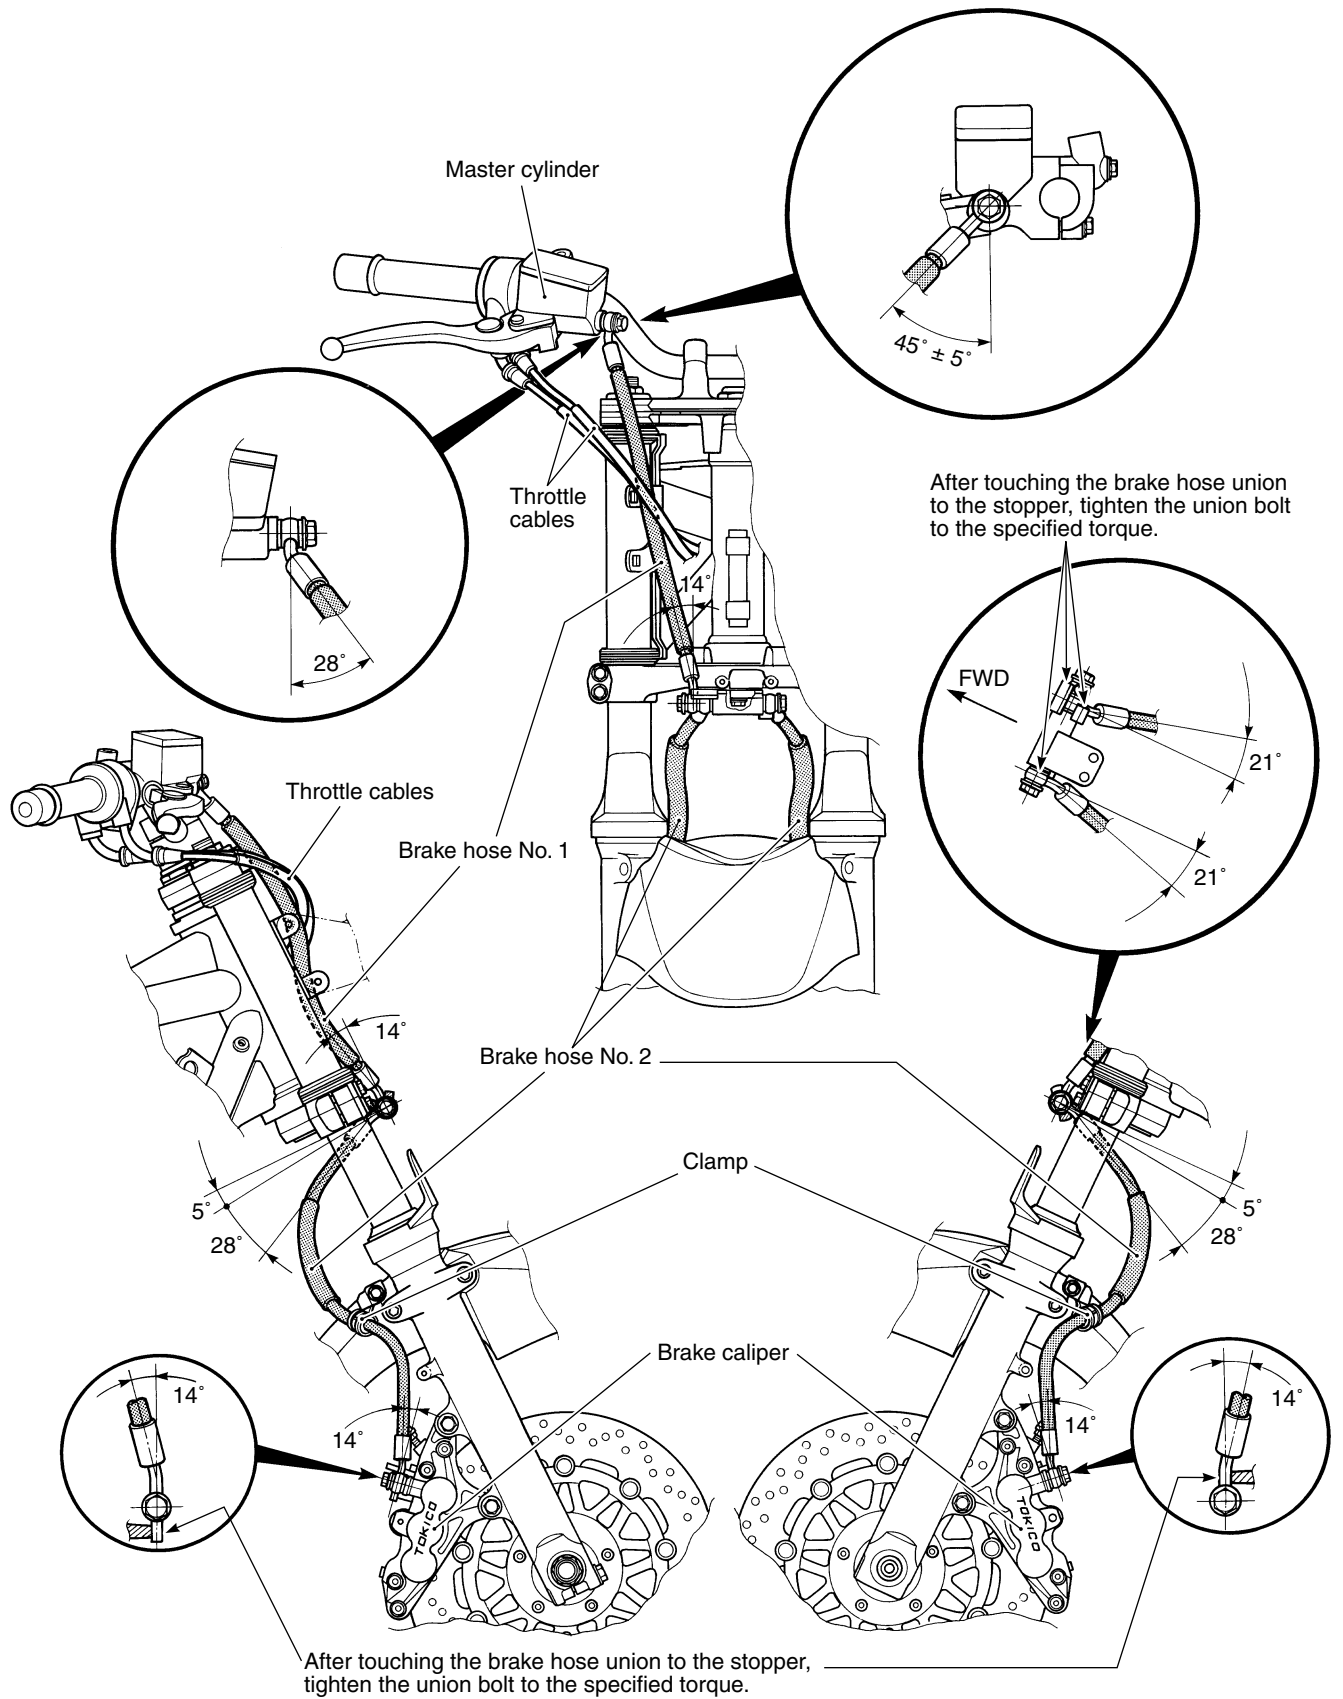

SERVICE DATA**VALVE + GUIDE**

Unit: mm (in)

ITEM	STANDARD		LIMIT
Valve diameter	IN.	28.5 (1.12)	——
	EX.	25 (1.0)	——
Valve clearance (when cold)	IN.	0.10 – 0.15 (0.004 – 0.006)	——
	EX.	0.18 – 0.23 (0.007 – 0.009)	——
Valve-guide to valve-stem clearance	IN.	0.020 – 0.047 (0.0008 – 0.0019)	——
	EX.	0.030 – 0.057 (0.0012 – 0.0022)	——
Valve stem deflection	IN. & EX.	——	0.35 (0.014)
Valve guide I.D.	IN. & EX.	5.000 – 5.012 (0.1969 – 0.1973)	——
Valve stem O.D.	IN.	4.965 – 4.980 (0.1955 – 0.1961)	——
	EX.	4.945 – 4.960 (0.1947 – 0.1953)	——
Valve stem runout	IN. & EX.	——	0.05 (0.002)
Valve face thickness	IN. & EX.	——	0.5 (0.02)
Valve stem end length	IN. & EX.	——	2.5 (0.10)
Valve seat width	IN. & EX.	0.9 – 1.1 (0.035 – 0.043)	——
Valve head radial runout	IN. & EX.	——	0.03 (0.001)
Valve spring free length (IN. & EX.)	INNER	——	35.0 (1.38)
	OUTER	——	37.8 (1.49)
Valve spring tension (IN. & EX.)	INNER	53 – 65 N, 5.3 – 6.5 kgf (11.7 – 14.3 lbs) at length 28 mm (1.10 in)	——
	OUTER	131 – 151 N, 13.1 – 15.1 kgf (28.9 – 33.3 lbs) at length 31.5 mm (1.24 in)	——

CAMSHAFT + CYLINDER HEAD

Unit: mm (in)

ITEM	STANDARD		LIMIT
Cam height	IN.	33.58 – 33.62 (1.3220 – 1.3236)	33.28 (1.3102)
	EX.	32.65 – 32.69 (1.2854 – 1.2870)	32.35 (1.2736)
Camshaft journal oil clearance	IN. & EX.	0.032 – 0.066 (0.0013 – 0.0026)	0.150 (0.0059)
Camshaft journal holder I.D.	IN. & EX.	22.012 – 22.025 (0.8666 – 0.8671)	—
Camshaft journal O.D.	IN. & EX.	21.959 – 21.980 (0.8645 – 0.8654)	—
Camshaft runout	IN. & EX.	—	0.10 (0.004)
Cam chain pin (at arrow "3")	24th pin		—
Rocker arm I.D.	IN. & EX.	12.000 – 12.018 (0.4724 – 0.4731)	—
Rocker arm shaft O.D.	IN. & EX.	11.973 – 11.984 (0.4714 – 0.4718)	—
Cylinder head distortion	—		0.20 (0.008)

CYLINDER + PISTON + PISTON RING

Unit: mm (in)

ITEM	STANDARD		LIMIT	
Compression pressure	1 250 kPa (12.5 kgf/cm ²) 178 psi		875 kPa (8.75 kgf/cm ²) 124 psi	
Compression pressure difference	—		200 kPa (2 kgf/cm ²) 28 psi	
Piston-to-cylinder clearance	0.040 – 0.070 (0.0016 – 0.0028)		0.120 (0.0047)	
Cylinder bore	79.000 – 79.015 (3.1102 – 3.1108)		79.080 (3.1134)	
Piston diameter	78.945 – 78.960 (3.1081 – 3.1087) Measure 15 (0.6) from the skirt end.		78.880 (3.1055)	
Cylinder distortion	—		0.20 (0.008)	
Piston ring free end gap	1st	R	Approx. 10 (0.39)	8.0 (0.31)
	2nd	RN	Approx. 12 (0.47)	9.6 (0.38)
Piston ring end gap	1st		0.20 – 0.35 (0.008 – 0.014)	0.5 (0.02)
	2nd		0.35 – 0.50 (0.014 – 0.020)	1.0 (0.04)

ITEM	STANDARD		LIMIT
Piston-ring to piston-ring-groove clearance	1st	————	0.180 (0.007)
	2nd	————	0.150 (0.006)
Piston ring groove width	1st	1.01 – 1.03 (0.040 – 0.041)	————
	2nd	1.01 – 1.03 (0.040 – 0.041)	————
	Oil	2.01 – 2.03 (0.079 – 0.080)	————
Piston ring thickness	1st	0.975 – 0.990 (0.0384 – 0.0390)	————
	2nd	0.970 – 0.990 (0.038 – 0.039)	————
Piston pin bore	20.002 – 20.008 (0.7875 – 0.7877)		20.030 (0.7886)
Piston pin O.D.	19.996 – 20.000 (0.7872 – 0.7874)		19.980 (0.7866)

CONROD + CRANKSHAFT

Unit: mm (in)

ITEM	STANDARD		LIMIT
Conrod small end I.D.	20.010 – 20.018 (0.7878 – 0.7881)		20.040 (0.7890)
Conrod big end side clearance	0.10 – 0.20 (0.004 – 0.008)		0.30 (0.01)
Conrod big end width	20.95 – 21.00 (0.825 – 0.827)		————
Crank pin width	21.10 – 21.15 (0.831 – 0.833)		————
Conrod big end oil clearance	0.032 – 0.056 (0.0013 – 0.0022)		0.080 (0.0031)
Crank pin O.D.	37.976 – 38.000 (1.4951 – 1.4961)		————
Crankshaft journal oil clearance	0.020 – 0.044 (0.0008 – 0.0017)		0.080 (0.0031)
Crankshaft journal O.D.	35.976 – 36.000 (1.4164 – 1.4173)		————
Crankshaft thrust clearance	0.04 – 0.08 (0.0016 – 0.0031)		————
Crankshaft thrust bearing thickness	Left side	2.360 – 2.520 (0.0929 – 0.0992)	————
	Right side	2.420 – 2.440 (0.0953 – 0.0961)	————
Crankshaft runout	————		0.05 (0.002)

OIL PUMP

ITEM	STANDARD	LIMIT
Oil pump reduction ratio	1.703 (72/46 × 37/34)	——
Oil pressure (at 60°C, 140°F)	Above 300 kPa (3.0 kgf/cm ² , 43 psi) Below 600 kPa (6.0 kgf/cm ² , 85 psi) at 3 000 r/min.	——

CLUTCH

Unit: mm (in)

ITEM	STANDARD	LIMIT
Clutch drive plate thickness	2.92 – 3.08 (0.115 – 0.121)	2.62 (0.103)
Clutch drive plate claw width	——	13.0 (0.51)
Clutch driven plate distortion	——	0.10 (0.004)
Clutch spring free height	——	3.1 (0.12)
Clutch master cylinder bore	14.000 – 14.043 (0.5511 – 0.5529)	——
Clutch master cylinder piston diam.	13.957 – 13.984 (0.5495 – 0.5506)	——
Clutch release cylinder bore	35.700 – 35.762 (1.4055 – 1.4079)	——
Clutch release cylinder piston diam.	35.650 – 35.675 (1.4035 – 1.4045)	——

TRANSMISSION + DRIVE CHAIN

Unit: mm (in) Except ratio

ITEM	STANDARD	LIMIT
Primary reduction ratio	1.565 (72/46)	——
Final reduction ratio	3.000 (45/15)	——
Gear ratios	1st (low)	2.384 (31/13)
	2nd	1.631 (31/19)
	3rd	1.250 (25/20)
	4th	1.045 (23/22)
	5th (top)	0.913 (21/23)
Gearshift-fork to gearshift-fork-groove clearance	No.1, No.2 & No.3 0.1 – 0.3 (0.004 – 0.012)	0.50 (0.020)
Gearshift fork groove width	No.1, No.2 & No.3 5.0 – 5.1 (0.197 – 0.201)	——
Gearshift fork thickness	No.1, No.2 & No.3 4.8 – 4.9 (0.189 – 0.193)	——
Drive chain	Type	RKGB50MFOZ1
	Links	110 links
	20-pitch length	——
Drive chain slack	20 – 30 (0.8 – 1.2)	——
Gearshift lever height	55 (2.2)	——

CARBURETOR

ITEM	SPECIFICATION
	E-02, 19
Carburetor type	MIKUNI BSR36SS
Bore size	36 mm
I.D. No.	32F0
Idle r/min.	1 200 ± 100 r/min.
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)
Main jet (M.J.)	#100
Jet needle (J.N.)	5C70-3rd
Needle jet (N.J.)	P-0M
Throttle valve (Th. V.)	#100
Pilot jet (P.J.)	#15
Pilot screw (P.S.)	PRE-SET (3 turns back)
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)

ELECTRICAL

Unit: mm (in)

ITEM		SPECIFICATION		NOTE	
Ignition timing		7° B.T.D.C. at 1 500 r/min.			
Firing order		1•2•4•3			
Spark plug	Type	NGK: JR9B			
	Gap	0.6 – 0.7 (0.024 – 0.028)			
Spark performance		Over 8 (0.3) at 1 atm.			
Pickup coil resistance		Approx. 130 – 200 Ω		Tester range: (× 100 Ω)	
Signal generator peak voltage		More than 1.0 V			
Ignition coil resistance	Primary	⊕ tap – ⊖ tap Approx. 2 – 4 Ω		Tester range: (× 1 Ω)	
	Secondary	Spark plug cap – Spark plug cap Approx. 30 – 40 kΩ		Tester range: (× 1 kΩ)	
Ignition coil primary peak voltage		More than 140 V			
Generator	Slip ring O.D.	Limit: 14.0 (0.55)		DENSO	
	Brush length	Limit: 4.5 (0.18)			
Generator maximum output		More than 550 W at 5 000 r/min.			
Regulated voltage		13.5 – 15 V at 5 000 r/min.			
Starter relay resistance		3 – 5 Ω			
Battery	Type designation	YTX12-BS			
	Capacity	12V 36.0 kC (10 Ah)/10HR			
	Standard electrolyte S.G.	1.320 at 20°C (68°F)			
Fuse size	Headlight	HI	15 A		
		LO	15 A		
	Turn signal		15 A		
	Ignition		10 A		
	Meter		10 A		
	Main		30 A		

WATTAGE

Unit: W

ITEM		SPECIFICATION
Headlight	HI	*60
	LO	*55
Parking or position light		5
Brake light/Taillight		21/5 × 2
Turn signal light		21 × 4
Speedometer light		LED
Tachometer light		LED
Turn signal indicator light		LED × 2
High beam indicator light		LED
Neutral position indicator light		LED
Oil pressure indicator light		LED
License plate light		5

BRAKE + WHEEL

Unit: mm (in)

ITEM	STANDARD		LIMIT
Rear brake pedal height	55 (2.2)		—
Brake disc thickness	Front	4.5 ± 0.2 (0.177 ± 0.008)	4.0 (0.16)
	Rear	5.0 ± 0.2 (0.197 ± 0.008)	4.5 (0.18)
Brake disc runout	—		0.30 (0.012)
Master cylinder bore	Front	15.870 – 15.913 (0.6248 – 0.6264)	—
	Rear	12.700 – 12.743 (0.5000 – 0.5017)	—
Master cylinder piston diameter	Front	15.827 – 15.854 (0.6231 – 0.6242)	—
	Rear	12.657 – 12.684 (0.4983 – 0.4994)	—
Brake caliper cylinder bore	Front	Leading	24.000 – 24.076 (0.9449 – 0.9479)
		Trailing	27.000 – 27.076 (1.0630 – 1.0660)
	Rear	38.180 – 38.256 (1.5031 – 1.5061)	
Brake caliper piston diameter	Front	Leading	23.925 – 23.975 (0.9419 – 0.9439)
		Trailing	26.920 – 26.970 (1.0598 – 1.0618)
	Rear	38.098 – 38.148 (1.4999 – 1.5019)	

ITEM	STANDARD		LIMIT
Wheel rim runout	Axial	_____	2.0 (0.08)
	Radial	_____	2.0 (0.08)
Wheel axle runout	Front	_____	0.25 (0.010)
	Rear	_____	0.25 (0.010)
Wheel rim size	Front	17 × MT3.50	_____
	Rear	17 × MT5.50	_____

SUSPENSION

Unit: mm (in)

ITEM	STANDARD	LIMIT	NOTE
Front fork stroke	130 (5.1)	_____	
Front fork spring free length	_____	*366 (14.4)	
Front fork oil level	*107 (4.2)	_____	
Rear wheel travel	125 (4.9)	_____	
Swingarm pivot shaft runout	_____	0.3 (0.01)	

TIRE


ITEM	STANDARD		LIMIT
Cold inflation tire pressure (Solo/Dual riding)	Front	250 kPa (2.50 kgf/cm ² , 36 psi)	_____
	Rear	250 kPa (2.50 kgf/cm ² , 36 psi)	_____
Tire size	Front	120/70 ZR17 (58W)	_____
	Rear	180/55 ZR17 (73W)	_____
Tire type	Front	MACADAM 90XM	_____
	Rear	MACADAM 90XM	_____
Tire tread depth (Recommended depth)	Front	_____	1.6 mm (0.06 in)
	Rear	_____	2.0 mm (0.08 in)

FUEL + OIL

ITEM	SPECIFICATION		NOTE
Fuel type	Gasoline used should be graded 91 octane or higher. An unleaded gasoline is recommended.		
Fuel tank capacity	Including reserve	20 L (5.3/4.4 US/Imp gal)	
	Reserve only	4.4 L (1.2/1.0 US/Imp gal)	
Engine oil type	SAE 10W/40, API SF or SG		
Engine oil capacity	Change	3 300 ml (3.5/2.9 US/Imp qt)	
	Filter change	3 500 ml (3.7/3.1 US/Imp qt)	
	Overhaul	4 600 ml (4.9/4.0 US/Imp qt)	
Front fork oil type	Fork oil SS-08 or #10 or equivalent fork oil		
Front fork oil capacity (each leg)	*507 ml (17.1/17.9 US/Imp oz)		
Brake fluid type	DOT 4		

FRONT FORK SETTING HEIGHT

Ⓜ: 2.0 mm (0.08 in)

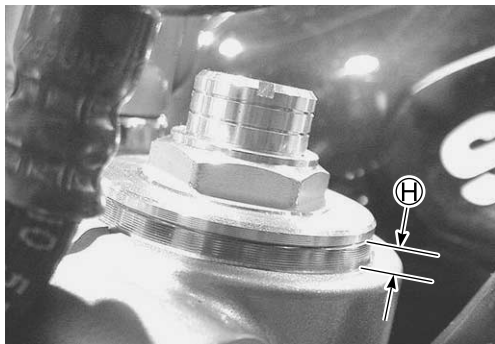

GSF1200K2/SK2 ('02-MODEL)

This chapter describes service data, service specifications and servicing procedures which differ from those of the GSF1200K1/SK1 ('01-model).

CONTENTS

SPECIFICATIONS	9- 2
SERVICE DATA (GSF1200S)	9- 4
SERVICE DATA (GSF1200)	9-13
WIRING DIAGRAM (GSF1200S)	9-22
WIRING DIAGRAM (GSF1200)	9-25
WIRE HARNESS ROUTING (GSF1200S)	9-27
WIRE HARNESS ROUTING (GSF1200)	9-28

NOTE:

The specification and service data are the same as the K1-MODEL.

SPECIFICATIONS

GSF1200/GSF1200S

DIMENSIONS AND DRY MASS

Overall length	2 070 mm (81.5 in)	GSF1200S
	2 140 mm (84.3 in)	GSF1200
Overall width	765 mm (30.1 in)	
Overall height	1 220 mm (48.0 in)	GSF1200S
	1 100 mm (43.3 in)	GSF1200
Wheelbase	1 430 mm (56.3 in)	
Ground clearance	130 mm (5.1 in)	
Seat height	790 mm (31.1 in)	
Dry mass	220 kg (485 lbs)	GSF1200S
	214 kg (471 lbs)	GSF1200

ENGINE

Type	4-stroke, air-cooled, DOHC	
Number of cylinders	4	
Bore	79.0 mm (3.110 in)	
Stroke	59.0 mm (2.323 in)	
Displacement	1 157 cm ³ (70.6 cu.in)	
Compression ratio	9.5 : 1	
Carburetor	MIKUNI BSR36SS, four	
Air cleaner	Non-woven fabric element	
Starter system	Electric	
Lubrication system	Wet sump	
Idle speed	1300 ± 100 r/min	E-03,28,33
	1200 ± 100 r/min	Others

TRANSMISSION

Clutch	Wet multi-plate type
Transmission	5-speed constant mesh
Gearshift pattern	1-down, 4-up
Primary reduction ratio	1.565 (72/46)
Gear ratios, Low	2.384 (31/13)
2nd	1.631 (31/19)
3rd	1.250 (25/20)
4th	1.045 (23/22)
Top	0.913 (21/23)
Final reduction ratio	3.000 (45/15)
Drive chain	RK GB50MF OZ1, 110 links

CHASSIS

Front suspension	Telescopic, coil spring, oil damped
Rear suspension	Link type, coil spring, oil damped
Front fork stroke	130 mm (5.1 in)
Rear wheel travel	125 mm (4.9 in)
Steering angle	35° (right & left)
Caster	25° 20'
Trail	104 mm (4.10 in)
Turning radius	2.8 m (9.2 ft)
Front brake	Disc brake, twin
Rear brake	Disk brake
Front tire size	120/70 ZR17 (58W), tubeless
Rear tire size	180/55 ZR17 (73W), tubeless

ELECTRICAL

Ignition type	Electronic ignition (Transistorized)
Ignition timing	7° B.T.D.C. at 1 200 r/min
Spark plug	NGK JR9B
Battery	12 V 36 kC (10 Ah)/10 HR
Generator	Three-phase A.C. generator
Main fuse	30A
Fuse	15/15/10/15/10 A
Headlight	12 V 50 + 60/51 W GSF1200S 12V 60/51 W GSF1200
Position light	12 V 5 W Except E-03, 24,28,33
Turn signal light	12 V 21 W
Brake light/Taillight	12 V 21/5 W × 2
License plate light	12 V 5 W
Speedometer light	LED
Tachometer light	LED
Neutral indicator light	LED
High beam indicator light	LED
Turn signal indicator light	LED
Oil pressure indicator light	LED

CAPACITIES

Fuel tank, including reserve	19.0 L(5.0/4.2 US/Imp gal) E-33 20.0 L (5.3/4.4 US/Imp gal) Others
Reserve	4.4 L (1.2/1.0 US/Imp gal)
Engine oil, oil change	3 300 ml (3.4/2.9 US/Imp qt)
with filter change	3 500 ml (3.6/3.0 US/Imp qt)
Overhaul	4 600 ml (4.9/4.0 US/Imp qt)
Front fork oil (each leg)	509 ml (17.2/17.9 US/Imp oz) GSF1200S (E-02, 19, 24) 507 ml (17.1/17.9 US/Imp oz) Others

SERVICE DATA (GSF1200S)**VALVE + GUIDE**

Unit: mm (in)

ITEM	STANDARD		LIMIT
Valve diameter	IN.	28.5 (1.12)	—
	EX.	25 (1.0)	—
Valve clearance (when cold)	IN.	0.10 – 0.15 (0.004 – 0.006)	—
	EX.	0.18 – 0.23 (0.007 – 0.009)	—
Valve-guide to valve-stem clearance	IN.	0.020 – 0.047 (0.0008 – 0.0019)	—
	EX.	0.030 – 0.057 (0.0012 – 0.0022)	—
Valve stem deflection	IN. & EX.	—	0.35 (0.014)
Valve guide I.D.	IN. & EX.	5.000 – 5.012 (0.1969 – 0.1973)	—
Valve stem O.D.	IN.	4.965 – 4.980 (0.1955 – 0.1961)	—
	EX.	4.945 – 4.960 (0.1947 – 0.1953)	—
Valve stem runout	IN. & EX.	—	0.05 (0.002)
Valve face thickness	IN. & EX.	—	0.5 (0.02)
Valve stem end length	IN. & EX.	—	2.5 (0.10)
Valve seat width	IN. & EX.	0.9 – 1.1 (0.035 – 0.043)	—
Valve head radial runout	IN. & EX.	—	0.03 (0.001)
Valve spring free length (IN. & EX.)	INNER	—	35.0 (1.38)
	OUTER	—	37.8 (1.49)
Valve spring tension (IN. & EX.)	INNER	53 – 65 N, 5.3 – 6.5 kgf (11.7 – 14.3 lbs) at length 28 mm (1.10 in)	—
	OUTER	131 – 151 N, 13.1 – 15.1 kgf (28.9 – 33.3 lbs) at length 31.5 mm (1.24 in)	—

CAMSHAFT + CYLINDER HEAD

Unit: mm (in)

ITEM	STANDARD		LIMIT
Cam height	IN.	33.58 – 33.62 (1.3220 – 1.3236)	33.28 (1.3102)
	EX.	32.65 – 32.69 (1.2854 – 1.2870)	32.35 (1.2736)
Camshaft journal oil clearance	IN. & EX.	0.032 – 0.066 (0.0013 – 0.0026)	0.150 (0.0059)
Camshaft journal holder I.D.	IN. & EX.	22.012 – 22.025 (0.8666 – 0.8671)	—
Camshaft journal O.D.	IN. & EX.	21.959 – 21.980 (0.8645 – 0.8654)	—
Camshaft runout	IN. & EX.	—	0.10 (0.004)
Cam chain pin (at arrow "3")	24th pin		—
Rocker arm I.D.	IN. & EX.	12.000 – 12.018 (0.4724 – 0.4731)	—
Rocker arm shaft O.D.	IN. & EX.	11.973 – 11.984 (0.4714 – 0.4718)	—
Cylinder head distortion	—		0.20 (0.008)

CYLINDER + PISTON + PISTON RING

Unit: mm (in)

ITEM	STANDARD		LIMIT	
Compression pressure	1 250 kPa (12.5 kgf/cm ²) 178 psi		875 kPa (8.75 kgf/cm ²) 124 psi	
Compression pressure difference	—		200 kPa (2 kgf/cm ²) 28 psi	
Piston-to-cylinder clearance	0.040 – 0.070 (0.0016 – 0.0028)		0.120 (0.0047)	
Cylinder bore	79.000 – 79.015 (3.1102 – 3.1108)		79.080 (3.1134)	
Piston diameter	78.945 – 78.960 (3.1081 – 3.1087) Measure 15 (0.6) from the skirt end.		78.880 (3.1055)	
Cylinder distortion	—		0.20 (0.008)	
Piston ring free end gap	1st	R	Approx. 10 (0.39)	8.0 (0.31)
	2nd	RN	Approx. 12 (0.47)	9.6 (0.38)
Piston ring end gap	1st		0.20 – 0.35 (0.008 – 0.014)	0.5 (0.02)
	2nd		0.35 – 0.50 (0.014 – 0.020)	1.0 (0.04)

ITEM	STANDARD		LIMIT
Piston-ring to piston-ring-groove clearance	1st	————	0.180 (0.007)
	2nd	————	0.150 (0.006)
Piston ring groove width	1st	1.01 – 1.03 (0.040 – 0.041)	————
	2nd	1.01 – 1.03 (0.040 – 0.041)	————
	Oil	2.01 – 2.03 (0.079 – 0.080)	————
Piston ring thickness	1st	0.975 – 0.990 (0.0384 – 0.0390)	————
	2nd	0.970 – 0.990 (0.038 – 0.039)	————
Piston pin bore	20.002 – 20.008 (0.7875 – 0.7877)		20.030 (0.7886)
Piston pin O.D.	19.996 – 20.000 (0.7872 – 0.7874)		19.980 (0.7866)

CONROD + CRANKSHAFT

Unit: mm (in)

ITEM	STANDARD		LIMIT
Conrod small end I.D.	20.010 – 20.018 (0.7878 – 0.7881)		20.040 (0.7890)
Conrod big end side clearance	0.10 – 0.20 (0.004 – 0.008)		0.30 (0.01)
Conrod big end width	20.95 – 21.00 (0.825 – 0.827)		————
Crank pin width	21.10 – 21.15 (0.831 – 0.833)		————
Conrod big end oil clearance	0.032 – 0.056 (0.0013 – 0.0022)		0.080 (0.0031)
Crank pin O.D.	37.976 – 38.000 (1.4951 – 1.4961)		————
Crankshaft journal oil clearance	0.020 – 0.044 (0.0008 – 0.0017)		0.080 (0.0031)
Crankshaft journal O.D.	35.976 – 36.000 (1.4164 – 1.4173)		————
Crankshaft thrust clearance	0.04 – 0.08 (0.0016 – 0.0031)		————
Crankshaft thrust bearing thickness	Left side	2.360 – 2.520 (0.0929 – 0.0992)	————
	Right side	2.420 – 2.440 (0.0953 – 0.0961)	————
Crankshaft runout	————		0.05 (0.002)

OIL PUMP

ITEM	STANDARD	LIMIT
Oil pump reduction ratio	1.703 (72/46 × 37/34)	——
Oil pressure (at 60°C, 140°F)	Above 300 kPa (3.0 kgf/cm ² , 43 psi) Below 600 kPa (6.0 kgf/cm ² , 85 psi) at 3 000 r/min.	——

CLUTCH

Unit: mm (in)

ITEM	STANDARD	LIMIT
Clutch drive plate thickness	2.92 – 3.08 (0.115 – 0.121)	2.62 (0.103)
Clutch drive plate claw width	——	13.0 (0.51)
Clutch driven plate distortion	——	0.10 (0.004)
Clutch spring free height	——	3.1 (0.12)
Clutch master cylinder bore	14.000 – 14.043 (0.5511 – 0.5529)	——
Clutch master cylinder piston diam.	13.957 – 13.984 (0.5495 – 0.5506)	——
Clutch release cylinder bore	35.700 – 35.762 (1.4055 – 1.4079)	——
Clutch release cylinder piston diam.	35.650 – 35.675 (1.4035 – 1.4045)	——

TRANSMISSION + DRIVE CHAIN

Unit: mm (in) Except ratio

ITEM	STANDARD	LIMIT
Primary reduction ratio	1.565 (72/46)	——
Final reduction ratio	3.000 (45/15)	——
Gear ratios	1st (low)	2.384 (31/13)
	2nd	1.631 (31/19)
	3rd	1.250 (25/20)
	4th	1.045 (23/22)
	5th (top)	0.913 (21/23)
Gearshift-fork to gearshift-fork-groove clearance	No.1, No.2 & No.3 0.1 – 0.3 (0.004 – 0.012)	0.50 (0.020)
Gearshift fork groove width	No.1, No.2 & No.3 5.0 – 5.1 (0.197 – 0.201)	——
Gearshift fork thickness	No.1, No.2 & No.3 4.8 – 4.9 (0.189 – 0.193)	——
Drive chain	Type	RKGB50MFOZ1
	Links	110 links
	20-pitch length	——
Drive chain slack	20 – 30 (0.8 – 1.2)	——
Gearshift lever height	55 (2.2)	——

CARBURETOR

ITEM	SPECIFICATION	
	E-02, 19, 24, 54	E-03, 28
Carburetor type	MIKUNI BSR36SS	←
Bore size	36 mm	←
I.D. No.	32F0	32F1
Idle r/min.	1 200 ± 100 r/min.	1 300 ± 100 r/min.
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)	←
Main jet (M.J.)	#100	# <i>100</i>
Jet needle (J.N.)	5C70-3rd	5C71-1st
Needle jet (N.J.)	P-0M	<i>P-0M</i>
Throttle valve (Th. V.)	#100	←
Pilot jet (P.J.)	#15	# <i>15</i>
Pilot screw (P.S.)	PRE-SET (3 turns back)	←
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)	←
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)	←

CARBURETOR

ITEM	SPECIFICATION	
	E-33	
Carburetor type	MIKUNI BSR36SS	
Bore size	36 mm	
I.D. No.	32F2	
Idle r/min.	1 300 ± 100 r/min.	
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)	
Main jet (M.J.)	# <i>100</i>	
Jet needle (J.N.)	5C71-1st	
Needle jet (N.J.)	<i>P-0M</i>	
Throttle valve (Th. V.)	# 100	
Pilot jet (P.J.)	# <i>15</i>	
Pilot screw (P.S.)	PRE-SET (3 turns back)	
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)	
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)	

ELECTRICAL

Unit: mm (in)

ITEM		SPECIFICATION		NOTE
Ignition timing		7° B.T.D.C. at 1 200 r/min.		
Firing order		1•2•4•3		
Spark plug	Type	NGK: JR9B		
	Gap	0.6 – 0.7 (0.024 – 0.028)		
Spark performance		Over 8 (0.3) at 1 atm.		
Pickup coil resistance		Approx. 130 – 200 Ω		Tester range: (× 100 Ω)
Signal generator peak voltage		More than 1.0 V		
Ignition coil resistance	Primary	⊕ tap – ⊖ tap Approx. 2 – 4 Ω		Tester range: (× 1 Ω)
	Secondary	Spark plug cap – Spark plug cap Approx. 30 – 40 kΩ		Tester range: (× 1 kΩ)
Ignition coil primary peak voltage		More than 140 V		
Generator	Slip ring O.D.	Limit: 14.0 (0.55)		DENSO
	Brush length	Limit: 4.5 (0.18)		
Generator maximum output		More than 550 W at 5 000 r/min.		
Regulated voltage		13.5 – 15 V at 5 000 r/min.		
Starter relay resistance		3 – 5 Ω		
Battery	Type designation	YTX12-BS		
	Capacity	12V 36.0 kC (10 Ah)/10HR		
	Standard electrolyte S.G.	1.320 at 20°C (68°F)		
Fuse size	Headlight	HI	15 A	
		LO	15 A	
	Turn signal		15 A	
	Ignition		10 A	
	Meter		10 A	
	Main		30 A	

WATTAGE

Unit: W

ITEM		SPECIFICATION	
		E-03, 24, 28, 33	The other countries
Headlight	HI	60 + 51	←
	LO	51	←
Parking or position light			5
Brake light/Taillight		21/5 × 2	←
Turn signal light		21 × 4	←
Speedometer light		LED	←
Tachometer light		LED	←
Turn signal indicator light		LED × 2	←
High beam indicator light		LED	←
Neutral position indicator light		LED	←
Oil pressure indicator light		LED	←
License plate light		5	←

BRAKE + WHEEL

Unit: mm (in)

ITEM	STANDARD		LIMIT
Rear brake pedal height	55 (2.2)		—
Brake disc thickness	Front	4.5 ± 0.2 (0.177 ± 0.008)	4.0 (0.16)
	Rear	5.0 ± 0.2 (0.197 ± 0.008)	4.5 (0.18)
Brake disc runout	—		0.30 (0.012)
Master cylinder bore	Front	15.870 – 15.913 (0.6248 – 0.6264)	—
	Rear	12.700 – 12.743 (0.5000 – 0.5017)	—
Master cylinder piston diameter	Front	15.827 – 15.854 (0.6231 – 0.6242)	—
	Rear	12.657 – 12.684 (0.4983 – 0.4994)	—
Brake caliper cylinder bore	Front	Leading	24.000 – 24.076 (0.9449 – 0.9479)
		Trailing	27.000 – 27.076 (1.0630 – 1.0660)
	Rear	38.180 – 38.256 (1.5031 – 1.5061)	
Brake caliper piston diameter	Front	Leading	23.925 – 23.975 (0.9419 – 0.9439)
		Trailing	26.920 – 26.970 (1.0598 – 1.0618)
	Rear	38.098 – 38.148 (1.4999 – 1.5019)	

ITEM	STANDARD		LIMIT
Wheel rim runout	Axial	————	2.0 (0.08)
	Radial	————	2.0 (0.08)
Wheel axle runout	Front	————	0.25 (0.010)
	Rear	————	0.25 (0.010)
Wheel rim size	Front	17 × MT3.50, 17 M/C × MT3.50	————
	Rear	17 × MT5.50, 17 M/C × MT5.50	————

SUSPENSION

Unit: mm (in)

ITEM	STANDARD	LIMIT	NOTE
Front fork stroke	130 (5.1)	————	
Front fork spring free length	————	366 (14.4)	E-03, 28, 33
	————	370 (14.6)	The other countries
Front fork oil level	107 (4.2)	————	E-03, 28, 33
	105 (4.1)	————	The other countries
Rear wheel travel	125 (4.9)	————	
Swingarm pivot shaft runout	————	0.3 (0.01)	

TIRE

ITEM	STANDARD		LIMIT
Cold inflation tire pressure (Solo/Dual riding)	Front	250 kPa (2.50 kgf/cm ² , 36 psi)	————
	Rear	250 kPa (2.50 kgf/cm ² , 36 psi)	————
Tire size	Front	120/70 ZR17 (58W), 120/70 ZR17 M/C (58W)	————
	Rear	180/55 ZR17 (73W), 180/55 ZR17 M/C (73W)	————
Tire type	Front	MACADAM 90XM	————
	Rear	MACADAM 90XM	————
Tire tread depth (Recommended depth)	Front	————	1.6 mm (0.06 in)
	Rear	————	2.0 mm (0.08 in)

FUEL + OIL

ITEM	SPECIFICATION		NOTE
Fuel type	Use only unleaded gasoline of at least 87 pump octane or 91 octane ($\frac{R+M}{2}$) or higher rated by the Research Method. Gasoline containing MTBE (Methyl Tertiary Butyl Ether), less than 10% ethanol, or less than 5% methanol with appropriate cosolvents and corrosion inhibitor is permissible.		E-03, 28, 33
	Gasoline used should be graded 91 octane or higher. An unleaded gasoline is recommended.		The other countries
Fuel tank capacity	Including reserve	19 L (5.0/4.2 US/Imp gal)	E-33
		20 L (5.2/4.4 US/Imp gal)	The other countries
	Reserve only	4.4 L (1.2/1.0 US/Imp gal)	
Engine oil type	SAE 10W/40, API SF or SG		
Engine oil capacity	Change	3 300 ml (3.5/2.9 US/Imp qt)	
	Filter change	3 500 ml (3.7/3.1 US/Imp qt)	
	Overhaul	4 600 ml (4.9/4.0 US/Imp qt)	
Front fork oil type	Fork oil SS-08 or #10 or equivalent fork oil		
Front fork oil capacity (each leg)	507 ml (17.1/17.9 US/Imp oz)		E-03, 28, 33
	509 ml (17.2/17.9 US/Imp oz)		The other countries
Brake fluid type	DOT 4		

SERVICE DATA (GSF1200)**VALVE + GUIDE**

Unit: mm (in)

ITEM	STANDARD		LIMIT
Valve diameter	IN.	28.5 (1.12)	——
	EX.	25 (1.0)	——
Valve clearance (when cold)	IN.	0.10 – 0.15 (0.004 – 0.006)	——
	EX.	0.18 – 0.23 (0.007 – 0.009)	——
Valve-guide to valve-stem clearance	IN.	0.020 – 0.047 (0.0008 – 0.0019)	——
	EX.	0.030 – 0.057 (0.0012 – 0.0022)	——
Valve stem deflection	IN. & EX.	——	0.35 (0.014)
Valve guide I.D.	IN. & EX.	5.000 – 5.012 (0.1969 – 0.1973)	——
Valve stem O.D.	IN.	4.965 – 4.980 (0.1955 – 0.1961)	——
	EX.	4.945 – 4.960 (0.1947 – 0.1953)	——
Valve stem runout	IN. & EX.	——	0.05 (0.002)
Valve face thickness	IN. & EX.	——	0.5 (0.02)
Valve stem end length	IN. & EX.	——	2.5 (0.10)
Valve seat width	IN. & EX.	0.9 – 1.1 (0.035 – 0.043)	——
Valve head radial runout	IN. & EX.	——	0.03 (0.001)
Valve spring free length (IN. & EX.)	INNER	——	35.0 (1.38)
	OUTER	——	37.8 (1.49)
Valve spring tension (IN. & EX.)	INNER	53 – 65 N, 5.3 – 6.5 kgf (11.7 – 14.3 lbs) at length 28 mm (1.10 in)	——
	OUTER	131 – 151 N, 13.1 – 15.1 kgf (28.9 – 33.3 lbs) at length 31.5 mm (1.24 in)	——

CAMSHAFT + CYLINDER HEAD

Unit: mm (in)

ITEM	STANDARD		LIMIT
Cam height	IN.	33.58 – 33.62 (1.3220 – 1.3236)	33.28 (1.3102)
	EX.	32.65 – 32.69 (1.2854 – 1.2870)	32.35 (1.2736)
Camshaft journal oil clearance	IN. & EX.	0.032 – 0.066 (0.0013 – 0.0026)	0.150 (0.0059)
Camshaft journal holder I.D.	IN. & EX.	22.012 – 22.025 (0.8666 – 0.8671)	—
Camshaft journal O.D.	IN. & EX.	21.959 – 21.980 (0.8645 – 0.8654)	—
Camshaft runout	IN. & EX.	—	0.10 (0.004)
Cam chain pin (at arrow "3")	24th pin		—
Rocker arm I.D.	IN. & EX.	12.000 – 12.018 (0.4724 – 0.4731)	—
Rocker arm shaft O.D.	IN. & EX.	11.973 – 11.984 (0.4714 – 0.4718)	—
Cylinder head distortion	—		0.20 (0.008)

CYLINDER + PISTON + PISTON RING

Unit: mm (in)

ITEM	STANDARD		LIMIT
Compression pressure	1 250 kPa (12.5 kgf/cm ²) 178 psi		875 kPa (8.75 kgf/cm ²) 124 psi
Compression pressure difference	—		200 kPa (2 kgf/cm ²) 28 psi
Piston-to-cylinder clearance	0.040 – 0.070 (0.0016 – 0.0028)		0.120 (0.0047)
Cylinder bore	79.000 – 79.015 (3.1102 – 3.1108)		79.080 (3.1134)
Piston diameter	78.945 – 78.960 (3.1081 – 3.1087) Measure 15 (0.6) from the skirt end.		78.880 (3.1055)
Cylinder distortion	—		0.20 (0.008)
Piston ring free end gap	1st	R	Approx. 10 (0.39)
	2nd	RN	Approx. 12 (0.47)
Piston ring end gap	1st		0.20 – 0.35 (0.008 – 0.014)
	2nd		0.35 – 0.50 (0.014 – 0.020)

ITEM	STANDARD		LIMIT
Piston-ring to piston-ring-groove clearance	1st	————	0.180 (0.007)
	2nd	————	0.150 (0.006)
Piston ring groove width	1st	1.01 – 1.03 (0.040 – 0.041)	————
	2nd	1.01 – 1.03 (0.040 – 0.041)	————
	Oil	2.01 – 2.03 (0.079 – 0.080)	————
Piston ring thickness	1st	0.975 – 0.990 (0.0384 – 0.0390)	————
	2nd	0.970 – 0.990 (0.038 – 0.039)	————
Piston pin bore	20.002 – 20.008 (0.7875 – 0.7877)		20.030 (0.7886)
Piston pin O.D.	19.996 – 20.000 (0.7872 – 0.7874)		19.980 (0.7866)

CONROD + CRANKSHAFT

Unit: mm (in)

ITEM	STANDARD		LIMIT
Conrod small end I.D.	20.010 – 20.018 (0.7878 – 0.7881)		20.040 (0.7890)
Conrod big end side clearance	0.10 – 0.20 (0.004 – 0.008)		0.30 (0.01)
Conrod big end width	20.95 – 21.00 (0.825 – 0.827)		————
Crank pin width	21.10 – 21.15 (0.831 – 0.833)		————
Conrod big end oil clearance	0.032 – 0.056 (0.0013 – 0.0022)		0.080 (0.0031)
Crank pin O.D.	37.976 – 38.000 (1.4951 – 1.4961)		————
Crankshaft journal oil clearance	0.020 – 0.044 (0.0008 – 0.0017)		0.080 (0.0031)
Crankshaft journal O.D.	35.976 – 36.000 (1.4164 – 1.4173)		————
Crankshaft thrust clearance	0.04 – 0.08 (0.0016 – 0.0031)		————
Crankshaft thrust bearing thickness	Left side	2.360 – 2.520 (0.0929 – 0.0992)	————
	Right side	2.420 – 2.440 (0.0953 – 0.0961)	————
Crankshaft runout	————		0.05 (0.002)

OIL PUMP

ITEM	STANDARD	LIMIT
Oil pump reduction ratio	1.703 (72/46 × 37/34)	———
Oil pressure (at 60°C, 140°F)	Above 300 kPa (3.0 kgf/cm ² , 43 psi) Below 600 kPa (6.0 kgf/cm ² , 85 psi) at 3 000 r/min.	———

CLUTCH

Unit: mm (in)

ITEM	STANDARD	LIMIT
Clutch drive plate thickness	2.92 – 3.08 (0.115 – 0.121)	2.62 (0.103)
Clutch drive plate claw width	———	13.0 (0.51)
Clutch driven plate distortion	———	0.10 (0.004)
Clutch spring free height	———	3.1 (0.12)
Clutch master cylinder bore	14.000 – 14.043 (0.5511 – 0.5529)	———
Clutch master cylinder piston diam.	13.957 – 13.984 (0.5495 – 0.5506)	———
Clutch release cylinder bore	35.700 – 35.762 (1.4055 – 1.4079)	———
Clutch release cylinder piston diam.	35.650 – 35.675 (1.4035 – 1.4045)	———

TRANSMISSION + DRIVE CHAIN

Unit: mm (in) Except ratio

ITEM	STANDARD	LIMIT
Primary reduction ratio	1.565 (72/46)	———
Final reduction ratio	3.000 (45/15)	———
Gear ratios	1st (low)	2.384 (31/13)
	2nd	1.631 (31/19)
	3rd	1.250 (25/20)
	4th	1.045 (23/22)
	5th (top)	0.913 (21/23)
Gearshift-fork to gearshift-fork-groove clearance	No.1, No.2 & No.3 0.1 – 0.3 (0.004 – 0.012)	0.50 (0.020)
Gearshift fork groove width	No.1, No.2 & No.3 5.0 – 5.1 (0.197 – 0.201)	———
Gearshift fork thickness	No.1, No.2 & No.3 4.8 – 4.9 (0.189 – 0.193)	———
Drive chain	Type	RKGB50MFOZ1
	Links	110 links
	20-pitch length	———
Drive chain slack	20 – 30 (0.8 – 1.2)	———
Gearshift lever height	55 (2.2)	———

CARBURETOR

ITEM	SPECIFICATION
	E-02, 19
Carburetor type	MIKUNI BSR36SS
Bore size	36 mm
I.D. No.	32F0
Idle r/min.	1 200 ± 100 r/min.
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)
Main jet (M.J.)	#100
Jet needle (J.N.)	5C70-3rd
Needle jet (N.J.)	P-0M
Throttle valve (Th. V.)	#100
Pilot jet (P.J.)	#15
Pilot screw (P.S.)	PRE-SET (3 turns back)
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)

CARBURETOR

ITEM	SPECIFICATION
	E-03
Carburetor type	MIKUNI BSR36SS
Bore size	36 mm
I.D. No.	32F1
Idle r/min.	1 300 ± 100 r/min.
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)
Main jet (M.J.)	#100
Jet needle (J.N.)	5C71
Needle jet (N.J.)	
Throttle valve (Th. V.)	#100
Pilot jet (P.J.)	#15
Pilot screw (P.S.)	PRE-SET (3 turns back)
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)

CARBURETOR

ITEM	SPECIFICATION	
	E-33	
Carburetor type	MIKUNI BSR36SS	
Bore size	36 mm	
I.D. No.	32F2	
Idle r/min.	1 300 ± 100 r/min.	
Float height	13.0 ± 1.0 mm (0.51 ± 0.04 in)	
Main jet (M.J.)	# 100	
Jet needle (J.N.)	5C71	
Needle jet (N.J.)		
Throttle valve (Th. V.)	# 100	
Pilot jet (P.J.)	# 15	
Pilot screw (P.S.)	PRE-SET (3 turns back)	
Throttle cable play (pulling cable)	2.0 – 4.0 mm (0.08 – 0.16 in)	
Starter (enricher) plunger cable play	0.5 – 1.0 mm (0.02 – 0.04 in)	

ELECTRICAL

Unit: mm (in)

ITEM		SPECIFICATION		NOTE
Ignition timing		7° B.T.D.C. at 1 200 r/min.		
Firing order		1•2•4•3		
Spark plug	Type	NGK: JR9B		
	Gap	0.6 – 0.7 (0.024 – 0.028)		
Spark performance		Over 8 (0.3) at 1 atm.		
Pickup coil resistance		Approx. 130 – 200 Ω		Tester range: (× 100 Ω)
Signal generator peak voltage		More than 1.0 V		
Ignition coil resistance	Primary	⊕ tap – ⊖ tap Approx. 2 – 4 Ω		Tester range: (× 1 Ω)
	Secondary	Spark plug cap – Spark plug cap Approx. 30 – 40 kΩ		Tester range: (× 1 kΩ)
Ignition coil primary peak voltage		More than 140 V		
Generator	Slip ring O.D.	Limit: 14.0 (0.55)		DENSO
	Brush length	Limit: 4.5 (0.18)		
Generator maximum output		More than 550 W at 5 000 r/min.		
Regulated voltage		13.5 – 15 V at 5 000 r/min.		
Starter relay resistance		3 – 5 Ω		
Battery	Type designation	YTX12-BS		
	Capacity	12V 36.0 kC (10 Ah)/10HR		
	Standard electrolyte S.G.	1.320 at 20°C (68°F)		

ITEM			SPECIFICATION	NOTE
Fuse size	Headlight	HI	15 A	
		LO	15 A	
	Turn signal		15 A	
	Ignition		10 A	
	Meter		10 A	
	Main		30 A	

WATTAGE

Unit: W

ITEM		SPECIFICATION	
		E-03, 33	E-02, 19
Headlight	HI	60	←
	LO	55	←
Parking or position light			5
Brake light/Taillight		21/5 × 2	←
Turn signal light		21 × 4	←
Speedometer light		LED	←
Tachometer light		LED	←
Turn signal indicator light		LED × 2	←
High beam indicator light		LED	←
Neutral position indicator light		LED	←
Oil pressure indicator light		LED	←
License plate light		5	←

BRAKE + WHEEL

Unit: mm (in)

ITEM	STANDARD		LIMIT
Rear brake pedal height	55 (2.2)		—
Brake disc thickness	Front	4.5 ± 0.2 (0.177 ± 0.008)	4.0 (0.16)
	Rear	5.0 ± 0.2 (0.197 ± 0.008)	4.5 (0.18)
Brake disc runout	—		0.30 (0.012)
Master cylinder bore	Front	15.870 – 15.913 (0.6248 – 0.6264)	—
	Rear	12.700 – 12.743 (0.5000 – 0.5017)	—
Master cylinder piston diameter	Front	15.827 – 15.854 (0.6231 – 0.6242)	—
	Rear	12.657 – 12.684 (0.4983 – 0.4994)	—

ITEM	STANDARD			LIMIT
Brake caliper cylinder bore	Front	Leading	24.000 – 24.076 (0.9449 – 0.9479)	——
		Trailing	27.000 – 27.076 (1.0630 – 1.0660)	——
	Rear	38.180 – 38.256 (1.5031 – 1.5061)		——
Brake caliper piston diameter	Front	Leading	23.925 – 23.975 (0.9419 – 0.9439)	——
		Trailing	26.920 – 26.970 (1.0598 – 1.0618)	——
	Rear	38.098 – 38.148 (1.4999 – 1.5019)		——
Wheel rim runout	Axial	——		2.0 (0.08)
	Radial	——		2.0 (0.08)
Wheel axle runout	Front	——		0.25 (0.010)
	Rear	——		0.25 (0.010)
Wheel rim size	Front	17 × MT3.50, 17 M/C × MT3.50		——
	Rear	17 × MT5.50, 17 M/C × MT5.50		——

SUSPENSION

Unit: mm (in)

ITEM	STANDARD	LIMIT	NOTE
Front fork stroke	130 (5.1)	——	
Front fork spring free length	——	366 (14.4)	
Front fork oil level	107 (4.2)	——	
Rear wheel travel	125 (4.9)	——	
Swingarm pivot shaft runout	——	0.3 (0.01)	


TIRE

ITEM	STANDARD		LIMIT
Cold inflation tire pressure (Solo/Dual riding)	Front	250 kPa (2.50 kgf/cm ² , 36 psi)	_____
	Rear	250 kPa (2.50 kgf/cm ² , 36 psi)	_____
Tire size	Front	120/70 ZR17 (58W), 120/70 ZR17 M/C (58W)	_____
	Rear	180/55 ZR17 (73W), 180/55 ZR17 M/C (73W)	_____
Tire type	Front	MACADAM 90XM	_____
	Rear	MACADAM 90XM	_____
Tire tread depth (Recommended depth)	Front	_____	1.6 mm (0.06 in)
	Rear	_____	2.0 mm (0.08 in)


FUEL + OIL

ITEM	SPECIFICATION		NOTE
Fuel type	Use only unleaded gasoline of at least 87 pump octane ($\frac{R+M}{2}$) or 91 octane or higher rated by the research method. Gasoline containing MTBE (Methyl Tertiary Butyl Ether), less than 10% ethanol, or less than 5% methanol with appropriate cosolvents and corrosion inhibitor is permissible.		E-03, 33
	Gasoline used should be graded 91 octane or higher. An unleaded gasoline is recommended.		E-02, 19
Fuel tank capacity	Including reserve	19 L (5.0/4.2 US/Imp gal)	E-33
		20 L (5.3/4.4 US/Imp gal)	E-02, 03, 19
	Reserve only	4.4 L (1.2/1.0 US/Imp gal)	
Engine oil type	SAE 10W/40, API SF or SG		
Engine oil capacity	Change	3 300 ml (3.5/2.9 US/Imp qt)	
	Filter change	3 500 ml (3.7/3.1 US/Imp qt)	
	Overhaul	4 600 ml (4.9/4.0 US/Imp qt)	
Front fork oil type	Fork oil SS-08 or #10 or equivalent fork oil		
Front fork oil capacity (each leg)	507 ml (17.1/17.9 US/Imp oz)		
Brake fluid type	DOT 4		


WIRING DIAGRAM GSF1200S (FOR E-02, 19)

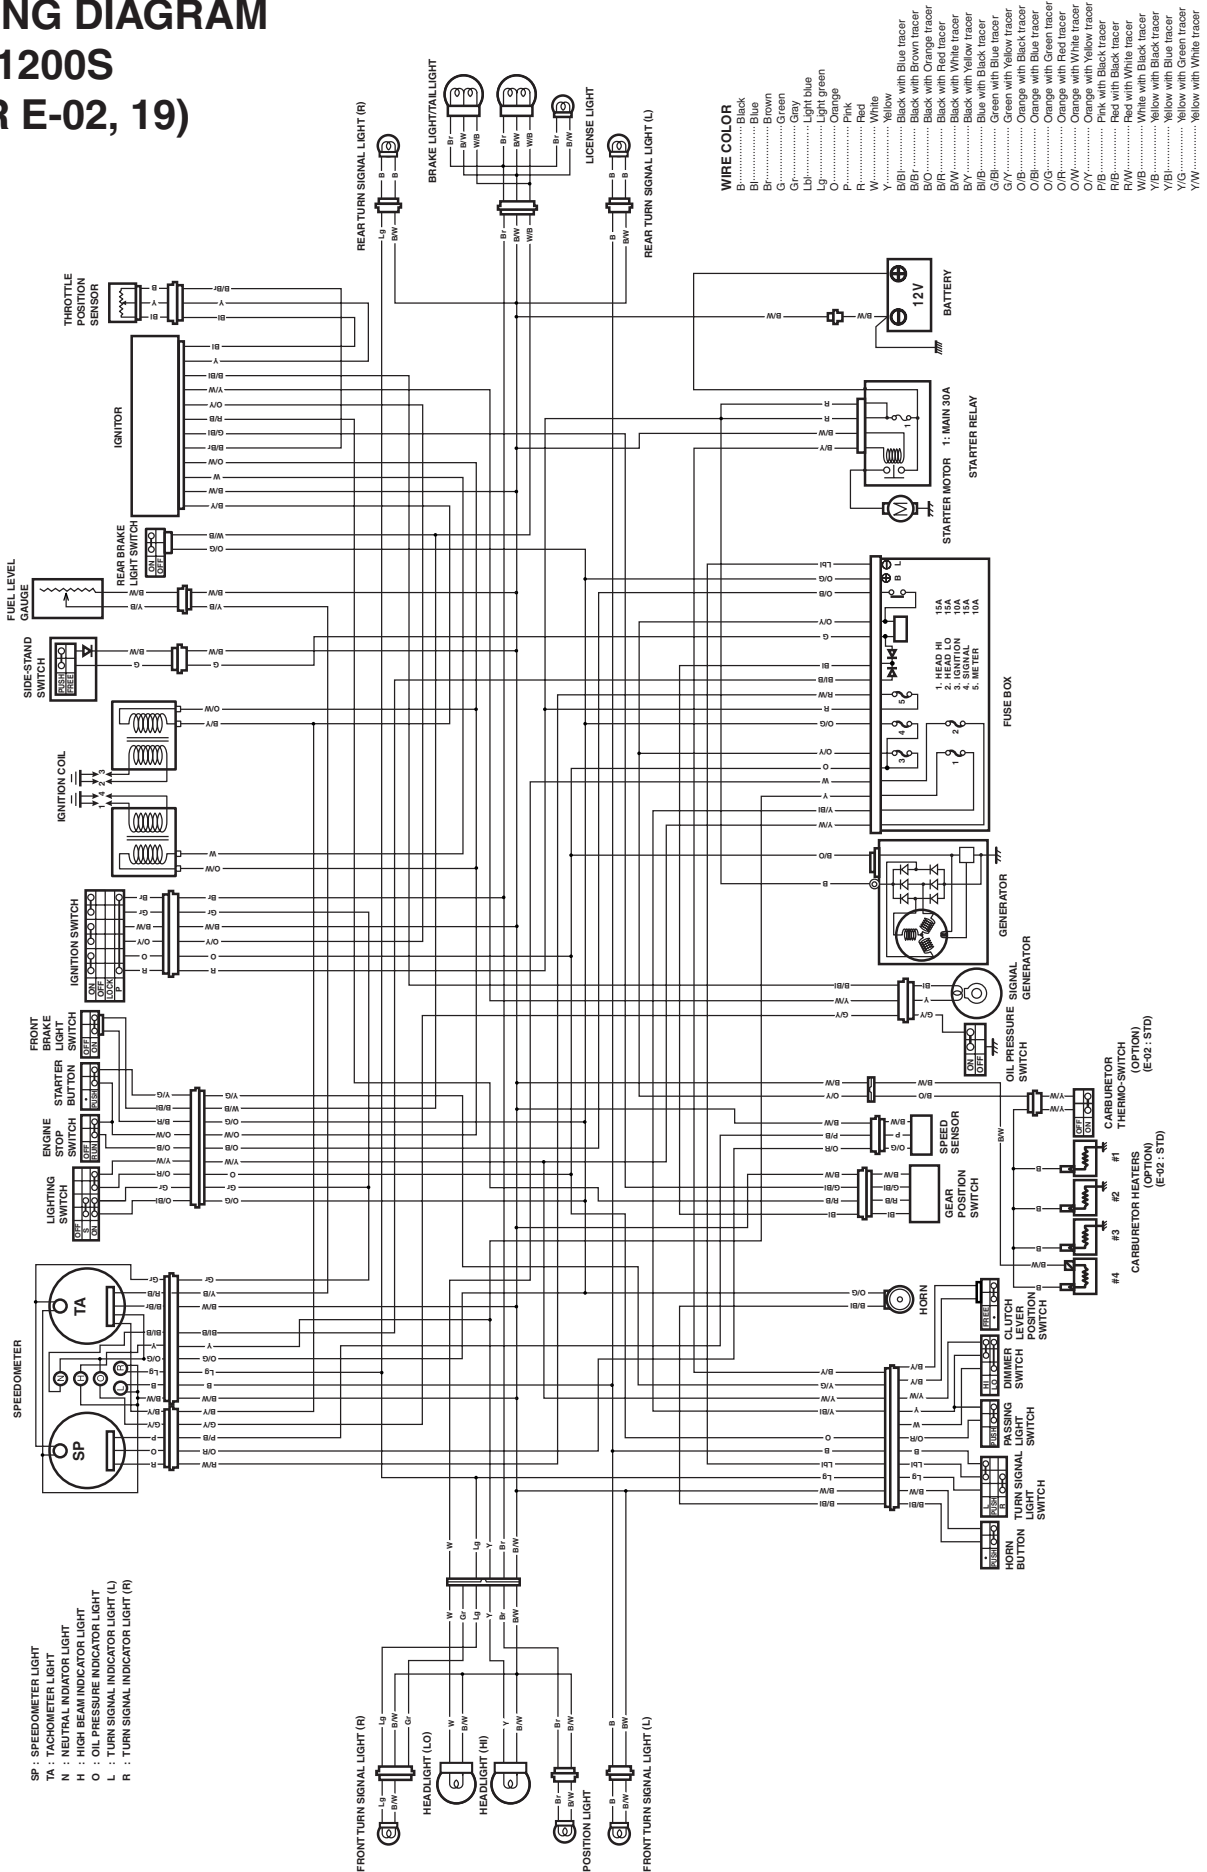


(FOR E-24)

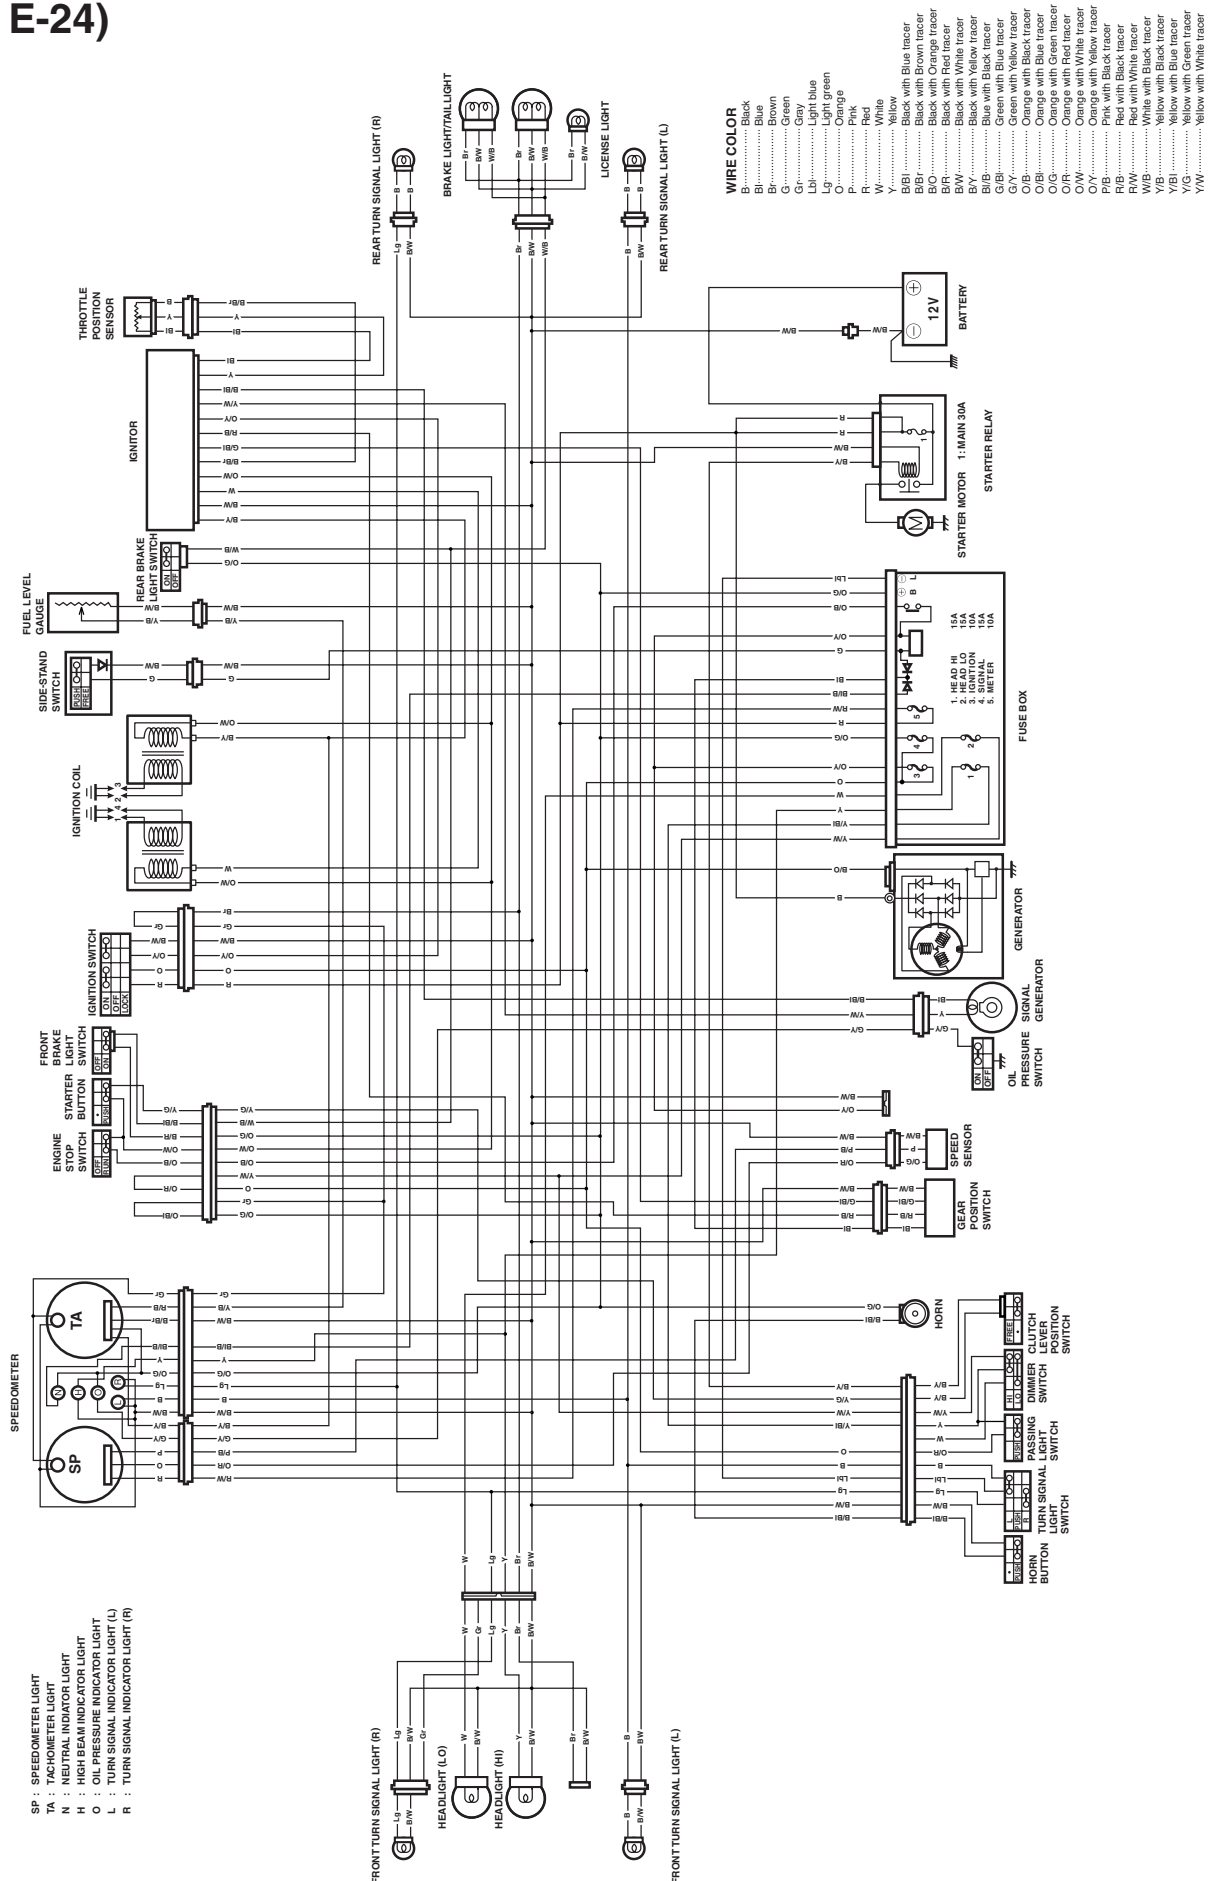


WIRING DIAGRAM GSF1200 (FOR E-02, 19)

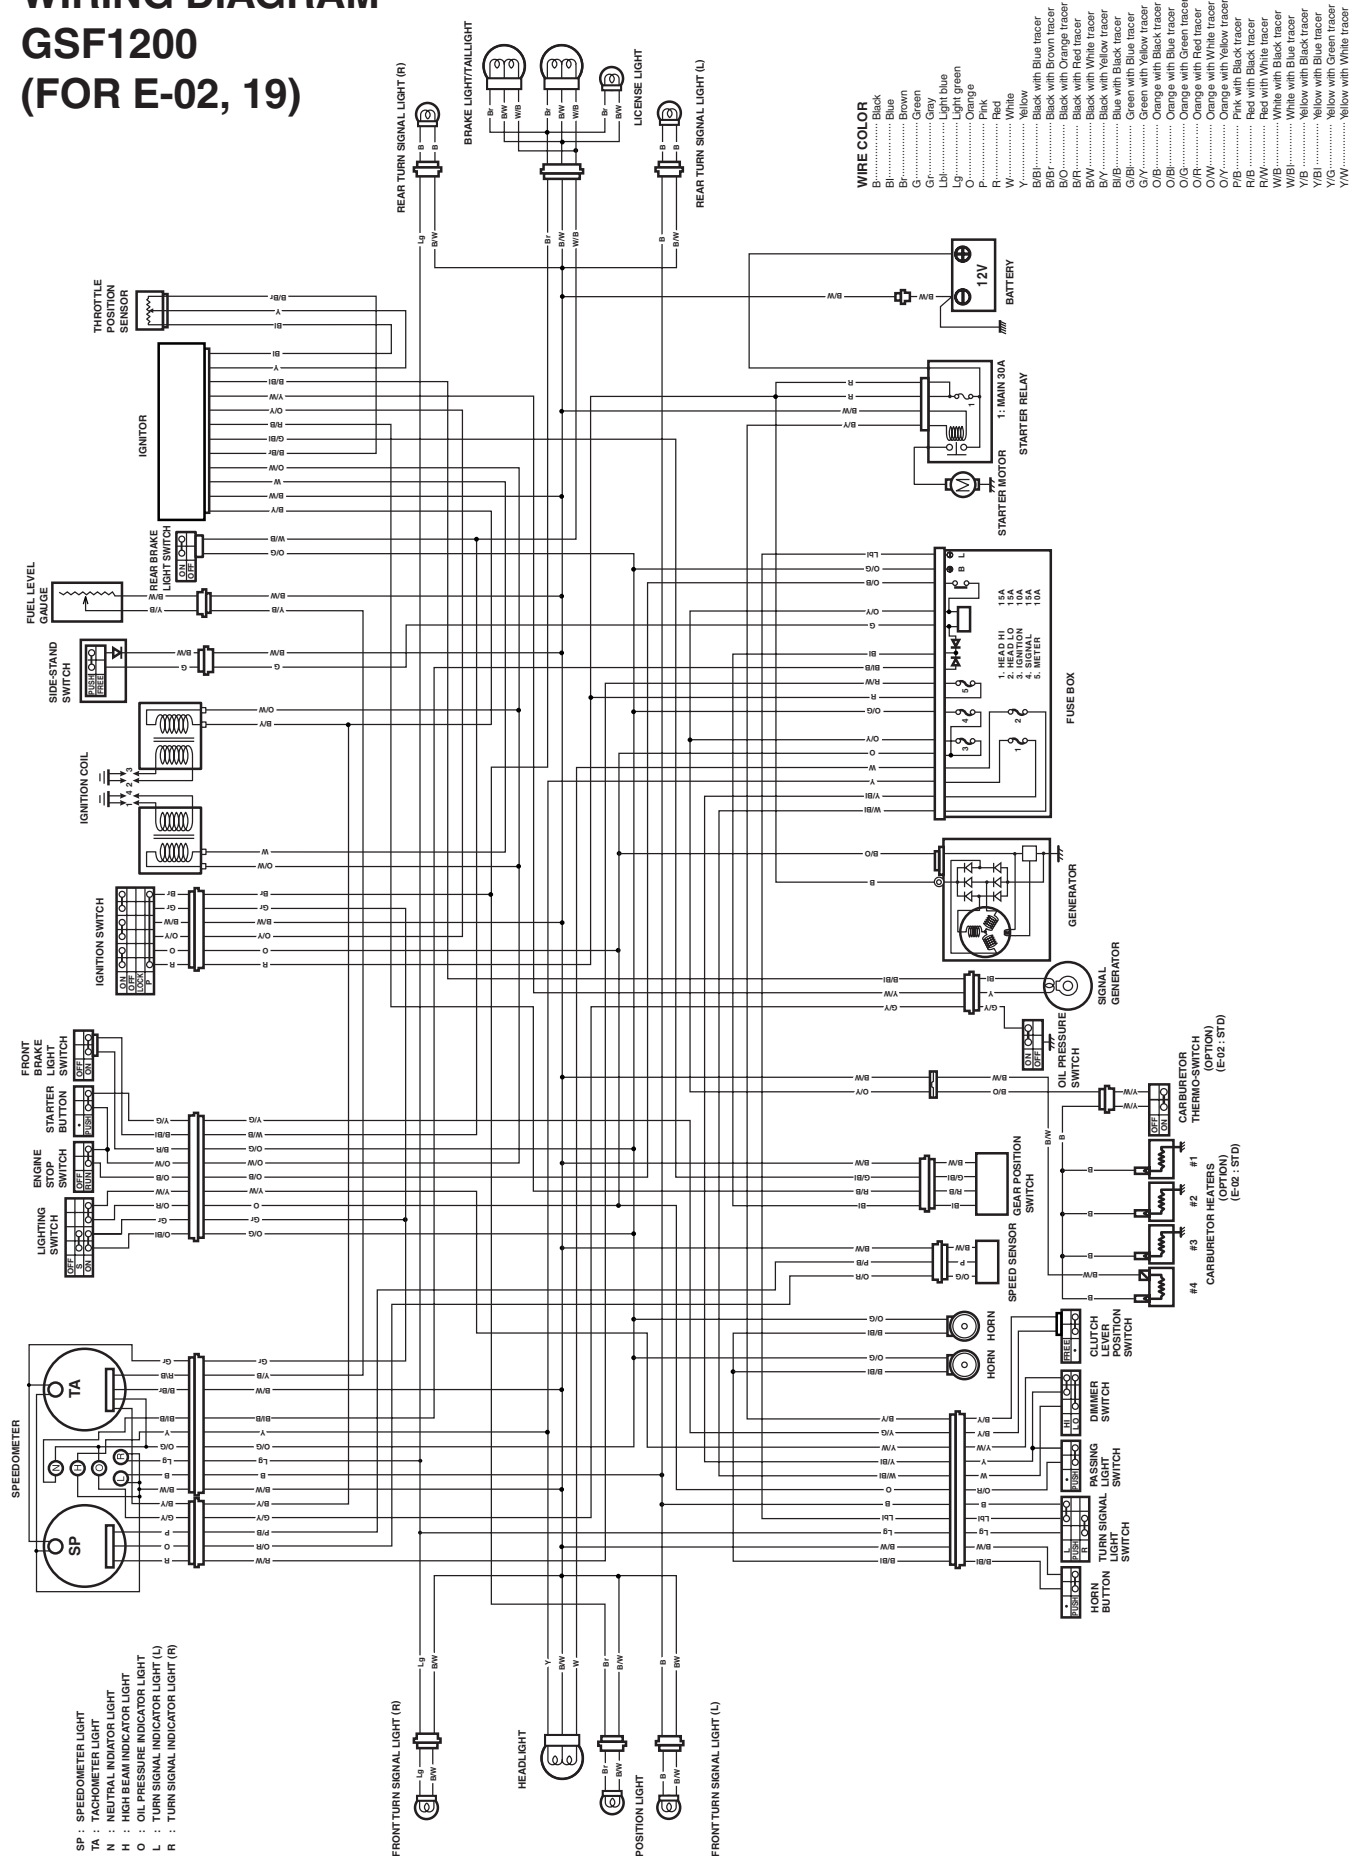

(FOR E-03, 33)

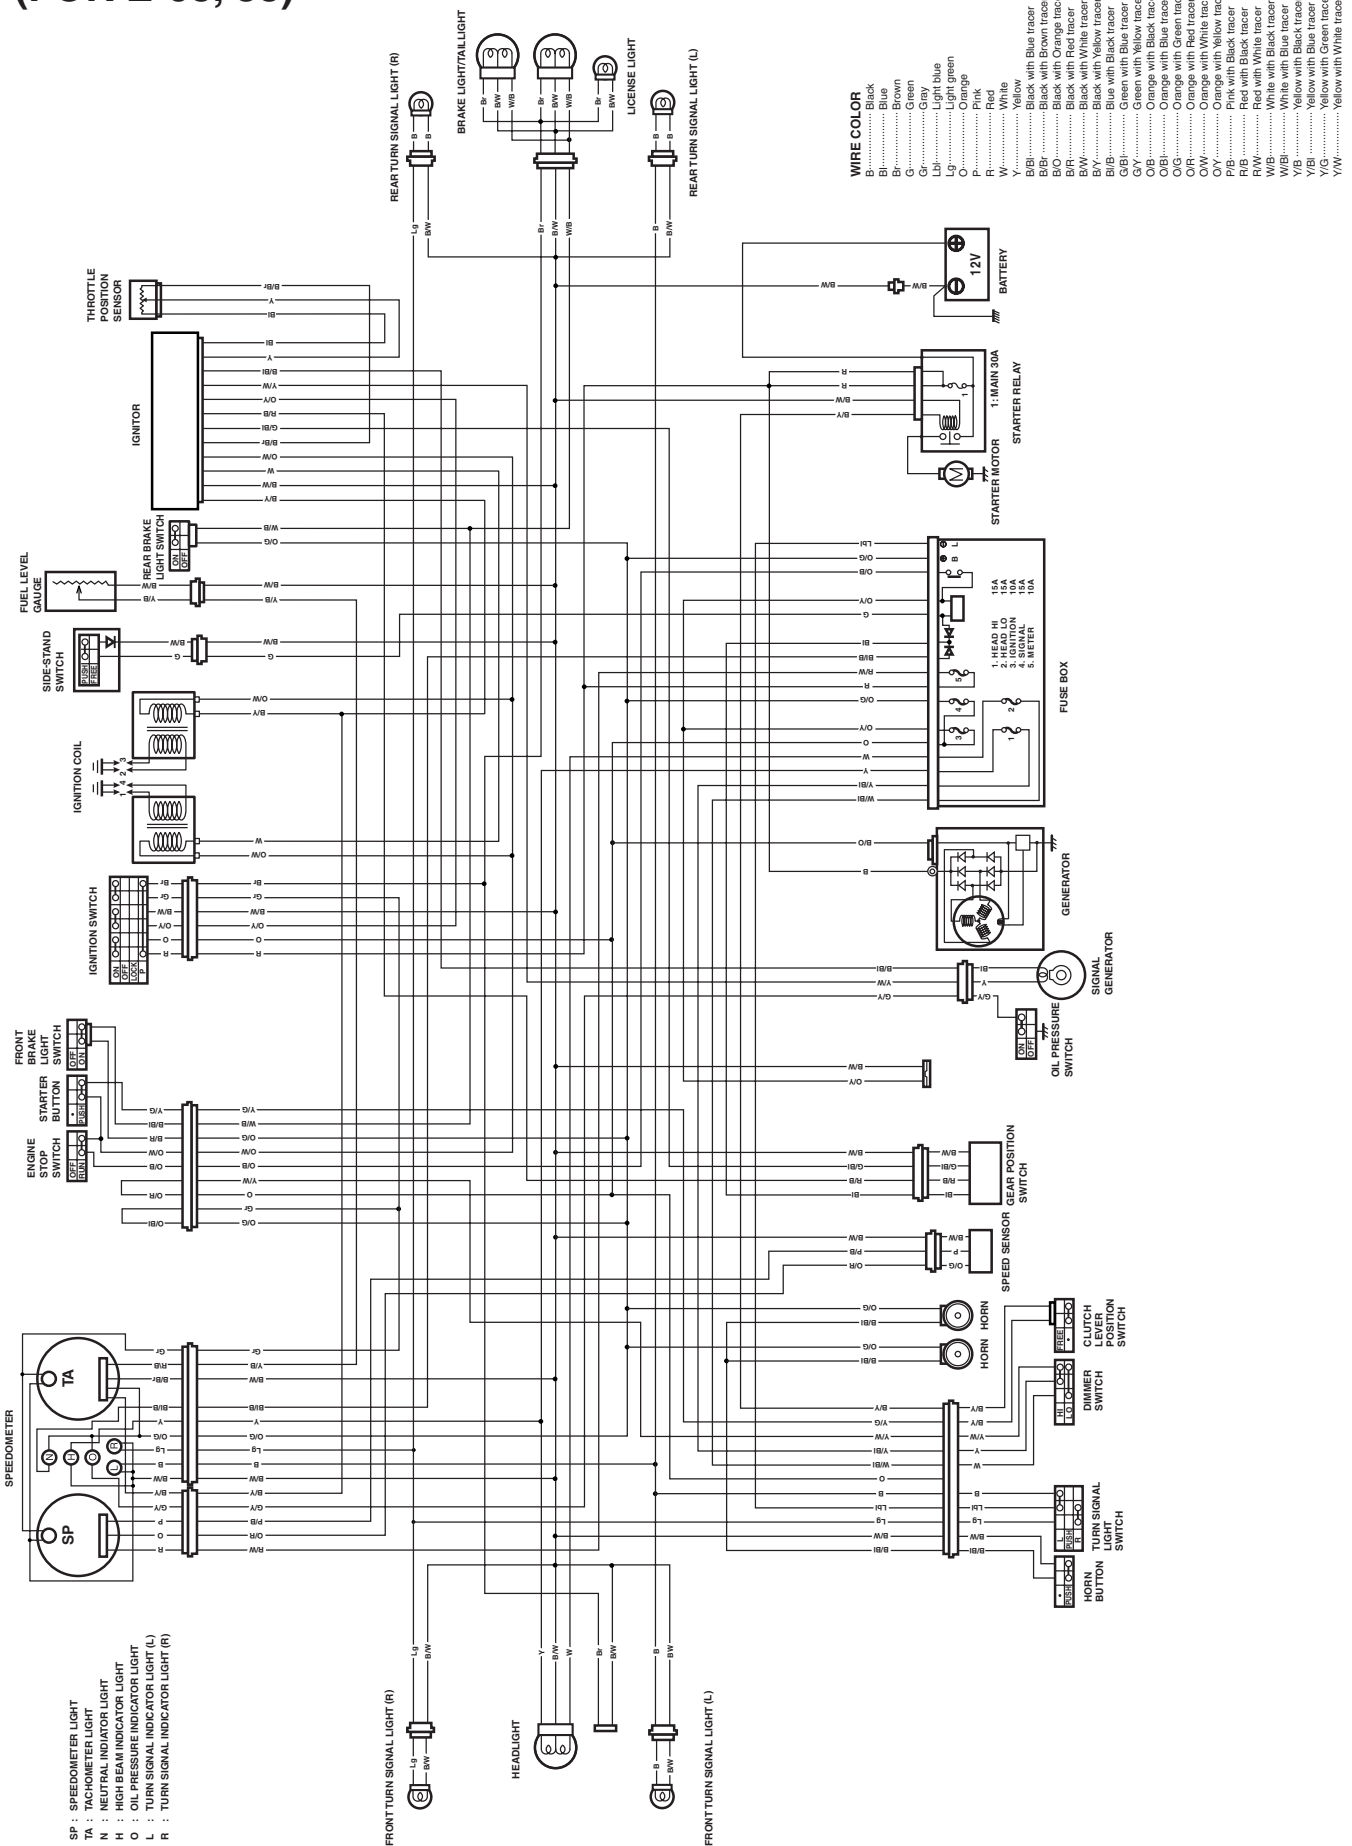

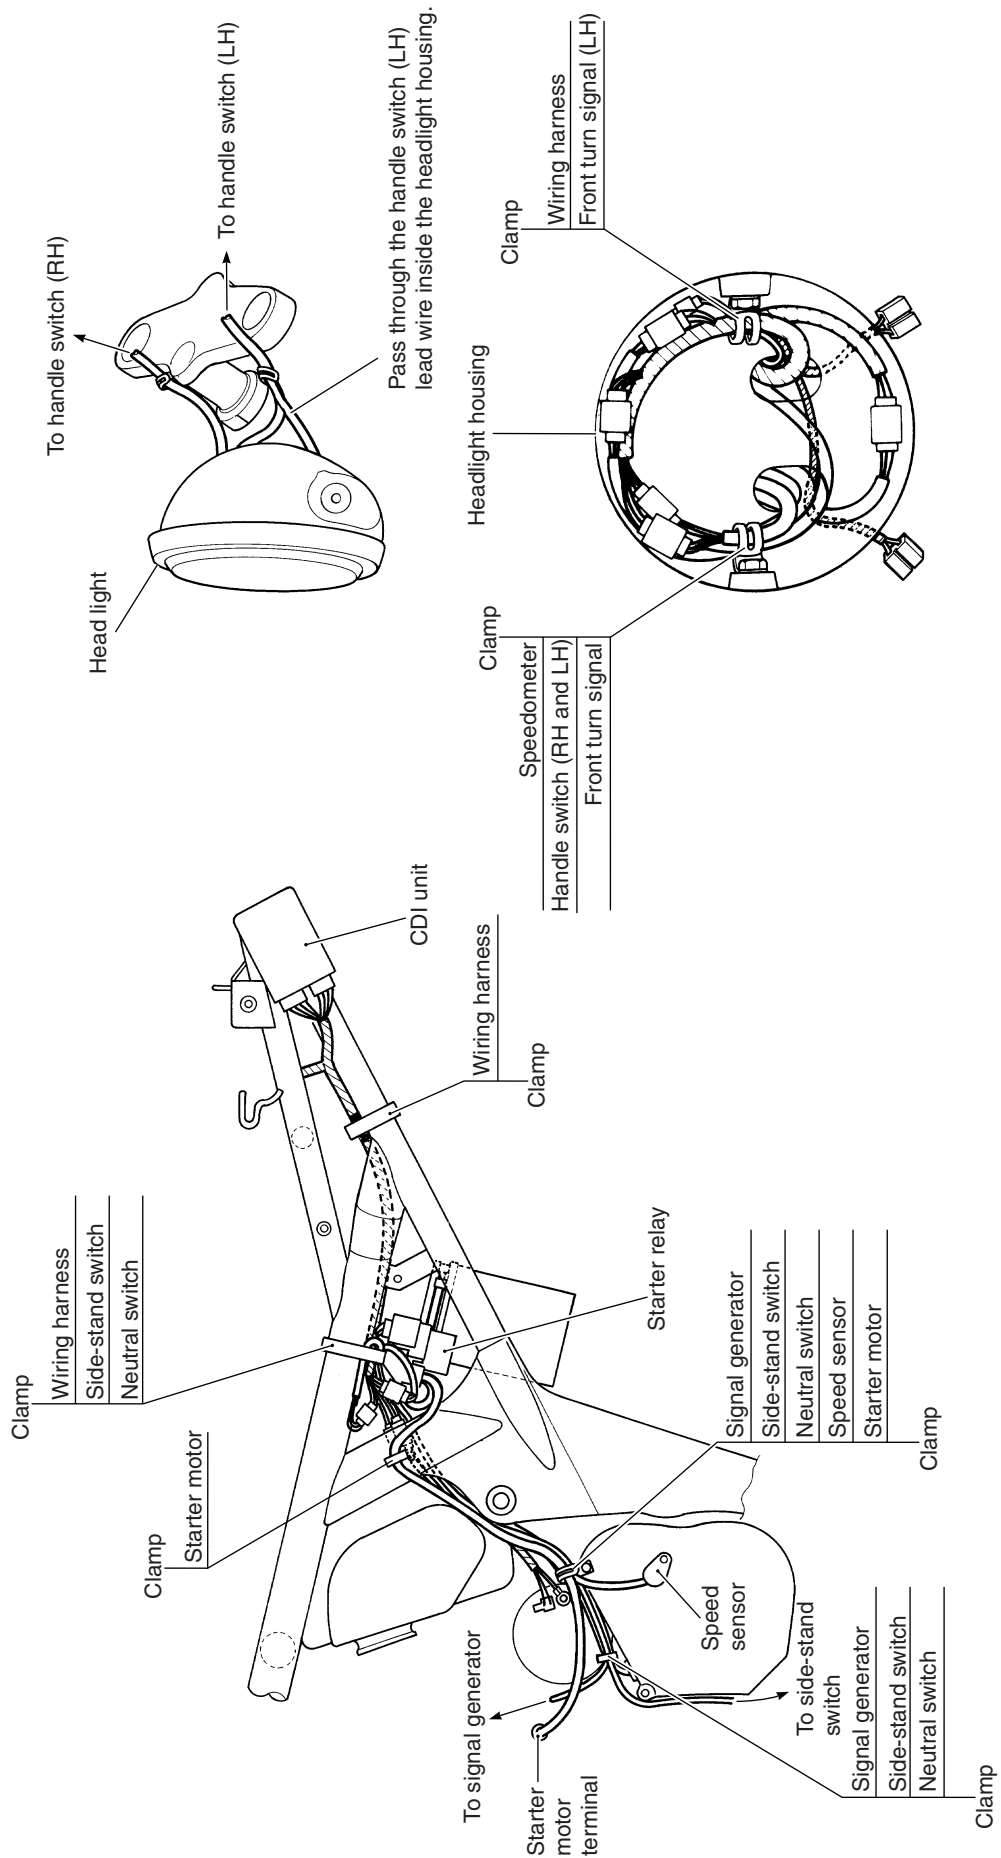

Prepared by

SUZUKI MOTOR CORPORATION

2nd Ed. February, 2002

1st Ed. April, 2000

Part No. 99500-39201-01E

Printed in Japan

SUZUKI MOTOR CORPORATION